Description

Product Features:

1 Operating voltage: DC 12V/DC 24V

2 Operating Current : Standby current (Digital tube OFF) 13MA, Standby current 5
ON), 1 relay open 76MA, 2 relays open 107MA, 3 relays open 133MA, 4 relays ope
open 185MA, 6 relays open 213MA, 7 relays open 258MA, 8 relays open 290MA

3 On-board resources: 1x RS485 Interface 8x opto-isolated inputs (low level trigger,
0/4-20MA Current Input,4x 0-5V/10V Voltage Input,2x 0-5V/10V Voltage Output(C
Current Output),1x ESP32 slots,8x relay outputs

4 size 180*72*19mm(Only Board)
5 Weight : 150g(Only Board), 276g(with shell)


As long as you write ESP32 code,You can use it to achieve a variety of delay timer f
WIFI remote control switch
WIFI Current and voltage collection
RS485 Master-Slave Device(PLC MCU),
2x 0-5V/10V Voltage Output(OR 2x 0/4-20MA Current Output)
4x 0/4-20MA Current Collection,
4x 0-5V/10V Voltage Collection,
8x RS485 DI-DO
Motor forward and reverse,
Power-up delay,
Trigger delay,
Infinite loop delay,
A finite number of cyclic delays,
Power sequencer,
And so on.

This is an expansion board based on 38PIN ESP32. We only provide some codes for
More codes and functions need to be developed by yourself.
If you need more functionality, write your own code. We do not provide additional c

support


Note: ES32D26 can not work independently, must be under the control of the 38PIN work,If you do not have a 38PIN ESP32 board, purchase it separately or purchase a ESP32

Onboard Resources

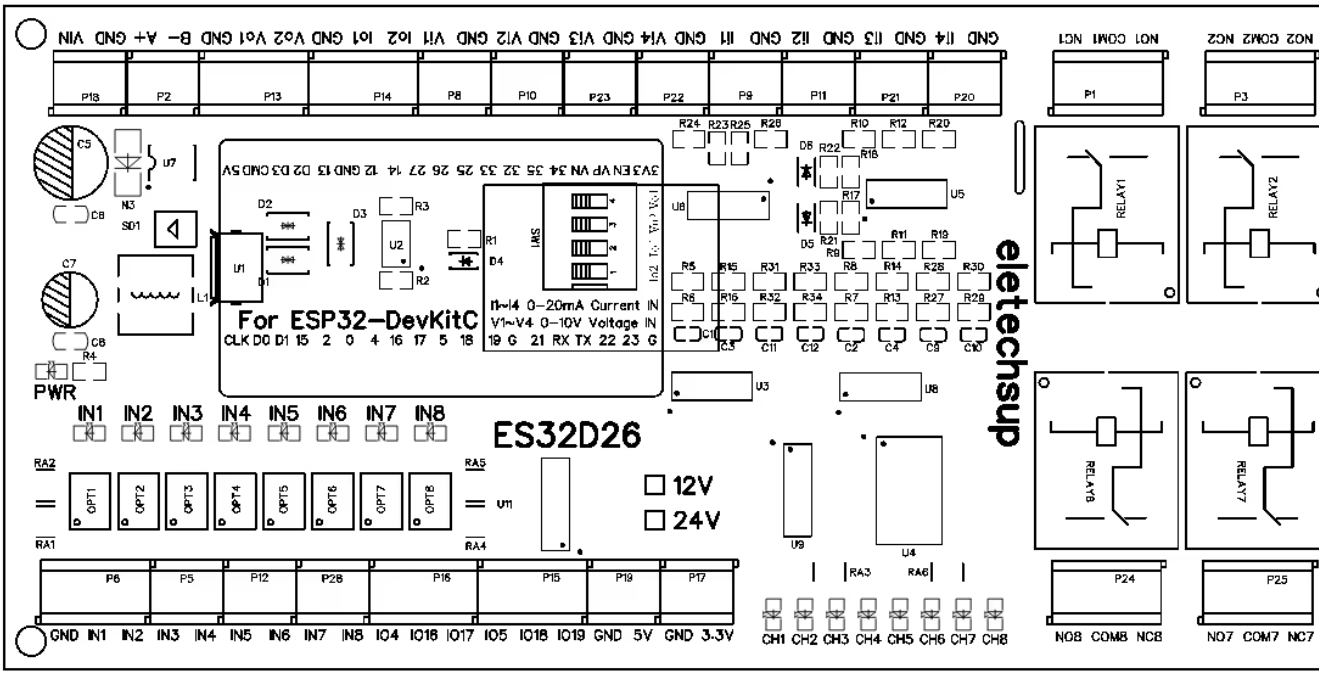

ES32D26 Expansion Board Port	ESP32 Core Board Pin
Vo1-Vo2(0-10V AO)	IO25-IO26
Io1-Io2(0-20MA AO)	IO25-IO26
Vi1-Vi4(0-10V AI)	IO14/IO33/IO27/IO32
Ii1-Ii4(0-20MA AI)	IO34/IO39/IO35/IO36
IN1-IN8(NPN DI)	74HC165 IO0/IO2/IO15
CH1-CH8(Relay DO)	74HC595 IO22/IO23/IO12/IO13
Free Port	IO4/IO16/IO17/IO5/IO18/IO19
RS485 Port	IO1/IO3/IO21

Note: Vo1/Io1, Vo2/Io2 are multiplexe ports, only one of them can be enable by SW1 dip switch)

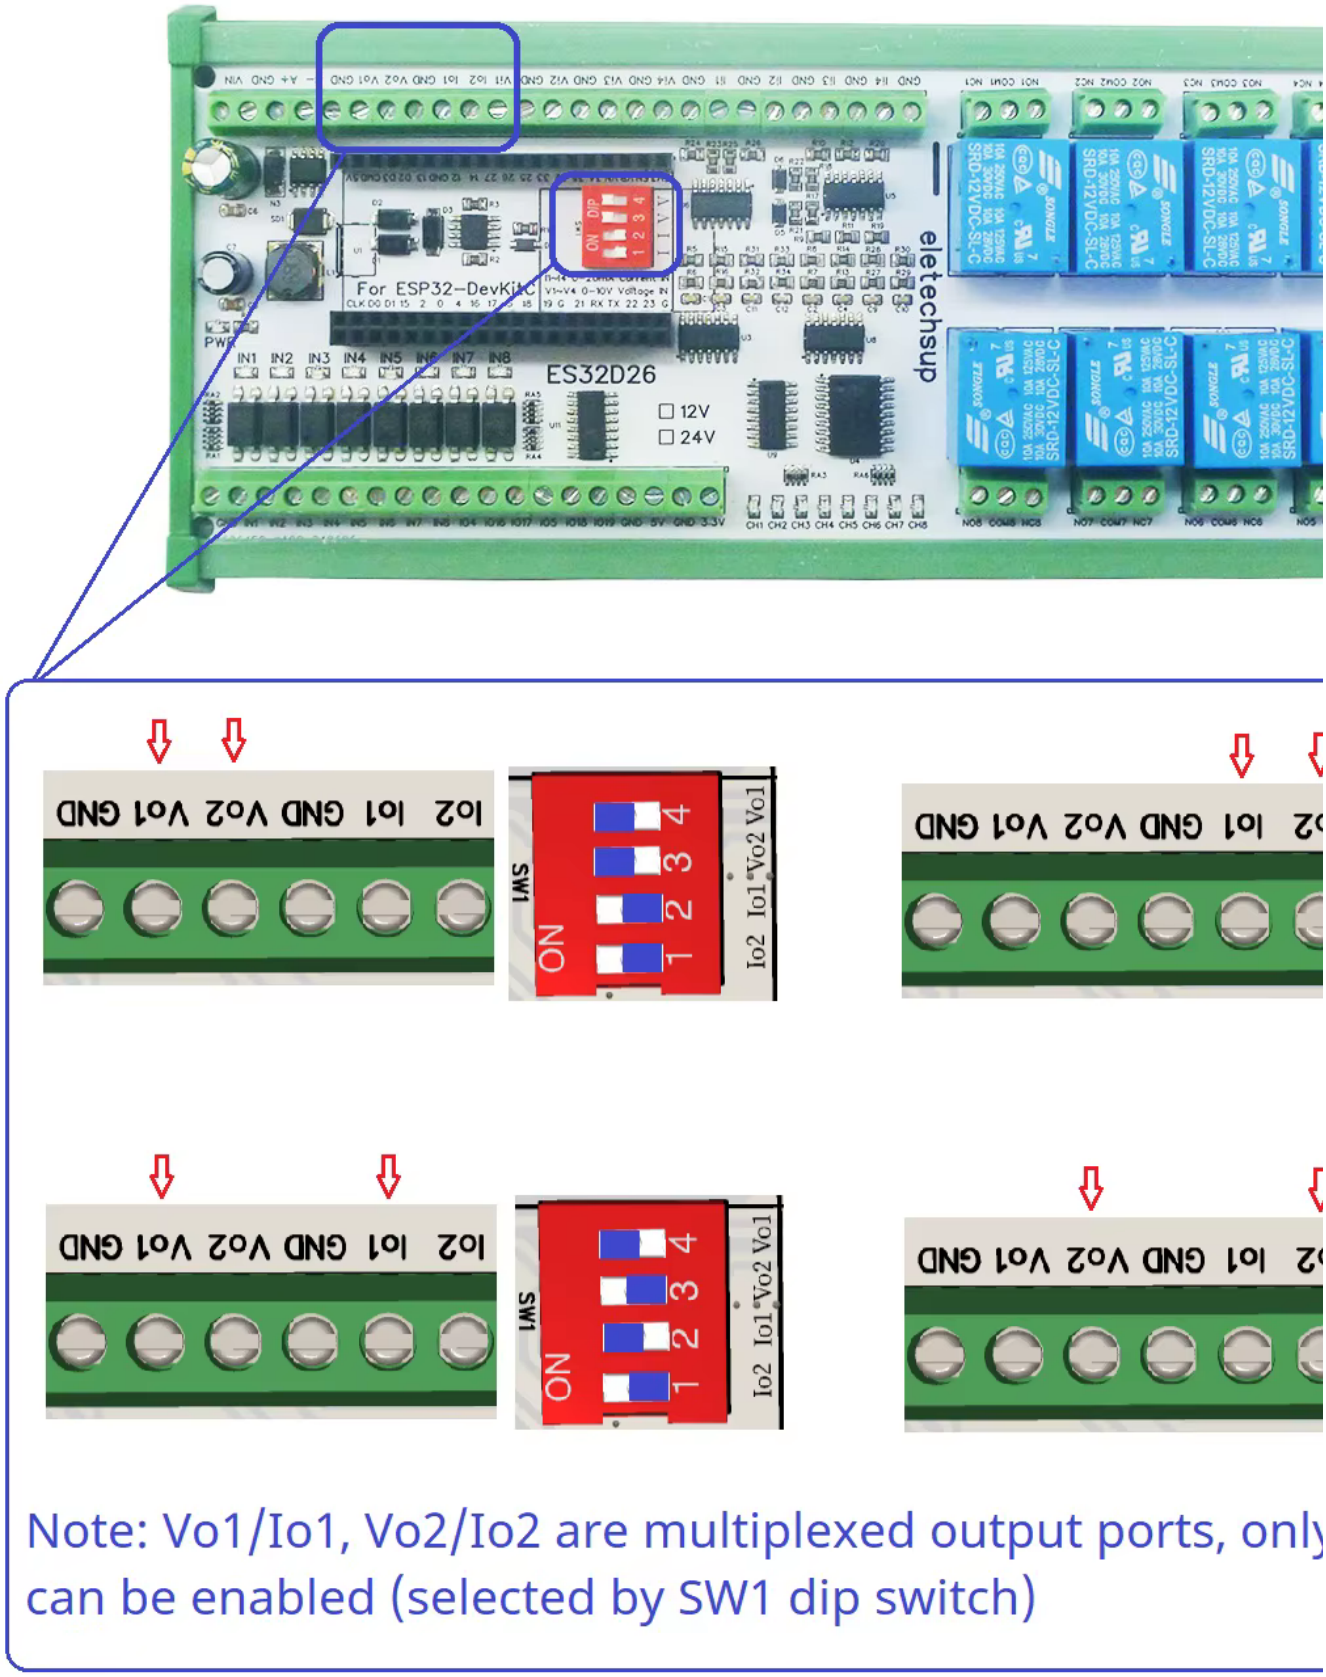

Note: Vo1/Io1, Vo2/Io2 are multiplexed output ports, only one of them can be enabl
dip switch)

Note: Vo1/Io1, Vo2/Io2 are multiplexed output ports, only one of be enabled (selected by SW1 dip switch)


2CH 0-20MA/0-10V
analog output port

Power interface
RS485 interface

4CH 0-5V/10V
Voltage Input

4CH 0/4-20MA
Current Input

8CH 10A Rela

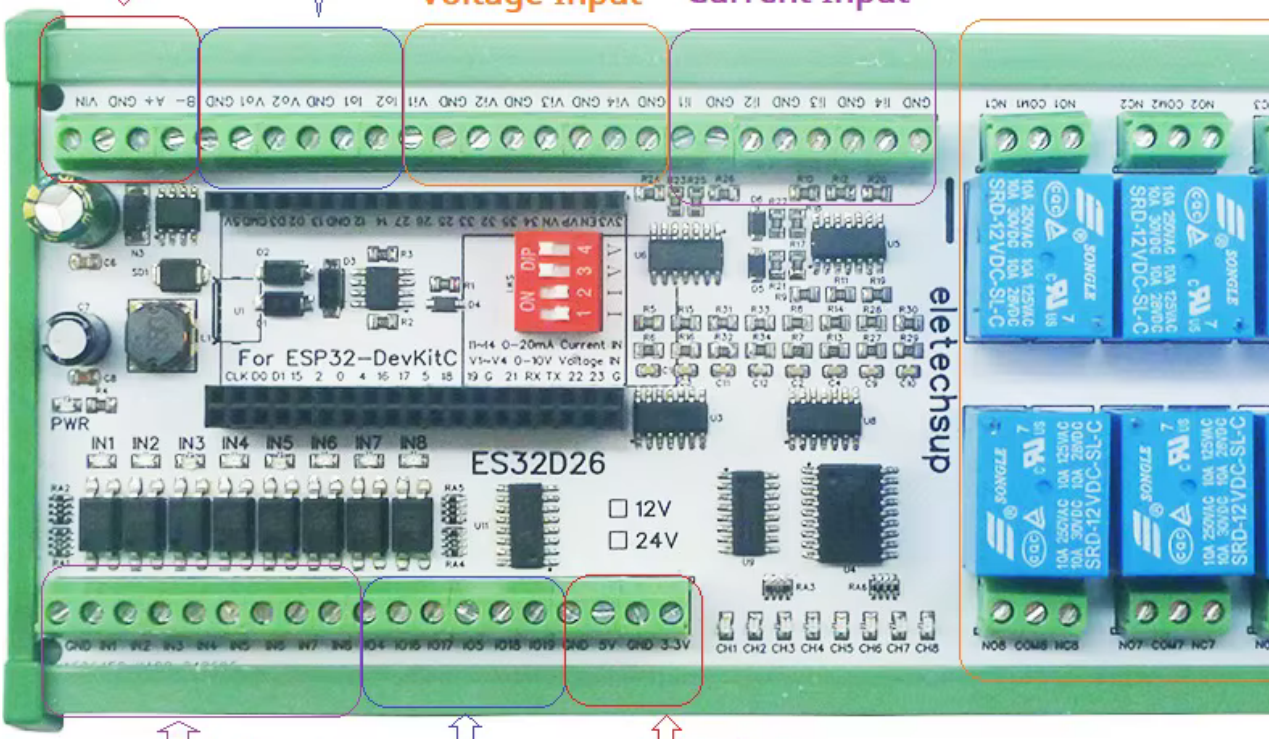

8CH NPN Digital Input

6CH Free Port

3.3V/5V
power output

IO port directly derived from ESP32,
the function refers to ESP32 core board
(IO4/IO16/IO17/IO5/IO18/IO19)

3.3V maximum outp
5V maximum output
Please do not overlo