AE333

Mechanics of Materials

Lecture 22 - Mohr's Circle
Dr. Nicholas Smith
Wichita State University, Department of Aerospace Engineering
29 Mar, 2019

schedule

- 29 Mar Mohr's Circle
- 1 Apr Strain Transformation
- 3 Apr Strain Transformation, HW7 Due
- 5 Apr Deflection of Beams

outline


- plane stress transformation
- general equations
- principal stresses

plane stress transformation

plane stress

- In general, the state of stress at a point is characterized by six stress components
- In practice, this is rare, as most stresses and forces act in the same plane
- This case is referred to as plane stress


transformation

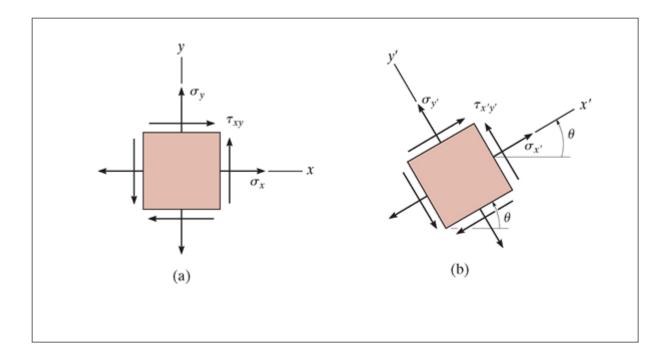


procedure

- If the state of stress $(\sigma_x, \sigma_y, \tau_{xy})$ is known for a known axis system x and y, we can find the stress relative to some rotated coordinate system
- We do this by considering a section of the element perpendicular to the x' axis
- Sum of forces in x and y will give $\sigma_{\chi'}$ and $\tau_{\chi' y'}$
- A second section is needed to find $\sigma_{y'}$, perpendicular to the y' axis

procedure

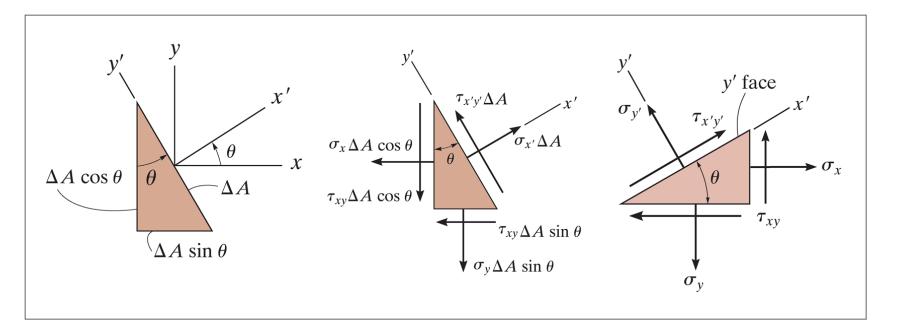

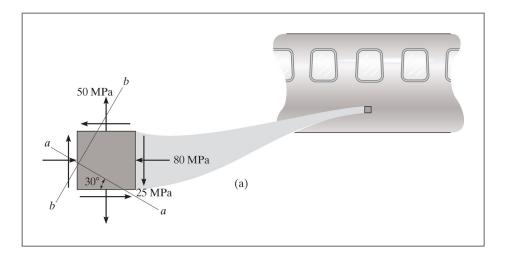

Represent the state of stress shown on the fuselage section on an element rotated 30° clockwise from the position shown.

general equations

general equations


- We can follow the methodology from the previous section to develop equations for some arbitrary rotation and a completely general state of stress
- We use some trig identities to simplify the formulae

$$egin{aligned} \sigma_{x'} &= rac{\sigma_x + \sigma_y}{2} + rac{\sigma_x - \sigma_y}{2} \cos 2 heta + au_{xy} \sin 2 heta \ au_{x'y'} &= -rac{\sigma_x - \sigma_y}{2} \sin 2 heta + au_{xy} \cos 2 heta \end{aligned}$$

• To find $\sigma_{y'}$ we can simply add 90° to θ

procedure

- The procedure in general is mostly "plug and chug"
- The only thing we need to be cautious about is sign convention: stresses are positive in tension, shear is positive with arrows pointing to the 1st and 3rd quadrants, θ is measured counter-clockwise from the x-axis

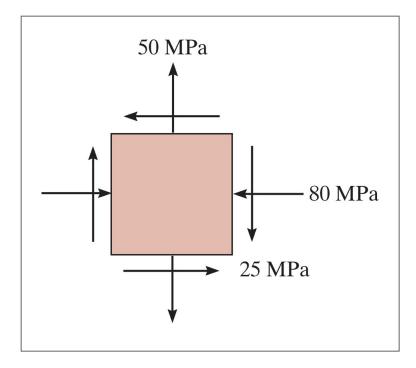

Determine the stress at this point on an element rotated 30° clockwise from the position shown.

principal stresses

principal stresses

- Since the local stresses only change with the rotation angle, we might like to find the angle with gives the maximum stress
- This is known as the principal direction, and the stresses are known as principal stresses
- We can find this direction by differentiating the equation for $\sigma_{\chi'}$

principal stress

• We find the angle as

$$an 2 heta_p = rac{2 au_{xy}}{\sigma_x - \sigma_y}$$

• The principal stresses are then

$$\sigma_{1,2} = rac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(rac{\sigma_x - \sigma_y}{2}
ight)^2 + au_{xy}^2}$$


maximum shear stress

• Similarly, we might want to find the direction of maximum shear stress

$$an 2 heta_s = rac{\sigma_y - \sigma_x}{2 au_{xy}}.$$

• And the maximum shear stress is

$$au_{max} = \sqrt{\left(rac{\sigma_x - \sigma_y}{2}
ight)^2 + au_{xy}^2}$$

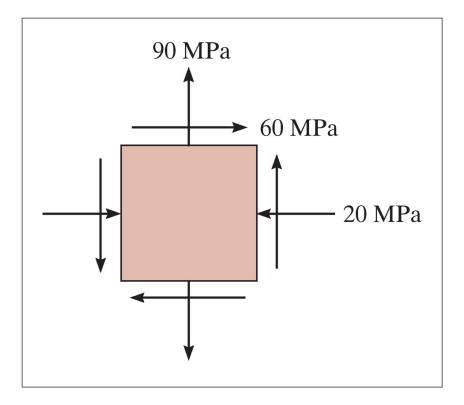

Find the principal stress for the stress state shown.

- When torsional loading *T* is applied to a circular bar it produces a state of pure shear stress.
- Find the maximum in-plane shear stress and the associated average normal stress
- Find the principal stresses