



ESP32

esp-dev-kits Documentation



Release master
Espressif Systems
Sep 01, 2026



Table of contents

Table of contents	i
1 ESP32-DevKitC	3
1.1 ESP32-DevKitC V4	3
1.1.1 What You Need	3
1.1.2 Overview	3
1.1.3 Functional Description	4
1.1.4 Power Supply Options	4
1.1.5 Header Block	5
1.1.6 Note on C15	6
1.1.7 Start Application Development	6
1.1.8 Related Documents	6
1.1.9 Disclaimer and Copyright Notice	9
2 ESP32-DevKitM-1	11
2.1 ESP32-DevKitM-1	11
2.1.1 Getting Started	12
2.1.2 Hardware Reference	13
2.1.3 Hardware Revision Details	15
2.1.4 Related Documents	16
2.1.5 Disclaimer and Copyright Notice	16
3 ESP32-PICO-KIT-1	17
3.1 ESP32-PICO-KIT-1	17
3.1.1 Overview	17
3.1.2 Getting Started	19
3.1.3 Contents and Packaging	20
3.1.4 Hardware Reference	20
3.1.5 Hardware Revision Details	22
3.1.6 Related Documents	22
3.1.7 Disclaimer and Copyright Notice	23
4 ESP32-PICO-DevKitM-2	25
4.1 ESP32-PICO-DevKitM-2	25
4.1.1 Overview	25
4.1.2 Getting Started	27
4.1.3 Contents and Packaging	28
4.1.4 Hardware Reference	28
4.1.5 Hardware Revision Details	30
4.1.6 Related Documents	30
4.1.7 Disclaimer and Copyright Notice	31
5 ESP32-LCDKit	33
5.1 ESP32-LCDKit	33
5.1.1 Overview	33
5.1.2 Block Diagram and PCB Layout	34
5.1.3 Functional Modules	34

5.1.4	Related Documents	37
5.1.5	Disclaimer and Copyright Notice	37
6	ESP32-Ethernet-Kit	39
6.1	ESP32-Ethernet-Kit v1.2	39
6.1.1	What You Need	39
6.1.2	Overview	39
6.1.3	Functionality Overview	39
6.1.4	Functional Description	42
6.1.5	Setup Options	44
6.1.6	GPIO Allocation	47
6.1.7	Start Application Development	49
6.1.8	Summary of Changes from ESP32-Ethernet-Kit v1.1	49
6.1.9	Other Versions of ESP32-Ethernet-Kit	49
6.1.10	Related Documents	50
6.1.11	Disclaimer and Copyright Notice	65
7	EOL (End of Life) Boards	67
7.1	ESP32-Sense-Kit	67
7.1.1	ESP32-Sense-Kit	67
7.2	ESP32-MeshKit-Sense	78
7.2.1	ESP32-MeshKit-Sense	78
7.3	ESP-WROVER-KIT	86
7.3.1	ESP-WROVER-KIT v4.1 Getting Started Guide	86
7.4	ESP32-PICO-KIT	111
7.4.1	ESP32-PICO-KIT v4/v4.1	111
8	Related Documentation and Resources	125
8.1	Related Documentation	125
8.2	Developer Zone	125
8.3	Products	125
8.4	Contact Us	126
9	Disclaimer and Copyright Notice	127
9.1	Terms of Use for Development Board	127

This document provides detailed user guides and examples for ESP32 series development boards.

Note: For the full list of Espressif development boards, please go to [ESP DevKits](#).

Chapter 1

ESP32-DevKitC

ESP32-DevKitC is a small-sized ESP32-based development board produced by [Espressif](#). Most of the I/O pins are broken out to the pin headers on both sides for easy interfacing. Developers can either connect peripherals with jumper wires or mount ESP32-DevKitC on a breadboard.

1.1 ESP32-DevKitC V4

The older version: [ESP32-DevKitC V2](#)

This guide shows how to start using the ESP32-DevKitC V4 development board.

1.1.1 What You Need

- [ESP32-DevKitC V4 board](#)
- USB 2.0 cable (Standard-A to Micro-B)
- Computer running Windows, Linux, or macOS

You can skip the introduction sections and go directly to Section [Start Application Development](#).

1.1.2 Overview

ESP32-DevKitC V4 is a small-sized ESP32-based development board produced by [Espressif](#). Most of the I/O pins are broken out to the pin headers on both sides for easy interfacing. Developers can either connect peripherals with jumper wires or mount ESP32-DevKitC V4 on a breadboard.

To cover a wide range of user requirements, the following versions of ESP32-DevKitC V4 are available:

- different ESP32 modules
 - [ESP32-WROOM-32E](#)
 - [ESP32-WROOM-32UE](#)
 - [ESP32-WROVER-E](#)
 - [ESP32-WROVER-IE](#)
 - [ESP32-WROOM-32D](#)
 - [ESP32-WROOM-32U](#)
 - [ESP32-WROOM-DA](#) (End of Life)
 - [ESP32-SOLO-1](#)
 - [ESP32-WROOM-32](#)
- male or female pin headers

For details please refer to [ESP Product Selector](#).

1.1.3 Functional Description

The following figure and the table below describe the key components, interfaces and controls of the ESP32-DevKitC V4 board.

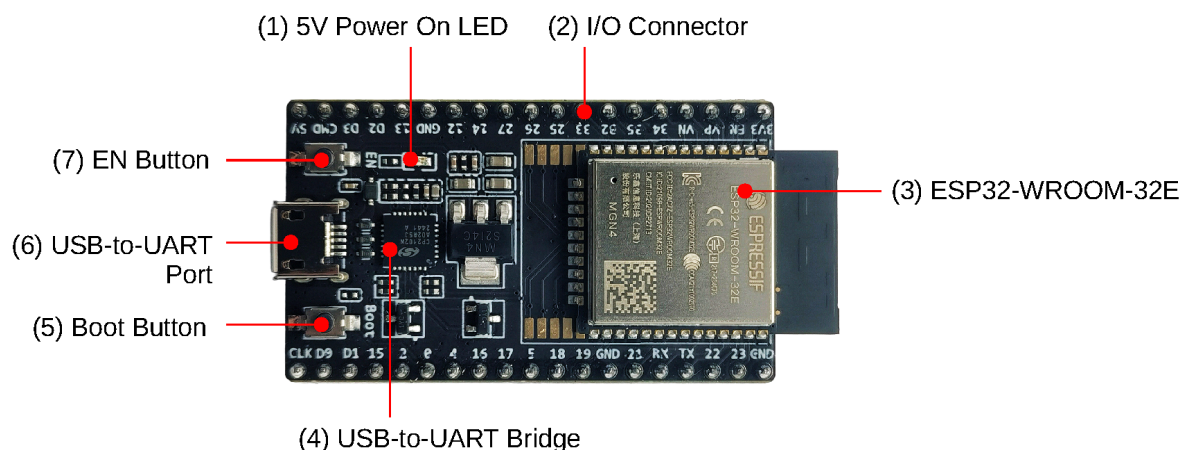


Fig. 1: ESP32-DevKitC V4 with ESP32-WROOM-32E module soldered

The key components of the board are described, starting from the 5V Power On LED, in a clockwise direction.

No.	Key Component	Description
1	5V Power On LED	Turns on when the USB or an external 5V power supply is connected to the board. For details see the schematics in Related Documents .
2	I/O Connector	Most of the pins on the ESP module are broken out to the pin headers on the board. You can program ESP32 to enable multiple functions such as PWM, ADC, DAC, I2C, I2S, SPI, etc.
3	ESP32-WROOM-32E	A module with ESP32 at its core. For more information, see ESP32-WROOM-32E Datasheet .
4	USB-to-UART Bridge	Single USB-to-UART bridge chip, providing transfer rates up to 3 Mbps.
5	Boot Button	Download button. Holding down Boot and then pressing EN initiates Firmware Download mode for downloading firmware through the serial port.
6	USB-to-UART Port	A Micro-USB port used for power supply to the board, as well as for communication between a computer and the ESP32-WROOM-32E module.
7	EN Button	Reset button.

1.1.4 Power Supply Options

There are three mutually exclusive ways to provide power to the board:

- Micro USB port, default power supply
- 5V and GND header pins
- 3V3 and GND header pins

Warning: The power supply must be provided using **one and only one of the options above**, otherwise the board and/or the power supply source can be damaged.

1.1.5 Header Block

The two tables below provide the **Name** and **Function** of I/O header pins on both sides of the board, as shown in *ESP32-DevKitC V4 with ESP32-WROOM-32E module soldered*.

J2

No.	Name	Type ¹	Function
1	3V3	P	3.3 V power supply
2	EN	I	CHIP_PU, Reset
3	VP	I	GPIO36, ADC1_CH0, S_VP
4	VN	I	GPIO39, ADC1_CH3, S_VN
5	IO34	I	GPIO34, ADC1_CH6, VDET_1
6	IO35	I	GPIO35, ADC1_CH7, VDET_2
7	IO32	I/O	GPIO32, ADC1_CH4, TOUCH_CH9, XTAL_32K_P
8	IO33	I/O	GPIO33, ADC1_CH5, TOUCH_CH8, XTAL_32K_N
9	IO25	I/O	GPIO25, ADC2_CH8, DAC_1
10	IO26	I/O	GPIO26, ADC2_CH9, DAC_2
11	IO27	I/O	GPIO27, ADC2_CH7, TOUCH_CH7
12	IO14	I/O	GPIO14, ADC2_CH6, TOUCH_CH6, MTMS
13	IO12	I/O	GPIO12, ADC2_CH5, TOUCH_CH5, MTDI
14	GND	G	Ground
15	IO13	I/O	GPIO13, ADC2_CH4, TOUCH_CH4, MTCK
16	D2	I/O	GPIO9, D2 ²
17	D3	I/O	GPIO10, D3 ²
18	CMD	I/O	GPIO11, CMD ²
19	5V	P	5 V power supply

¹ P: Power supply; I: Input; O: Output.

² The pins D0, D1, D2, D3, CMD and CLK are used internally for communication between ESP32 and SPI flash memory. They are grouped on both sides near the USB connector. Avoid using these pins, as it may disrupt access to the SPI flash memory/SPI RAM.

J3

No.	Name	Type ¹	Function
1	GND	G	Ground
2	IO23	I/O	GPIO23
3	IO22	I/O	GPIO22
4	TX	I/O	GPIO1, U0TXD
5	RX	I/O	GPIO3, U0RXD
6	IO21	I/O	GPIO21
7	GND	G	Ground
8	IO19	I/O	GPIO19
9	IO18	I/O	GPIO18
10	IO5	I/O	GPIO5
11	IO17	I/O	GPIO17 ³
12	IO16	I/O	GPIO16 ³
13	IO4	I/O	GPIO4, ADC2_CH0, TOUCH_CH0
14	IO0	I/O	GPIO0, ADC2_CH1, TOUCH_CH1, Boot
15	IO2	I/O	GPIO2, ADC2_CH2, TOUCH_CH2
16	IO15	I/O	GPIO15, ADC2_CH3, TOUCH_CH3, MTDO
17	D1	I/O	GPIO8, D1 ^{Page 5, 2}
18	D0	I/O	GPIO7, D0 ^{Page 5, 2}
19	CLK	I/O	GPIO6, CLK ^{Page 5, 2}

Pin Layout**1.1.6 Note on C15**

The component C15 may cause the following issues on earlier ESP32-DevKitC V4 boards:

- The board may boot into Download mode
- If you output clock on GPIO0, C15 may impact the signal

In case these issues occur, please remove the component. The figure below shows the location of C15 highlighted in yellow.

1.1.7 Start Application Development

Before powering up your ESP32-DevKitC V4, please make sure that the board is in good condition with no obvious signs of damage.

After that, proceed to [ESP-IDF Get Started](#), which will quickly help you set up the development environment then flash an application example onto your board.

1.1.8 Related Documents

- [ESP32 Datasheet](#) (PDF)
- [ESP32-DevKitC V4 Schematics](#) (PDF)
- [ESP32-DevKitC V4 PCB Layout](#) (PDF)
- [ESP32-DevKitC V4 Dimensions](#) (PDF)
- [ESP32-DevKitC V4 Dimensions source file](#) (DXF) - You can view it with [Autodesk Viewer](#) online
- [ESP Product Selector](#)

For further design documentation for the board, please contact us at sales@espressif.com.

³ The pins GPIO16 and GPIO17 are available for use only on the boards with the modules ESP32-WROOM and ESP32-SOLO-1. The boards with ESP32-WROVER modules have the pins reserved for internal use.

ESP32-DevKitC

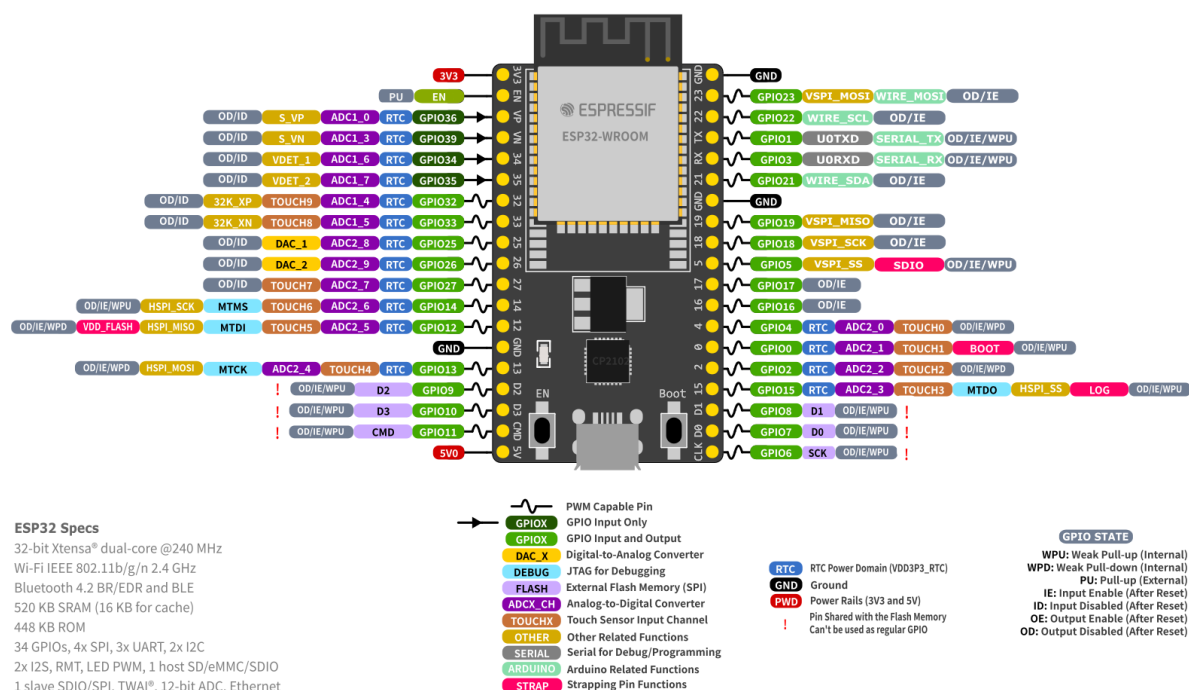


Fig. 2: ESP32-DevKitC Pin Layout (click to enlarge)

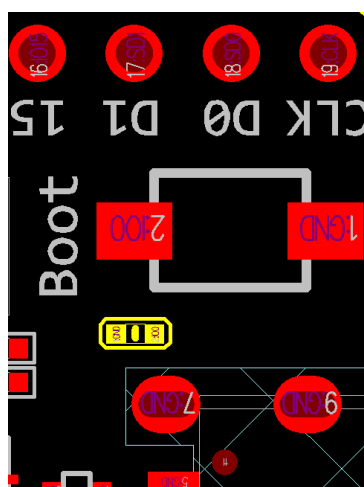


Fig. 3: Location of C15 (yellow) on ESP32-DevKitC V4 board

ESP32-DevKitC V2

New version available: [ESP32-DevKitC V4](#)

This guide shows how to start using the ESP32-DevKitC V2 development board.

What You Need

- [ESP32-DevKitC V2 board](#)
- USB 2.0 cable (Standard-A to Micro-B)
- Computer running Windows, Linux, or macOS

You can skip the introduction sections and go directly to Section [Start Application Development](#).

Overview ESP32-DevKitC V2 is a small-sized ESP32-based development board produced by [Espressif](#). Most of the I/O pins are broken out to the pin headers on both sides for easy interfacing. Developers can either connect peripherals with jumper wires or mount ESP32-DevKitC V4 on a breadboard.

Functional Description The following figure and the table below describe the key components, interfaces and controls of the ESP32-DevKitC V2 board.

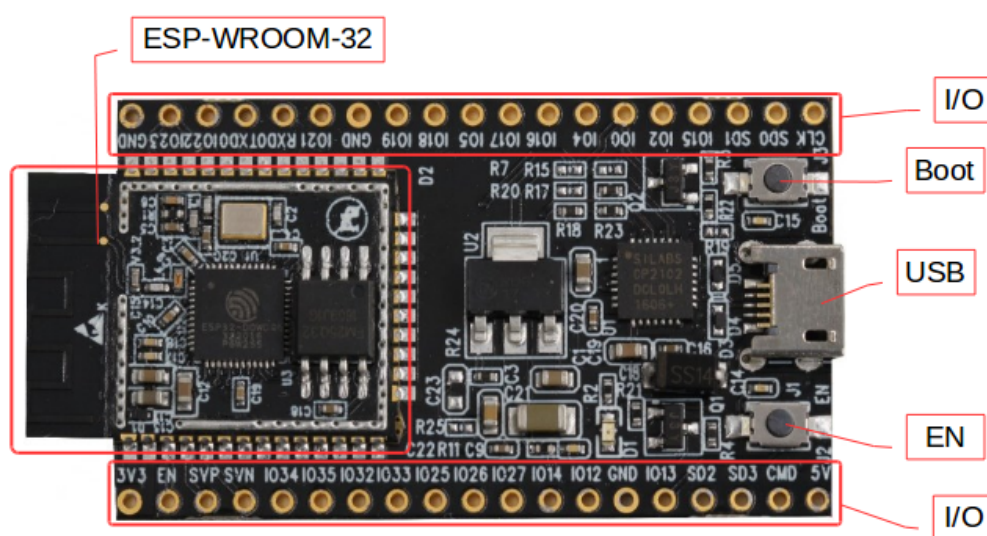


Fig. 4: ESP32-DevKitC V2 board layout

Key Component	Description
ESP32-WROOM-32	Standard module with ESP32 at its core. For more information, see ESP32-WROOM-32 Datasheet
EN	Reset button.
Boot	Download button. Holding down Boot and then pressing EN initiates Firmware Download mode for downloading firmware through the serial port.
Micro USB Port	USB interface. Power supply for the board as well as the communication interface between a computer and ESP32-WROOM-32.
I/O	Most of the pins on the ESP module are broken out to the pin headers on the board. You can program ESP32 to enable multiple functions such as PWM, ADC, DAC, I2C, I2S, SPI, etc.

Power Supply Options There are three mutually exclusive ways to provide power to the board:

- Micro USB port, default power supply
- 5V and GND header pins
- 3V3 and GND header pins

Warning: The power supply must be provided using **one and only one of the options above**, otherwise the board and/or the power supply source can be damaged.

Start Application Development Before powering up your ESP32-DevKitC V2, please make sure that the board is in good condition with no obvious signs of damage.

After that, proceed to [ESP-IDF Get Started](#), which will quickly help you set up the development environment then flash an application example onto your board.

Related Documents

- [ESP32-DevKitC schematics](#) (PDF)
- [ESP32 Datasheet](#) (PDF)
- [ESP32-WROOM-32 Datasheet](#) (PDF)

Disclaimer and Copyright Notice See [Disclaimer and Copyright Notice](#).

1.1.9 Disclaimer and Copyright Notice

See [Disclaimer and Copyright Notice](#).

Chapter 8

Related Documentation and Resources

8.1 Related Documentation

- [ESP32 Datasheet](#) –Specifications of the ESP32 hardware.
- [ESP32 Technical Reference Manual](#) –Detailed information on how to use the ESP32 memory and peripherals.
- [ESP32 Hardware Design Guidelines](#) –Guidelines on how to integrate the ESP32 into your hardware product.
- ESP32 Product/Process Change Notifications (PCN)
<https://espressif.com/en/support/documents/pcns?keys=ESP32>
- ESP32 Advisories –Information on security, bugs, compatibility, component reliability.
<https://espressif.com/en/support/documents/advisories?keys=ESP32>
- Certificates
<https://espressif.com/en/support/documents/certificates>
- Documentation Updates and Update Notification Subscription
<https://espressif.com/en/support/download/documents>

8.2 Developer Zone

- [ESP-IDF Programming Guide for ESP32](#) –Extensive documentation for the ESP-IDF development framework.
- [ESP-IoT-Solution Programming Guide](#) - Extensive documentation for the ESP-IoT-Solution development framework.
- [ESP-FAQ](#) - A summary document of frequently asked questions released by Espressif.
- ESP-IDF and other development frameworks on GitHub.
<https://github.com/espressif>
- ESP32 BBS Forum –Engineer-to-Engineer (E2E) Community for Espressif products where you can post questions, share knowledge, explore ideas, and help solve problems with fellow engineers.
<https://esp32.com/>
- The ESP Journal –Best Practices, Articles, and Notes from Espressif folks.
<https://blog.espressif.com/>
- See the tabs SDKs and Demos, Apps, Tools, AT Firmware.
<https://espressif.com/en/support/download/sdks-demos>

8.3 Products

- ESP32 Series SoCs –Browse through all ESP32 SoCs.
<https://espressif.com/en/products/socs?id=ESP32>

- ESP32 Series Modules –Browse through all ESP32-based modules.
<https://espressif.com/en/products/modules?id=ESP32>
- ESP32 Series DevKits –Browse through all ESP32-based devkits.
<https://espressif.com/en/products/devkits?id=ESP32>
- ESP Product Selector –Find an Espressif hardware product suitable for your needs by comparing or applying filters.
<https://products.espressif.com/#/product-selector>

8.4 Contact Us

- See the tabs Sales Questions, Technical Enquiries, Circuit Schematic & PCB Design Review, Get Samples (Online stores), Become Our Supplier, Comments & Suggestions.
<https://espressif.com/en/contact-us/sales-questions>