


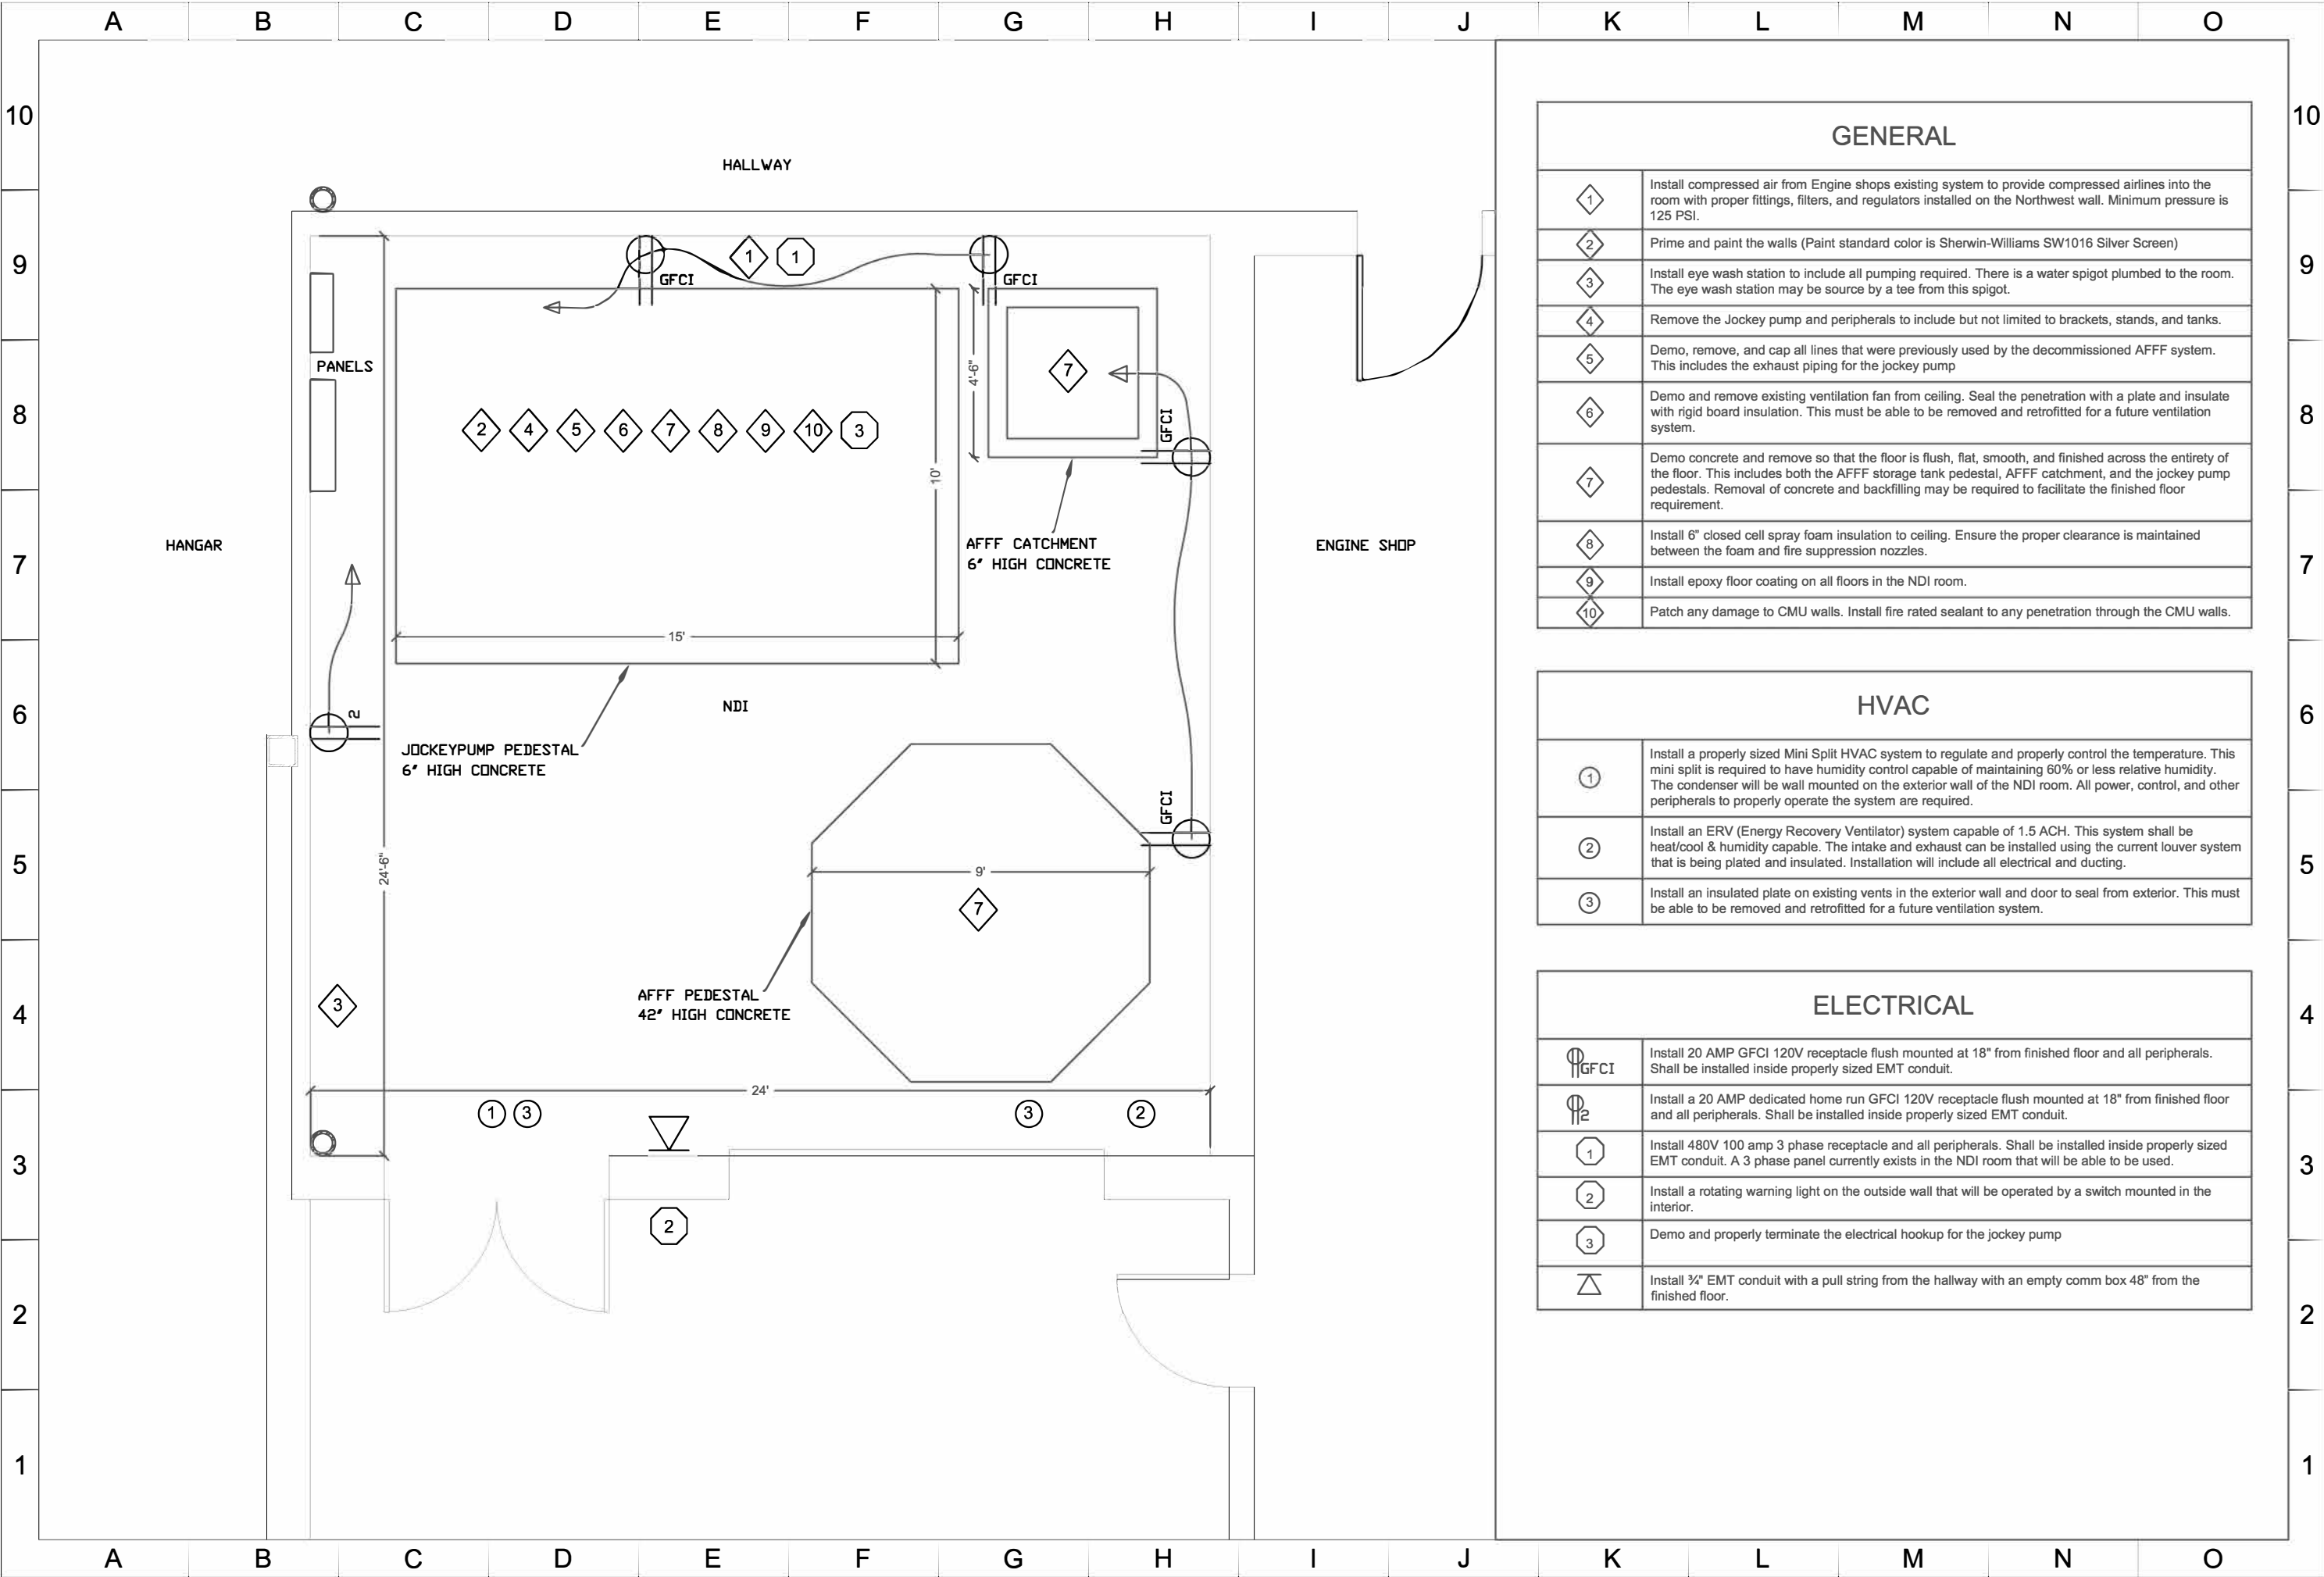

GENERAL	
1	Install compressed air from Engine shops existing system to provide compressed airlines into the room with proper fittings, filters, and regulators installed on the Northwest wall. Minimum pressure is 125 PSI.
2	Prime and paint the walls (Paint standard color is Sherwin-Williams SW1016 Silver Screen)
3	Install eye wash station to include all pumping required. There is a water spigot plumbed to the room. The eye wash station may be source by a tee from this spigot.
4	Remove the Jockey pump and peripherals to include but not limited to brackets, stands, and tanks.
5	Demo, remove, and cap all lines that were previously used by the decommissioned AFFF system. This includes the exhaust piping for the jockey pump
6	Demo and remove existing ventilation fan from ceiling. Seal the penetration with a plate and insulate with rigid board insulation. This must be able to be removed and retrofitted for a future ventilation system.
7	Demo concrete and remove so that the floor is flush, flat, smooth, and finished across the entirety of the floor. This includes both the AFFF storage tank pedestal, AFFF catchment, and the jockey pump pedestals. Removal of concrete and backfilling may be required to facilitate the finished floor requirement.
8	Install 6" closed cell spray foam insulation to ceiling. Ensure the proper clearance is maintained between the foam and fire suppression nozzles.
9	Install epoxy floor coating on all floors in the NDI room.
10	Patch any damage to CMU walls. Install fire rated sealant to any penetration through the CMU walls.

HVAC	
1	Install a properly sized Mini Split HVAC system to regulate and properly control the temperature. This mini split is required to have humidity control capable of maintaining 60% or less relative humidity. The condenser will be wall mounted on the exterior wall of the NDI room. All power, control, and other peripherals to properly operate the system are required.
2	Install an ERV (Energy Recovery Ventilator) system capable of 1.5 ACH. This system shall be heat/cool & humidity capable. The intake and exhaust can be installed using the current louver system that is being plated and insulated. Installation will include all electrical and ducting.
3	Install an insulated plate on existing vents in the exterior wall and door to seal from exterior. This must be able to be removed and retrofitted for a future ventilation system.

ELECTRICAL	
GFCI	Install 20 AMP GFCI 120V receptacle flush mounted at 18" from finished floor and all peripherals. Shall be installed inside properly sized EMT conduit.
1/2	Install a 20 AMP dedicated home run GFCI 120V receptacle flush mounted at 18" from finished floor and all peripherals. Shall be installed inside properly sized EMT conduit.
1	Install 480V 100 amp 3 phase receptacle and all peripherals. Shall be installed inside properly sized EMT conduit. A 3 phase panel currently exists in the NDI room that will be able to be used.
2	Install a rotating warning light on the outside wall that will be operated by a switch mounted in the interior.
3	Demo and properly terminate the electrical hookup for the jockey pump
Δ	Install 3/4" EMT conduit with a pull string from the hallway with an empty comm box 48" from the finished floor.

136 WING CES
200 Hensley Ave. Bldg 1671
Ft Worth, TX, 76127
817-850-3333

DESIGN: MSGT MATLEY
REVIEWED BY: MAJ NORTON

PREP BY
DATE
APPRVD

REV
DESCRIPTION

LOCATION
TEAMS/ENGINEERING/PROJECTS/DDPRM262001

TEXAS AIR NATIONAL GUARD
NAVAL AIR STATION JOINT RESERVE BASE FORT WORTH, TX

DATE: 01/30/2026

CONVERT COMMAND POST & NDI
CLIN 002 - B1675 - NDI

DRAWING SIZE: 11X17
SPEC. NO.
SCALE: 1/4" = 1'

PROJECT NUMBER
DDPM262101

SHEET 2 OF 2

A-2