


EXISTING CONCRETE PRE-CAST FASCIA
PANEL

PATCH AND REPAIR AREAS OF SPALLED
OR CRACKED CONCRETE (TYPICAL
CONDITION SHOWN): CONTRACTOR SHALL
CHIP AWAY ALL LOOSE CONCRETE UNTIL
EXPOSING A SOUND SUBSTRATE IN THE
SPALL AREA.


CONTRACTOR SHALL POWER WIRE BRUSH
EXPOSED REBAR, REMOVING ALL RUST.

PATCH AREA WITH LIGHT WEIGHT
CONCRETE PATCHING COMPOUND, APPLY A
FINISH TO MATCH EXISTING ADJACENT
AREAS IN PLANE AND TEXTURE.

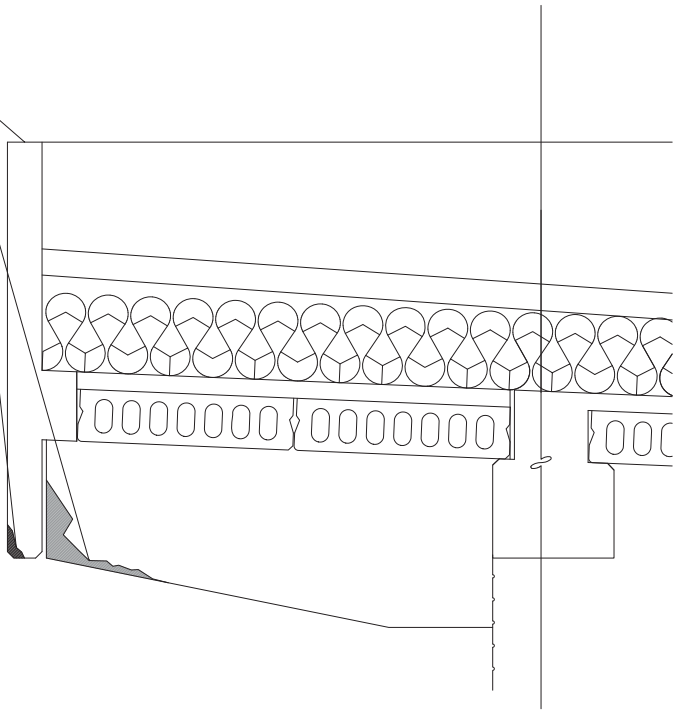

TYPICAL SPALLING CONCRETE REPAIR

SCALE: NOT TO SCALE

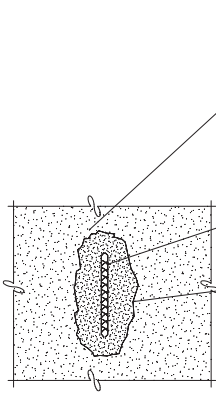

PATCH AND REPAIR AREAS OF SPALLED
CONCRETE (TYPICAL CONDITION SHOWN):
CONTRACTOR SHALL CHIP AWAY ALL
LOOSE CONCRETE UNTIL EXPOSING A
SOUND SUBSTRATE IN THE SPALL AREA.

CONTRACTOR SHALL POWER WIRE BRUSH
EXPOSED REBAR, REMOVING ALL RUST.

COAT REBAR WITH ANTI-RUST SOLUTION
AND PATCH AREA WITH CONCRETE
PATCHING COMPOUND, APPLY A FINISH TO
MATCH EXISTING ADJACENT AREAS IN
PLANE AND TEXTURE.

TYPICAL SPALLING CONCRETE REPAIR

SCALE: NOT TO SCALE

TYPICAL SPALLING REPAIR DETAIL
