

Ultra-High Flow Models for Master and all Satellite Units – Foundation Diagram

(Models JHB600, JHC600, JHB800, JHC800, JHD800)

PRODUCT INLET LOCATIONS

SINGLE MASTER

A	INLET FROM TANK
B	OUTLET TO SATELLITE A
C	NOT USED
D	NOT USED
POSITION	FUNCTION

1-GRADE, 1-HOSE - JHB600

DUAL MASTER

A	INLET FROM TANK A
B	OUTLET TO SATELLITE A
C	OUTLET TO SATELLITE B
D	INLET FROM TANK B
POSITION	FUNCTION

2-GRADE, 2-HOSE - JHB800

COMBO

A	INLET FROM TANK
B	OUTLET TO SATELLITE A
C	NOT USED
D	INLET FROM REMOTE
POSITION	FUNCTION

JHD800

SINGLE SATELLITE

A	INLET FROM REMOTE A
B	NOT USED
C	NOT USED
D	NOT USED
POSITION	FUNCTION


1-GRADE, 1-HOSE - JHC600

DUAL SATELLITE


A	INLET FROM REMOTE A
B	NOT USED
C	NOT USED
D	INLET FROM REMOTE B
POSITION	FUNCTION

2-GRADE, 2-HOSE - JHC800

TOP VIEW

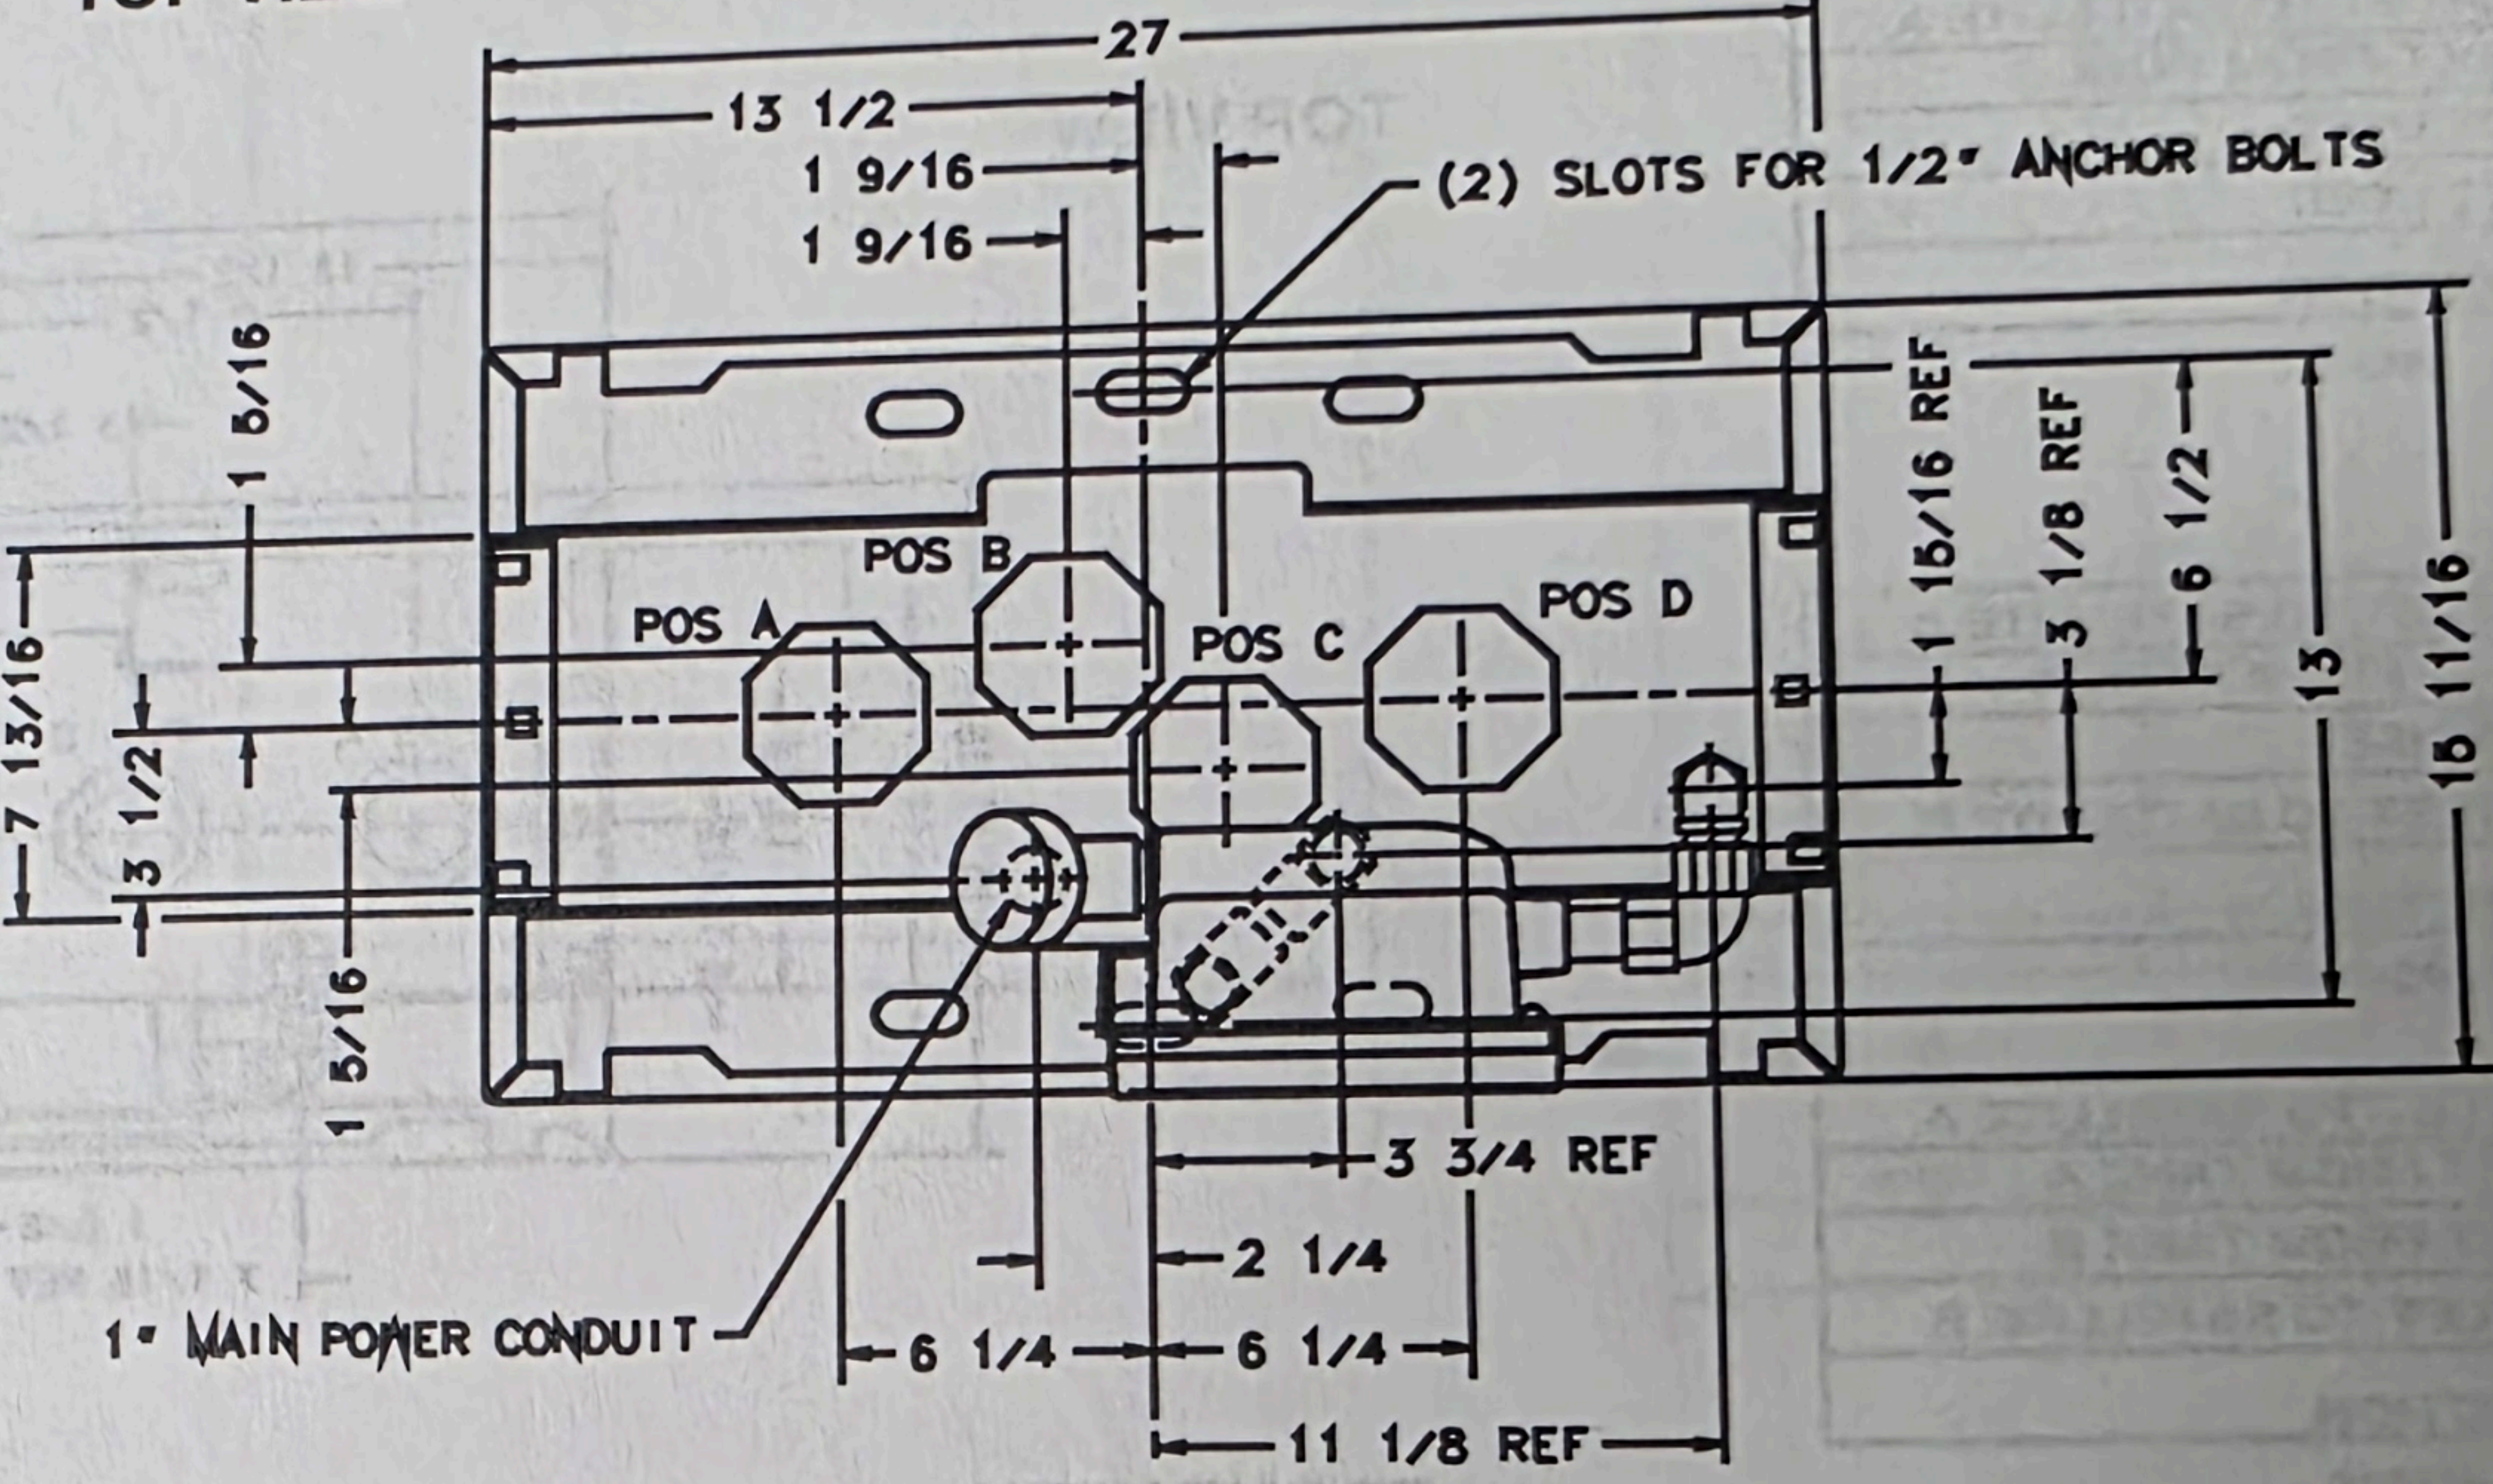

FRONT VIEW

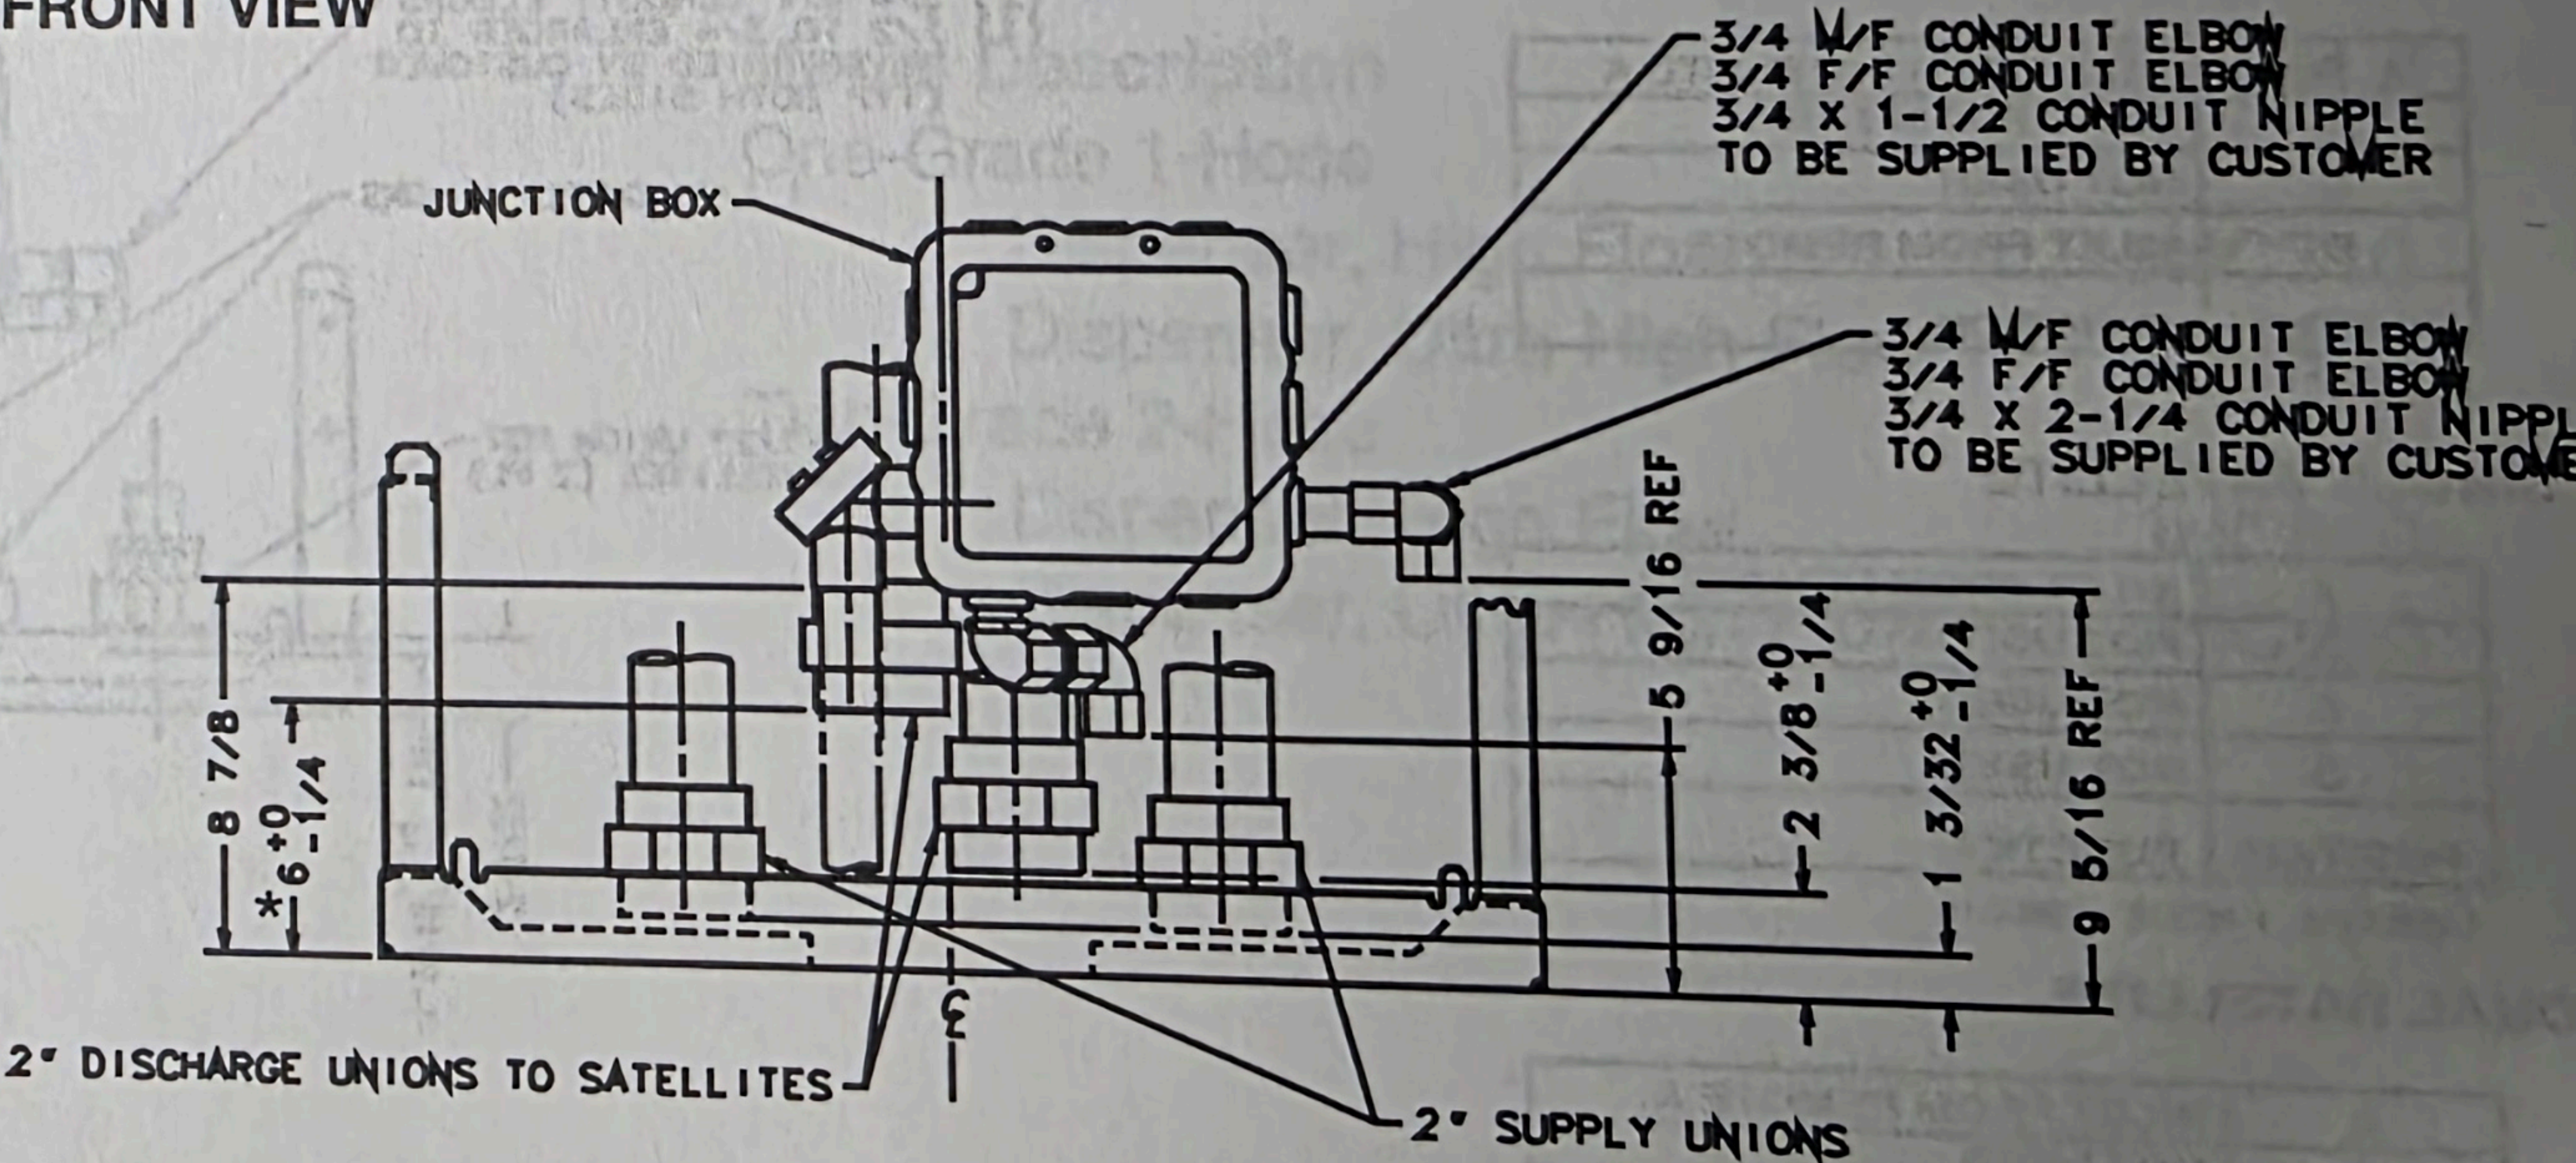

* POS B ELEVATION	UNIT TYPE
6" +0/-1/4	DUAL MASTER
2-3/8" +0/-1/4	SINGLE MASTER OR COMBO