

FIBERGLASS PILINGS BOLLARD DETAIL

NOTES:

Site Preparation:

- 1.0 Identify and mark the precise locations of the existing damaged bollards to be replaced.
- 2.0 Identify any additional damaged bollards.
- 3.0 Coordinate with park staff to determine any necessary closures or restrictions during construction.
- 4.0 Carefully remove the existing bollards, and pilings shards ensuring no debris is left behind.
- 5.0 Dispose of the removed bollards in an environmentally responsible manner.

- 1.0 Removal of Existing Bollards
- 1.1 Carefully excavate around each existing bollard without damaging the surrounding area.
- 2.0 Remove the existing damaged 10–14 inch diameter fiberglass bollards.
- 3.0 Transport the removed bollards to a designated disposal or recycling facility in compliance with environmental regulations.

- Bollard Installation:**
1.0 Acquire new fiberglass pilings, ensuring they match the material and diameter (10–14 inches) of the existing bollards.


- 3.0 Install the new bollards that meet the following specifications:
 - Material: 15 foot Fiberglass pilings that are high resistance to weather, storm damage, and storm impact, pilings cone caps and fasteners.
 - Diameter: Fiberglass pilings (10–14)-inches.
 - Height: fiberglass pilings tubes buried to no less than 8 foot in depth

by mean of hydro jetting utilizing adjacent saltwater sources to reduce impacts to surrounding natural resources.

- Mounting: Surface-mounted embedded directly into the ground.
- Ballards shall be filled with sand. Plings one caps added and fastened after inflated with sand.
- Variability: Plings will be installed in such a manner as to be vertically plumb, in line and in a uniformed consistent 6" clear spacing as to provide for a pleasing consistent aesthetic view shed. Clearly visible to approaching vehicles, replace existing markings if necessary.
- Ensure proper spacing and alignment of the ballards.
- Backfill and tamp the soil around the bollard foundations to prevent settling.

Restoration and Cleanup:

- 1.0 Remove any construction debris or materials from the site.
- 2.0 Restore the disturbed areas to their original condition, including replanting any vegetation that was damaged during construction.
- 3.0 Conduct a final inspection to ensure all bollards are properly installed and functioning as intended. Once installation has been completed the contractor shall perform a functionality test of all installed equipment in the presence of a government representative to validate its suitable operation.


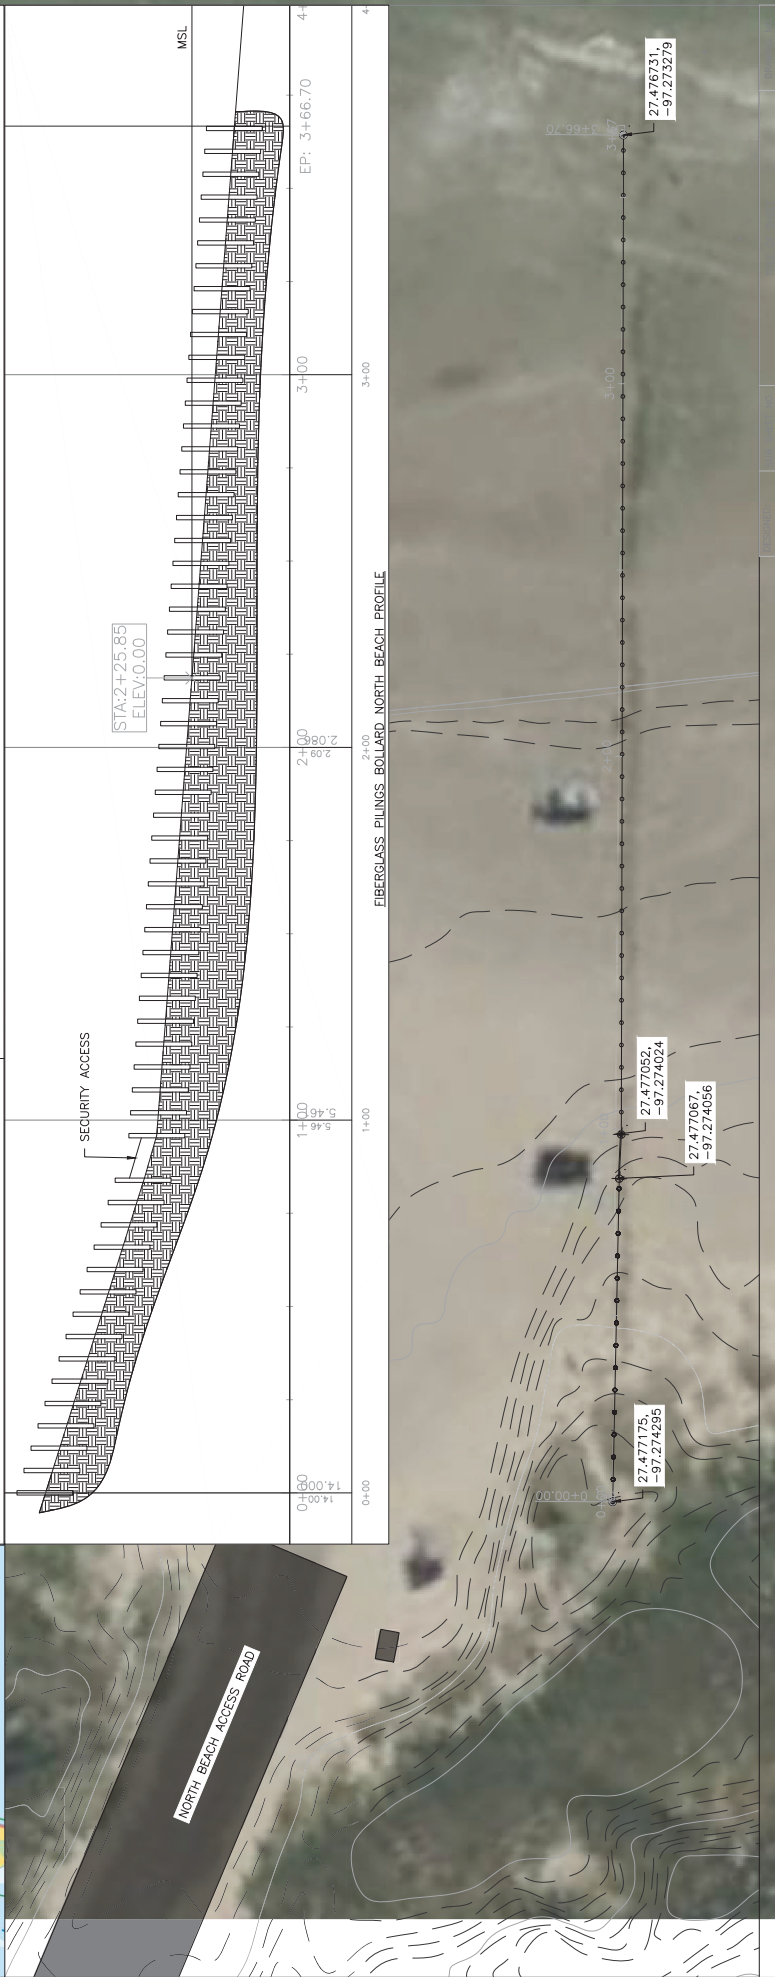


BEACH SECURITY
PILINGS REPLACEMENT
NORTH BEACH ACCESS

PMIS/PKG NO.
339194


X

 N.FLECK
 TECH. REVIEW:
 X
 DATE:
 14AUG2024

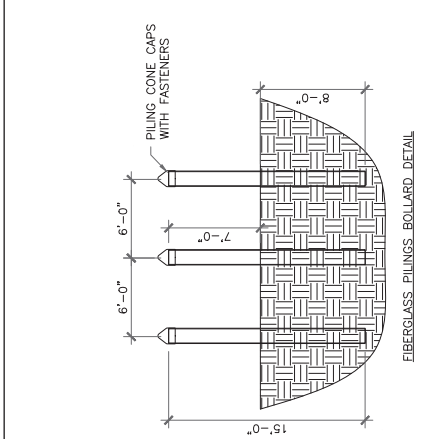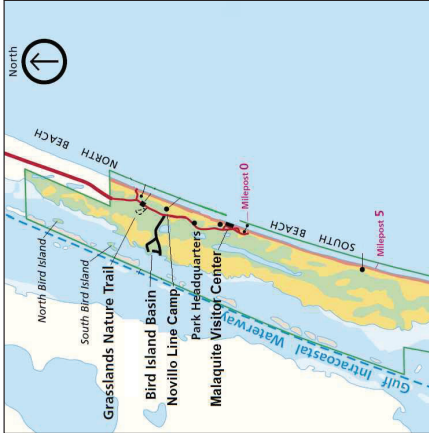

- NOTES:**
- Site Preparation:**
- 1.0 Identify and mark the precise locations of the existing damaged bollards to be replaced.
 - 2.0 Identify any additional damaged bollards.
 - 3.0 Coordinate with park staff to determine any necessary closures or restrictions during construction.
 - 4.0 Remove the existing bollards, and pilings shards ensuring visitor safety.
 - 5.0 Dispose of the removed bollards in an environmentally responsible manner.
- Removal of Existing Bollards**
- 1.0 Carefully excavate around each existing bollard without damaging the surrounding area.
 - 2.0 Remove the existing damaged 10–14 inch diameter fiberglass bollards.
 - 3.0 Transport the removed bollards to a designated disposal or recycling facility in compliance with environmental regulations.
- Bollard Installation:**
- 1.0 Acquire new fiberglass pilings, ensuring they match the material and diameter (10–14 inches) of the existing bollards.
 - 2.0 Inspect the new bollards for any manufacturing defects before installation.
 - 3.0 Install the new bollards that meet the following specifications:
 - Material: 15 foot Fiberglass pilings that are high resistance to weather, storm damage and impact.
 - Height: 7 foot.
 - Diameter: Fiberglass pilings (10–14 inch).
 - Height: fiberglass pilings tubes buried to no less than 8 foot in depth

- by means of hydro jacking utilizing adjacent softwater sources to reduce impacts to surrounding natural resources.
- Mounting: Surface-mounted embedded directly into the ground. Bollards shall be infilled with sand. Pilings cone caps added and fastened after infilled with sand.
 - Visibility: pilings will be installed in such a manner as to be vertically uniform and in a uniform consistent 6 foot spacing as to provide for clear sight lines and visibility to approaching vehicles. Existing markings if necessary.
 - Ensure proper spacing and alignment of the bollards.
 - Backfill and tamp the soil around the bollard foundations to prevent settling.
- Restoration and Cleanup:**
- 1.0 Remove any construction debris or materials from the site.
 - 2.0 Restore the disturbed areas to their original condition, including replanting any vegetation that was damaged during construction.
 - 3.0 Conduct a final inspection to ensure all bollards are properly installed and functioning as intended. Once installation has been completed the area shall be left in a neat and professional condition of the site in the presence of a government representative to validate its suitable operation.

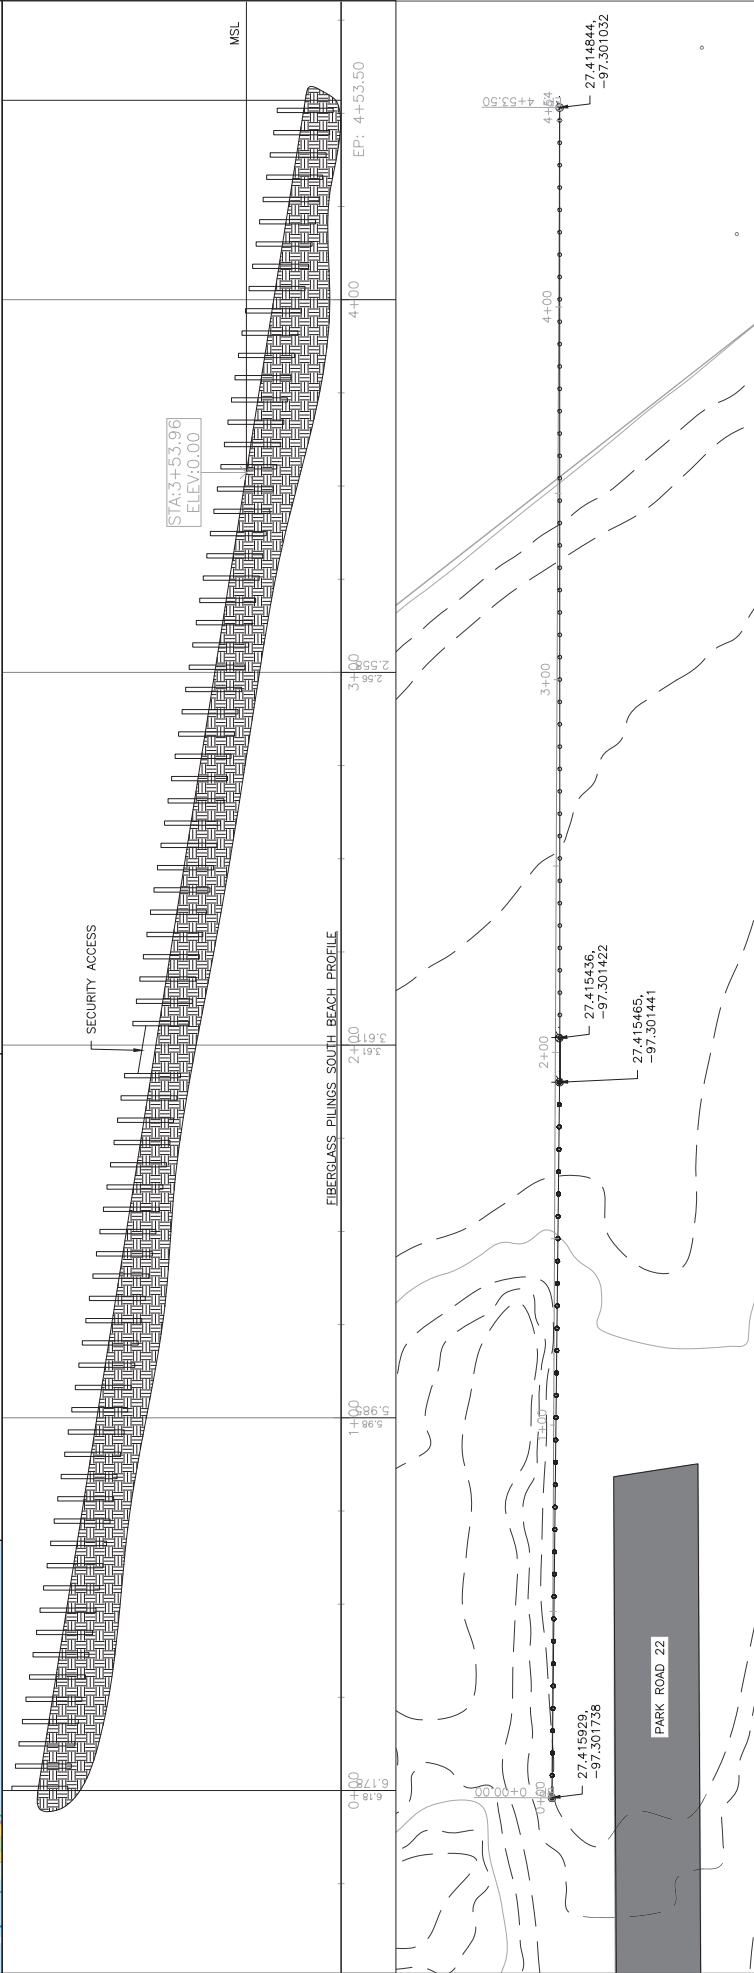

DESIGNED: X		SUB SHEET NO. C2		TITLE OF SHEET BEACH SECURITY PILINGS REPLACEMENT SOUTH BEACH ACCESS		DRAWING NO. X	
IN/LECK		TECH. REVIEW: X		PMS/PKG NO. 339194		SHEET 2 OF 2	
DATE: 14AUG2024				PADRE ISLAND NATIONAL SEASHORE PAIS			

0 25 50 100 Feet

1:200