


EMMA V2 SHOWER DOOR INSTALLATION INSTRUCTIONS

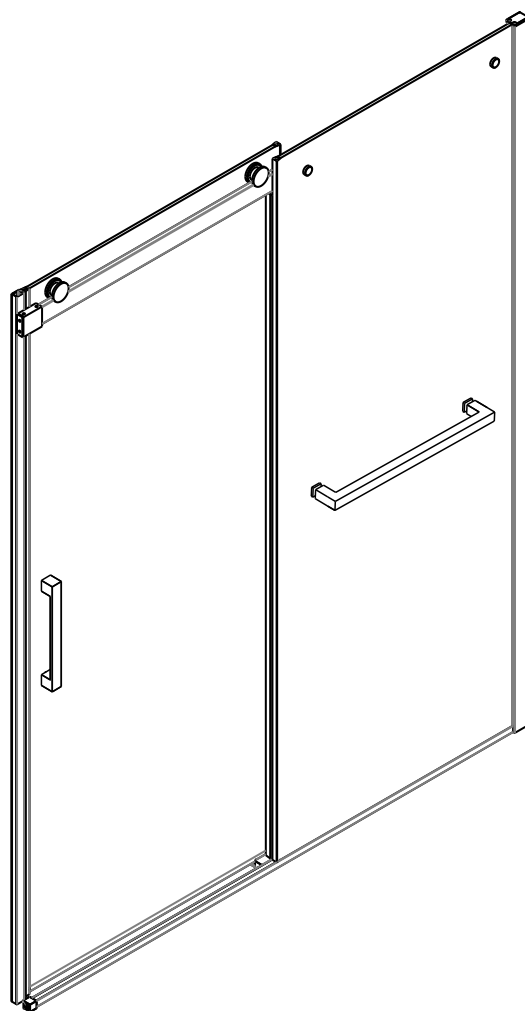

GD-EM4879-V2/GD-EM6079-V2

Size: 46" -48" x79" (GD-EM4879-V2)
56" -60" x79" (GD-EM6079-V2)

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.


Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.






Tools Required

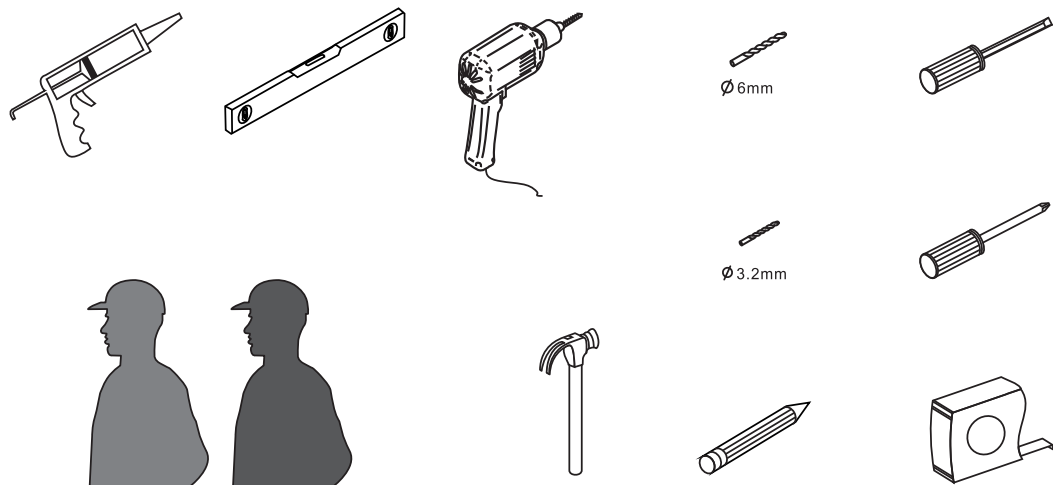


This product is heavy and may require two people to install.



◆ Box Contents:

[1]	1xHorizontal Rail.	➔		
[2]	1xInstallation Instruction.	➔		
[3]	1xHandle Set. 1xTowel Bar.	➔		 
[4]	2xClips. 1xScrew M4x12. 1xScrew Cover Cap.	➔		   
[5]	2xFixing Part. 2xAnti-collision.	➔		   
[6]	2xWall Connectors. 4xScrews M4x35. 4xWall Plugs.	➔		 
[7]	2xTop Rollers.	➔		 
[8]	6xScrews M4x35. 6xWall Plugs.	➔		     
[9]	3xScrews M4x8. 3xScrew Cover Caps.	➔		  
[10]	5xWater Deflectors.	➔		
[11]	1xMagnetic Seal.	➔		
[12]	1xAluminum Seal. 1xAluminum Seal Cover. 3xScrews M4x25. 3xWall Plugs.	➔	 	       
[13]	2xWall Posts.	➔	 	 
[14]	1xPost.	➔		
[15]	1xFixed Panel.	➔		
[16]	1xDoor Panel.	➔		
[17]	1xProfile Cover. 2xScrews M4x16.	➔		  
[18]	1xInstallation Aid	➔		

◆ Assembly Drawing





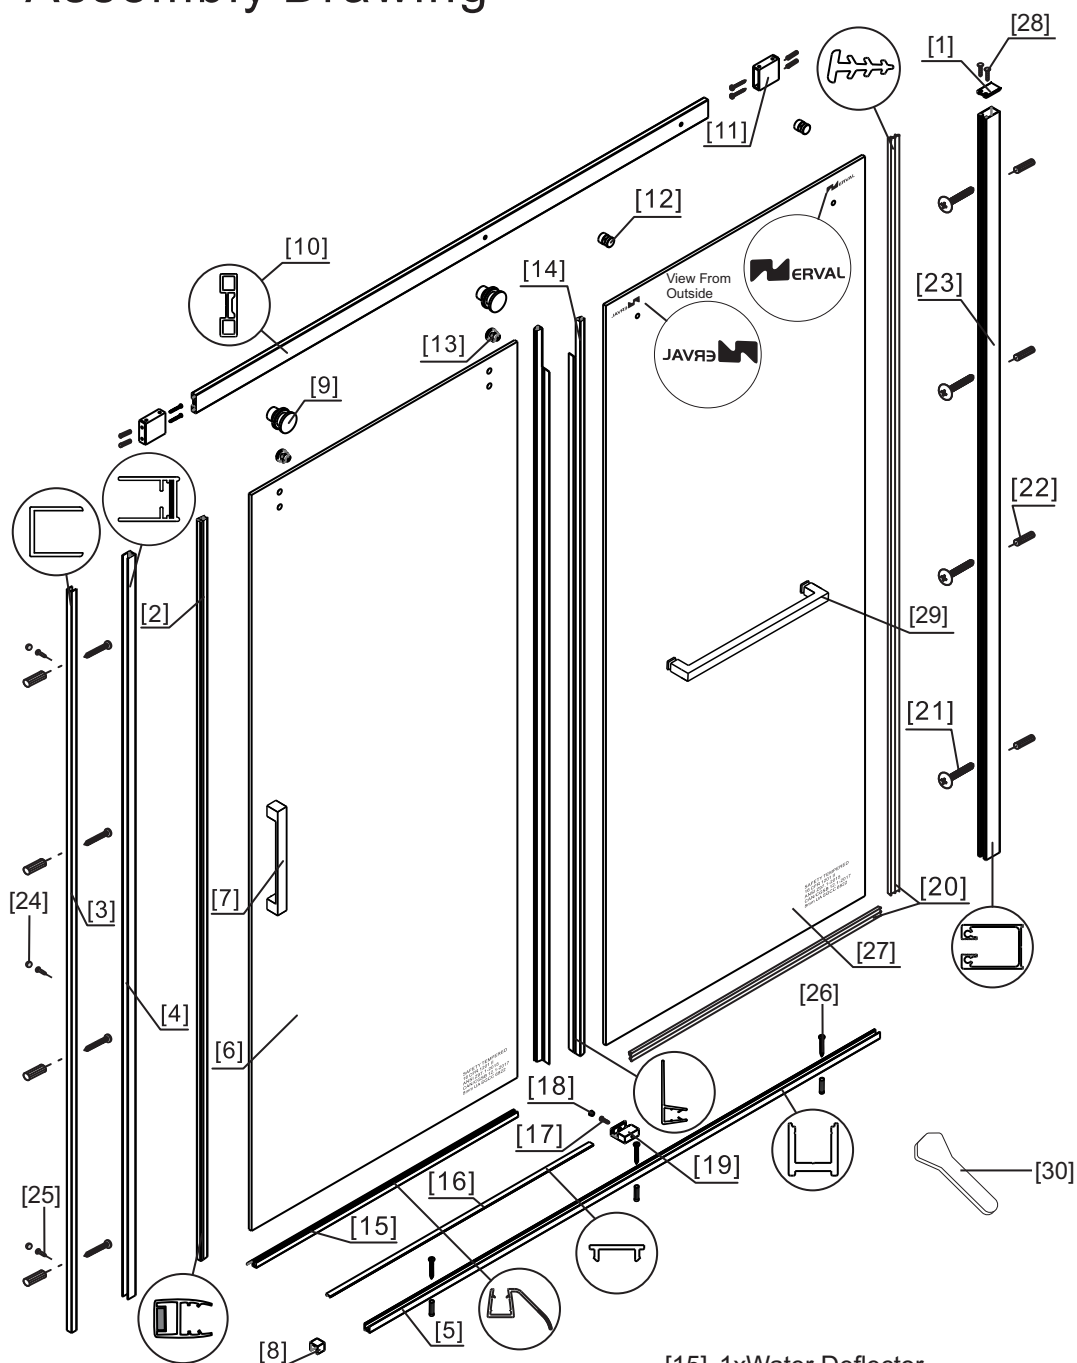


- [1] 1xProfile Cover
- [2] 1xMagnetic Seal
- [3] 1xWall Post
- [4] 1xPost
- [5] 1xAluminum Seal
- [6] 1xDoor Panel
- [7] 1xHandle Set
- [8] 1xClip
- [9] 2xTop Rollers
- [10] 1xHorizontal Rail
- [11] 2xWall Connectors
- [12] 2xFixing Parts
- [13] 2xAnti-collision Component
- [14] 2xWater Deflectors

- [15] 1xWater Deflector
- [16] 1xAluminum Seal Cover
- [17] 1xScrew M4x12
- [18] 1xScrew Cover Cap
- [19] 1xClip
- [20] 2xDeflectors
- [21] 6xFlat Screws M4x35
- [22] 13xWall Plugs
- [23] 1xWall Post
- [24] 3xScrew Cover Caps
- [25] 3xScrews M4x8
- [26] 3xScrews M4x25
- [27] 1xFixed Panel
- [28] 2xScrews M4x16
- [29] 1xTowel Bar
- [30] 1xInstallation Aid


◆ Installation Steps

Step 1

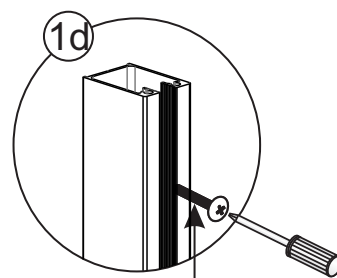
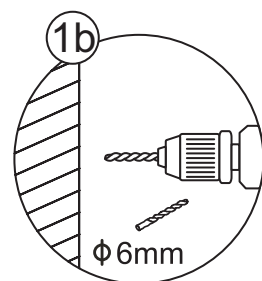
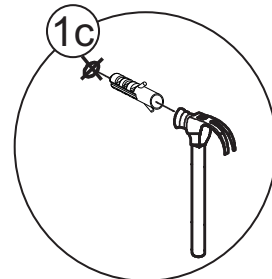
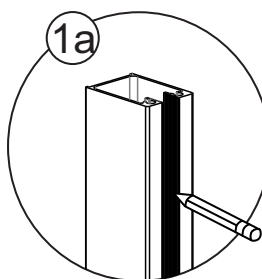
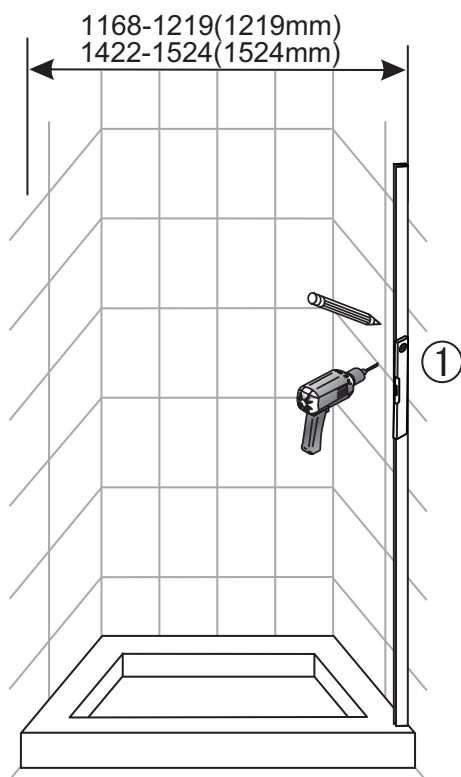


Step 2


Vertical profile can be adjusted 25mm ,When the glass is fully inserted into the vertical profile(eg:the Installation size size is 1524) ,bottom U channel need to be cut 25mm(to be 1485), when the glass isn't fully inserted into the vertical profile ,bottom U channel need to be cut accordingly.Cut the spare length with a saw if the installation size less than 1524mm.

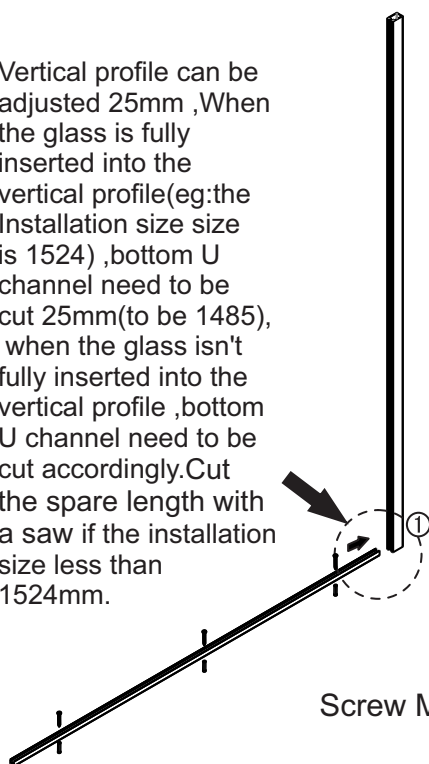


Screw M4x25

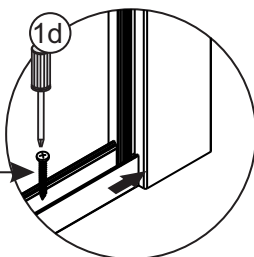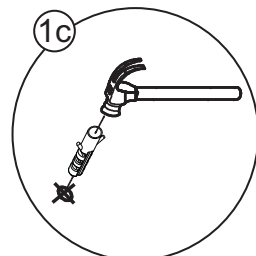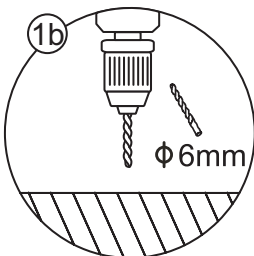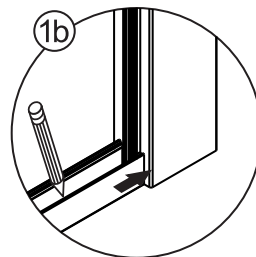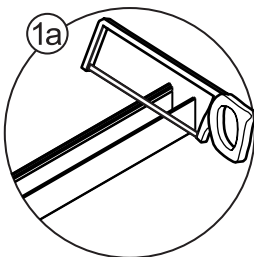



Step 3

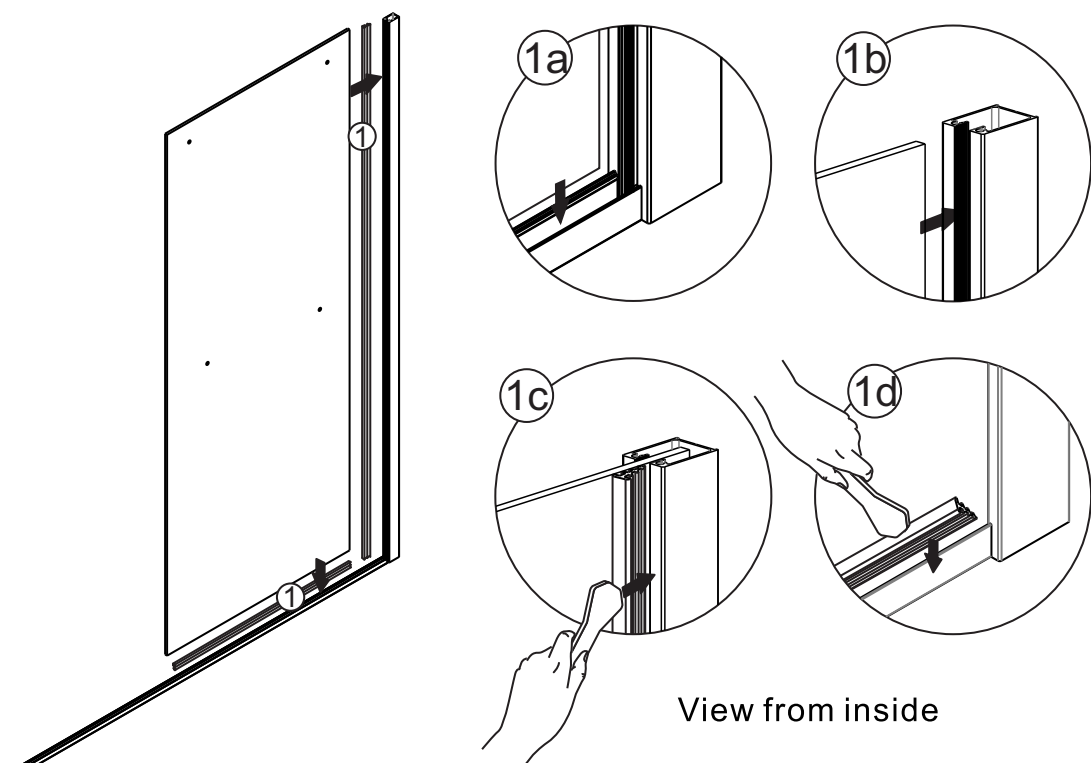


Step 4

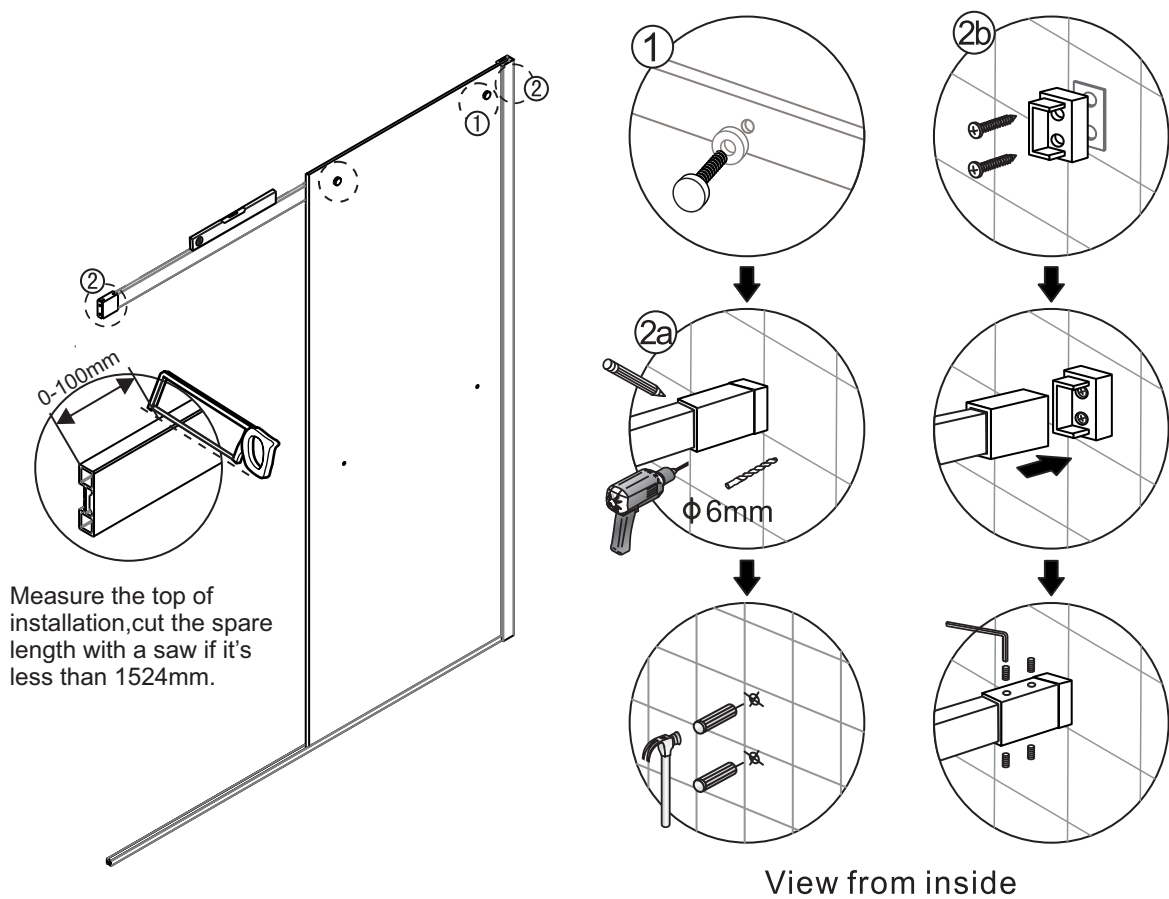



Step 5

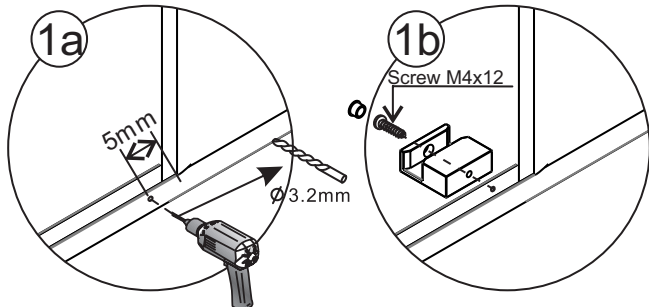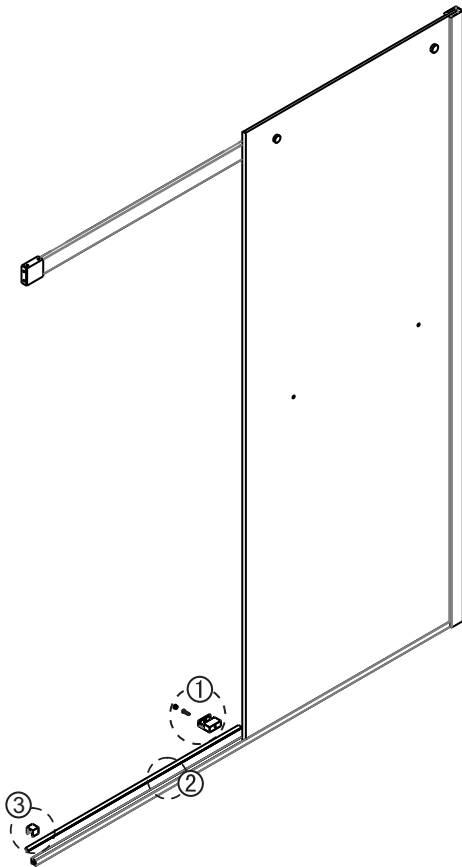

View from inside

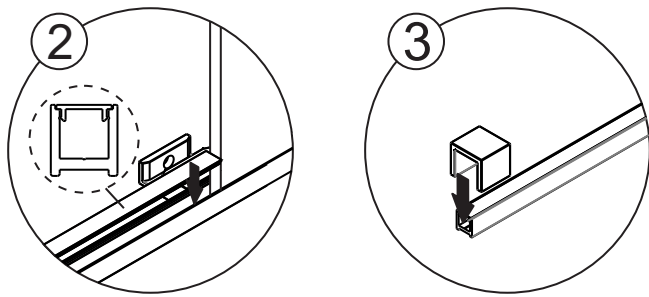



Step 6

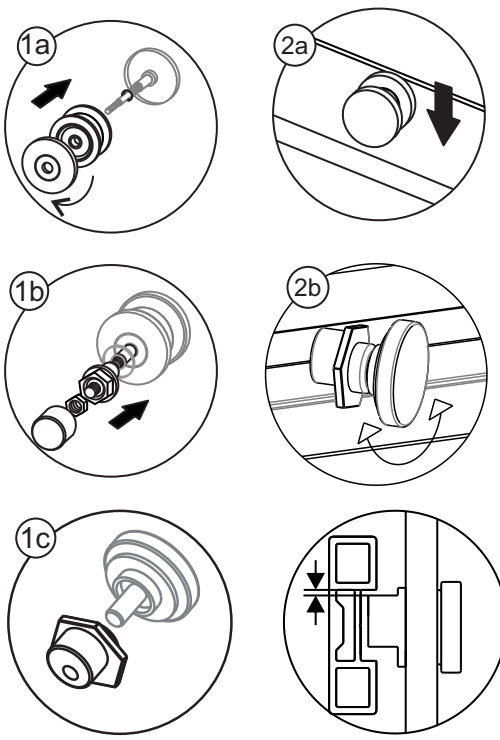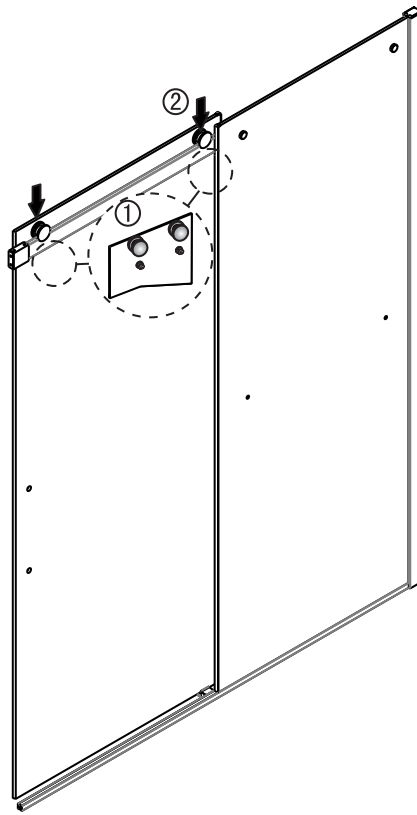

View from inside



The gaps need to be adjust to the minimal size

Step 7

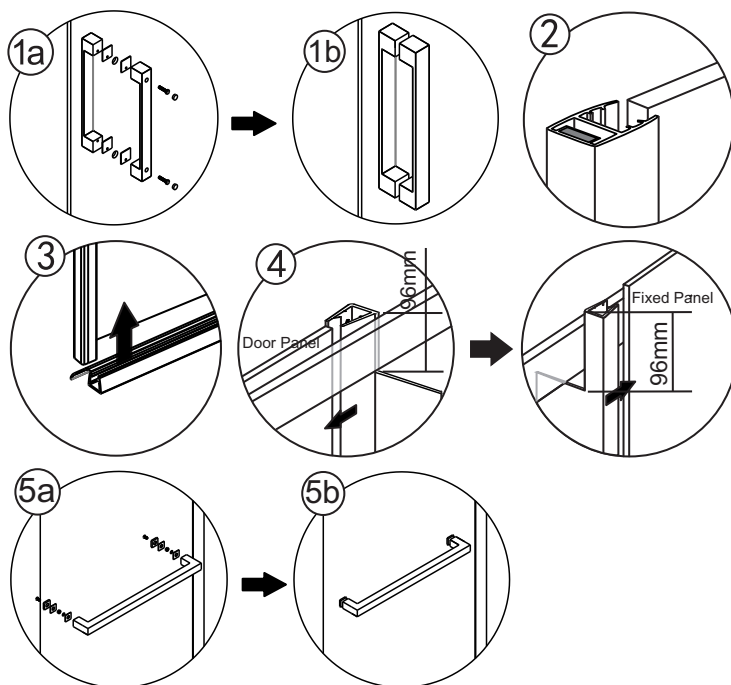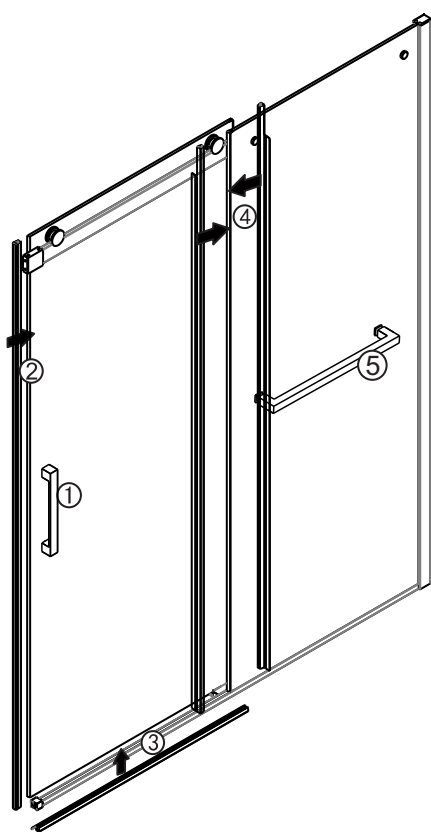



⚠ Ensure wall profiles are plumb.
Adjust enclosure to be square and level.
Wheels should be adjusted to square the
doors and ensure smooth running.

Step 8

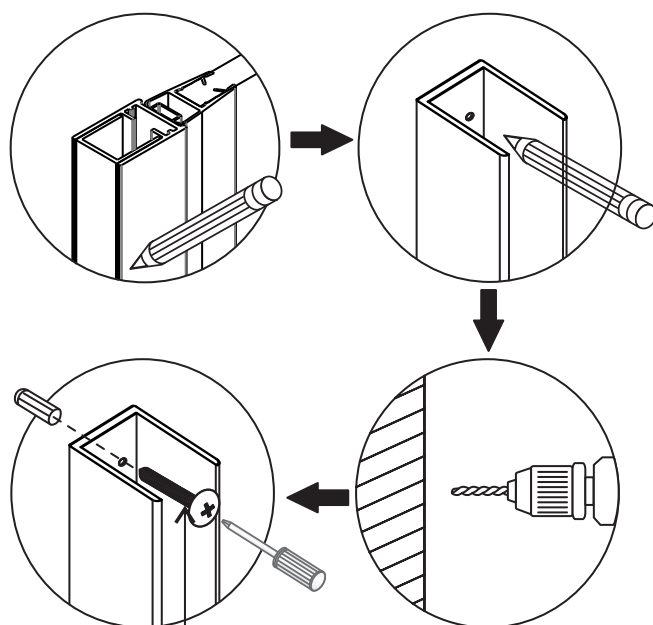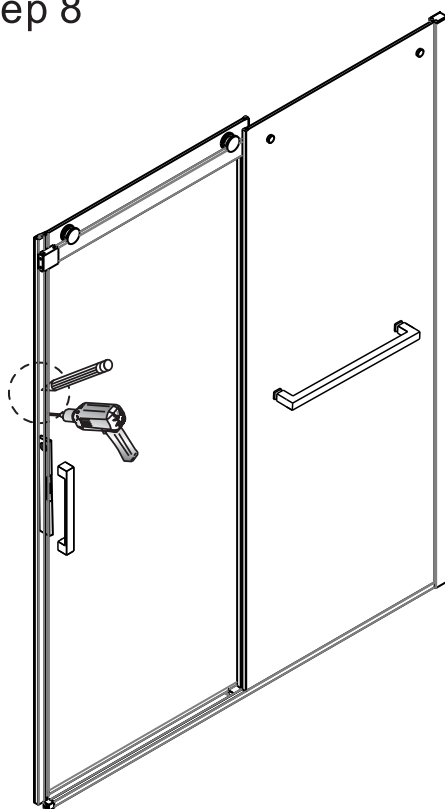



Flat Screw
M4x30

Step 9

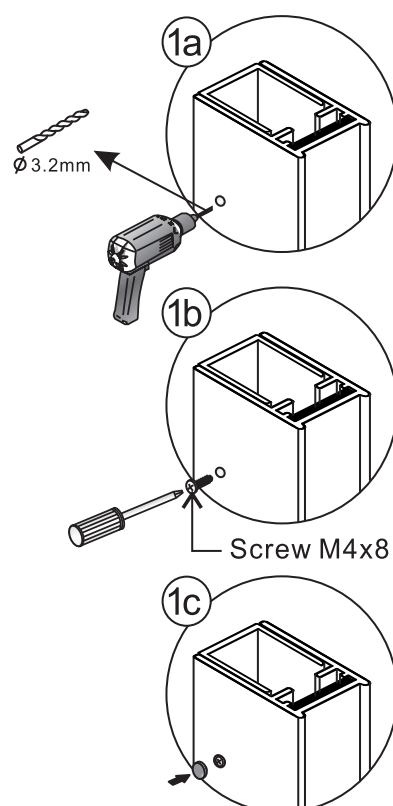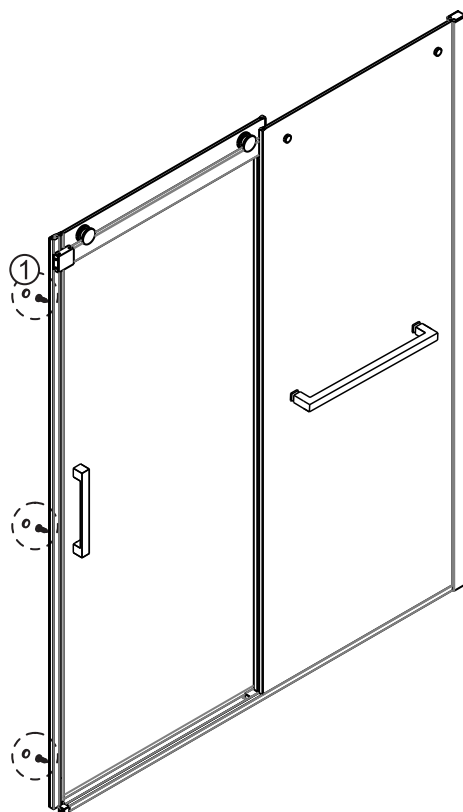


View from inside

Step 10

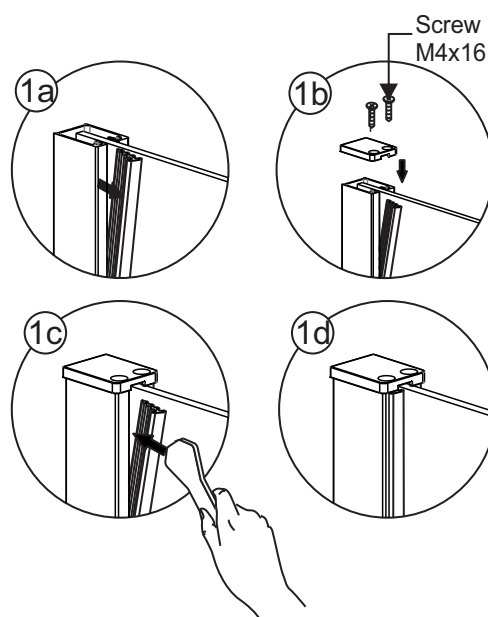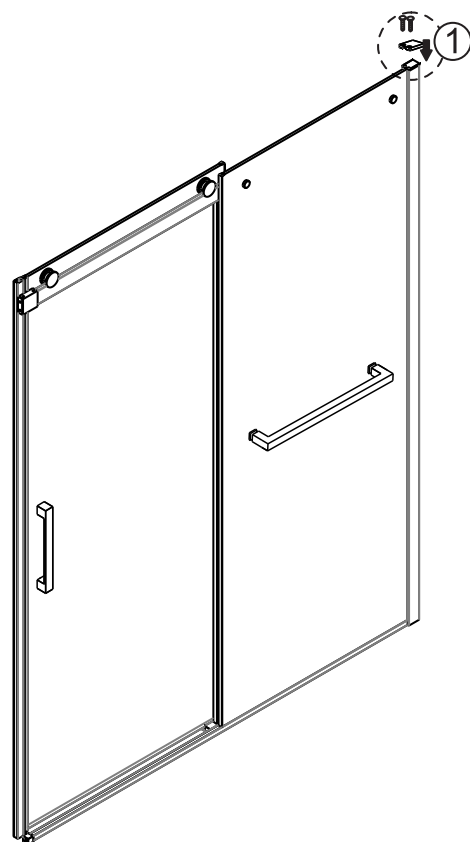

View from inside

Step 11

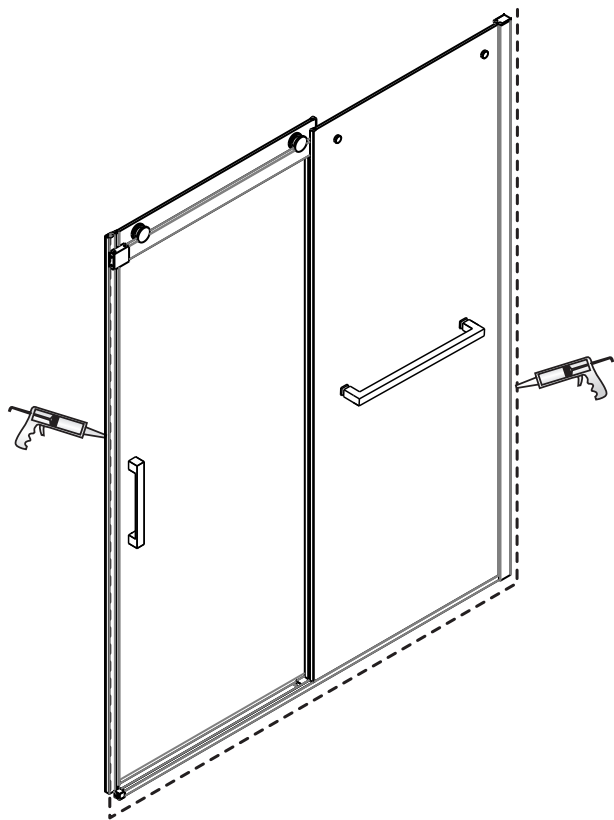

Silicone must be left to dry
for 24 hours before use.