5 Installation (Type VXvue)

5.1 Using DVD Drive

The setup of PC requires the DVD drive. Connect the DVD drive to the USB port on PC or that on the external right-side of the mobile X-ray system.

To access the USB port on PC, remove the inside cover and both side covers, and open the FPD box.

After use of DVD drive, close the FPD box and attach the removed covers again.

Reference M503-E404 MobileDaRt/Art Evolution Installation Manual Common Section "How to Open/Close Covers"

NOTE Do NOT connect the DVD drive to the USB hub of the system or the USB port on the left-side of the system. It may cause the power shortage and the system may not work correctly.

Hint If the power to the DVD drive is supplied from the AC adapter, or if the DVD drive is connected to the installation USB hub with the power supplied from the external power source, it can be connected to the USB hub of the system or the USB port on the left-side of the system.
In this case, it is not needed to open the inside cover and both side covers, and remove the FPD box.

5.2 Setting for DR System

NOTE For details, refer to the service manual published by Vieworks. This chapter covers basic settings only.

5.2.1 BIOS Setting

1

Turn ON the power to the computer, and press and hold the following key to enter the BIOS setup screen. If you cannot enter BIOS mode, the message "Reboot and Select proper Boot device or Insert Boot Media in selected Boot device and press a key" appears. In this case, turn off the computer and try again.

- 【MX8 version】 <ESC> Key
- 【MX9 version】 <F2> Key

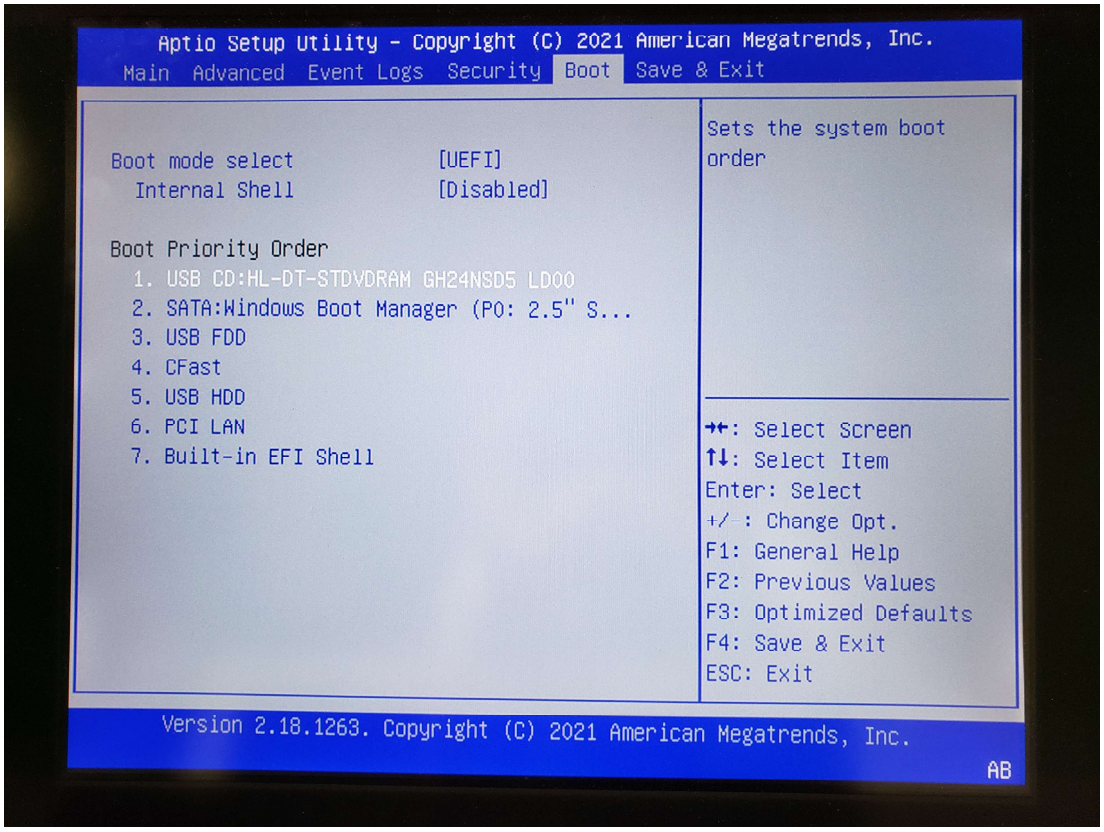


Fig. 5-1

NOTE In the BIOS setup screen, use <↑>and <↓> keys to switch the selected item, which will be highlighted. Select a desired item and press <Enter> key to show the submenu. Specify a value by <↑>and <↓> keys, and press <Enter> key.

5.2.2 To Restore SSD Image

Restore the master disk. This operation requires the preparation of the following products.

■ **MX8 version**

- 566-15875-16 MAINT VW 430L
- GHOST BOOT DISK

■ **MX9 version**

- 566-15875-26 MAINT VW 430P
- GHOST BOOT DISK

1 **Insert "GHOST BOOT DISK" into the drive, and turn the power ON.**

2 **When BIOS window shows a message as shown below, press any key to boot Ghost program.**



Fig. 5-3

NOTE Ghost should be booted within 5 seconds after the message is displayed. Otherwise, Windows will be started from the hard drive. In this case, restart PC and try again.

5.2.3 How to Login to Windows

This section describes on how to log in to Windows.

Table 5-1 (Reference) User account and password

User account	Password
Operator	vxvue (all lowercase letters)
Shimadzu	service (all lowercase letters)

1 **Select "Shimadzu" account, input "service (all lowercase letters)" in the Password field, and press <Enter> key.**

NOTE
- When the dialog prompting you to restart PC, click [Restart Now].
- When the window requesting your Windows product key appears, click [Cancel] and continue the operations.

5.2.4 Windows License Agreement

Perform the license agreement of Windows10.

1 **Log in with Shimadzu account.**

2 **Double-click "Open the license activation screen.bat" on the desktop.**

3 **Select your country from "Select your country or region", and click [Next].**

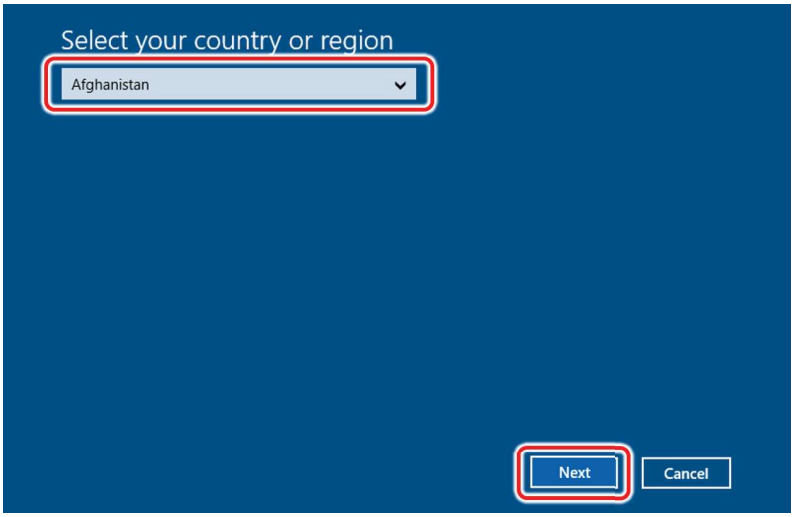


Fig. 5-14

4 **Call one of the numbers listed and follow the directions to get your ID.**
Click [Enter confirmation ID] to move to the ID input screen.

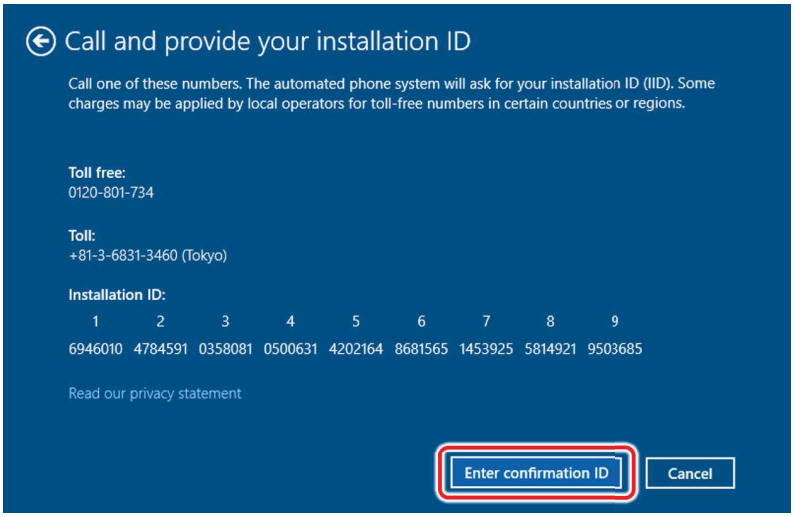


Fig. 5-15

1 **Set the "Exposure Time" for "2800"ms.**

6.5.2 Settings for MobileDaRt Evolution

Refer to the following manual and perform the procedure.

Reference M503-E404 MobileDaRt Evolution Installation Manual (Common Section)

6.6 Touch Screen Monitor Calibration

If the touch sensor of the monitor needs adjustment, perform the procedures below.

6.6.1 Software Calibration

Hint Perform this calibration when the cursor cannot jump to your fingertip on the monitor.

1 **Doubl-click on the shortcut of "DMT-DD" to run Touch Screen Properties.**



Fig. 6-59

2 **Click [Basic Setting] and open Software Setting tab, and click [9Point] in the Calibrate field.**

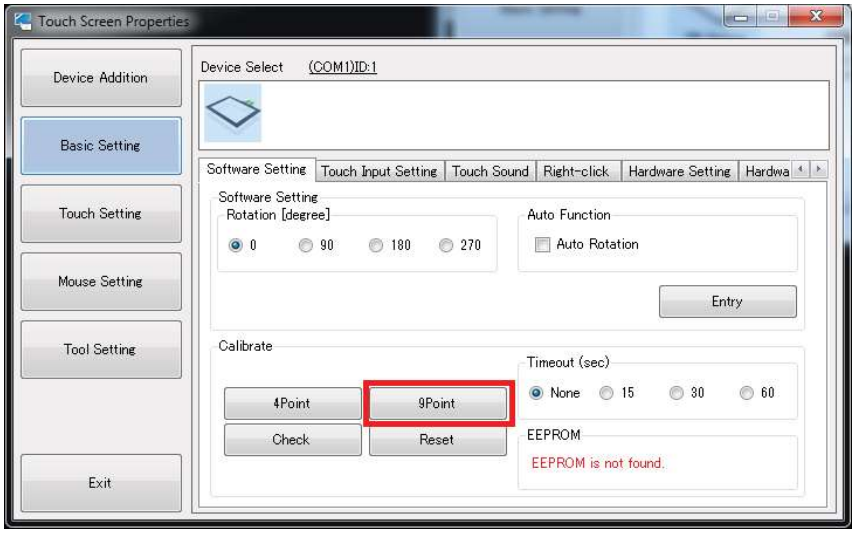


Fig. 6-60

5.2.7 Installation of VXvue Software

■ Install VXvue

1 **Create "temp" folder on drive D.**

2 **Copy the "VXvue*.*.*(SMZ).zip" file to "D:\temp" folder.**
It takes a few minutes to copy the file.

> NOTE "*.*.*" contains the revision number.

3 **Right-click it and select [Extract All...].**

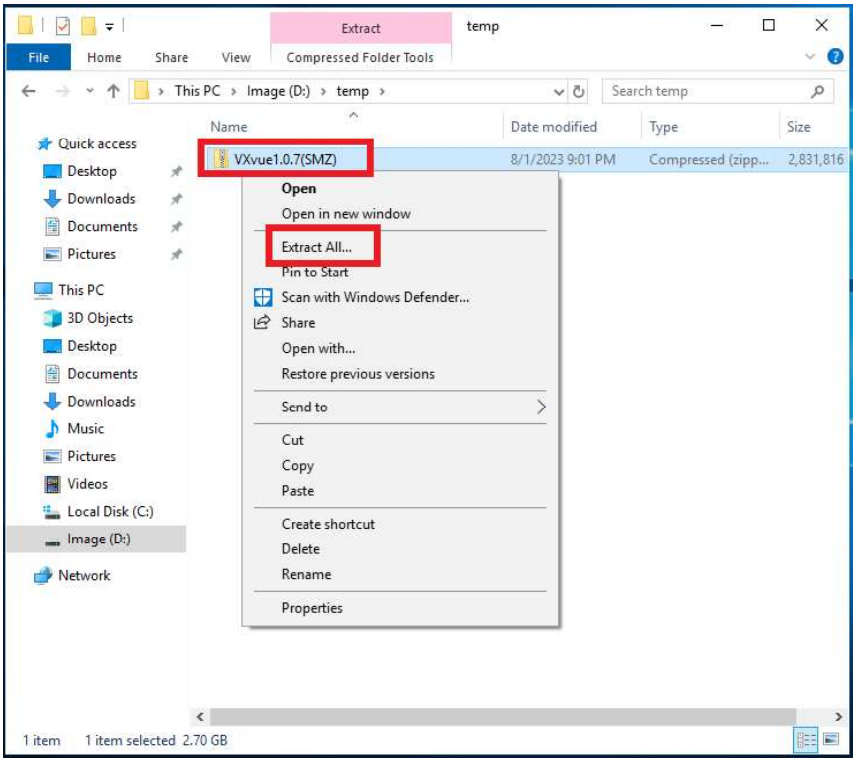


Fig. 5-30

4 **In the following window, click [Extract].**

It takes about 1 minute to extract the file.

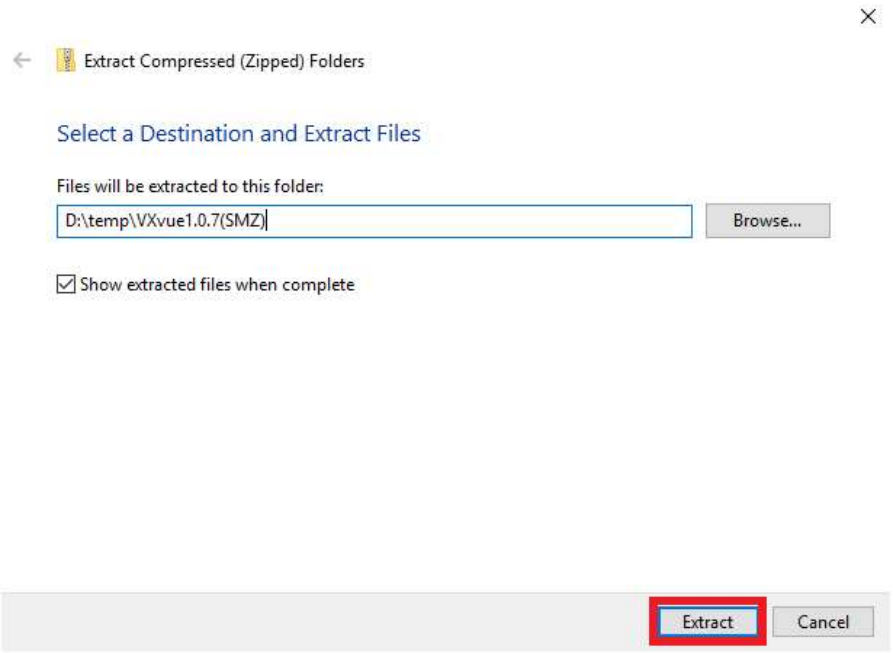


Fig. 5-31

5 **Right-click "D:\temp\VXvue*.*.*(SMZ)\Install.exe" and select [Run as administrator].**

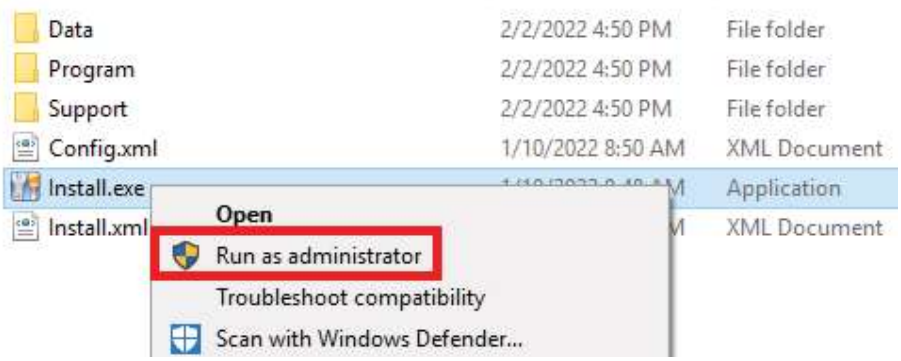


Fig. 5-32

■ Install VSS

1 **Copy the "VSS.ShimadzuMobile_*.*.*.zip" file to "D:\temp" folder.**

> NOTE "*.*.*" contains the revision number.

2 **Right-click it and select [Extract All...].**
Click [Extract].

3 **Right-click "D:\temp\VSS.ShimadzuMobile_*.*.*\VSS.ShimadzuMobile.Setup_*.*.*.exe" and select [Run as administrator].**

> NOTE "*.*.*" contains the revision number.

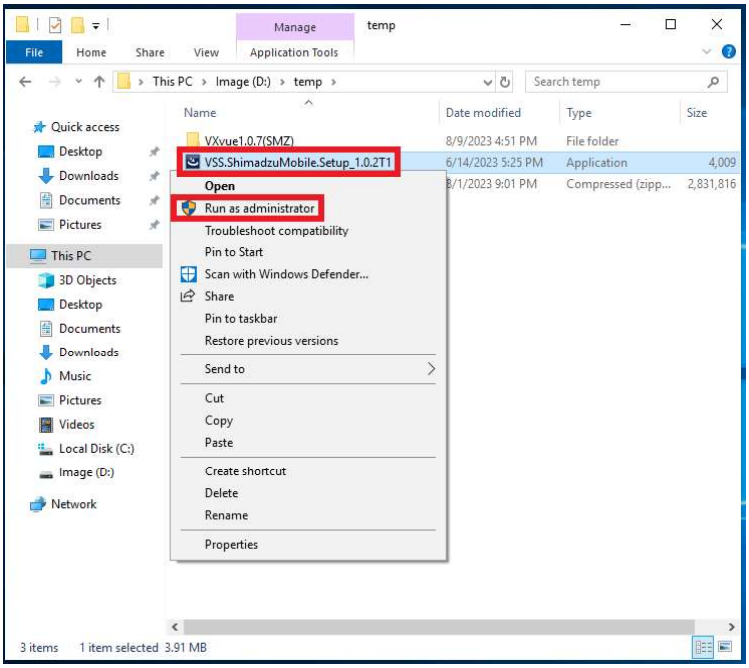


Fig. 5-50

■ Configure the Firewall

1 **Log in with Shimadzu account.**

2 **Click the "Start" menu and select "Windows System" - "Control Panel".**

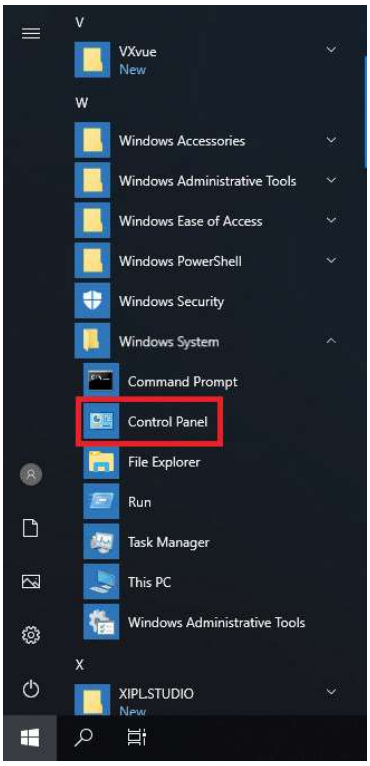


Fig. 5-40

5.2.8 Setting of Access Point (for Aruba)

■ Setting for Detector Default

> **NOTE** To set the Vieworks FPD, you must first match the Access Point settings to the FPD defaults.
>
> If the Access Point to be used is in the initial state, perform the following procedure.

1 **Click "C:\Shimadzu\APsettingforVW\APsettingforVieworksDefault.bat".**

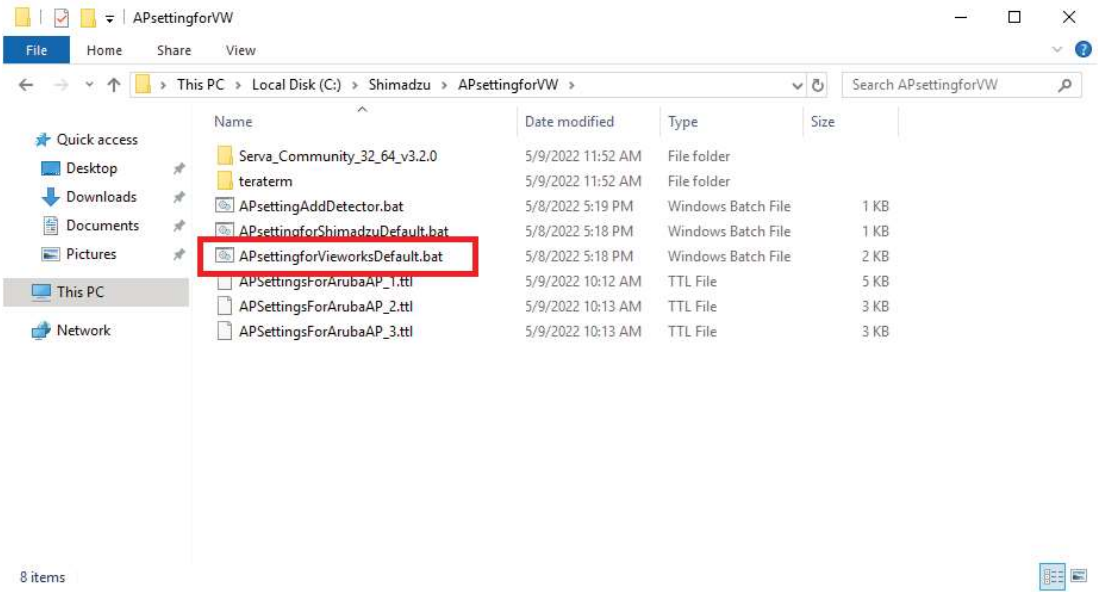


Fig. 5-140

2 **Click [I'm a "Community" user].**



Fig. 5-141

■ FPD Registration

When setting for the first time, please start from the procedure of "5.2.8 Setting of Access Point (for Aruba)" - "Setting for Detector Default"

1 **Click the "VXSetup.exe - Shortcut" on the Desktop.**

2 **If the following window is displayed, Enter "service" for ID, “service" for Password and click [Login].**

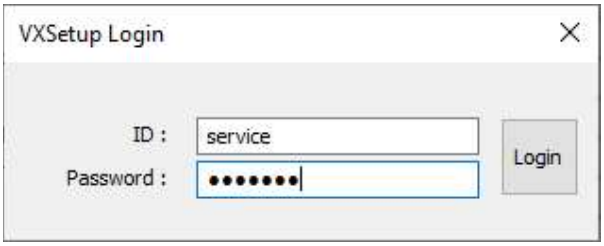


Fig. 5-76

3 **Click the "Setting" in "Detector".**

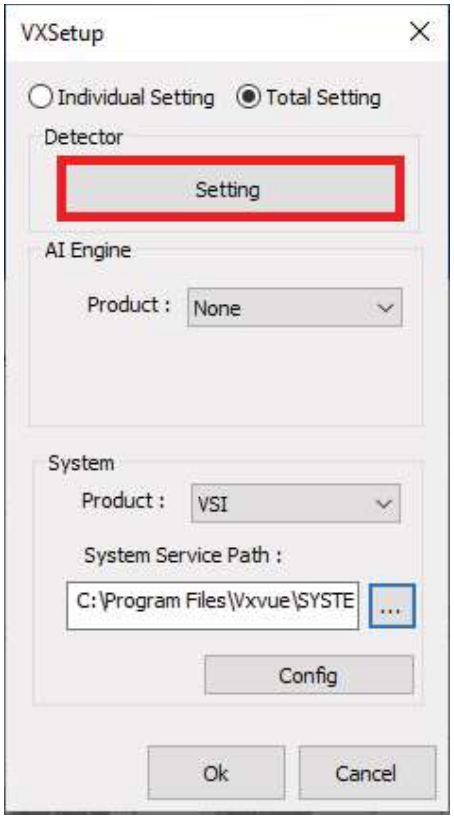


Fig. 5-77

6 **If the selection is successful, it is displayed as a green marker. Click [Next].**

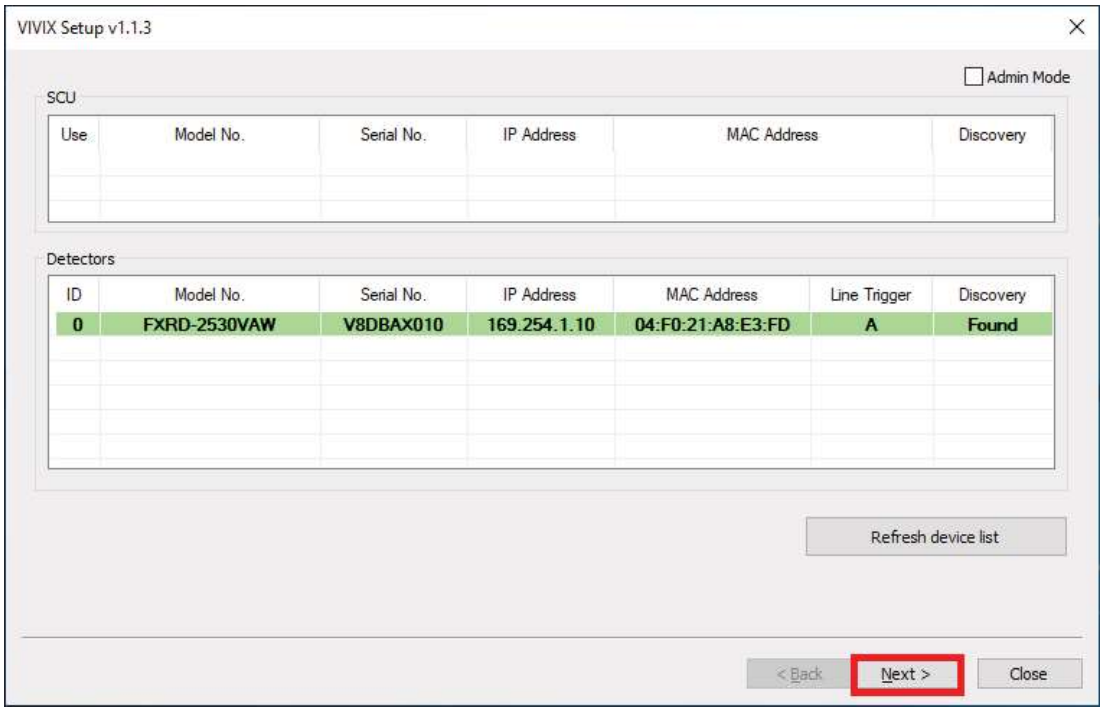


Fig. 5-80

7 **Click [Configuration] for the detector whose settings to change.**

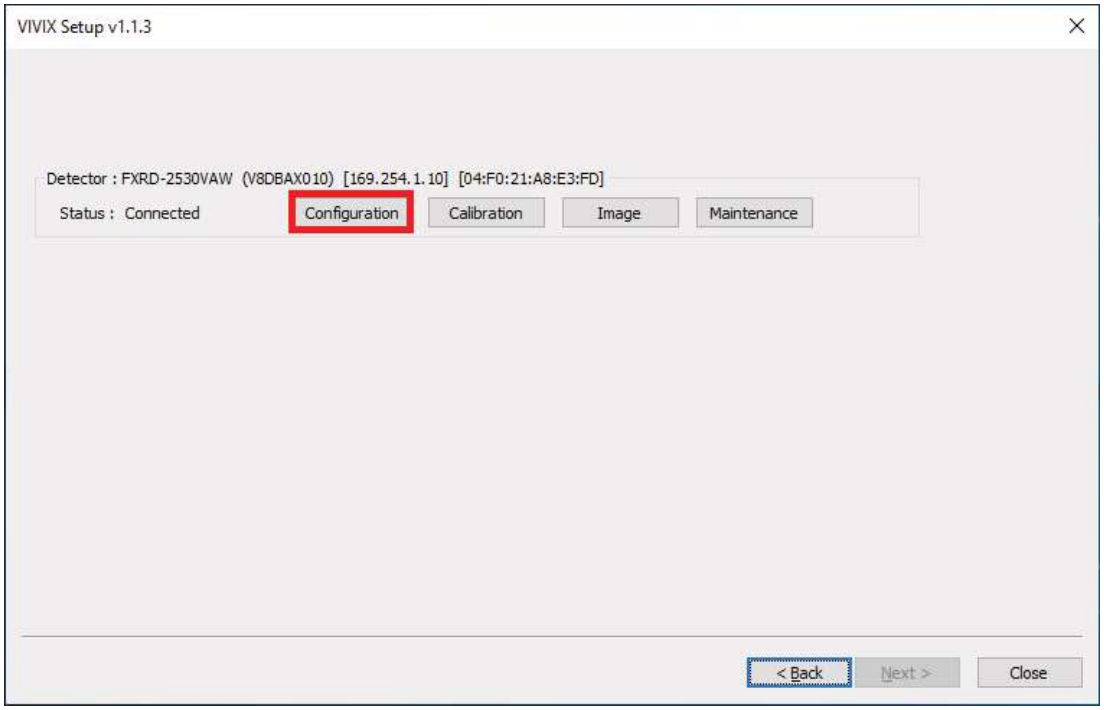


Fig. 5-81

8 Change the Detector settings, click [Set Config]. The following settings are standard.

Table 5-2

Items		Value
Wireless Network	SSID	Shimadzu_Mobile
	Key	shimadzuservice
	Wireless Only	On
Power Mode	Sleep	After 10 min
	Shut down	After 30 min
AP Button Type		Preset Switching
Exposure Mode		DR Trigger
Image Transmission	Option	Preview

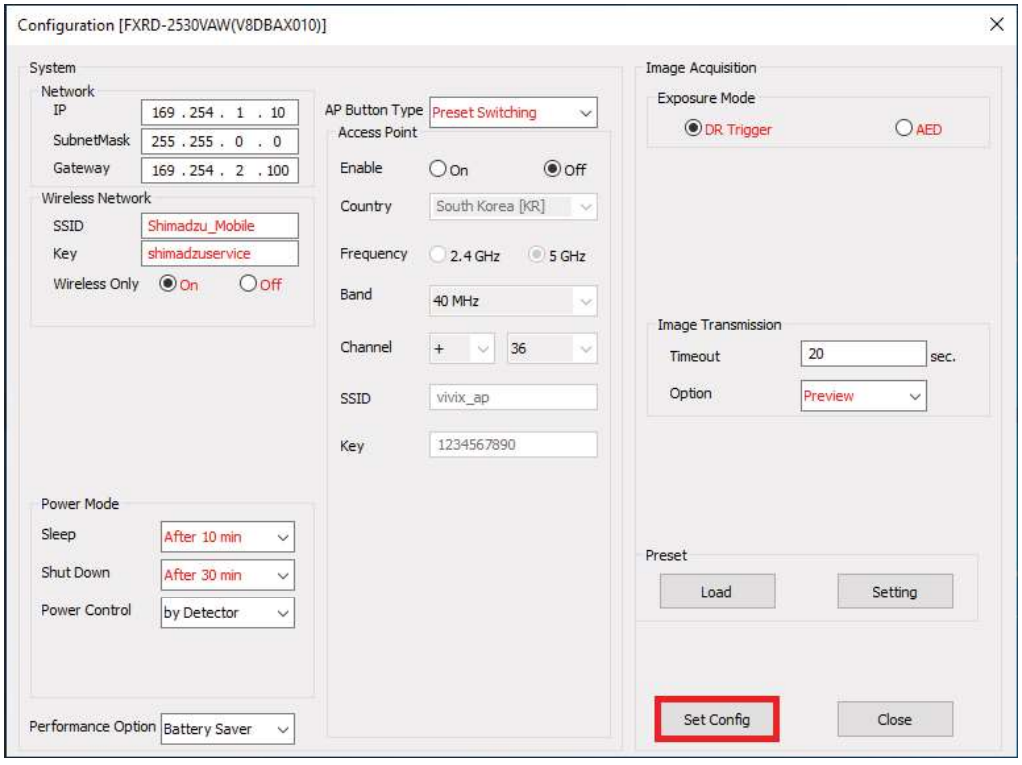


Fig. 5-82

■ Setting for Shimadzu Default

Table 5-3

Item	Setting Value
IP address	169.254.0.51
Subnet mask	255.255.0.0
Default gateway	169.254.0.50
ESSID	Shimadzu_Mobile
Passphrase	shimadzuservice
Band	5GHz
Frequency band	W52 (40ch)
Encryption	ON
Broadcast Filtering	Disable
Deauth inactive client	Enable

NOTE To change the Access Point setting from the FPD default to the Shimadzu standard, perform the following procedure.

1 **Click "C:\Shimadzu\APsettingforVW\APsettingforShimadzuDefault.bat".**

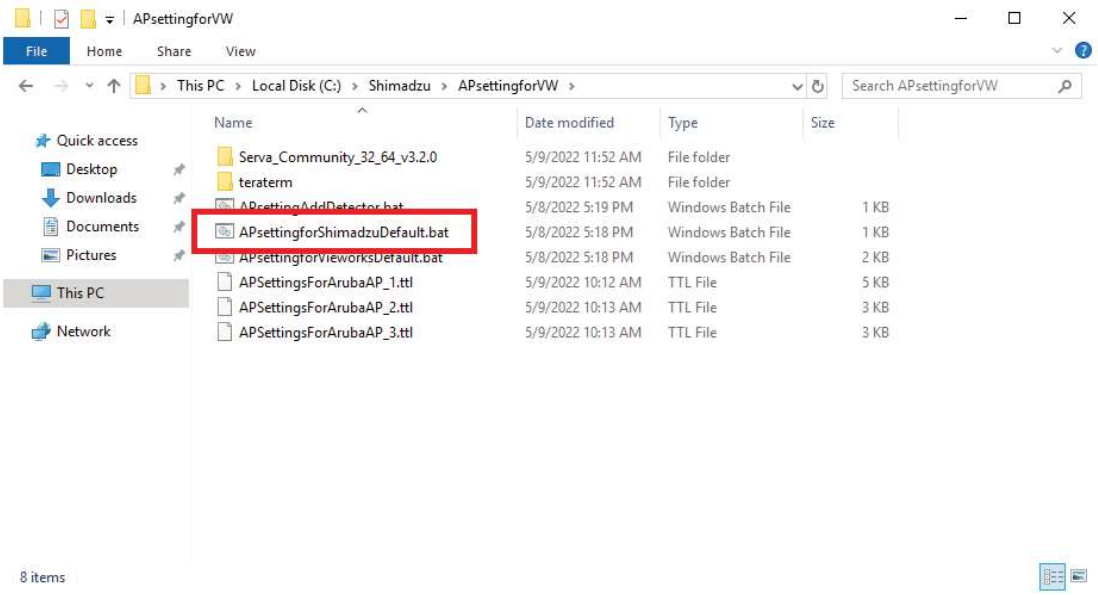


Fig. 5-145

■ FPD Calibration

1 **Before Calibration**

- Preheat the detector for at least 30 minutes before starting calibration.
- Measurements may be inaccurate if the detector is not preheated sufficiently.
- Place the collimator in the center of the detector and fully open.
- Adjust the SID to 150 cm or less and include the detector in the X-ray field.

2 **Click the "VXSetup.exe - Shortcut" on the desktop.**

3 **Enter "service" for ID, “service" for Password and click [Login].**

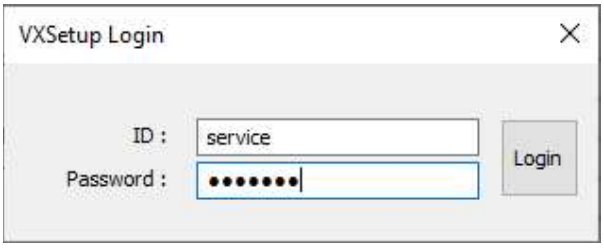


Fig. 5-90

4 **Lock the target PC again.**

Reference "To Lock PC" P.540

5 **Check the status of PC to make sure the target PC is locked.**

Reference "To Check PC status" P.541

5.6 Backup After Installation

In consideration of possible setting data loss, hard disk corruption or other data errors, back up the Important setting file to restore the status at the installtion.

1 **Make backup media according to the following instructions**

Reference • "6.2 How to Perform Restoration from Recovery DVD"
"6.3 Backup and Recovery with Windows Backup"

5.5 McAfee Embedded Control (MEC)

Antivirus software "McAfee Embedded Control (MEC)" is installed on this device. When locked by MEC, you cannot install, uninstall or launch unauthorized software. Refer to the following and operate.

■ Necessary operation at initial installation

Hint Wait until the installation work involving the software installation is completed.

Step	References	Remarks
1	"5.5.1 Introduction"	Understanding MEC
2	"5.5.2 Basic operation" - "To Create White List"	Create a whitelist
3	"5.5.2 Basic operation" - "To Lock PC"	Lock MEC

■ Necessary operations when updating and installing additional software

Table 5-14

Step	References	Remarks
1	"5.5.2 Basic operation" - "To Check PC status"	Check the status of MEC
2	"5.5.2 Basic operation" - "To Unlock PC"	Unlock MEC
3		update and installation
4	"5.5.2 Basic operation" - "To Create White List"	Create a whitelist
5	"5.5.2 Basic operation" - "To Lock PC"	Lock MEC

10 **Confirm the following shortcuts are created on the desktop.**

- SecureExec.bat
  MEC_menu.htm



Fig. 5-212

11 **Right-click "C:\Solidcore\Scripts\MakeWhiteList.bat" and select Edit.**

12 **Change the line "sadmin so c:" to "sadmin so c: d:" and save it.**

13 **Open a command prompt and enter the following.**

sadmin recover
sadmin features disable mp
sadmin config set pkgbootperf=1

NOTE
- When prompted for a password, enter "Shimadzu".
- The input is successful if the response is as follows
  ・sadmin recover
  → Local CLI has been successfully recoverd.
  → Local CLI is already recovered.
  ・sadmin features disable mp
  → Reboot feature changes to take effect
  ・sadmin config set pkgbootperf=1
  → If nothing is displayed, it is normal.

14 **Make sure MEC is unlocked.**

Reference "To Check PC status" P.541

15 **Eject Antivirus OP S/W (565-10197) from the drive.**

The installation of antivirus package software is now completed.

■ To Create White List

⚠ CAUTION

Before creating White List, update of the configuration is needed in some cases. Following the procedure of the target PC, create White List after necessary preparation is completed.

6 **Enter the password on the Command Prompt.**

- Password: Shimadzu

7 **The creation of the White List starts. The processing time is depends on the target PC. It approximately takes from 1 min to 15min.**

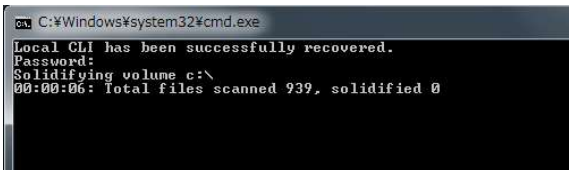


Fig. 5-214

NOTE When the creation ends, Command Prompt is automatically closed.

8 **In case that configuration files are updated, password might be required several times after the creation of White List. Then, please enter the following password.**

- Password: Shimadzu

■ To Lock PC

1 **Log in as an administrator.**

2 **Double click on the "MEC_menu.htm" on the desktop.**

3 **Click on the [LockPC] on the menu.**

NOTE If security warning appears, press [Run].



Fig. 5-215

4 **Enter the password on the Command Prompt.**

- Password: Shimadzu

5 **Shutdown dialog appears, and PC restarts.**