All IT Tools

**Newsletters** 

**Events** 

SpiceWorld

O Search Spiceworks

**Login Join** 

**Login Join** 


**Tech General** 

# What Is Computer Architecture? Components, Types, and Exampl

Computer architecture determines how a computer's components exchange signals to enable input, processing, and output.



 $\triangle$ 

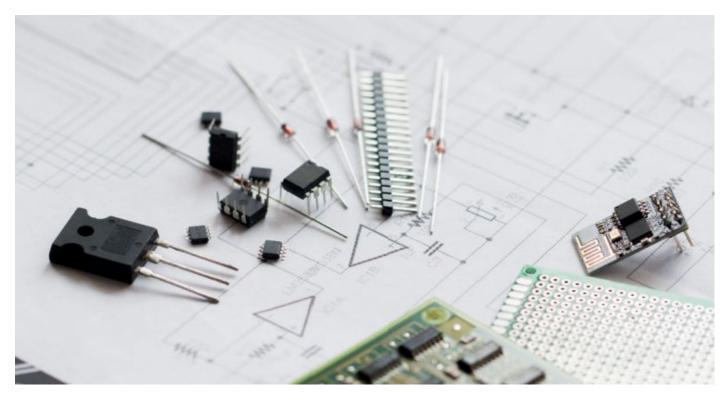

- Computer architecture is defined as the end-to-end structure of a compute system that determines how its components interact with each other in helping execute the machine's purpose (i.e., processing data).
- This article explains the components of computer architecture and its key types and gives a few notable examples.

#### **Table of Contents**

- What Is Computer Architecture?
- **Components of Computer Architecture**
- Types of Computer Architecture
- **Examples of Computer Architecture**


# What Is Computer Architecture?

Computer architecture refers to the end-to-end structure of a computer system



13/12/2024, 7:48 pm

that determines how its components interact with each other in helping to execute the machine's purpose (i.e., processing data), often avoiding any reference to tl actual technical implementation.

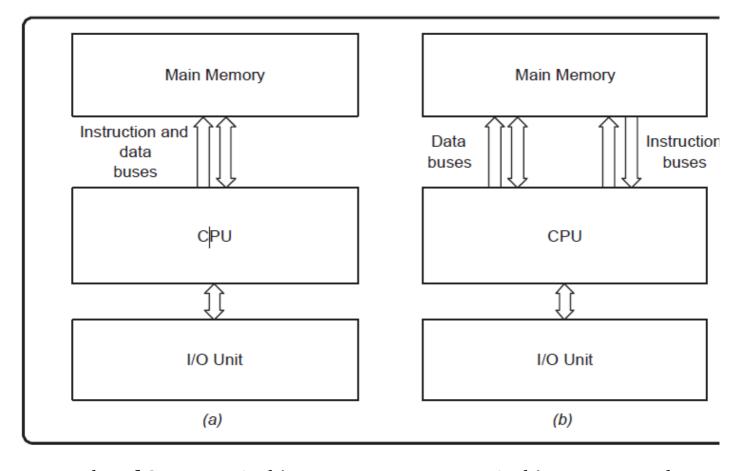

Examples of Computer Architecture: Von Neumann Architecture (a) and Harv Architecture (b)

Source: ResearchGate 🗷

Computers are an integral element of any organization's infrastructure, from tl equipment employees use at the office to the cell phones and wearables they us work from home. All computers, regardless of their size, are founded on a set of principles describing how hardware and software connect to make them function This is what constitutes computer architecture.

Computer architecture is the arrangement of the components that complise a

13/12/2024, 7:48 pm

computer system and the engine at the core of the processes that drive its functioning. It specifies the machine interface for which programming languag and associated processors are designed.

Complex instruction set computer (CISC) and reduced instruction set computer (RISC) are the two predominant approaches to the architecture that influence I computer processors function.

**CISC** processors have one processing unit, auxiliary memory, and a tiny registe set containing hundreds of unique commands. These processors execute a task with a single instruction, making a programmer's work simpler since fewer line code are required to complete the operation. This method utilizes less memory may need more time to execute instructions.

A reassessment led to the creation of high-performance computers based on the **RISC** architecture. The hardware is designed to be as basic and swift as possible and sophisticated instructions can be executed with simpler ones.

# How does computer architecture work?

Computer architecture allows a computer to compute, retain, and retrieve information. This data can be digits in a spreadsheet, lines of text in a file, dots color in an image, sound patterns, or the status of a system such as a <u>flash drive</u>

- **Purpose of computer architecture:** Everything a system performs, from online surfing to printing, involves the transmission and processing of numbers. A computer's architecture is merely a mathematical system intended to collect, transmit, and interpret numbers.
- Data in numbers: The computer stores all data as numerals. When a developer is engrossed in machine learning code and analyzing sophisticat algorithms and data structures, it is easy to forget this.

- **Manipulating data:** The computer manages information using numerical operations. It is possible to display an image on a screen by transferring a matrix of digits to the video memory, with every number reflecting a pixel color.
- **Multifaceted functions:** The components of a computer architecture includes both software and hardware. The processor hardware that executes computer programs is the primary part of any computer.
- **Booting up:** At the most elementary level of a computer design, programs executed by the processor whenever the computer is switched on. These programs configure the computer's proper functioning and initialize the different hardware sub-components to a known state. This software is known as <u>firmware</u> since it is persistently preserved in the computer's memory.
- **Support for temporary storage:** Memory is also a vital component of computer architecture, with several types often present in a single system. The memory is used to hold programs (applications) while they are being executed by the processor and the data being processed by the programs.
- **Support for permanent storage**: There can also be tools for storing data sending information to the external world as part of the computer system. These provide text inputs through the keyboard, the presentation of knowledge on a monitor, and the transfer of programs and data from or to disc drive.
- **User-facing functionality:** Software governs the operation and functioning of a computer. Several software 'layers' exist in computer architecture.

  Typically, a layer would only interface with layers below or above it.


The working of a computer architecture begins with the bootup process. Once the firmware is loaded, it can initialize the rest of the computer architecture and ensure that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly, i.e., helping the user retrieve, consume that it works seamlessly it is not always that it works seamlessly it is not always the user retrieve, consume that it works seamlessly it is not always the user retrieve.

See More: <u>Distributed Computing vs. Grid Computing: 10 Key Comparisons</u>

# **Components of Computer Architecture**

Depending on the method of categorization, the parts of a computer architectucan be subdivided in several ways. The main components of a computer architecture are the CPU, memory, and peripherals. All these elements are link by the system bus, which comprises an address bus, a data bus, and a control by Within this framework, the computer architecture has eight key components, a described below.

# **Components of Computer Architecture**

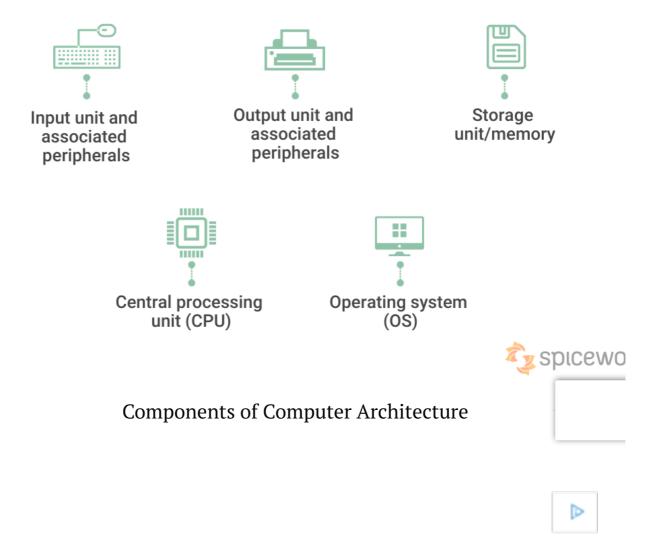

# 1. Input unit and associated peripherals

# 2. Output unit and associated peripherals

The output unit delivers the computer process's results to the user. A majority the output data comprises music, graphics, or video. A computer architecture's output devices encompass the display, printing unit, speakers, headphones, etc

To play an MP3 file, for instance, the system reads a number array from the discand into memory. The computer architecture manipulates these numbers to convert compressed audio data to uncompressed audio data and then outputs t resulting set of numbers (uncompressed audio file) to the audio chips. The chip then makes it user-ready through the output unit and associated peripherals.

# 3. Storage unit/memory

The storage unit contains numerous computer parts that are employed to store data. It is typically separated into primary storage and secondary storage.

#### Primary storage unit

This component of the computer architecture is also referred to as the main memory, as the CPU has direct access to it. Primary memory is utilized for stori

information and instructions during program execution. Random access memo (RAM) and read-only memory (ROM) are the two kinds of memory:

- RAM supplies the necessary information straight to the CPU. It is a tempo memory that stores data and instructions intermittently.
- **ROM** is a memory type that contains pre-installed instructions, including firmware. This memory's content is persistent and cannot be modified. RO utilized to boot the machine upon initial startup. The computer is now unaware of anything outside the ROM. The chip instructs it on how to set the computer architecture, conduct a power-on self-test (POST), and finall locate the hard drive so that the operating system can be launched.

#### Secondary storage unit

Secondary or external storage is inaccessible directly to the CPU. Before the CP uses secondary storage data, it must be transferred to the main storage. Secondary storage permanently retains vast amounts of data. Examples include <a href="https://examples.com/hard/disk/drives/">hard disk drives (HDDs)</a>, solid-state drives (SSDs), compact disks (CDs), etc.

See More: What Is IT Infrastructure? Definition, Building Blocks, and Managen Best Practices

# 4. Central processing unit (CPU)

The central processing unit includes registers, an arithmetic logic unit (ALU), a control circuits, which interpret and execute assembly language instructions. T CPU interacts with all the other parts of the computer architecture to make sen of the data and deliver the necessary output.

Here is a brief overview of the CPU's sub-components:

#### 1. Registers

These are high-speed and purpose-built temporary memory devices. Rather the being referred to by their address, they are accessed and modified directly by the CPU throughout execution. Essentially, they contain data that the CPU is prese processing. Registers contain information, commands, addresses, and intermed processing results.

#### 2. Arithmetic logic unit (ALU)

The arithmetic logic unit includes the electrical circuitry that performs any arithmetic and logical processes on the supplied data. It is used to execute all arithmetic (additions, subtractions, multiplication, division) and logical (<, >, AND, OR, etc.) computations. Registers are used by the ALU to retain the data being processed.

#### 3. Control unit

The control unit collaborates with the computer's input and output devices. It instructs the computer to execute stored program instructions via communicat with the ALU and registers. The control unit aims to arrange data and instruction processing.

The microprocessor is the primary component of computer hardware that runs CPU. Large printed circuit boards (PCBs) are utilized in all electronic systems, including desktops, calculators, and <u>internet of things (IoT)</u> devices. The Intel 40004 was the first microprocessor with all CPU components on a single chip.

In addition to these four core components, a computer architecture also has supporting elements that make it easier to function, such as:

 $\square$ 

### 5. Bootloader

The firmware contains the bootloader, a specific program executed by the processor that retrieves the operating system from the disc (or non-volatile memory or network interface, as deemed applicable) and loads it into the mem so that the processor can execute it. The bootloader is found on desktop and workstation computers and embedded devices. It is essential for all computer architectures.

# 6. Operating system (OS)

The operating system governs the computer's functionality just above firmware manages memory usage and regulates devices such as the keyboard, mouse, display, and disc drives. The OS also provides the user with an interface, allowing them to launch apps and access data on the drive.

Typically, the operating system offers a set of tools for programs, allowing ther access the screen, disc drives, and other elements of the computer's architectual

#### 7. Buses

A bus is a tangible collection of signal lines with a linked purpose; a good exam is the <u>universal serial bus (USB)</u>. Buses enable the flow of electrical impulses between various components of a computer's design, transferring information from one system to another. The size of a bus is the count of information-transferring signal lines. A bus with a size of 8 bits, for instance, transports 8 dabits in a parallel formation.

# 8. Interrupts


Interrupts, also known as traps or exceptions in certain processors, are a methor for redirecting the processor from the running of the current program so that it can handle an occurrence. Such an event might be a malfunction from a periph or just the fact that an I/O device has completed its previous duty and is present ready for another one. Every time you press a key and click a mouse button, you system will generate an interrupt.

See More: What Is Network Hardware? Definition, Architecture, Challenges, an Best Practices

# **Types of Computer Architecture**

It is possible to set up and configure the above architectural components in numerous ways. This gives rise to the different types of computer architecture. most notable ones include:

# Types of Computer Architecture

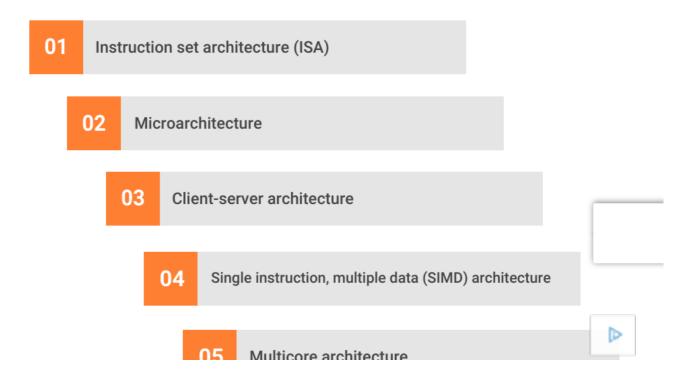



#### Types of Computer Architecture

# 1. Instruction set architecture (ISA)

Instruction set architecture (ISA) is a bridge between the software and hardwar a computer. It functions as a programmer's viewpoint on a machine. Computer can only comprehend binary language (0 and 1), but humans can comprehend high-level language (if-else, while, conditions, and the like). Consequently, ISA plays a crucial role in user-computer communications by translating high-level language into binary language.

In addition, ISA outlines the architecture of a computer in terms of the fundamental activities it must support. It's not involved with implementation-specific computer features. Instruction set architecture dictates that the compumust assist:

- **Arithmetic/logic instructions:** These instructions execute various mathematical or logical processing elements solely on a single or maybe moperands (data inputs).
- **Data transfer instructions:** These instructions move commands from the memory or into the processor registers, or vice versa.
- **Branch and jump instructions:** These instructions are essential to interr the logical sequence of instructions and jump to other destinations.

#### 2. Microarchitecture

 $\square$ 

Microarchitecture, unlike ISA, focuses on the implementation of how instruction will be executed at a lower level. This is influenced by the microprocessor's structural design.

Microarchitecture is a technique in which the instruction set architecture incorporates a processor. Engineering specialists and hardware scientists execu ISA with various microarchitectures that vary according to the development of technologies. Therefore, processors may be physically designed to execute a certain instruction set without modifying the ISA.

Simply put, microarchitecture is the purpose-built logical arrangement of the microprocessor's electrical components and data pathways. It facilitates the optimum execution of instructions.

#### 3. Client-server architecture

Multiple clients (remote processors) may request and get services from a single centralized server in a client-server system (host computer). Client computers allow users to request services from the server and receive the server's reply. Servers receive and react to client inquiries.

A server should provide clients with a standardized, transparent interface so th they are unaware of the system's features (software and hardware components) that are used to provide the service.

Clients are often located on desktops or laptops, while servers are typically located on desktops or laptops. somewhere else on the network, on more powerful hardware. This computer architecture is most efficient when the clients and the servers frequently perform pre-specified responsibilities.

13/12/2024, 7:48 pm

# 4. Single instruction, multiple data (SIMD) architecture

Single instruction, multiple data (SIMD) computer systems can process multiple data points concurrently. This cleared the path for <u>supercomputers</u> and other devices with incredible performance capabilities. In this form of design, all processors receive an identical command from the control unit yet operate on distinct data packets. The shared memory unit requires numerous modules to interact with all CPUs concurrently.

#### 5. Multicore architecture

Multicore is a framework wherein a single physical processor has the logic of multiple processors. A multicore architecture integrates numerous processing cores onto only one integrated circuit. The goal is to develop a system capable doing more tasks concurrently, improving overall system performance.

See More: What Is Middleware? Definition, Architecture, and Best Practices

# **Examples of Computer Architecture**

Two notable examples of computer architecture have paved the way for recent advancements in computing. These are 'Von Neumann architecture' and 'Harva architecture.' Most other architectural designs are proprietary and are therefor not revealed in the public domain beyond a basic abstraction.

Here's a description of what these two examples of computer architecture are a about.

#### 1. Von Neumann architecture

The von Neumann architecture, often referred to as the Princeton architecture, computer architecture that was established in a 1945 presentation by John von Neumann and his collaborators in the First Draft of a Report on the EDVAC (electronic discrete variable automatic computer). This example of computer architecture proposes five components:

- A processor with connected registers
- A control unit capable of storing instructions
- Memory capable of storing information as well as instructions and communicating via buses
- Additional or external storage
- Device input as well as output mechanisms

#### 2. Harvard architecture

The Harvard architecture refers to a computer architecture with distinct data a instruction storage and signal pathways. In contrast to the von Neumann architecture, in which program instructions and data use the very same memor and pathways, this design separates the two. In practice, a customized Harvard architecture with two distinct <u>caches</u> is employed (for data and instruction); X8 and Advanced RISC Machine (ARM) systems frequently employ this instruction.

See More: Top 8 Middleware Software Platforms in 2021

# **Takeaway**

Computer architecture is one of the key concepts that define modern computin Depending on the architecture, you can build micro-machines such as Raspber. Pi or incredibly powerful systems such as supercomputers. It determines how electrical signals move across the different pathways in a computing system to achieve the most optimal outcome.

Image source: Shutterstock

#### **MORE ON COMPUTING**

- What Is Parallel Processing? Definition, Types, and Examples
- How Do Supercomputers Work? Key Features and Examples
- What Is Cloud Computing? Definition, Benefits, Types, and Trends
- CPU vs. GPU: 11 Key Comparisons
- What Is a Software Engine? Types, Applications, and Importance

Share This Article:

Chiradeep BasuMallick
Technical Writer