

LEGACY FORK MANUAL

It's not only a fork of Voron Legacy,
but also a big "fork" (a.k.a. Voron Trident).

VERSION 2026-09-01

A solid red horizontal bar spanning the width of the page at the bottom.

TABLE OF CONTENTS





A/B DRIVE & IDLER	04
X AXIS	17
BELTS	33

Follow the official Voron Trident manual

Most of the printer is assembled as a Voron Trident.

Come back to this manual for the gantry sub-assemblies (A/B drives, idles, XY axis, and belts).

A/B DRIVE & IDLER

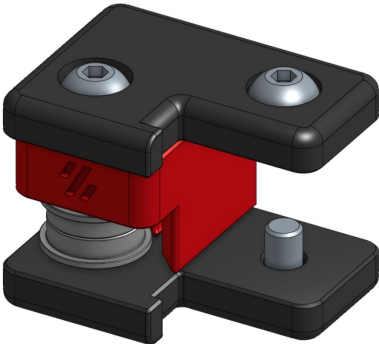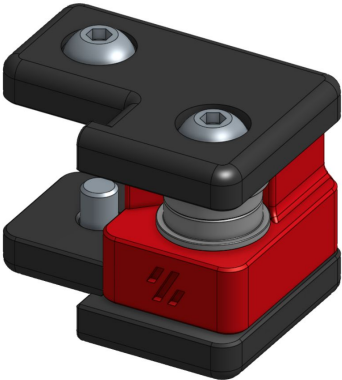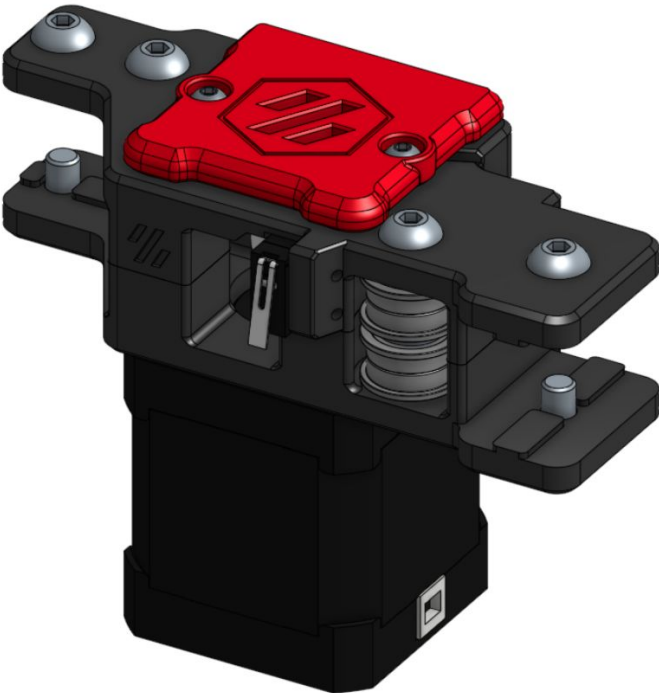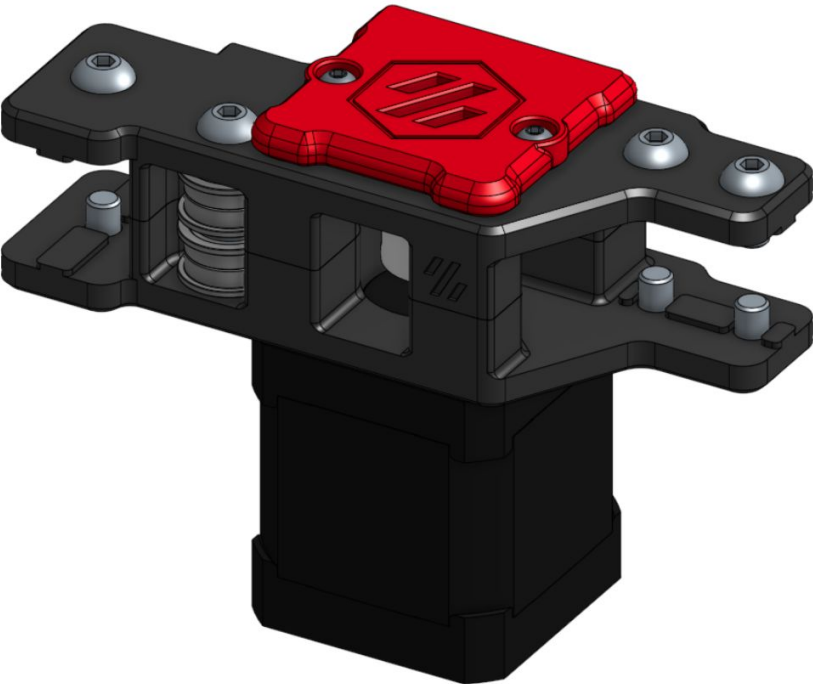


Bearing Stacks

F695 bearing stacks


There are two ways to build a bearing stack. The alternative stack has a small clearance for the belt and thus less likely to wear out, but it requires additional hardware (M5x0.5mm shims) from the stock BOM.

The components are listed from top to bottom:

1. The stock bearing stack: **M5 1mm shim - F695 (flange up) - F695 (flange down) - M5 1mm shim**
2. Alternative bearing stack: **M5 0.5mm shim - F695 (flange up) - M5 1mm shim - F695 (flange down) - M5 0.5mm shim**

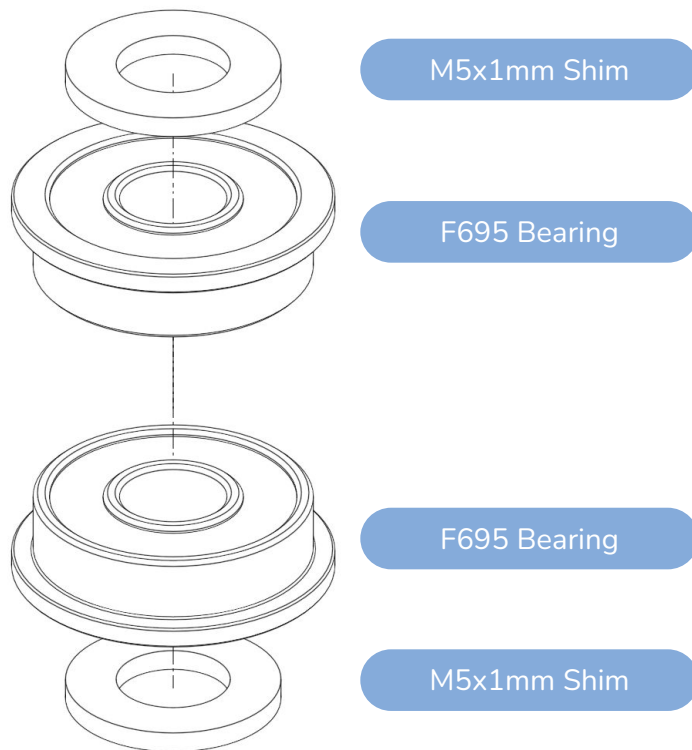


Stock bearing stack

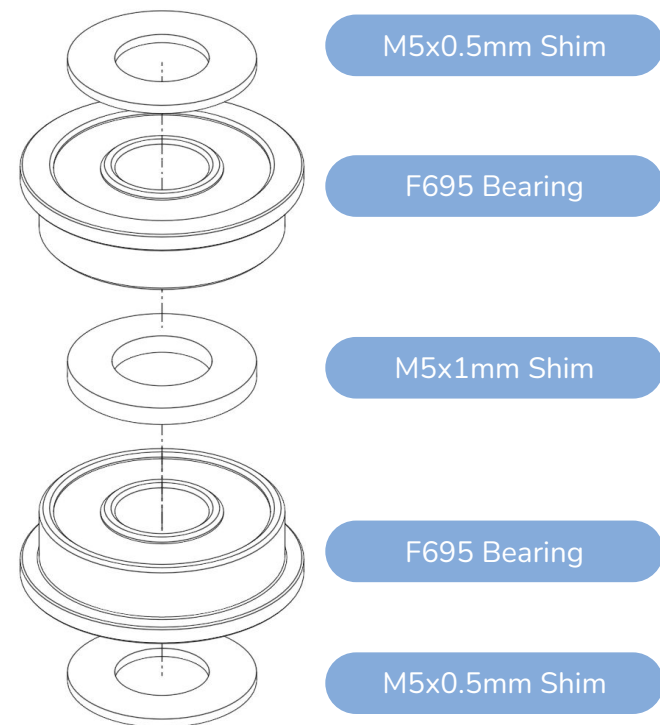


Alternative bearing stack

A IDLER

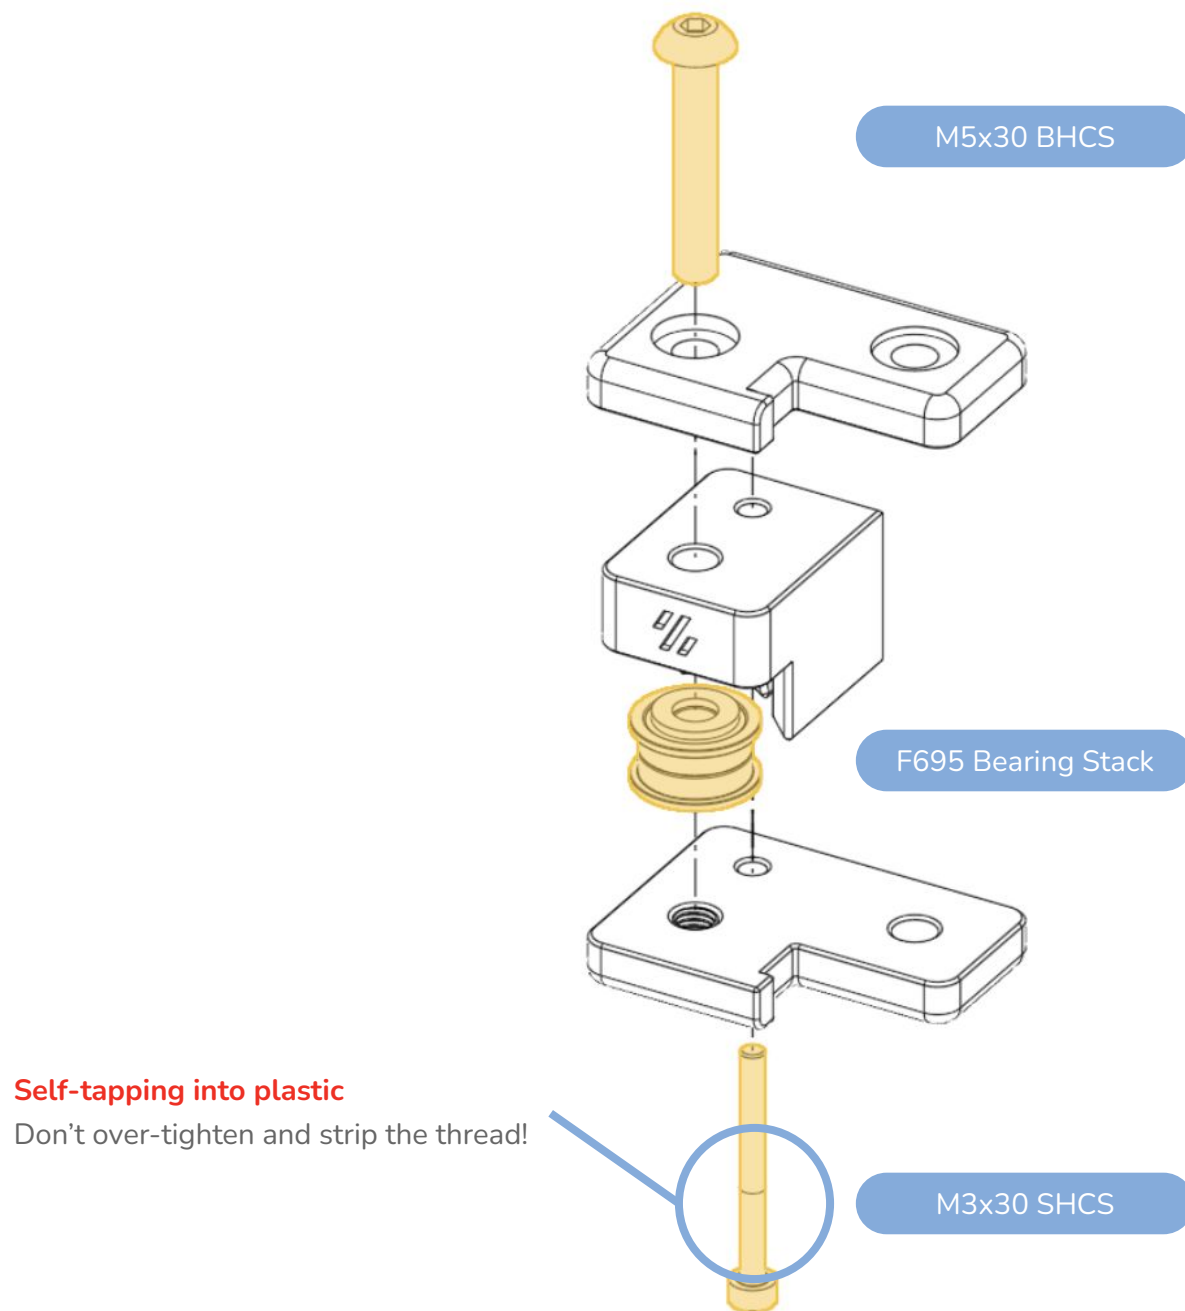


B IDLER

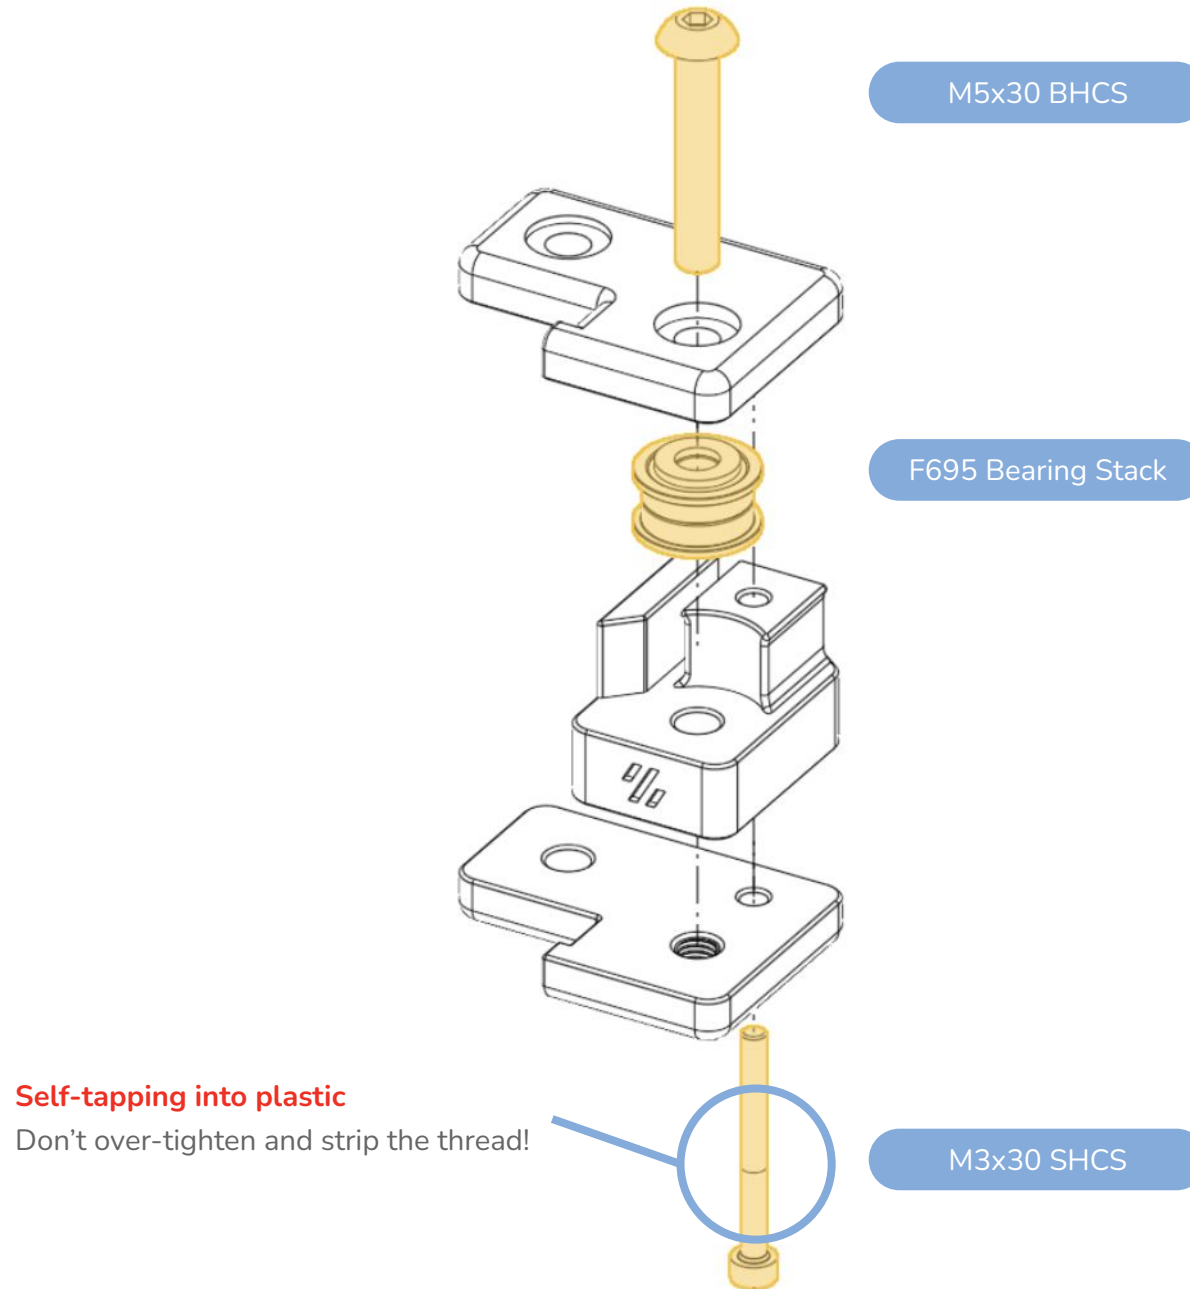

A/B IDLER


M5x10 BHCS

B IDLER

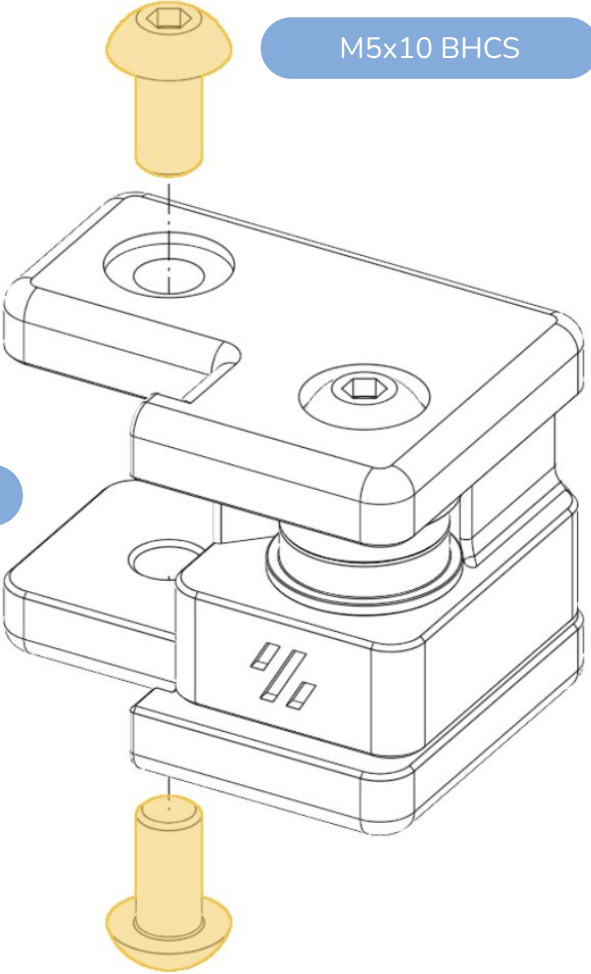


For reference only. Use these to attach to the frame.


A IDLER

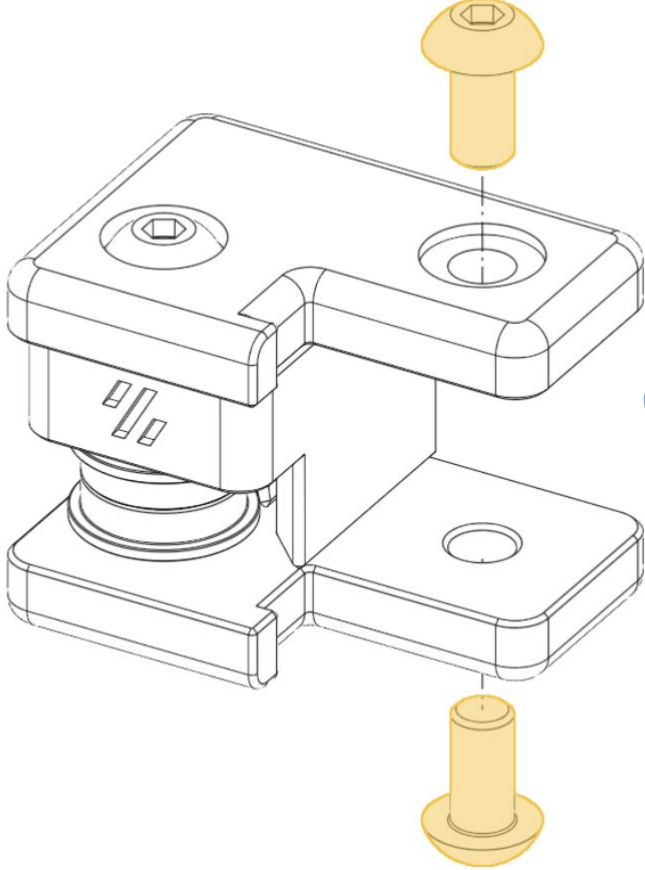


A DRIVE

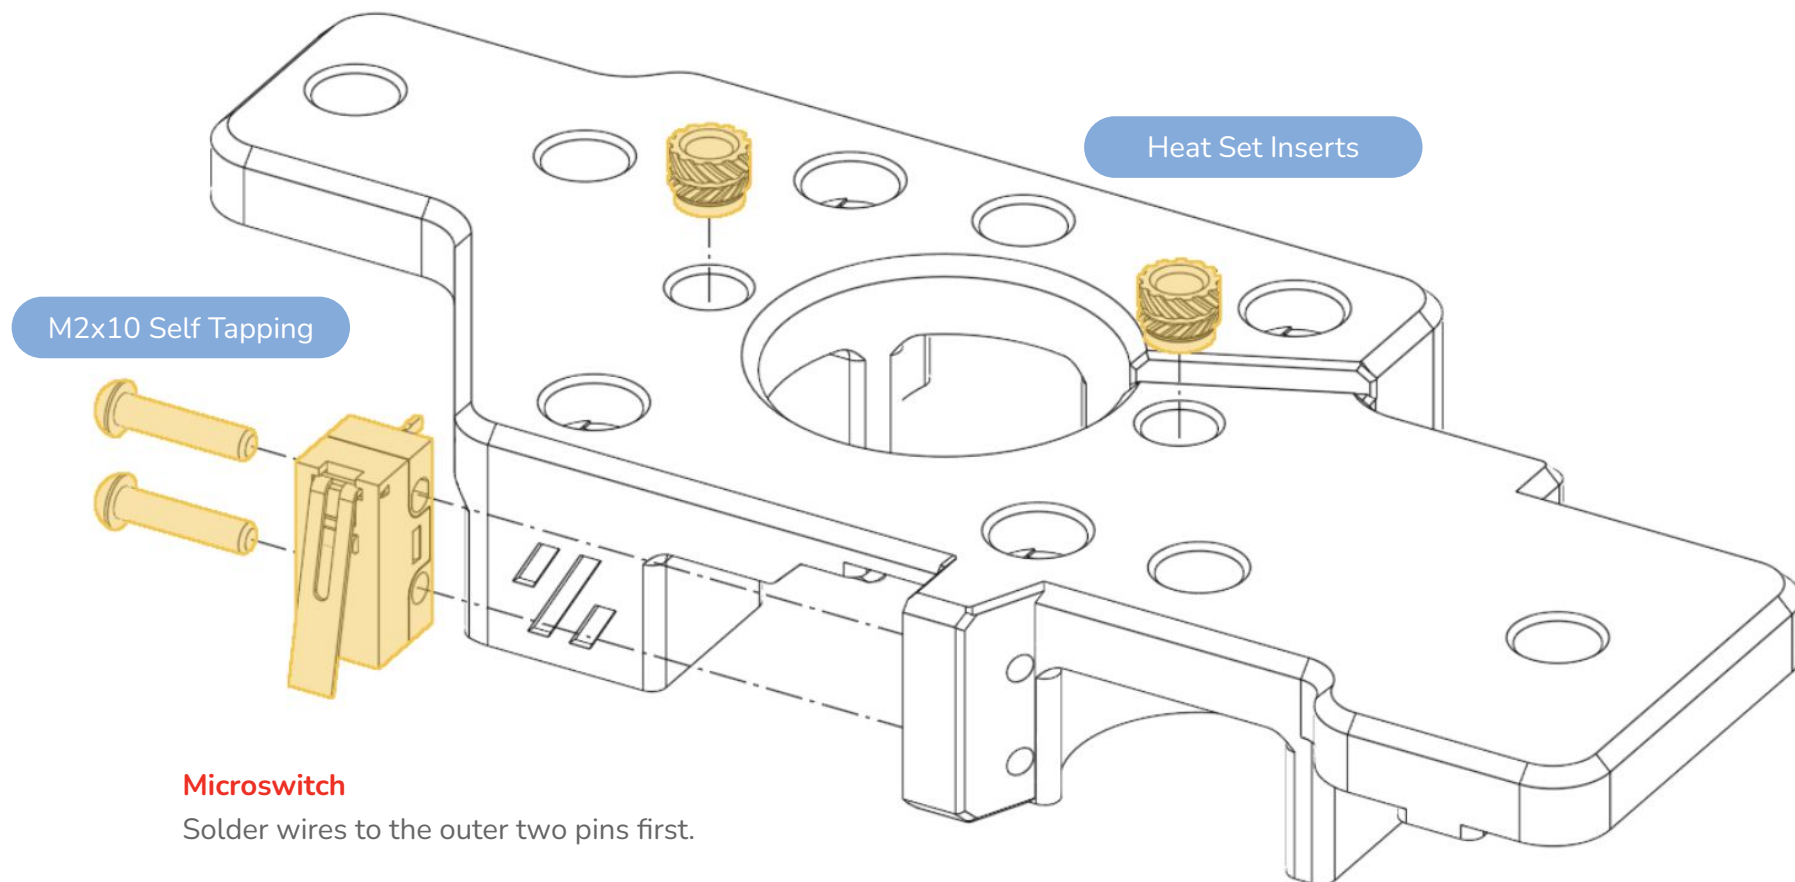


A DRIVE

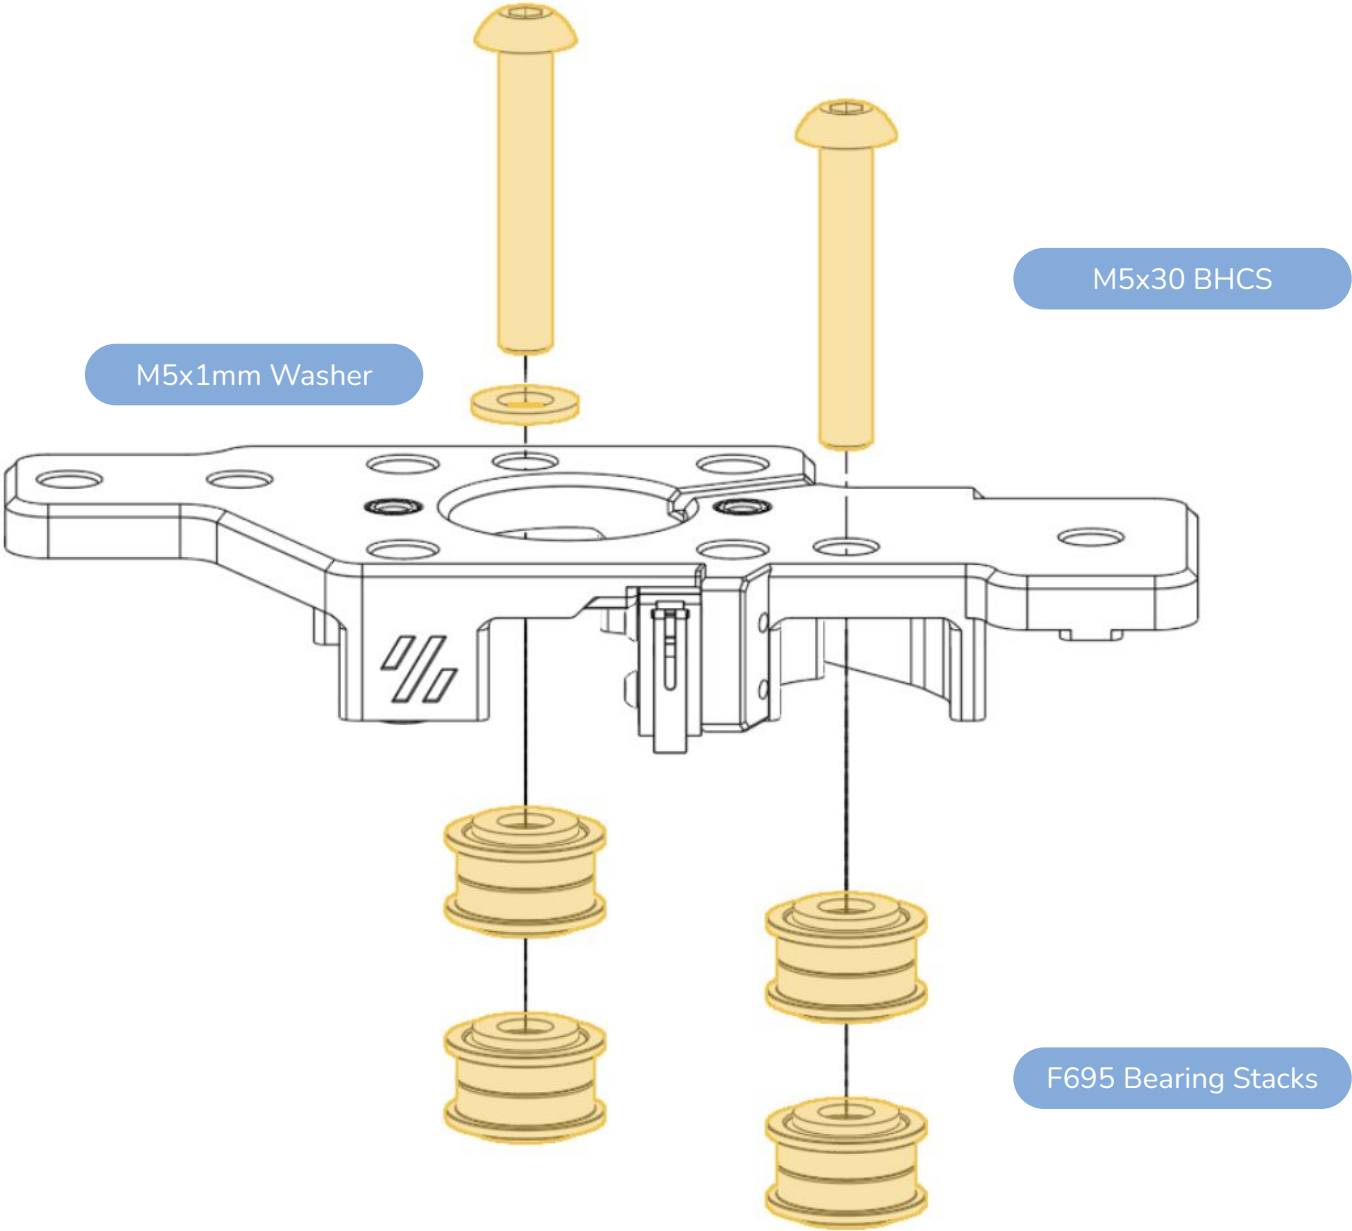

A DRIVE

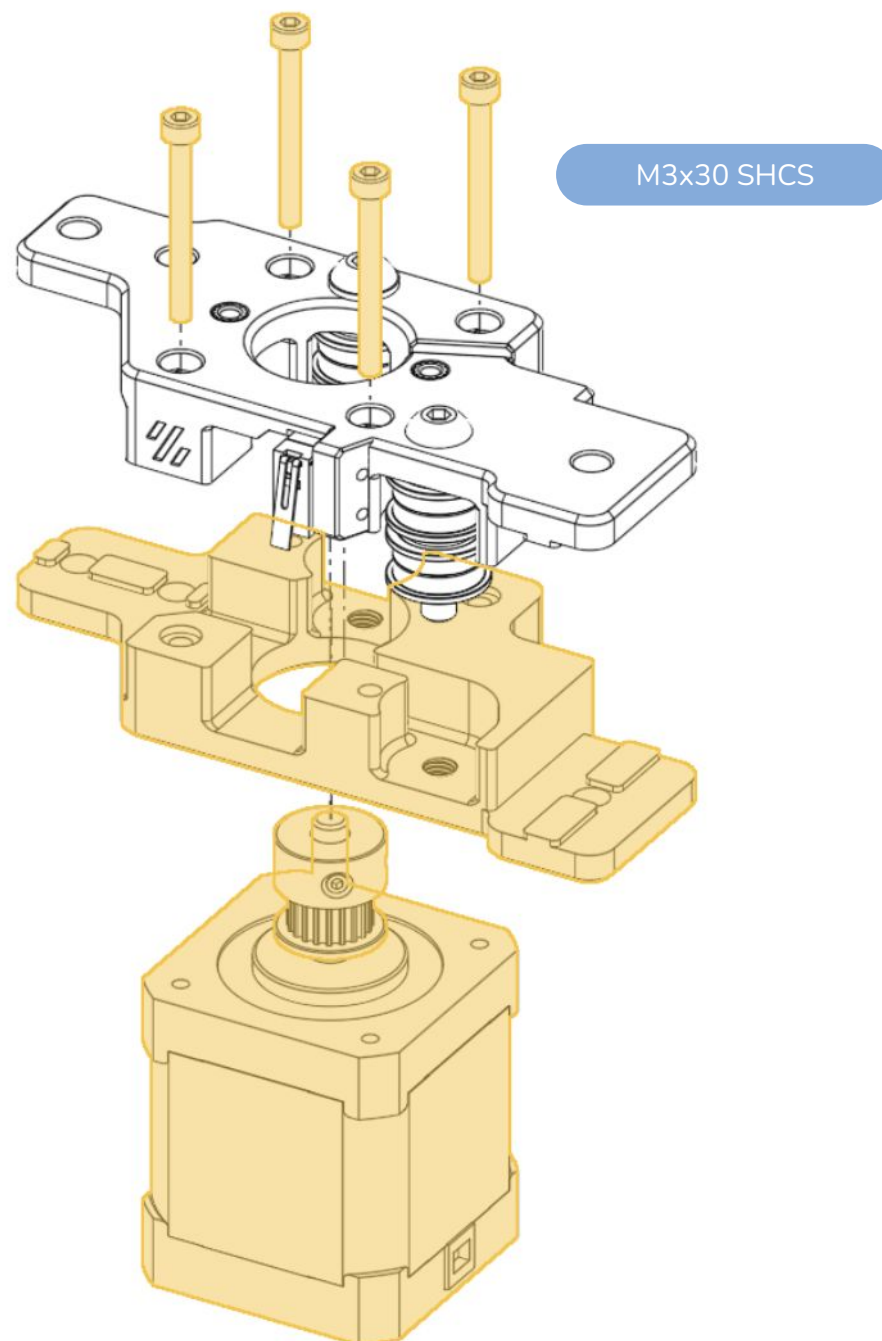


A DRIVE

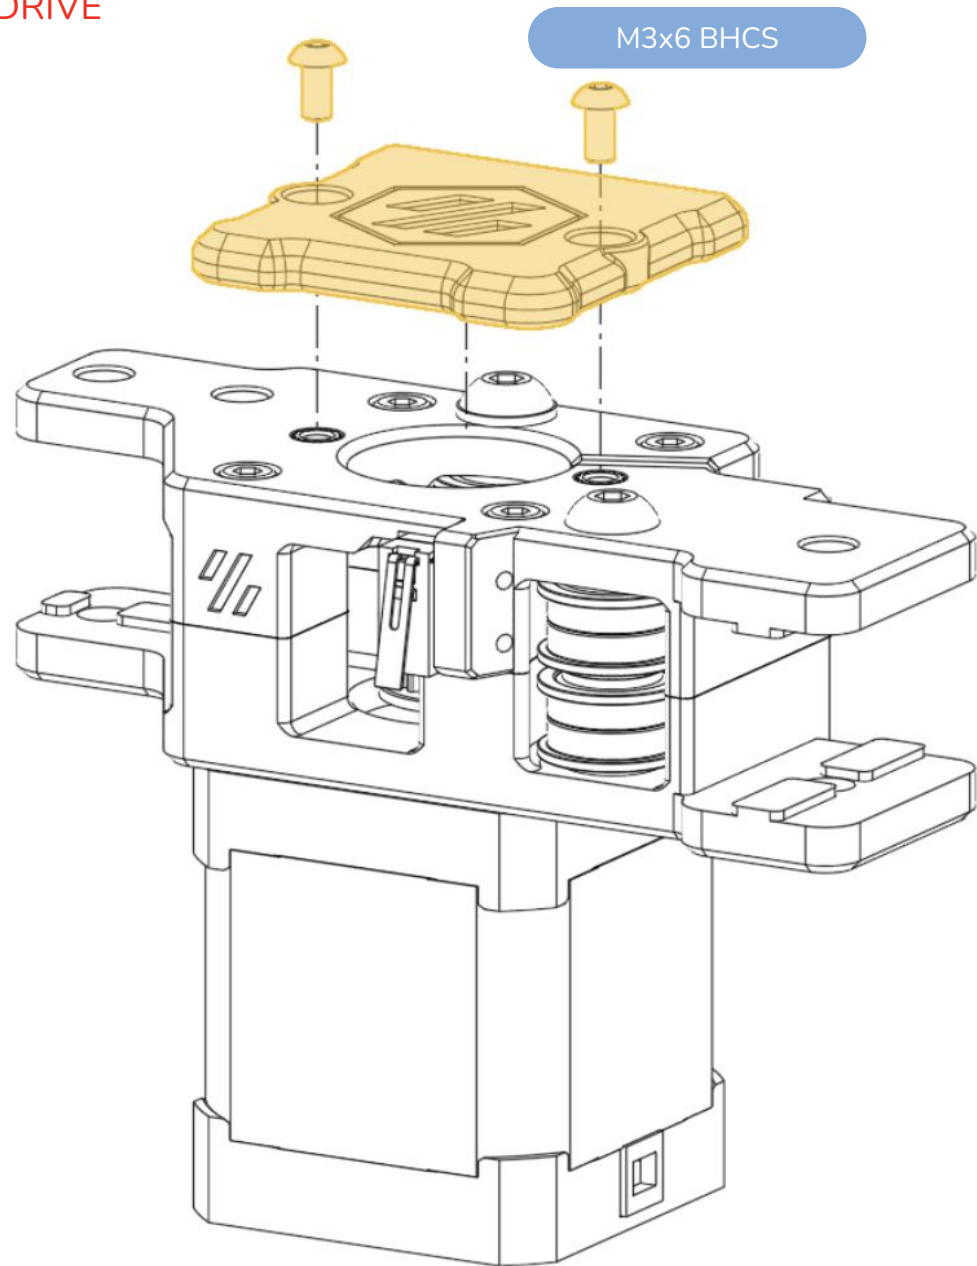


Y endstop wires

The wires from the microswitch go through this slot.

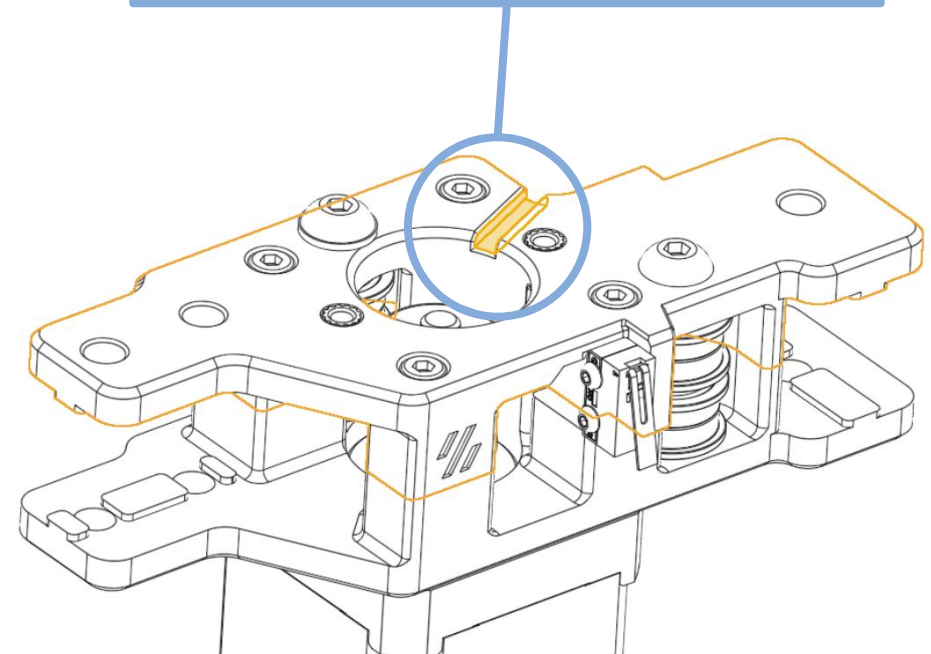

A DRIVE

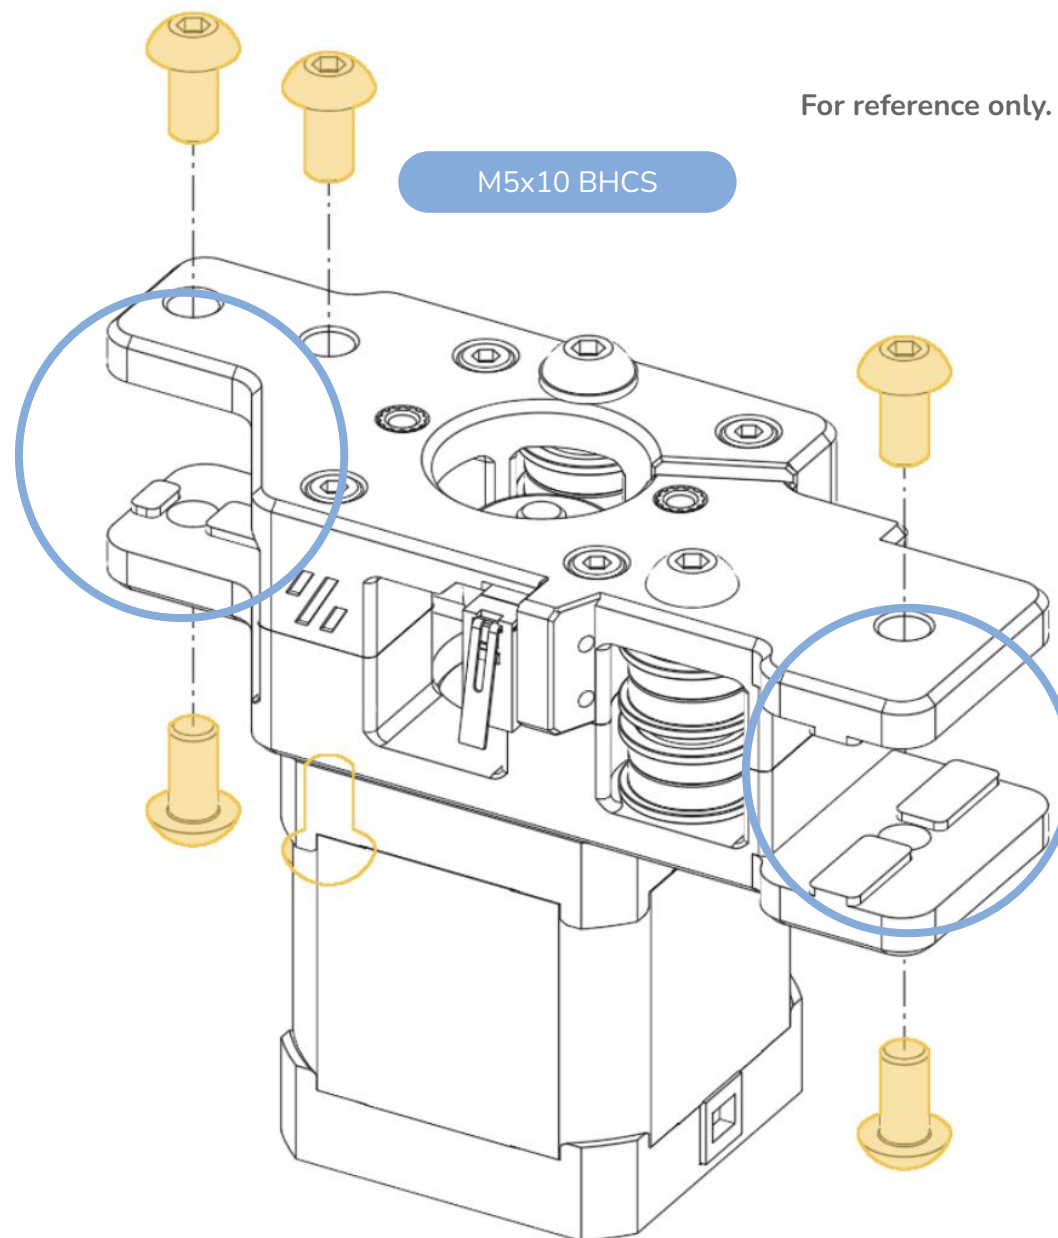


For reference only. Use these to attach to the frame.


M5x10 BHCS


Note: Loosen all the other screws a bit so the indexing protrusion can go over the extrusions.

B DRIVE

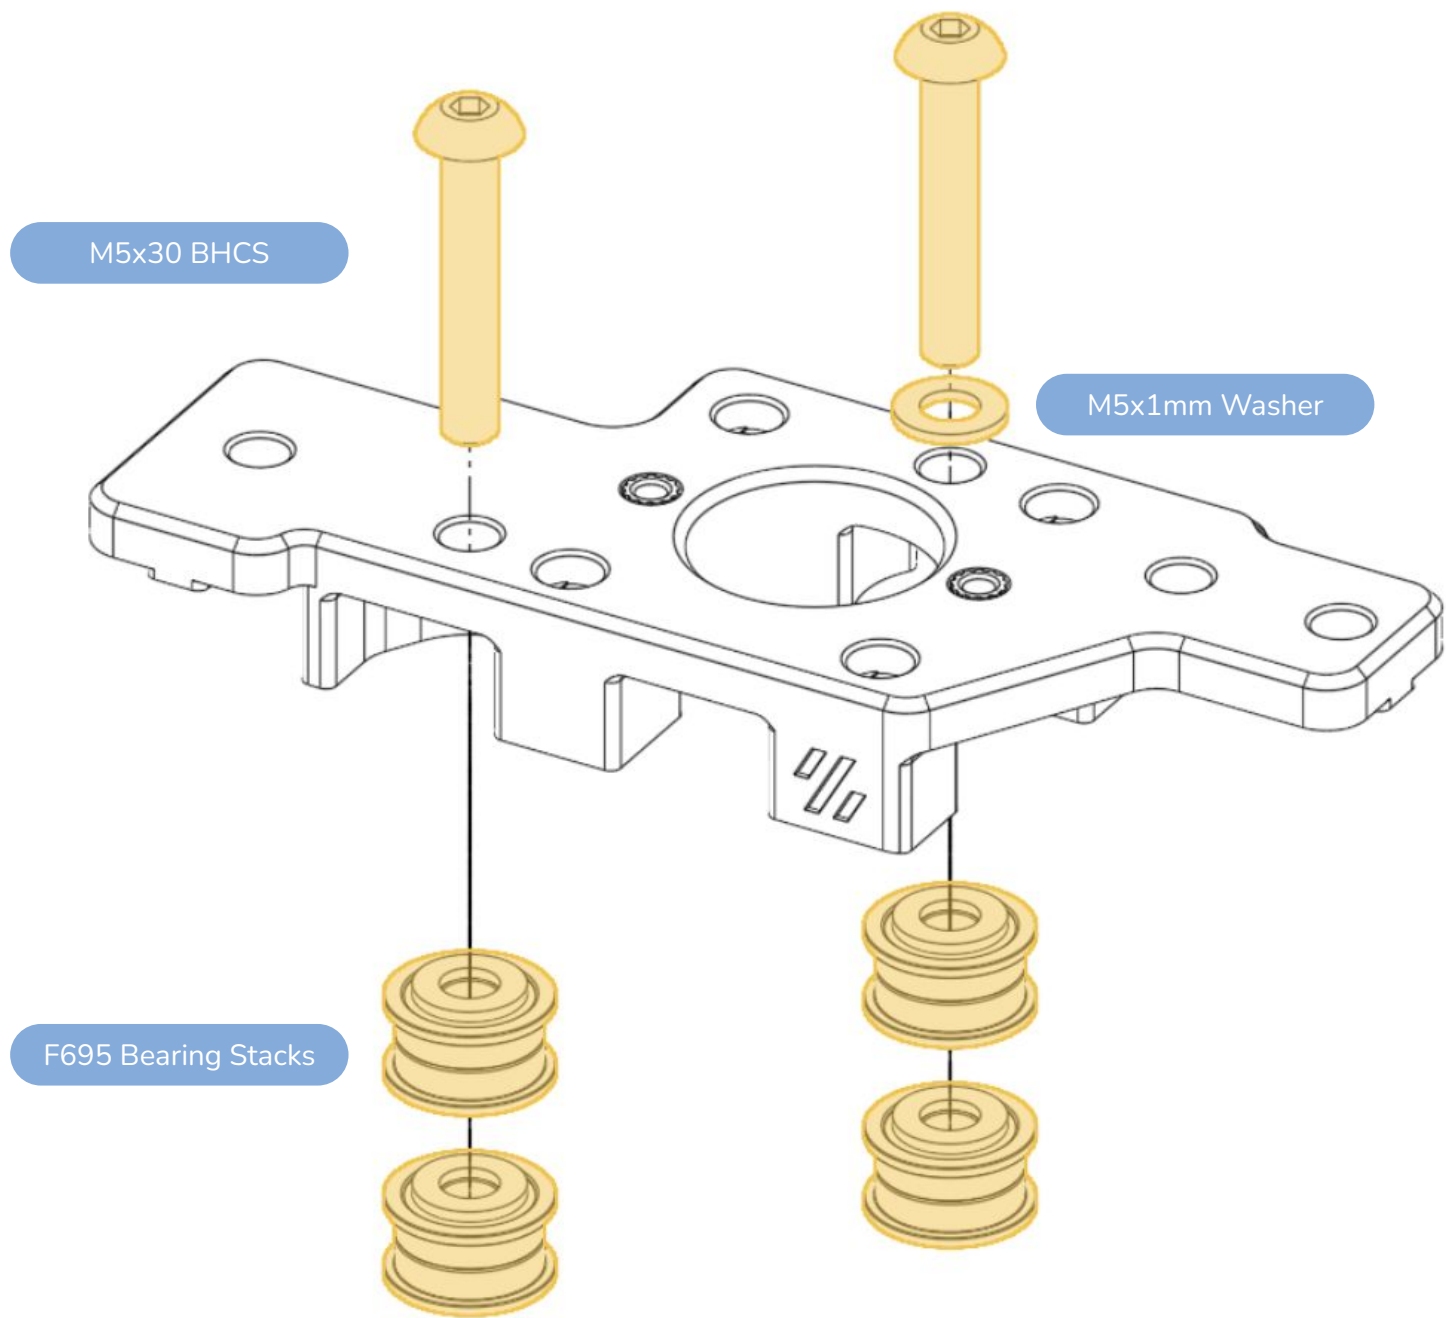


B DRIVE

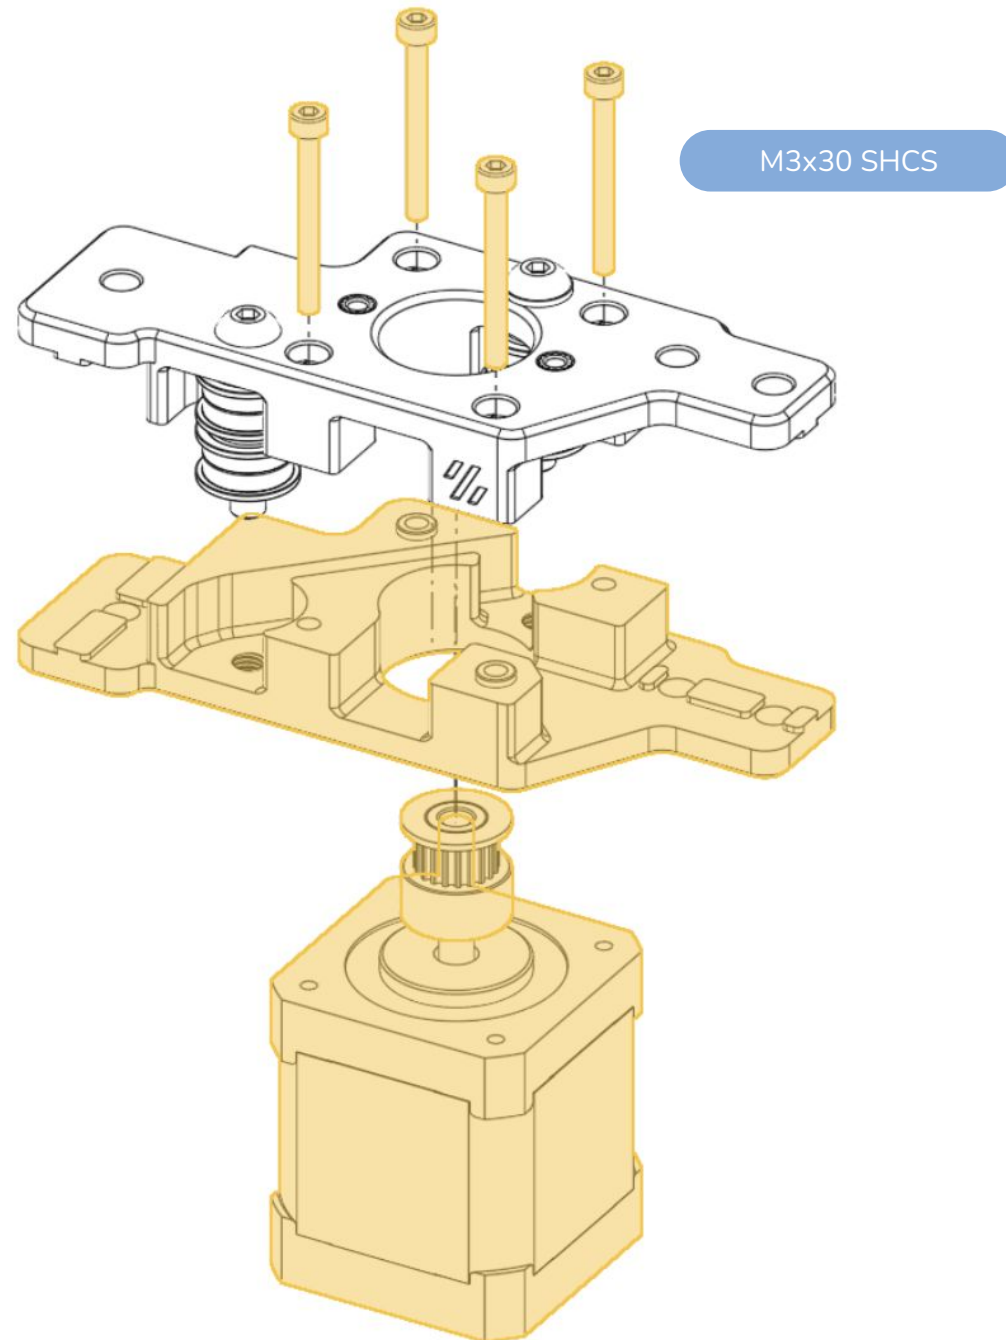


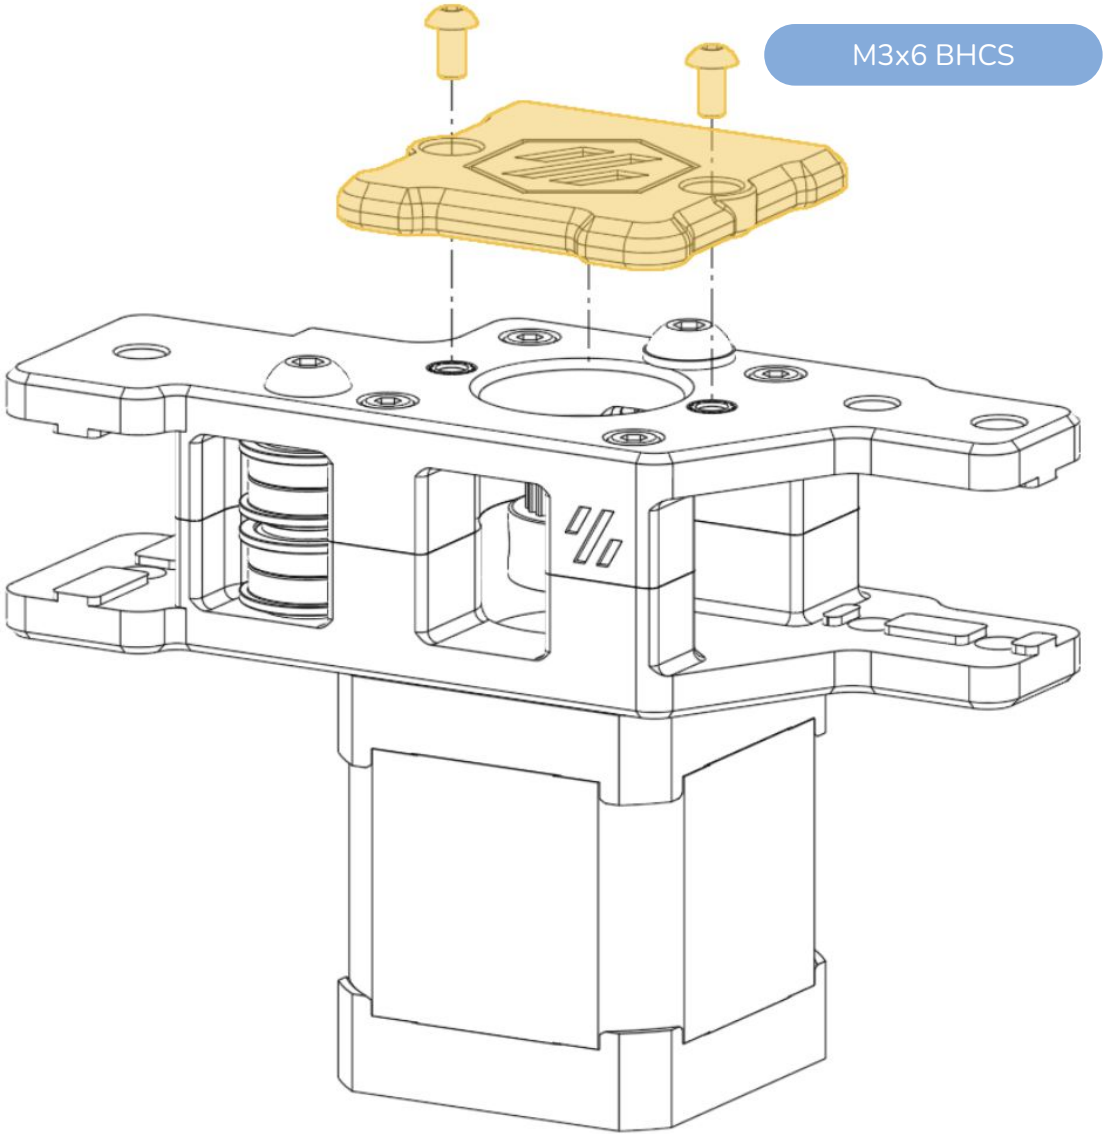


B DRIVE

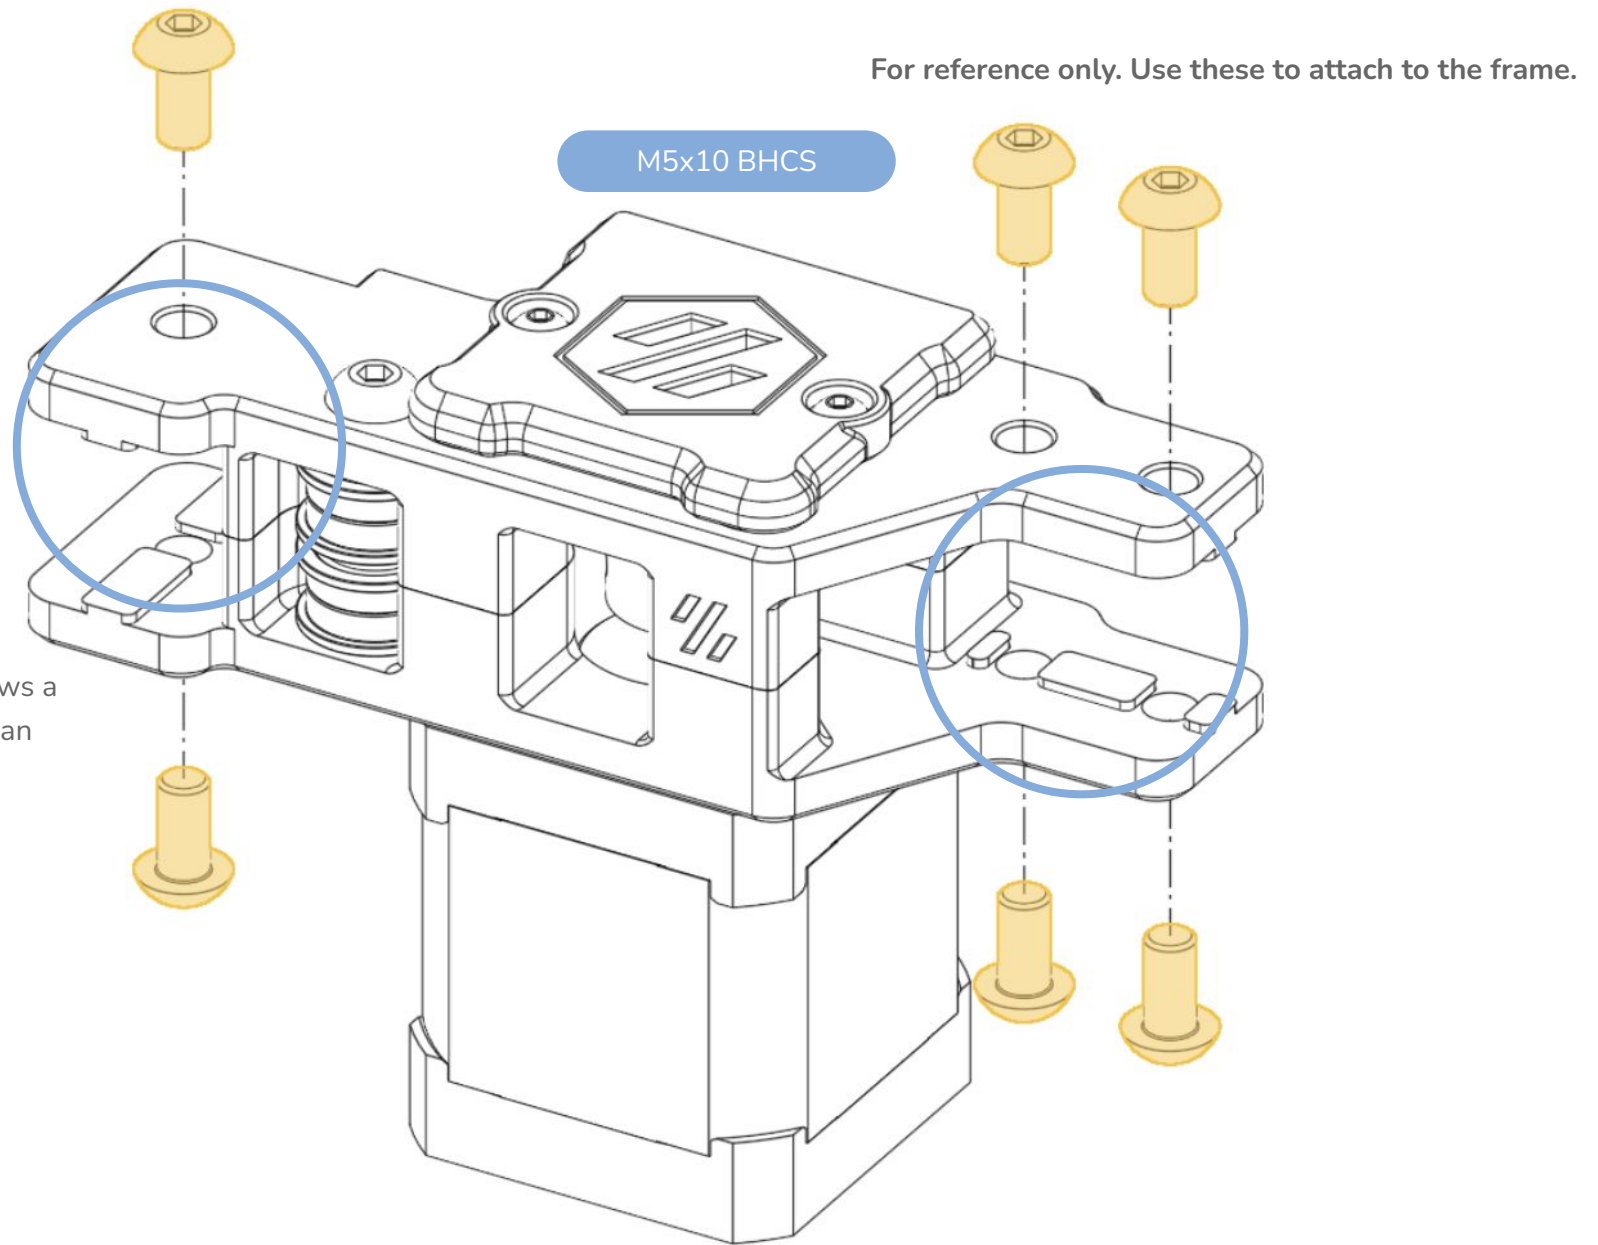


X AXIS

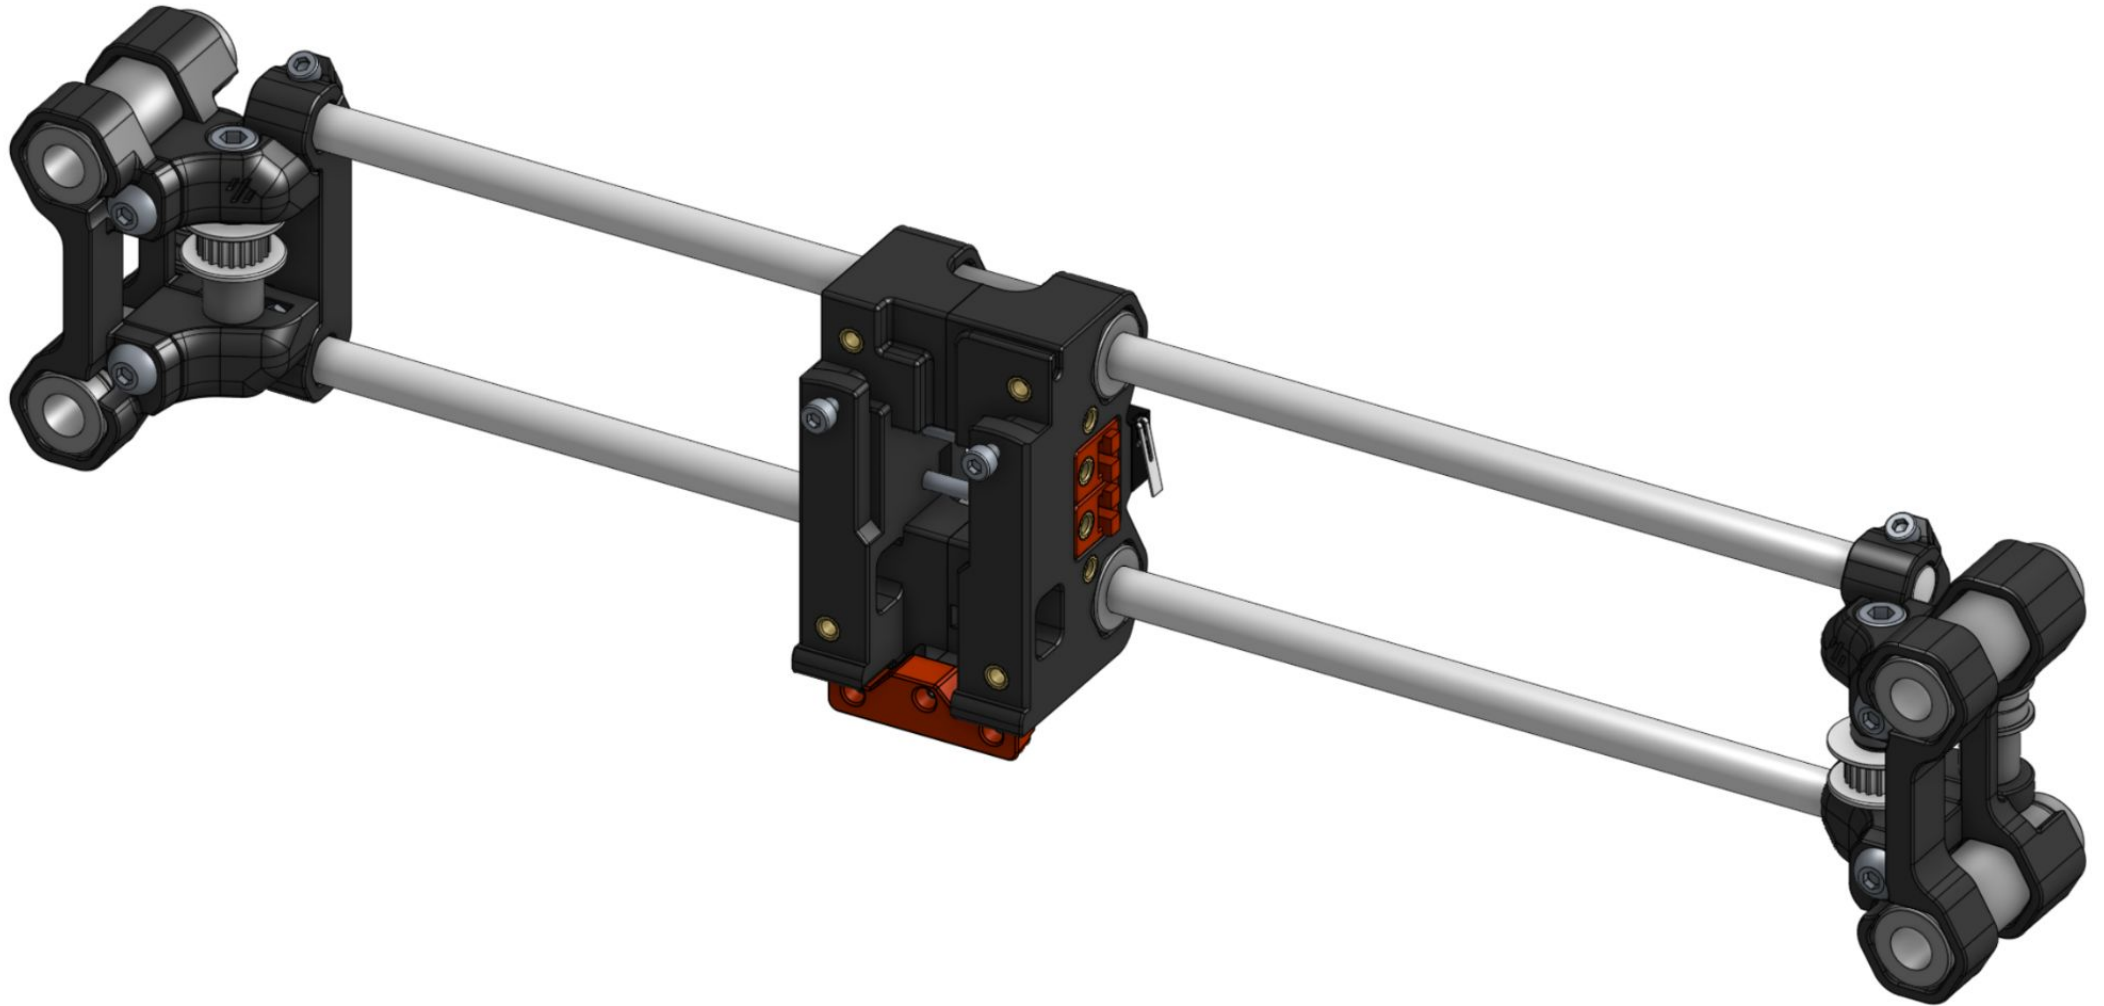


LEFT XY JOINT

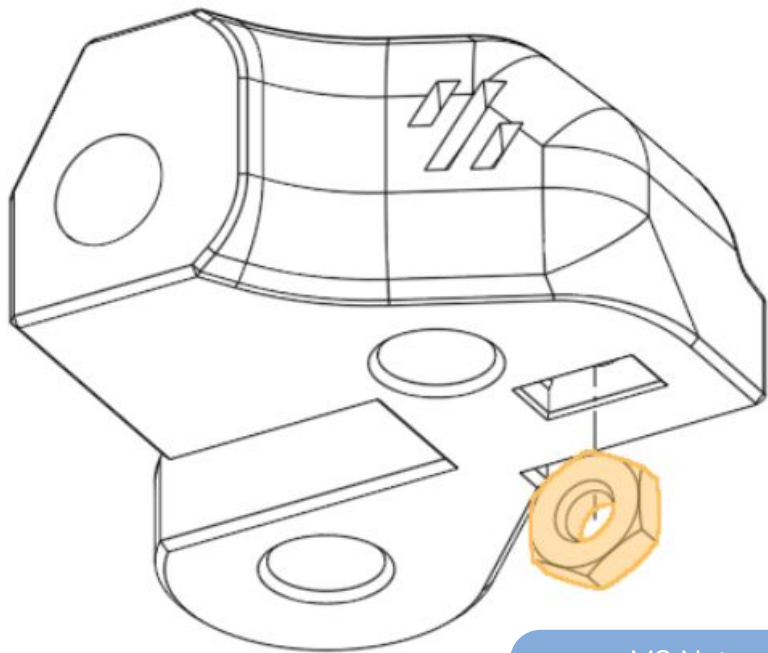


M3 Nut

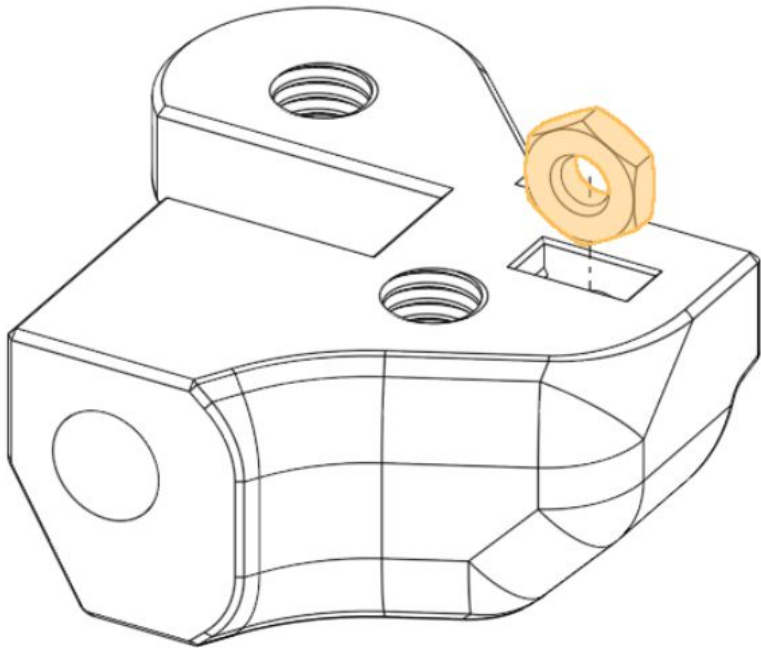


LEFT XY JOINT

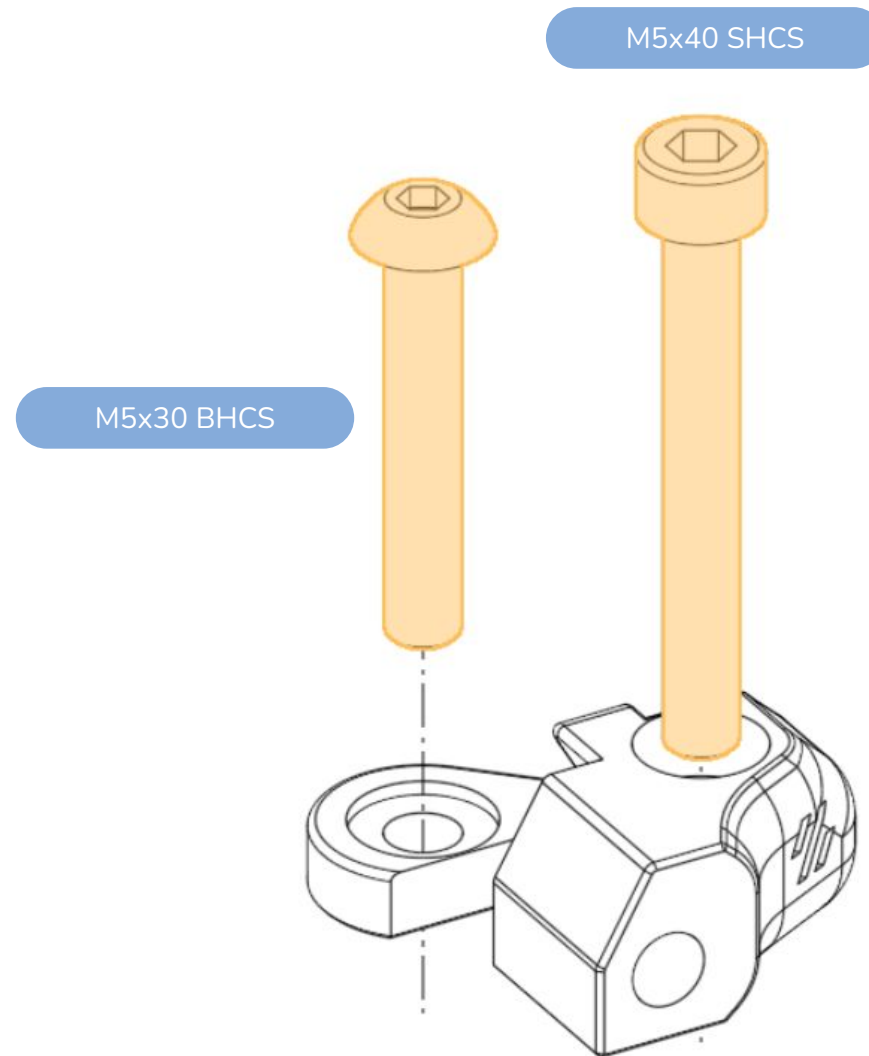


LEFT XY JOINT

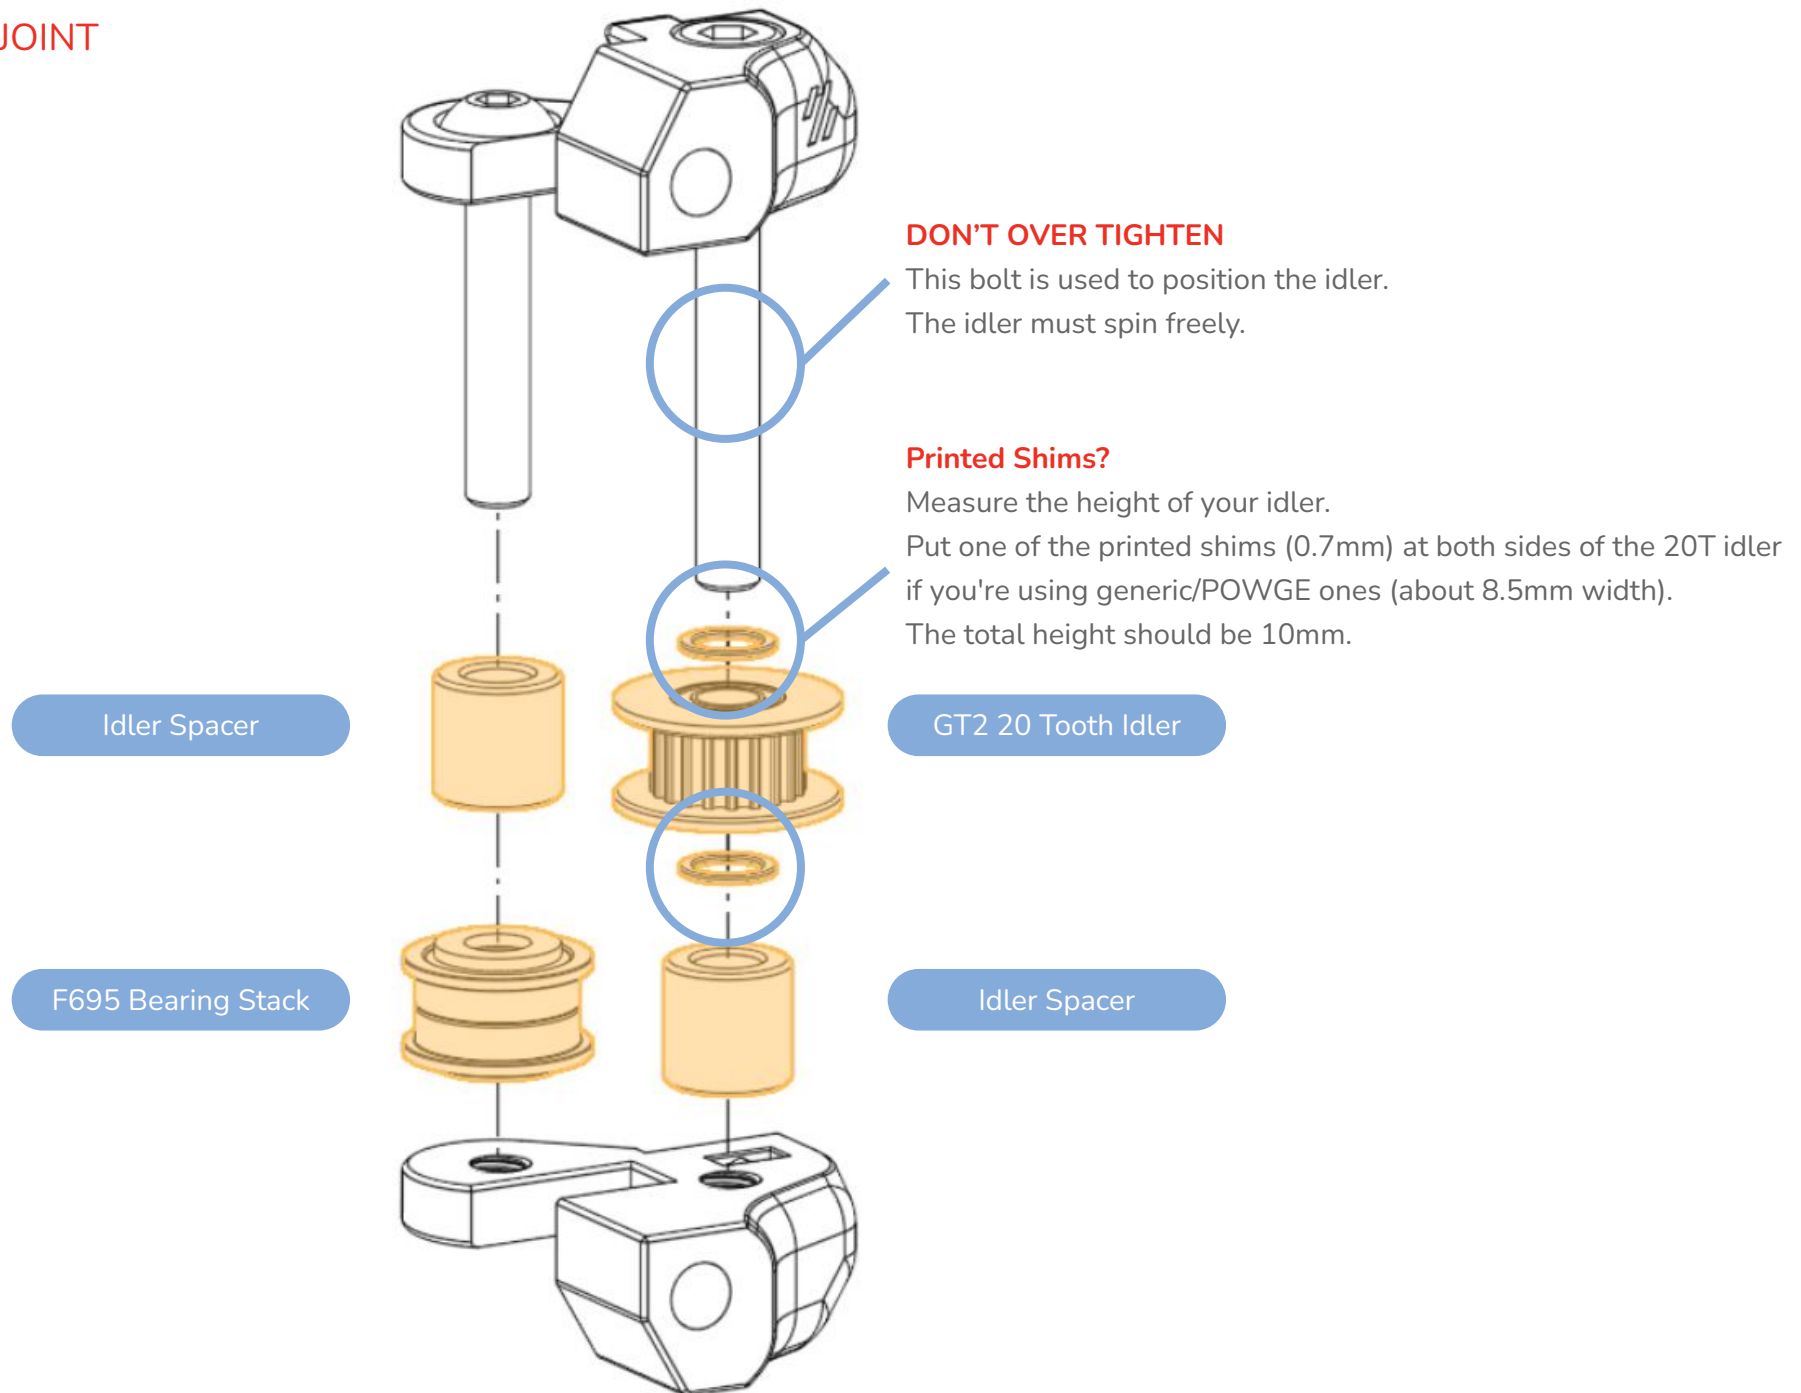


LEFT XY JOINT

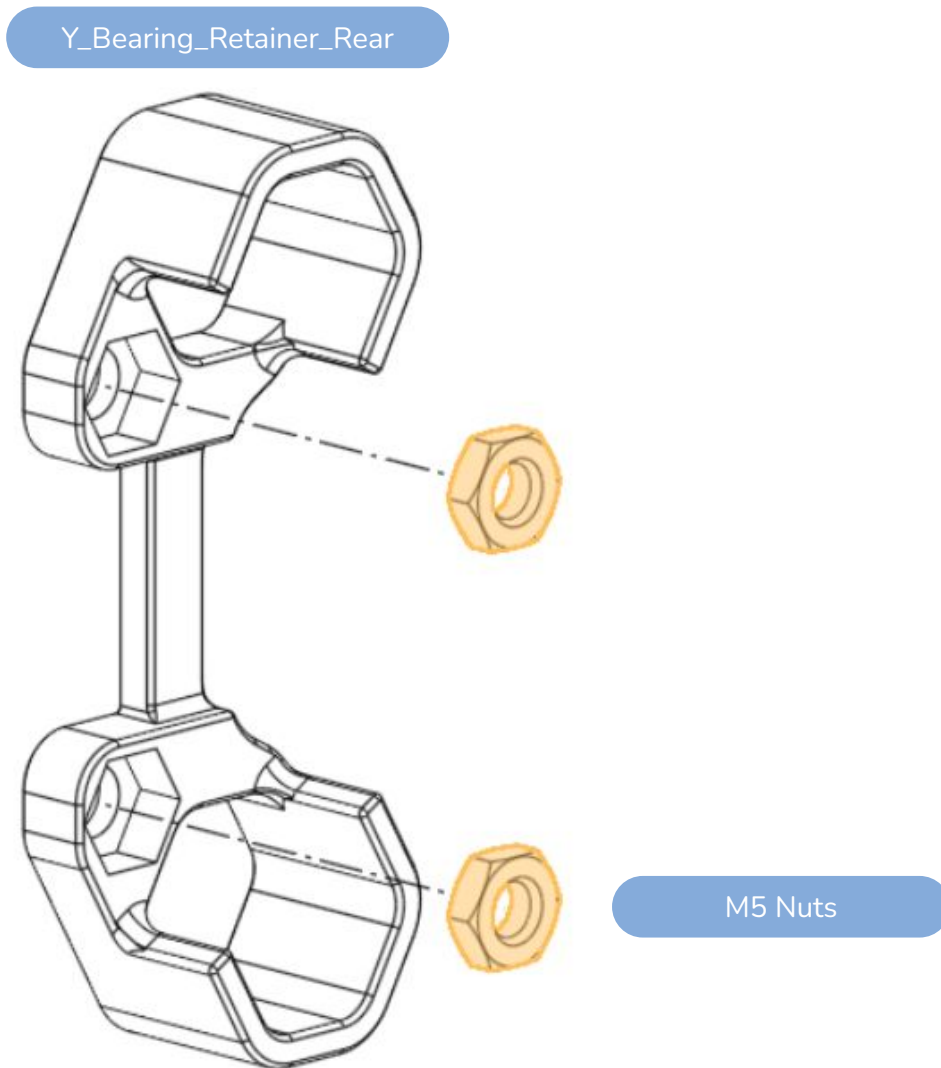


LEFT XY JOINT

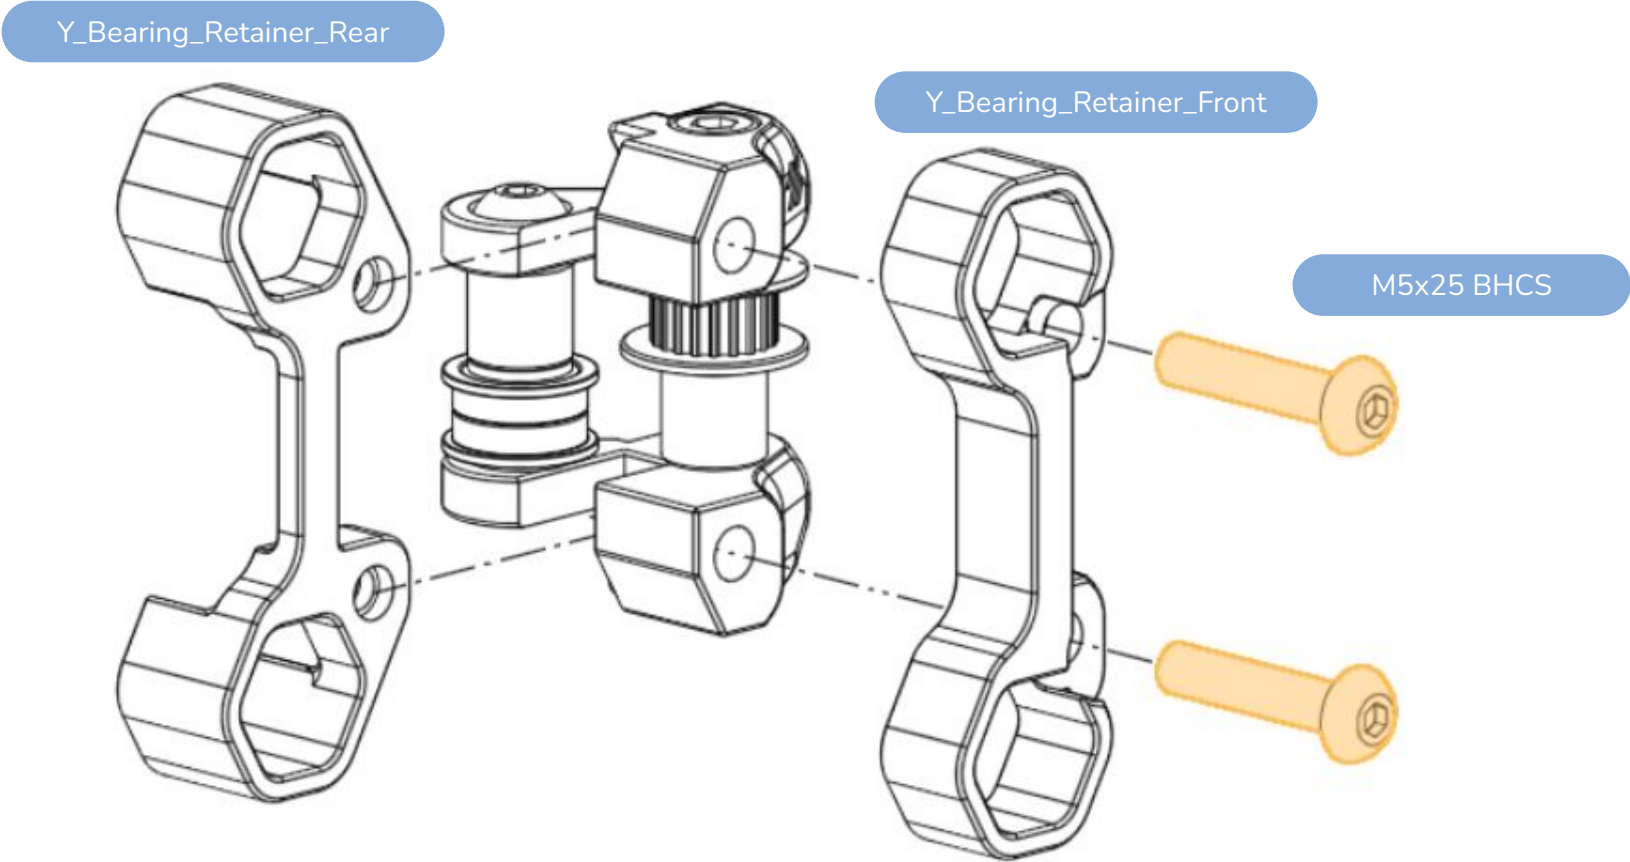


LEFT XY JOINT

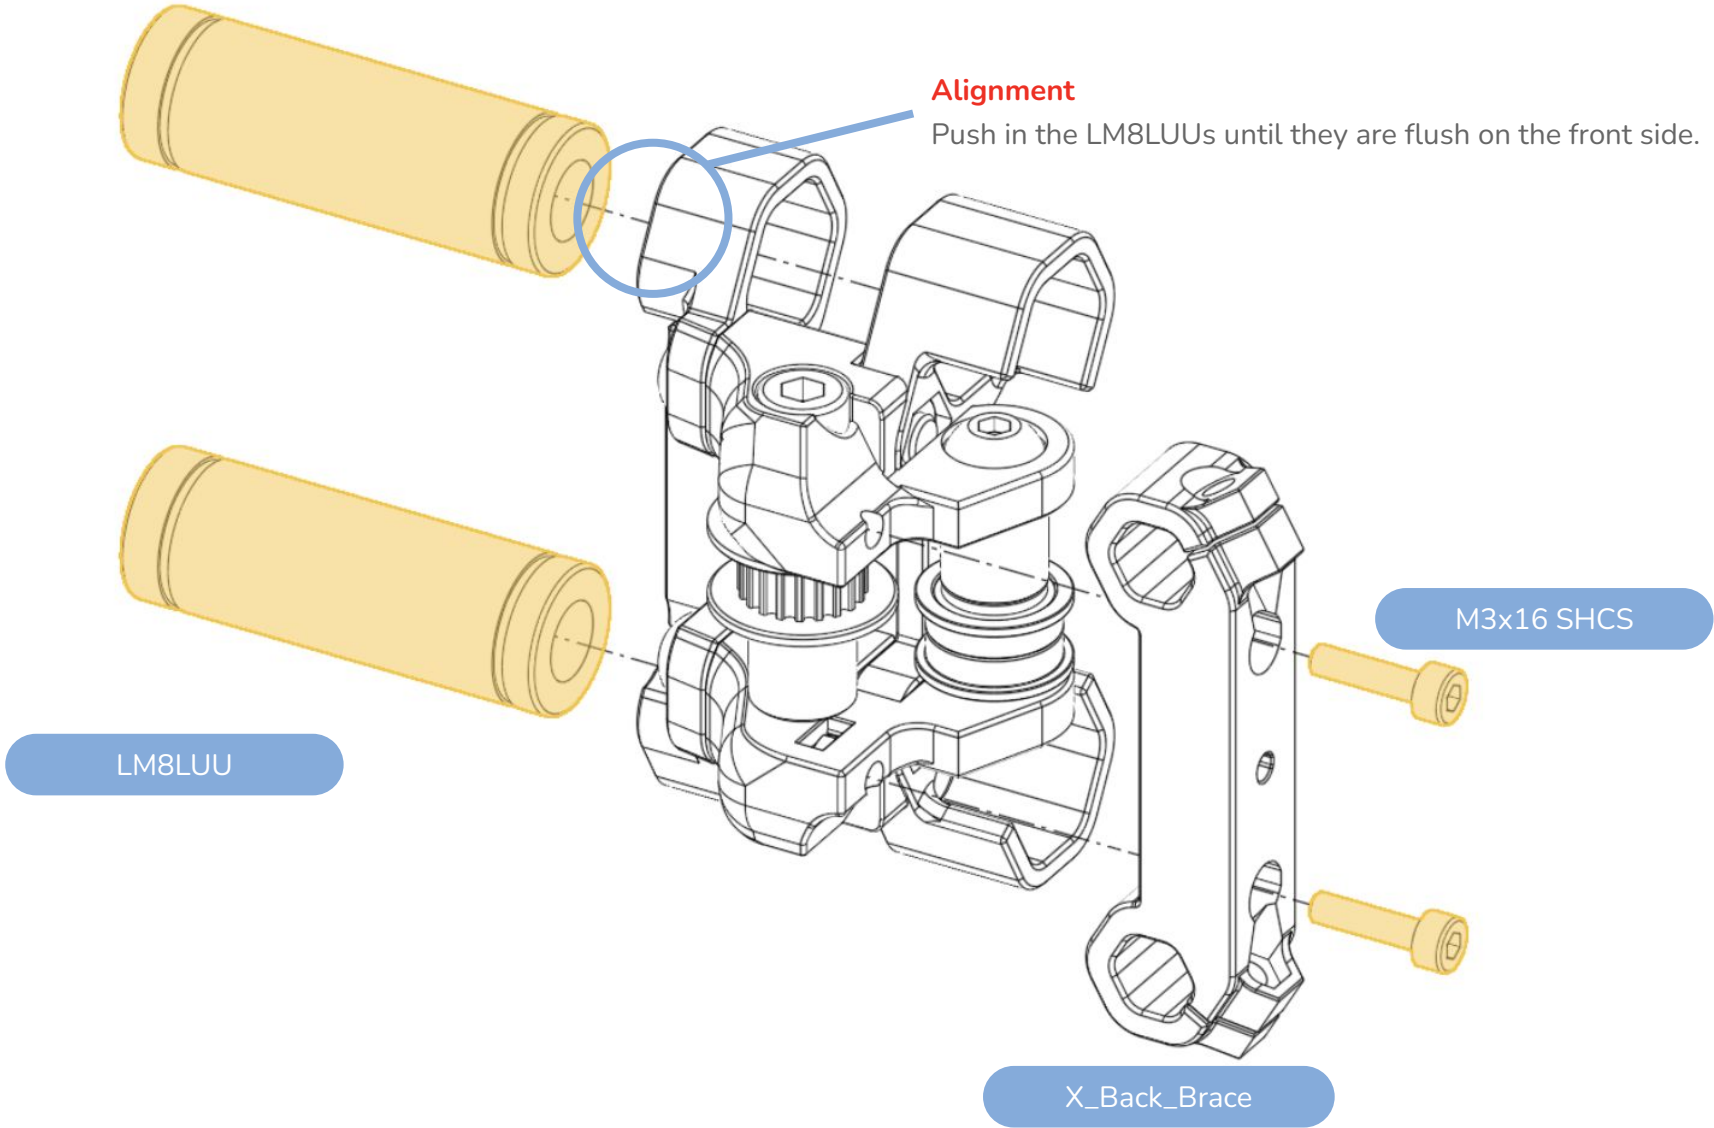

LEFT XY JOINT

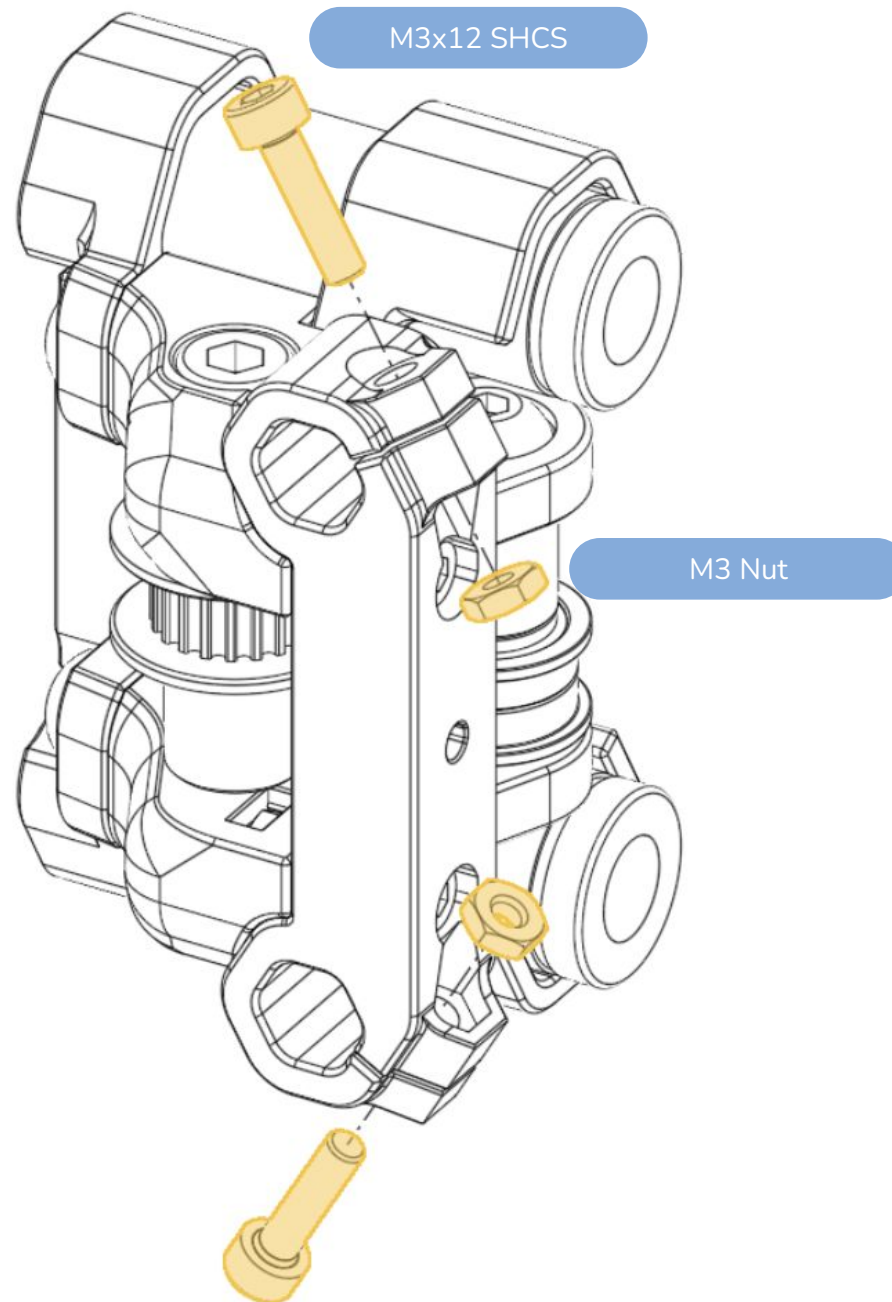


RIGHT XY JOINT

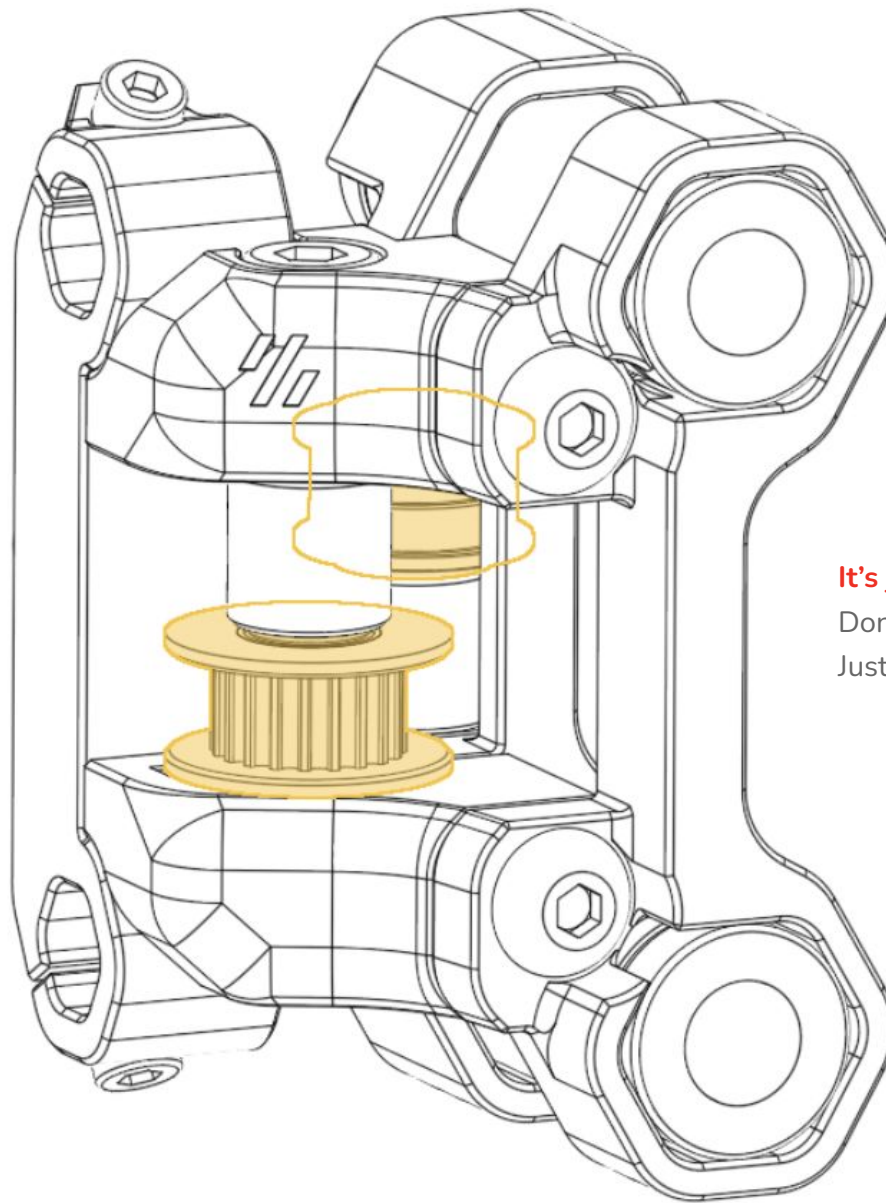

It's just the mirror of the left side

Don't expect too much from this manual.
Just note the placement of the idlers.

RIGHT XY JOINT

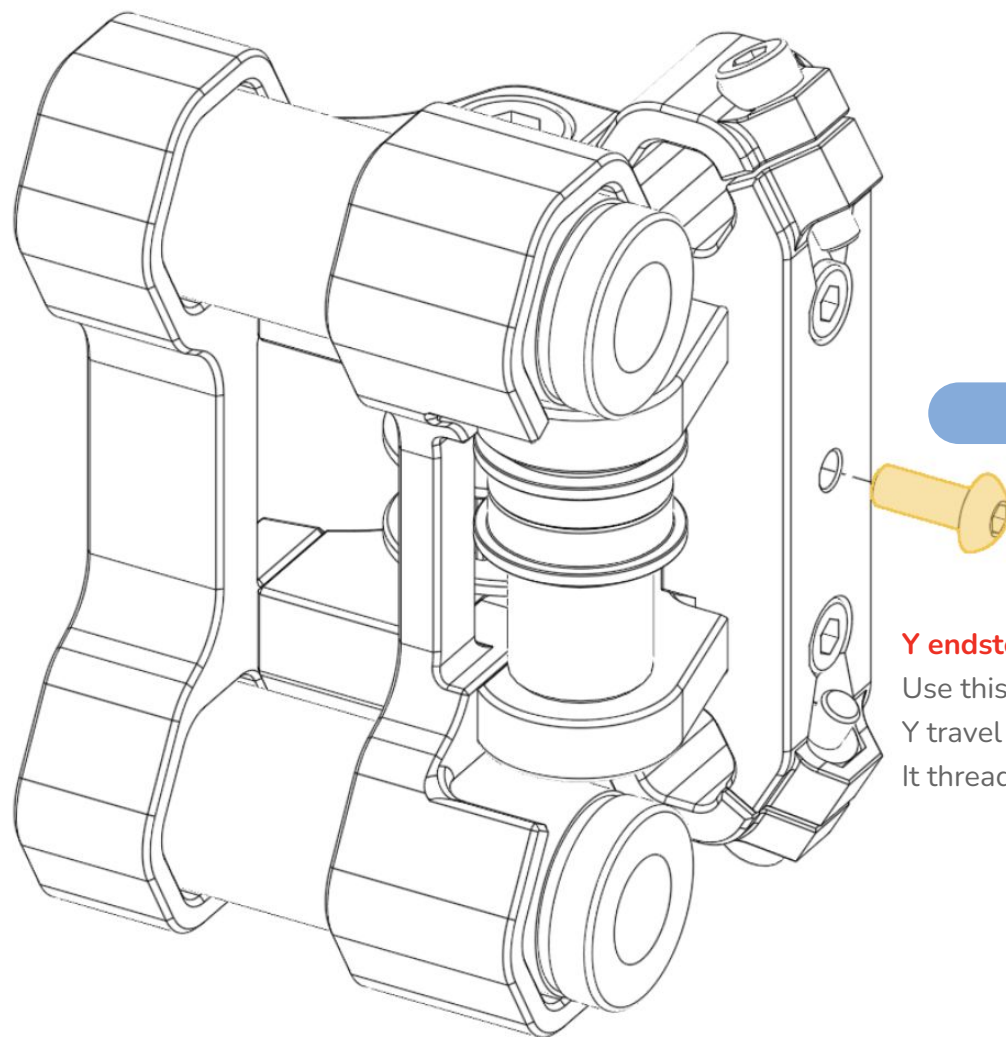


M3x8 BHCS


Y endstop trigger

Use this screw to adjust the trigger point so the Y travel falls in the print bed.
It threads into plastic!


X CARRIAGE

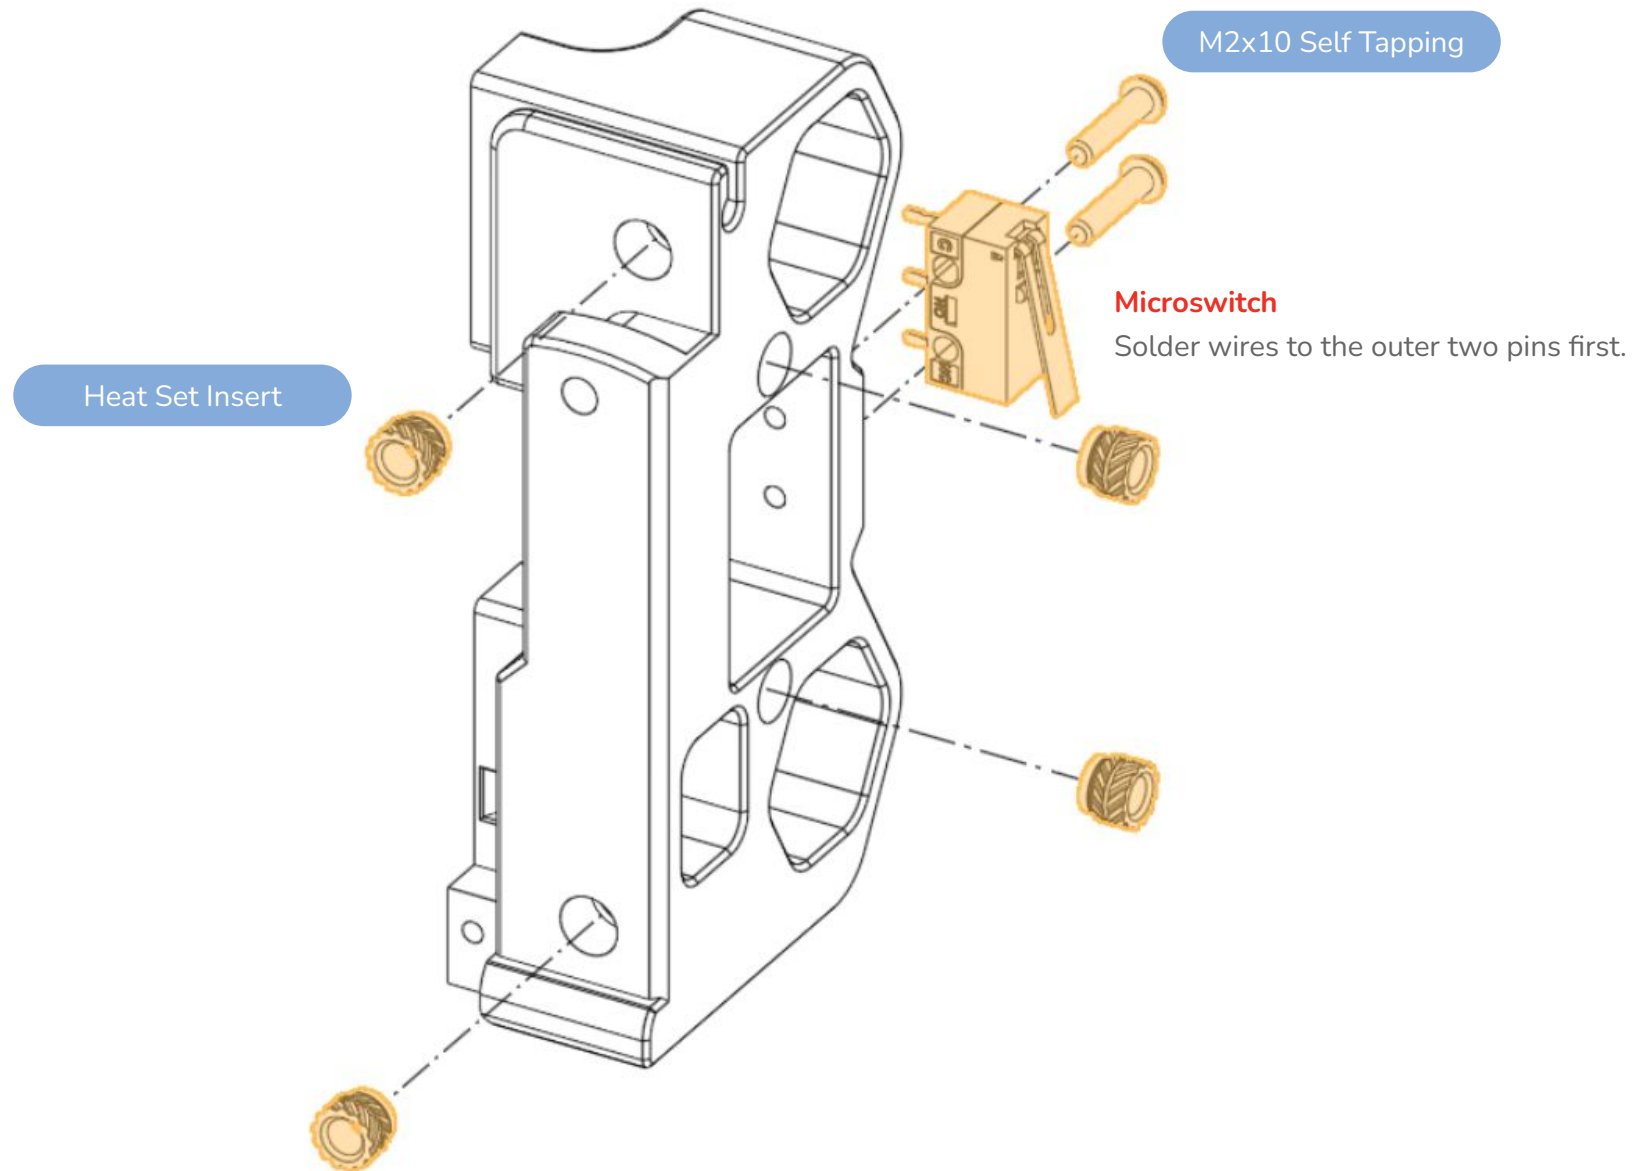

X CARRIAGE

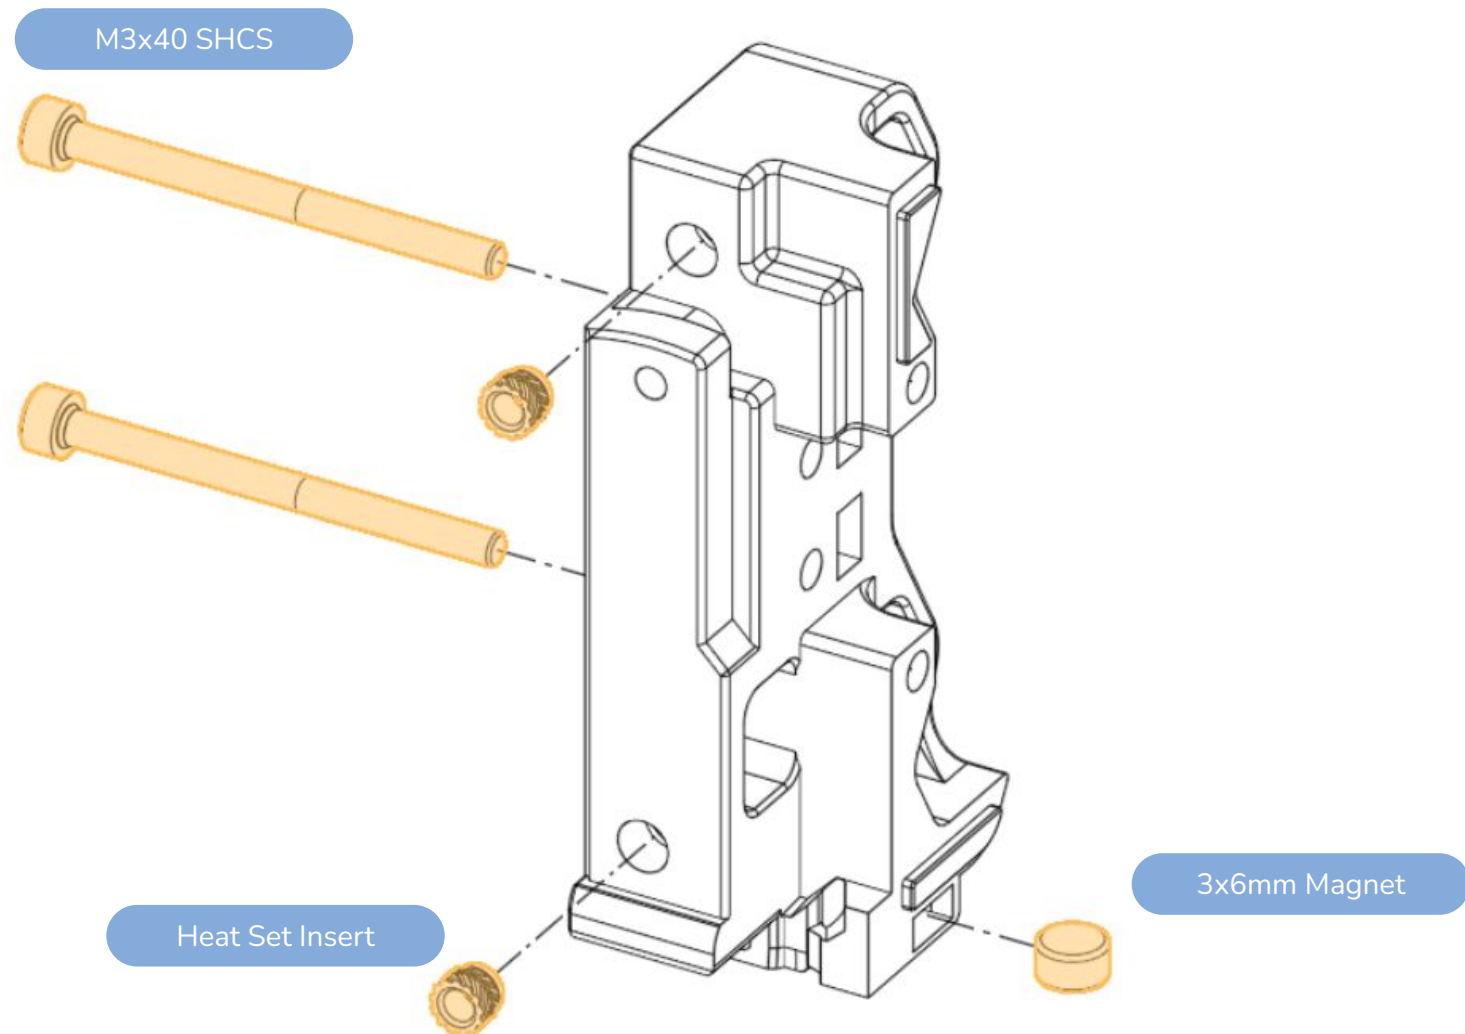


X CARRIAGE - KICKY_NG

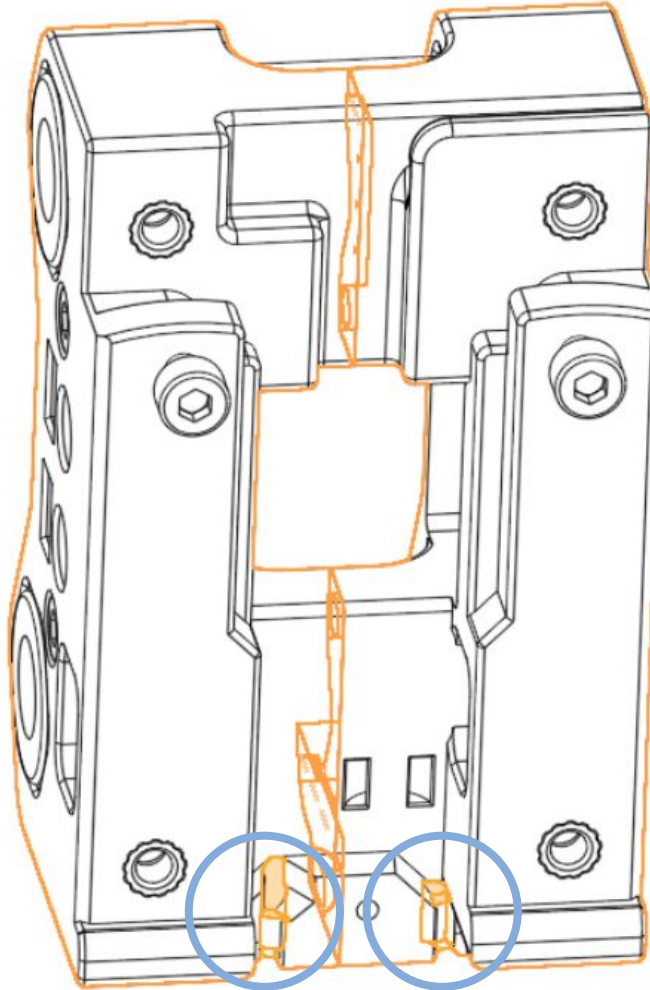


KlickyNG

The X carriage has built-in KlickyNG probe.
Feed two wire through these holes and twist
the conductor back from the front.
Check [here](#) for details about KlickyNG probe!


X CARRIAGE - KICKY_NG

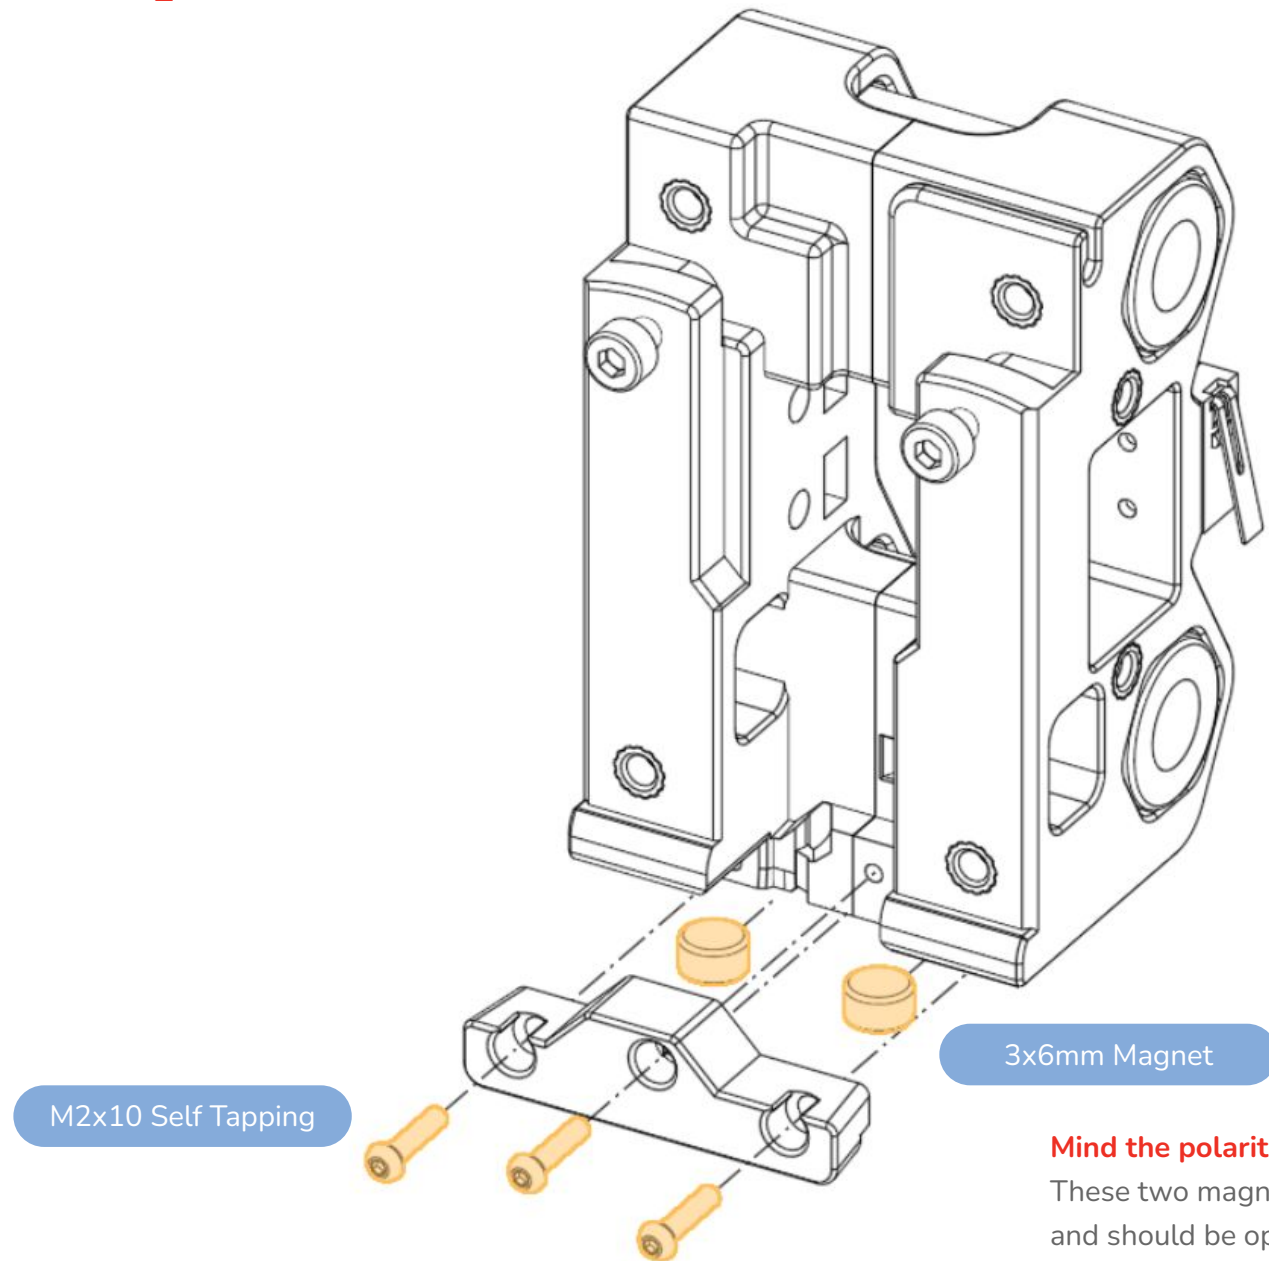


X CARRIAGE - INDUCTIVE PROBE

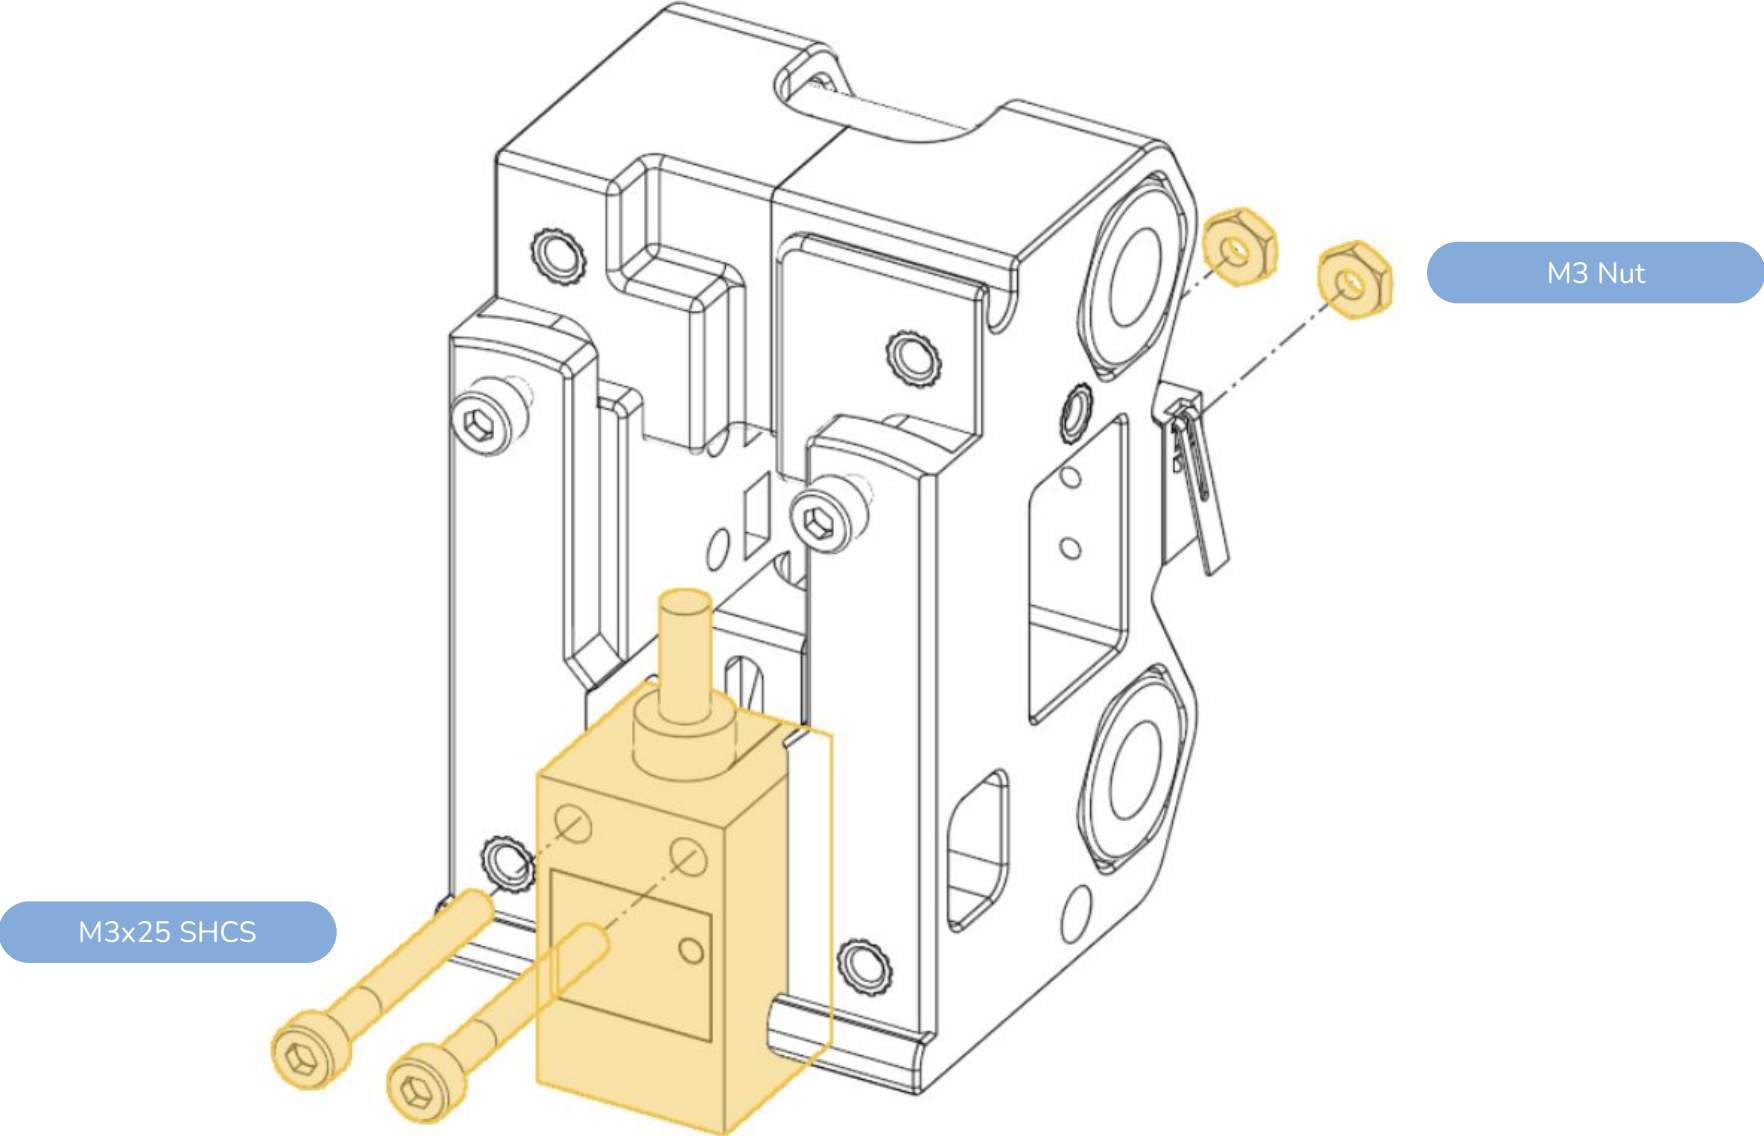


X CARRIAGE

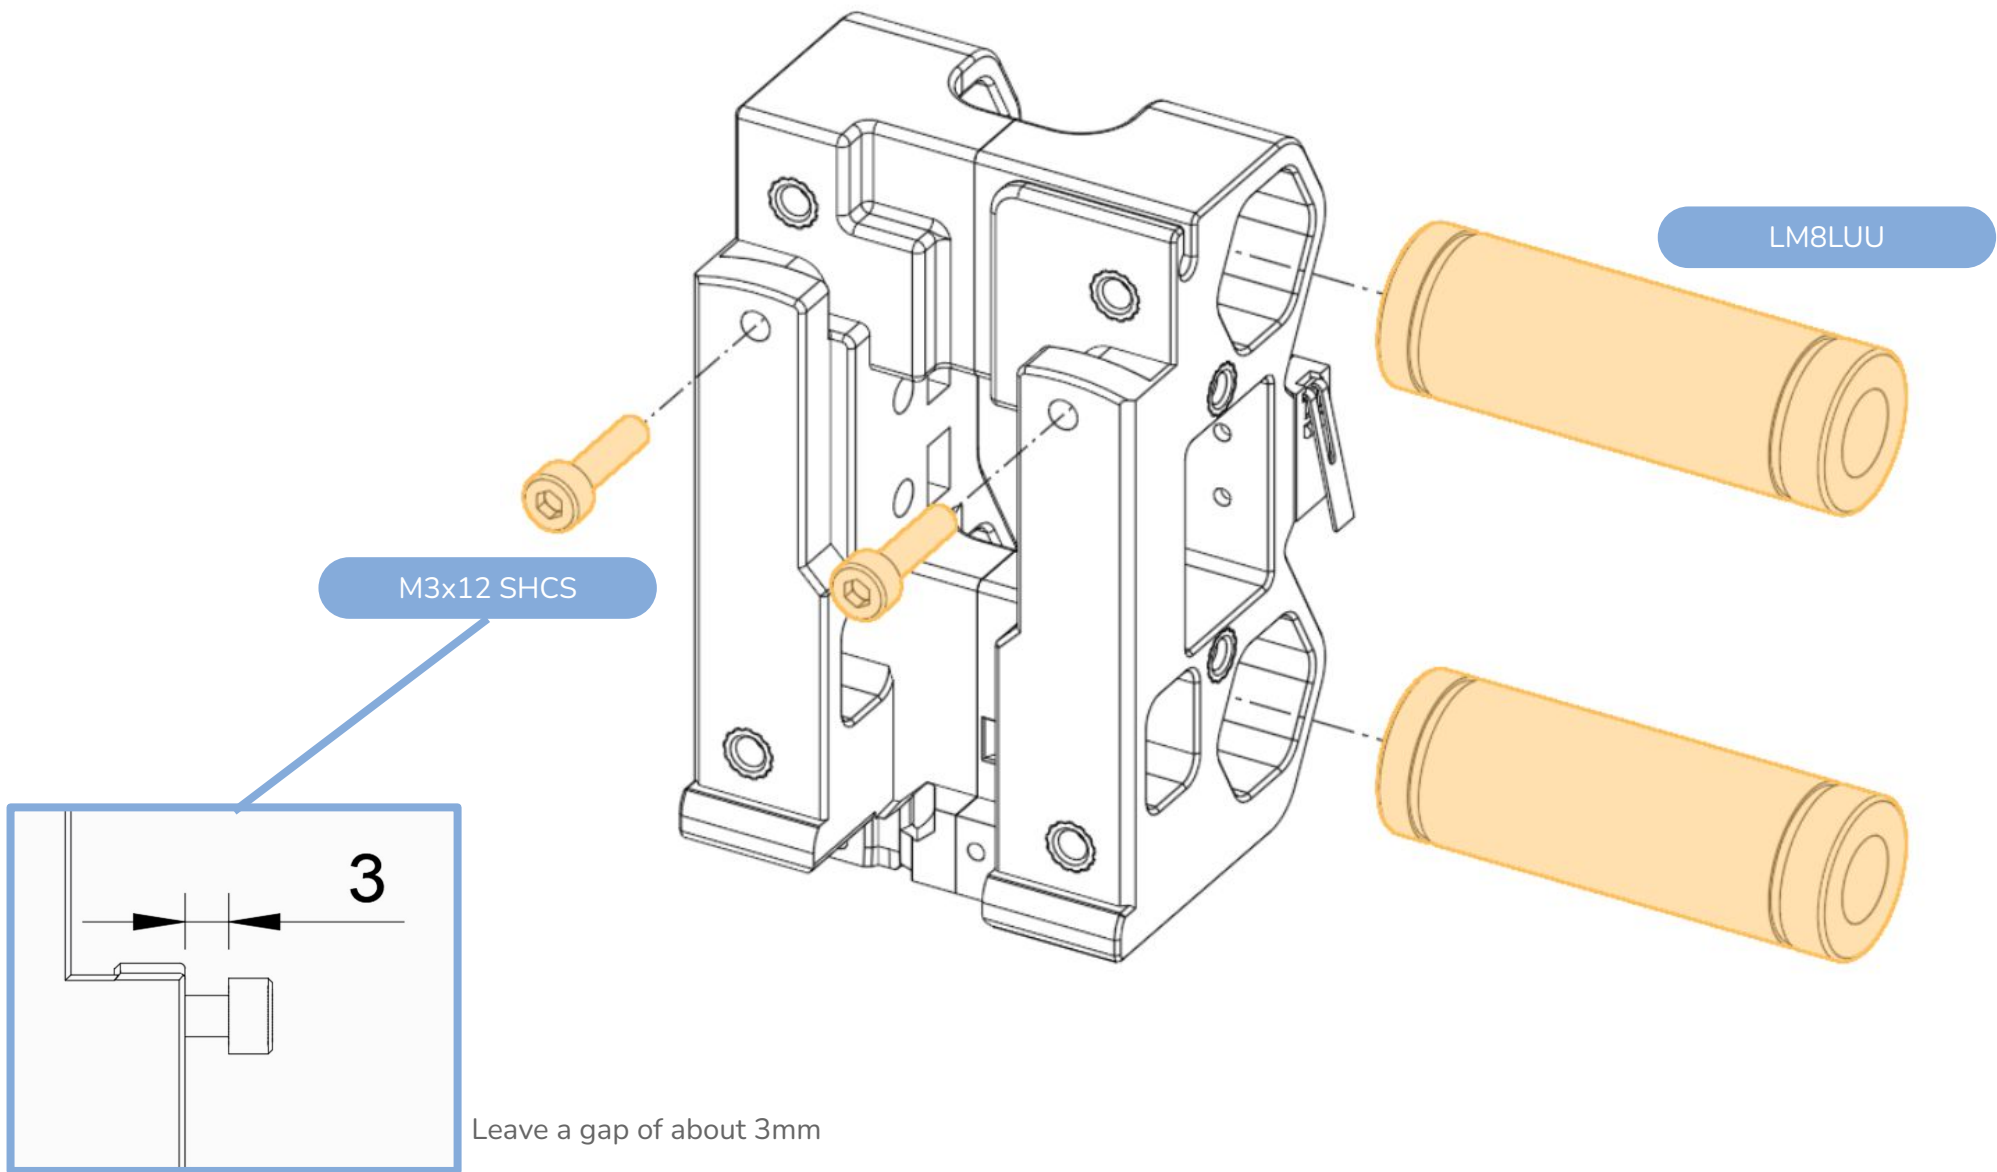

X CARRIAGE

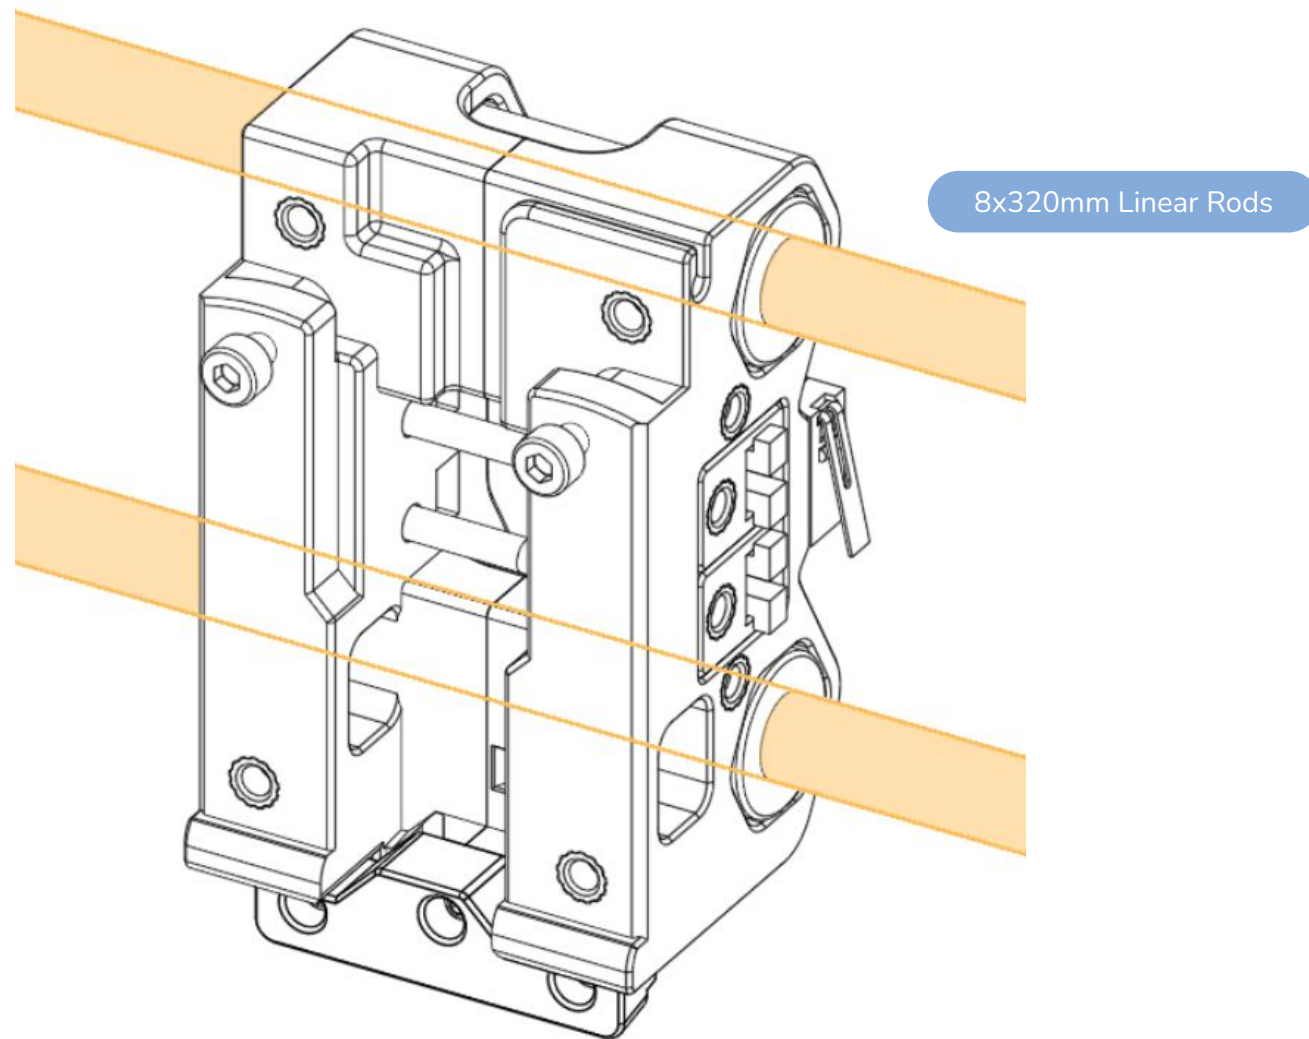


X CARRIAGE

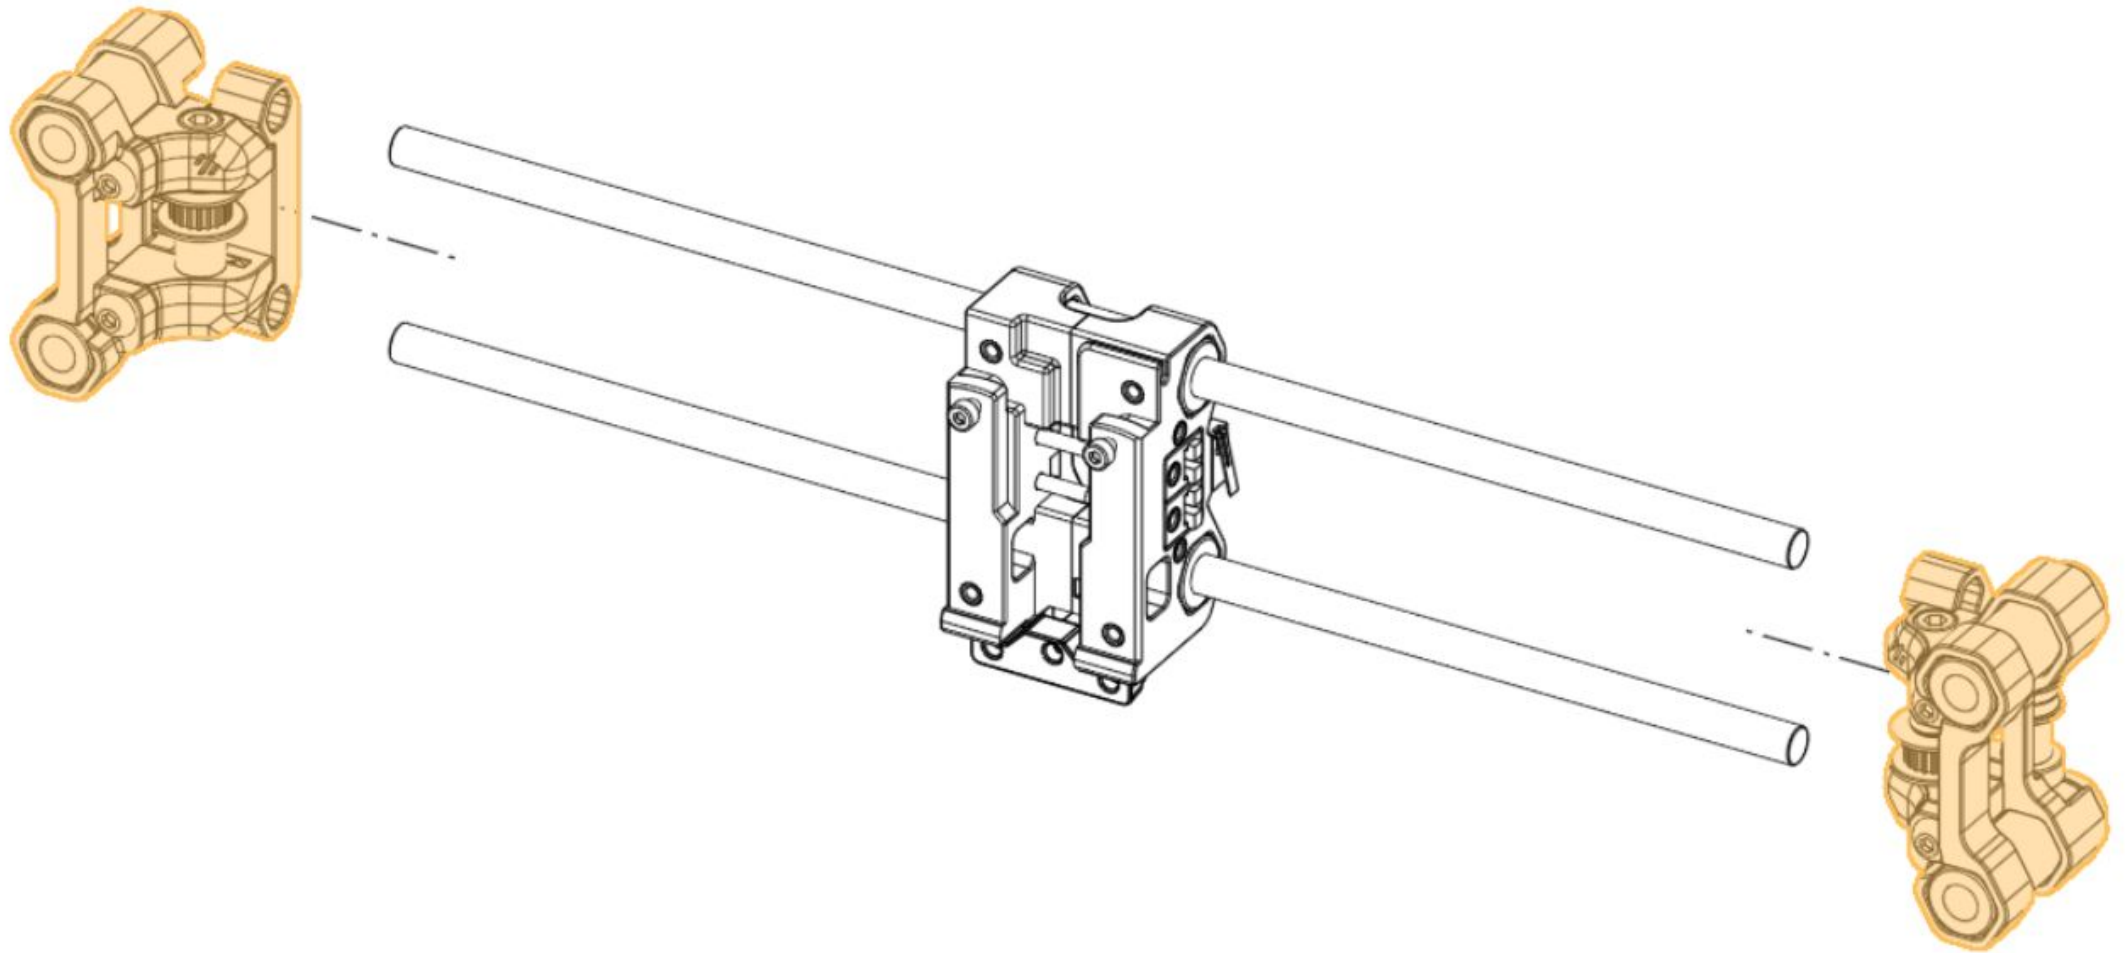


BELTS



Y AXIS

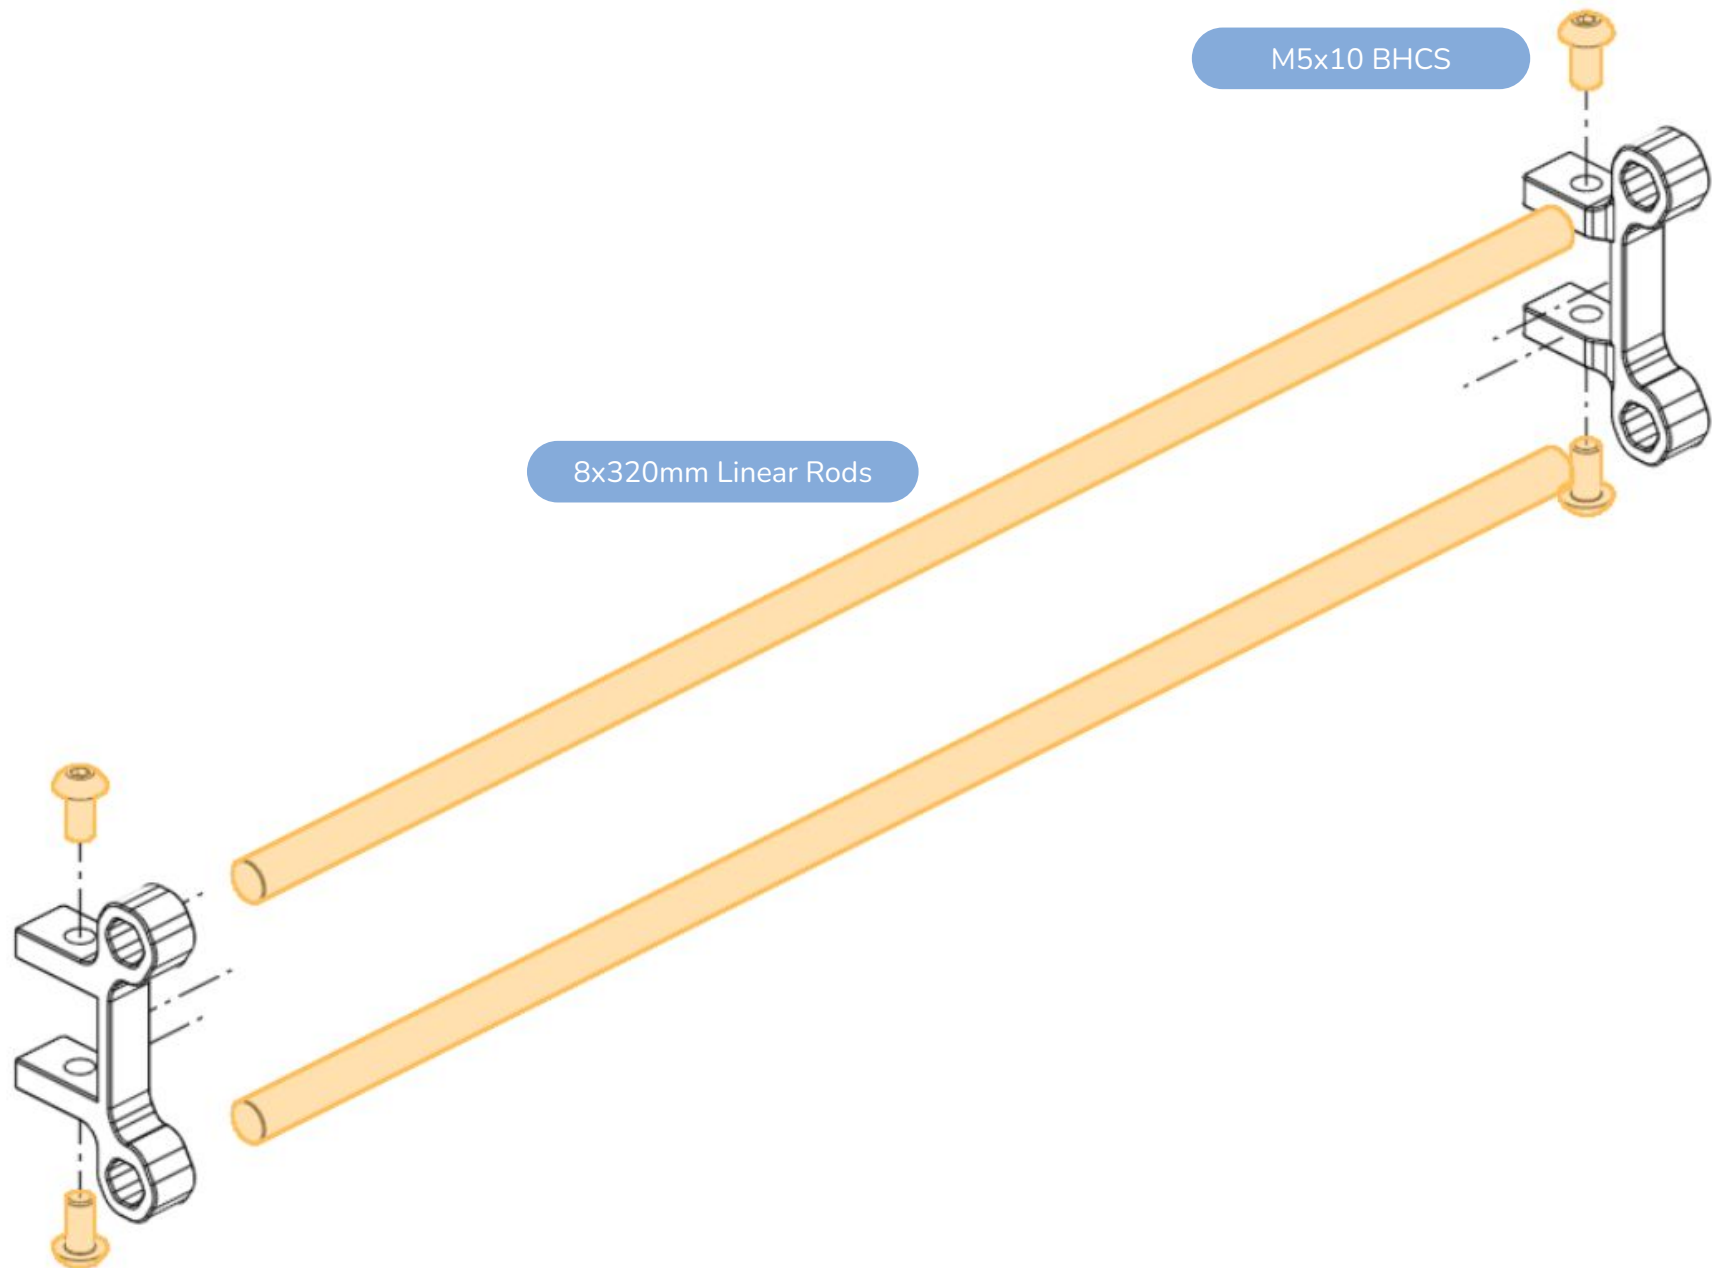

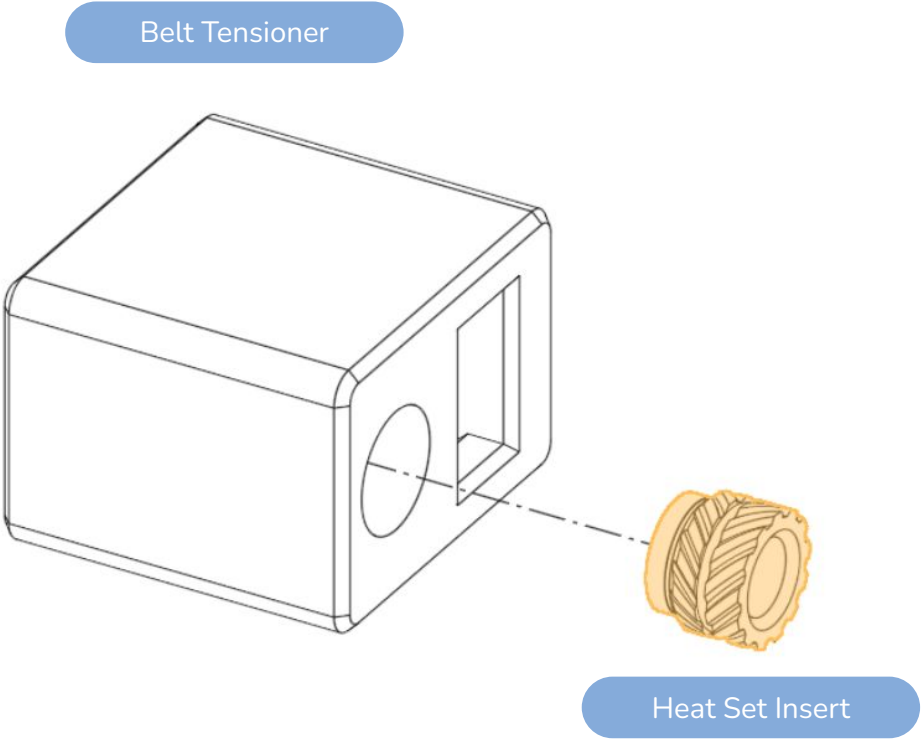


BELTS


ApexClips

The toothed side of the belt is facing the side with the heat set insert. Slide in the belt clip after inserting the belt.

Check [here](#) for details about ApexClips!

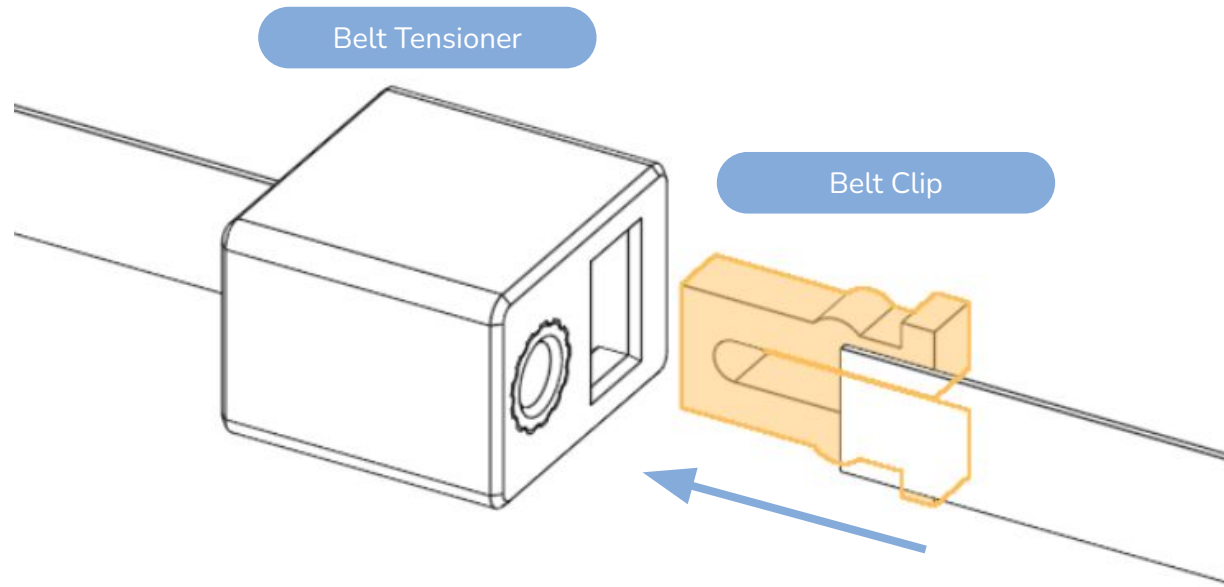


BELTS

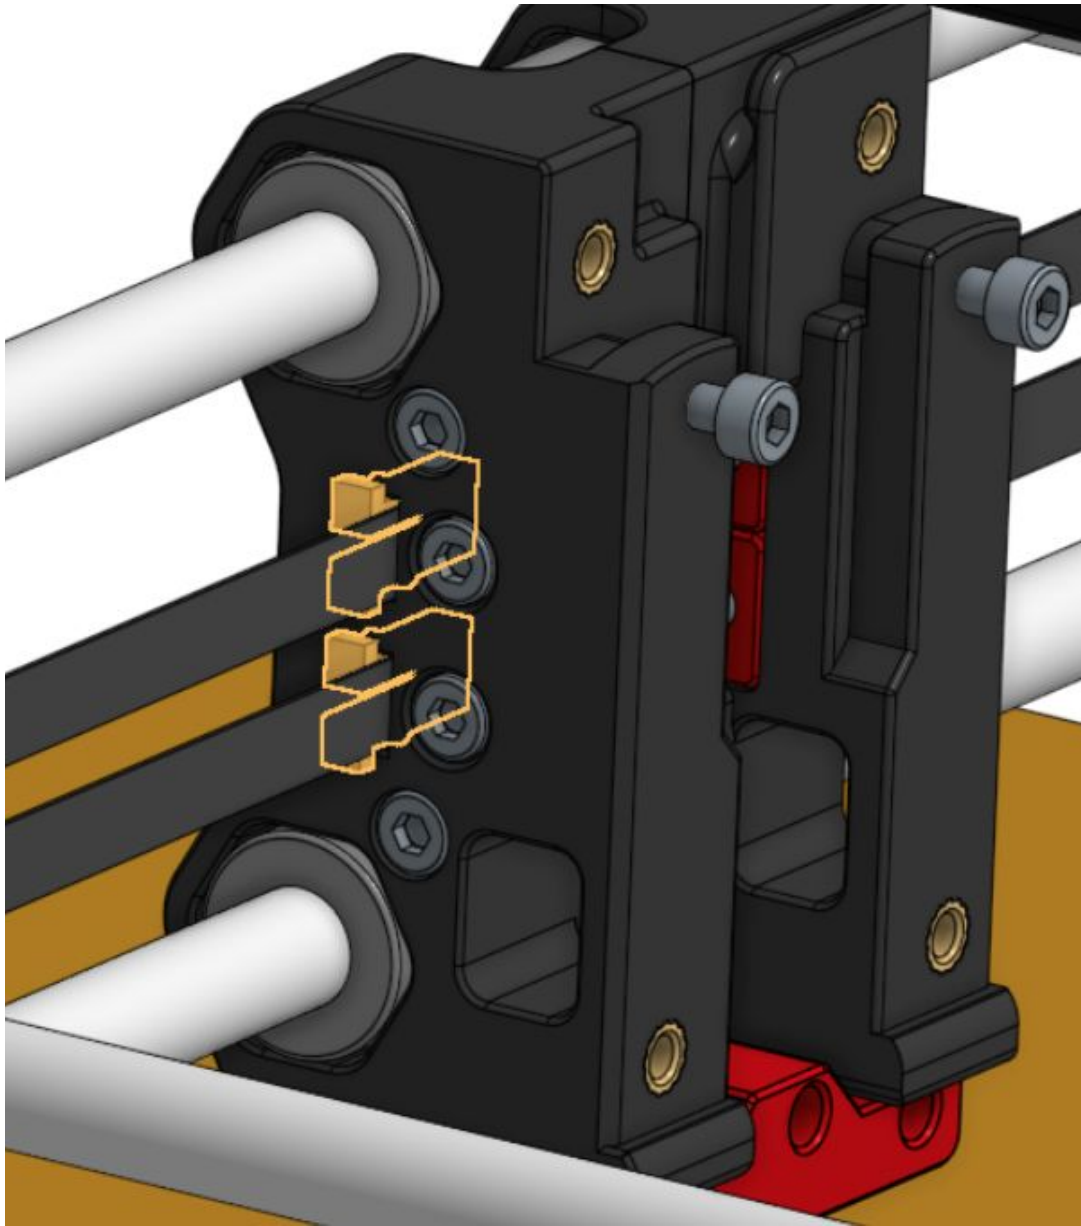

Rout the belts

Feed the belts through the whole gantry and clip the other end of the belts to the X carriage.

BELTS

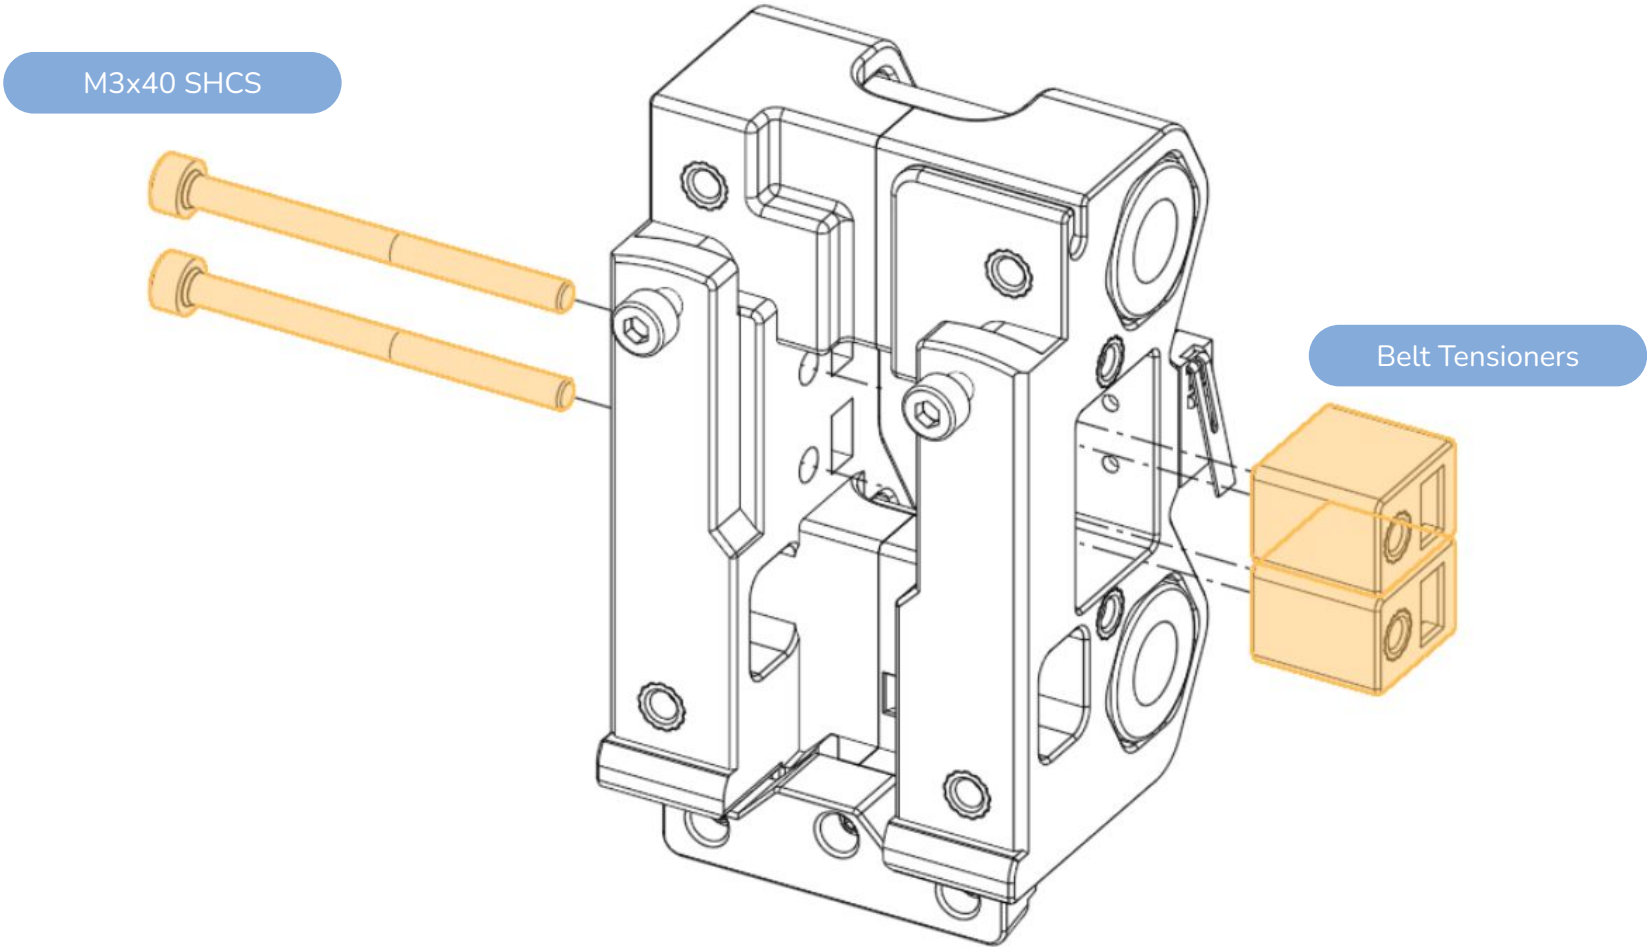

CONGRATULATIONS!

Now you can finish the build following the Voron Trident manual!

GITHUB

<https://github.com/nhchiu/Legacy-Fork>
