



(link to video guide)

Footrest Accessory Installation

Tools Provided:

- Torx 25 Driver
- Torx 30 Driver
- 3 mm Hex Driver
- 10 mm Wrench
- 2x Installation Spacers

Footrest Components:

- Footrest Tube
- 2 x Frame Clamps
- 2x Quick Release Clamps
- Storage Sleeve
- 2x Longer Backrest Screws





Storage Sleeve Installation Steps:

- 1) Choose either the left or right backrest tube for installation. Install with red reinforced webbing towards the inside of the Zeen.
- 2) Partially fold the Zeen to relieve tension on backrest screws.
- 3) Remove both screws (T25) retaining the backrest fabric and the bottom bolt and nut (T30 & 10mm Wrench) from the selected side. (Please retain the bottom hardware)
- 4) Use the provided longer screws to replace the original shorter screws, threading through the storage sleeve and backrest grommets into the backrest.
- 5) Re-thread the bottom bolt and nut through the bottom sleeve grommet.



- 6) Drawstring cinches bag shut.

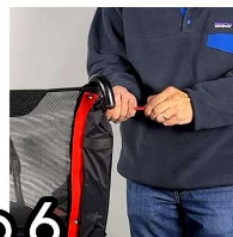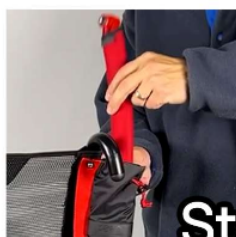

Footrest Frame Clamp 页码 2/2 Installation Steps:

- 1) Align both the front wheels away from the user's standing position.



- 2) Place the provided spacer plates around the front frame tube on top of the wheel fairings.

- 3) Briefly unscrew the red mount pin and apply two drops of threadlocker to the thread before re-installing and hand-tightening back down.



- 4) Fit the footrest mount brackets around the front frame tube to rest upon the spacer plates. Be sure that the retaining straps are towards the outside of the Zeen frame.



- 5) Loosely fit the quick-release clamp in the rear of the mount bracket. When installing quick release clamps, please ensure the cam levers are positioned facing toward the inside of the frame.



- 6) Test fit the footrest tube onto the loosely clamped mounts. Twist the footrest mount brackets so that the ends of the footrest tube are centered and the mounts align with the existing footrest reflectors.

- 7) With the quick-release clamps in the non-clamped position, tighten the quick release knob all the way by hand, then push down the cam to lock in position.



- 8) Remove the footrest tube and spacer plates to reveal the flat edge on the bottom of the red mounting pin. Turn the wheels back to the rear of the frame. Align the 10mm wrench with the bottom of the mount pin to hold it in place. Ensure the retaining straps face outward. Use the 3mm driver from below to thread into the red pin until tight. Repeat for both sides.



Note: Please ensure capture straps are always buckled, either to the tube or to themselves.