ECEN 449: Microprocessor System Design Department of Electrical and Computer Engineering Texas A&M University

Prof. Sunil P Khatri (Lab exercise created and tested by Ramu Endluri, He Zhou and Sunil P Khatri)

Laboratory Exercise #1 Using the Vivado

Objective

The aim of this week's lab exercise is to familarize you with the Xilinx FPGA design flow via Vivado by stepping through a simple example. We will use Vivado to create hardware, which lights up the LEDs on the ZYBO board depending on the status of the on-board DIP switches. The hardware will be using an FPGA and designed in Vivado using Verilog. After completing the aforementioned example, you will be expected to implement a simple counter and jackpot game on your own with the knowledge gained from the first part of this lab.

Procedure

- 1. Create a folder for your ECEN449/ECEN749 lab work
- 2. Launch the Vivado and create a new design project.
 - (a) Open a terminal window in the CentOS workstation and run the following commands:
 - >source /softwares/Linux/xilinx/Vivado/2015.2/settings64.sh >vivado

The first sets up the environment in order to run Vivado and the second command starts the Vivado Suite

(b) Once in Vivado, select **File** → **Create New Project**The New Project Wizard opens. Click **Next**. (Figure 1).

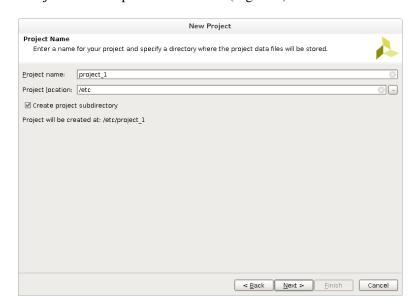


Figure 1: Create New Project

Select a Project Name (ex. lab1) and a Project Location (ex. /ecen449/lab1 in your home directory). Then check the create project subdirectory and click Next. Select RTL project and leave 'Do not specify sources' unchecked at this time. Click Next. You will see 'Add Sources' window, select 'Target language' as Verilog and 'Simulator language' as Mixed. Click on the green '+' button and select 'Create file', a window pop up will appear. Select 'File type' as verilog, 'File name' as 'switch', and select 'File location' as '<local to project>', click 'OK' to create the Verilog source file. Click 'Next' and you will see the 'Add Existing IP' window. Right now we don't need any IP. Click 'Next' and the 'Add Constraints(optional)' window will appear. We will add the Constraints File later in the lab. Click 'Next'.

(c) Next, the 'Default Part' window appears (Figure 2). We can select our hardware from the 'Parts' tab or from the 'Boards' tab. The 'Parts' tab lists Xilinx supported Parts(FPGAs) and the 'Boards' tab lists the supported boards. The ZYBO (Zynq Board) is an entry-level digital circuit development platform built around the Xilinx Zynq-7000 family, the Z-7010. The Z-7010 is based on the Xilinx All Programmable System-on-Chip (AP SoC) architecture, which inte-

grates a dual-core ARM Cortex-A9 processor with a Xilinx 7-series Field Programmable Gate Array (FPGA) logic. In this lab and the next we will select the hardware from the 'Parts' tab and in the later labs we will select the hardware using the 'Boards' tab. Select the hardware using the following parameters.

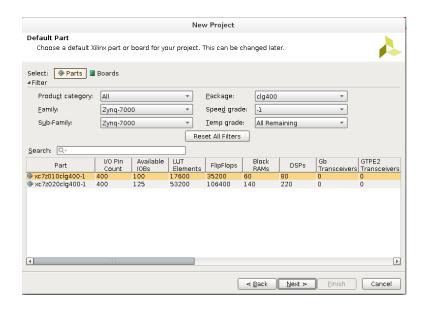


Figure 2: Device Properties

Set the device properties to the following:

Device Family: Zynq-7000 Sub-Family: Zynq-7000

Package: clg400 Speed Grade: -1

You will see two devices. Select the first device with part number 'xc7z010clg400-1' and click 'Next'. Finally, review the information in the 'New Project Summary' window and hit 'Finish' to create project.

Next, the 'Define Module' window appears (Figure 3). This allows us to define the ports for our hardware module. Xilinx will then auto generate part of our source file based on the information provided. Specify a port called 'SWITCHES'. Set its direction to 'input', check Bus, set the Most Significant Bit (MSB) to 3, and set the Least Significant Bit (LSB) to 0. Specify another port called 'LEDS' and set the direction to 'output', check 'Bus', set MSB to 3, and set LSB to

ECEN 449 3

0. This will create a 4-bit input port, which will connect to the on-board slide switches, and a 4-bit output port, which will connect to the on-board LEDs. Click 'OK'

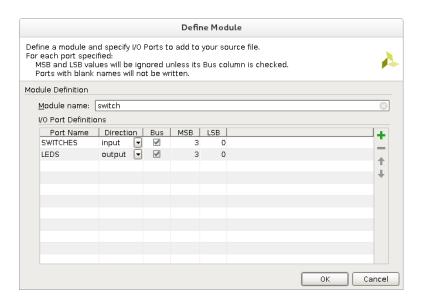


Figure 3: Define Module

- 3. At this point, Vivado has created a new project and source file for us to modify. We will now create code to provide the desired functionality (i.e. to turn on LED[i] when Switch[i] is high).
 - (a) From the 'Sources' window, open the 'switch.v' file. It will contain a Verilog module with the port declarations described in part 2(b).
 - (b) Above 'endmodule', add the following line of code: assign LEDS[3:0] = SWITCHES[3:0];

The resulting verilog module should be as follows:

```
module switch(SWITCHES,LEDS);
  input [3:0] SWITCHES;
  output [3:0] LEDS;
  assign LEDS[3:0] = SWITCHES[3:0];
endmodule
```

- (c) Click on File → Save All files to save your changes. Saving the source file will perform a 'Syntax Check'. When you save the file, if you have made any syntax errors in the source file, Vivado will show error messages corresponding to syntax errors in the messages panel. Please clear the errors and save your source file by pressing Ctrl+S or Click on File → Save All files.
- 4. We now need to create the 'Xilinx Design Constraints(XDC)' file containing the location of the DIP switches and LEDs on the ZYBO Board. The .xdc file will be used to connect signals described in the Verilog file (LEDS[3:0] and SWITCHES[3:0] in our case) to pins on the FPGA, which are hardwired to the LEDS and DIP switches on the ZYBO board.
 - (a) Use your favorite text editor to create a new file called 'switch.xdc' in your lab1 project directory and copy the following text into the new file:

```
## Switches
set_property PACKAGE_PIN G15 [get_ports {SWITCHES[0]}]
set_property IOSTANDARD LVCMOS33 [get_ports {SWITCHES[0]}]
set_property PACKAGE_PIN P15 [get_ports {SWITCHES[1]}]
set_property IOSTANDARD LVCMOS33 [get_ports {SWITCHES[1]}]
set_property PACKAGE_PIN W13 [get_ports {SWITCHES[2]}]
set_property IOSTANDARD LVCMOS33 [get_ports {SWITCHES[2]}]
set_property PACKAGE_PIN T16 [get_ports {SWITCHES[3]}]
set_property IOSTANDARD LVCMOS33 [get_ports {SWITCHES[3]}]
##LEDs
set_property PACKAGE_PIN M14 [get_ports {LEDS[0]}]
set_property IOSTANDARD LVCMOS33 [get_ports {LEDS[0]}]
set_property PACKAGE_PIN M15 [get_ports {LEDS[1]}]
set_property IOSTANDARD LVCMOS33 [get_ports {LEDS[1]}]
set_property PACKAGE_PIN G14 [get_ports {LEDS[2]}]
set_property IOSTANDARD LVCMOS33 [get_ports {LEDS[2]}]
set_property PACKAGE_PIN D18 [get_ports {LEDS[3]}]
set_property IOSTANDARD LVCMOS33 [get_ports {LEDS[3]}]
```

Note that the above pin assignments were taken from the ZYBO Master Constraint File accessible from the course website.

(b) After saving 'switch.xdc', return to the Sources panel in vivado, right click on the constraints folder and select 'add sources'. Next, the 'Add Sources' window will open. Select 'Add or

ECEN 449 5

create constraints' and click 'Next'. Click on the green + button and select 'Add files' and navigate to the directory where you saved the constraint file. Select the constraint file and click 'OK'. Click 'Finish' to add the XDC file to your project.

- 5. At this point, both 'switch.v' and 'switch.xdc' should show up in the 'Sources' window. It is now time to create the hardware configuration for our specific FPGA and download the generated configuration to the ZYBO board.
 - (a) Select 'switch.v' in the 'Sources' window. In the 'Flow Navigator' under 'Program and Debug' panel, click on 'Generate Bitstream'. A warning will appear indicating 'No implementation results available'. Click 'Yes' to launch 'Synthesis and Implementation'. This will run all the processes necessary to create a bitstream, which can be downloaded to the FPGA. Running these processes may take several minutes; progress is indicated by the spinning icon and output to the console. You can check the progress in the 'Design Runs' panel located at the bottom of the screen. When a process completes, a appears next to the appropriate process name. Vivado follows these steps before creating the Bitstream File: synthesize the Verilog, map the result to the FPGA hardware, place the mapped hardware, and route the placed hardware.
 - (b) Once the bitstream generation is completed, we need to download the bitstream to the FPGA on the ZYBO board. Turn on the power to the ZYBO board and make sure that the jumper JP5 is set in 'JTAG' mode. In the 'Flow Navigator' window, under the 'Program and Debug' panel click on 'Open Hardware Manager'. Click on 'Open Target' and in the pop up select 'Open New Target' which will open the 'Open New Hardware Target' window. Click 'Next'. select 'Local Server' in the 'connect to' field. Click 'Next'. Select 'xilinx_tcf' in Hardware Targets and 'xc7z010_1' in Hardware Devices as in (Figure 4). The 'arm_dap_0' device is ARM Cortex Processor which is not needed for this lab. Click 'Next' and go through the summary and Click 'Finish'. Click on 'Program Device' under 'Hardware Manager' and select the FPGA 'xc7z010_1'. Click 'Program' to program the FPGA on the ZYBO board.
- 6. At this point, the FPGA should be programmed to function as described in 'switch.v'. Verify this by toggling the DIP switches 0 through 3 and observe LEDs 0 through 3. Demonstrate your progress to the TA.
- 7. Implement a 4-bit counter using the LEDs (You do not need the switches for this exercise). The count value should update approximately every 1 second. Use the BTN0 and BTN1 push buttons on the ZYBO board to control the direction of the count. For example, when the BTN0 button is pressed, the counter should count up. Likewise when the button BTN1 is pressed, the counter should count down. When neither button is pressed, the count should remain the same. Demonstrate this operation to the TA upon completion.

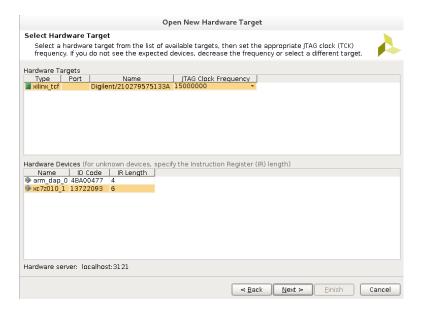


Figure 4: Hardware Target

Hints:

- Do not forget to add clock and reset as input pins to your verilog module.
- Skim through the user manual for the ZYBO board to determine the pin assignments for additional signals. The user manual may be found on the course website.
- After modifying the XDC to include the new ports (and removing unused ports) append the following text to the XDC:

```
set_property PACKAGE_PIN L16 [get_ports CLOCK]
set_property IOSTANDARD LVCMOS33 [get_ports CLOCK]
```

Note: The above XDC lines provide Vivado with timing constraints necessary to ensure proper design operation and assume your signal for clock is labeled 'CLOCK'.

- The L16 pin is the onboard clock with frequency 125MHz. Updates to the LEDs at this rate will not be visible, and thus, the incoming clock must be divided. Think back to your introductory digital logic class to determine how to divide a clock!
- 8. Design a 'Jackpot game which works as follows: The LEDs glow in a one-hot fashion, which means that the LEDs are turned on one a time in a sequential manner. Get the transition to happen as fast as you can, while you can still make out which LED is on at a given of time. Assign a DIP switch to each of the LEDs. At any point in time, if you turn on the switch corresponding to the glowing LED, you win a Jackpot and all the LEDs start glowing!

ECEN 449 7

Deliverables

1. [6 points.] Demonstration of working portions of the lab.

Submit a lab report with the following items:

- 2. [6 points.] Correct format including an Introduction, Procedure, Results, and Conclusion.
- 3. [6 points.] Commented Verilog files.
- 4. [2 points.] Answers to the following questions:
 - (a) How are the user push-buttons wired on the ZYBO board (i.e. what pins on the FPGA do each of them correspond to and are the signals pulled up or down)? You will have to consult the Master XDC file for this information.
 - (b) What is the purpose of an edge detection circuit and how should it have been used in this lab?