


3280-K

BOX — BUILD COOKBOOK







CONCEPT — NOT A SHIPPED PRODUCT

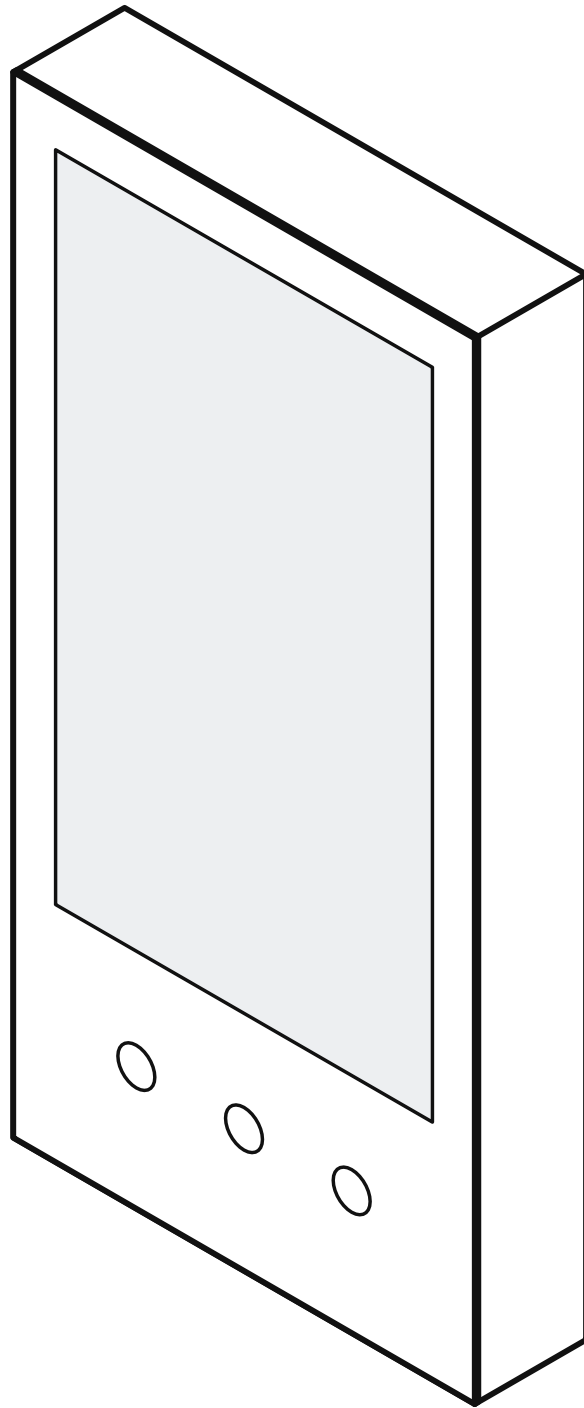


15 × 30 × 3-5/8"

9 crosscuts · no rips

≈ 24 lb

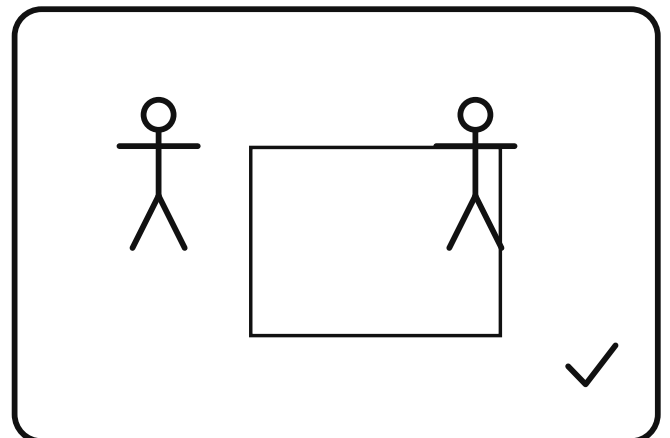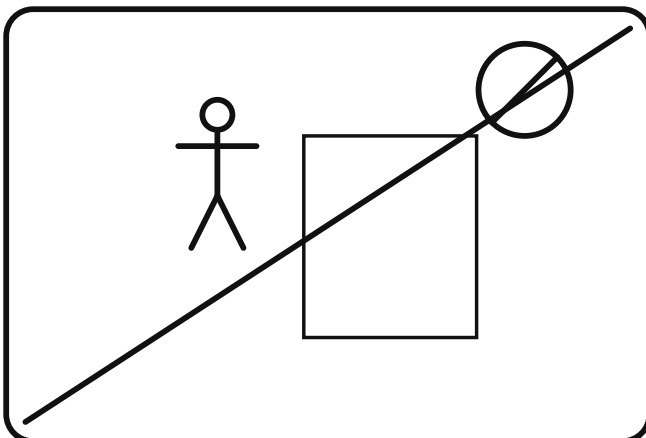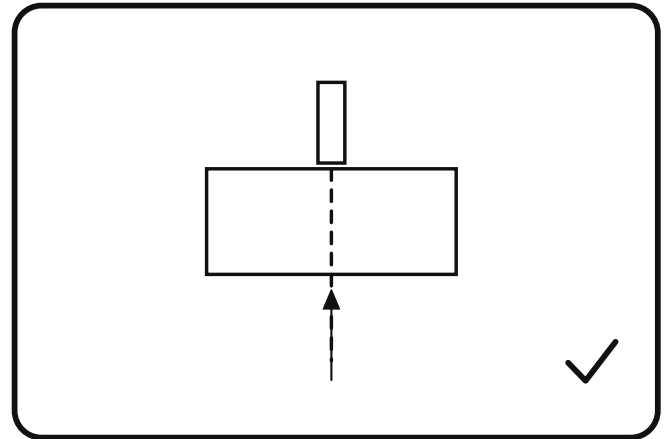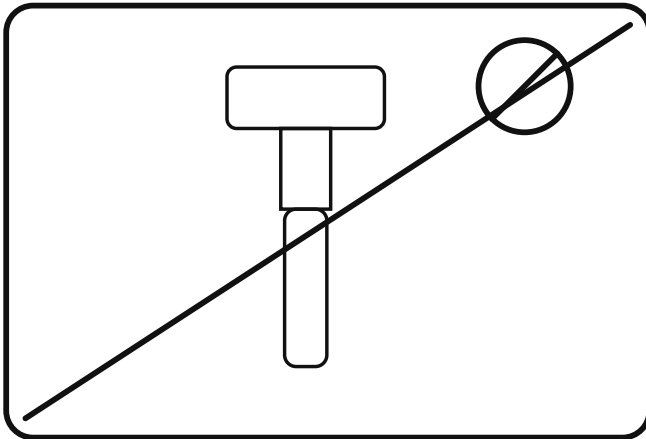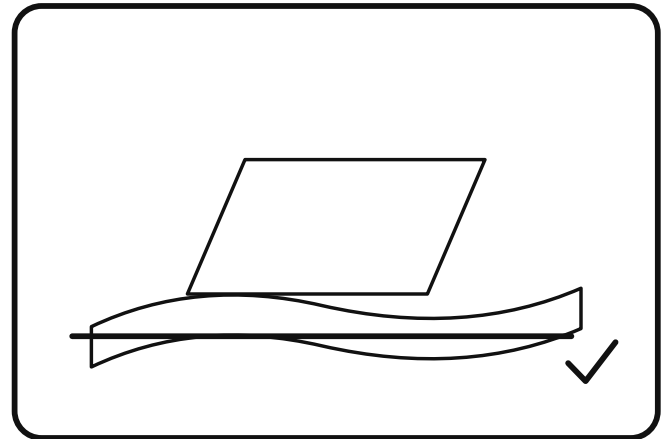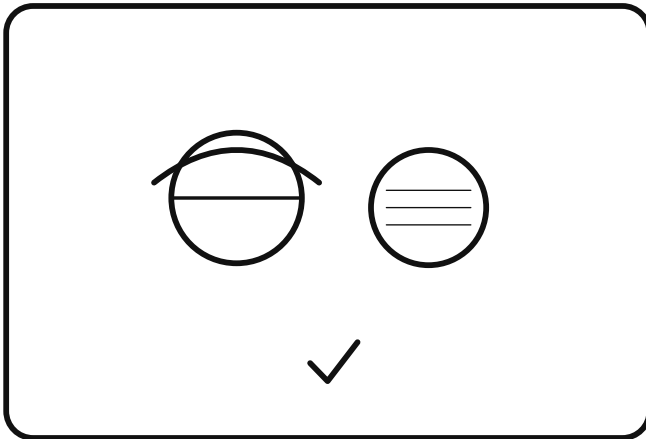


A

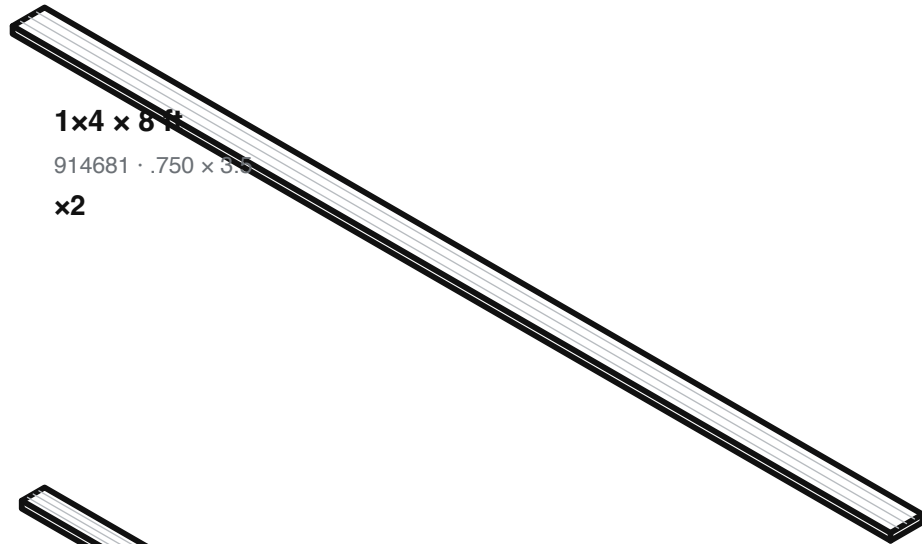

1x4 x 8 ft

914681 · .750 x 5.5

x2

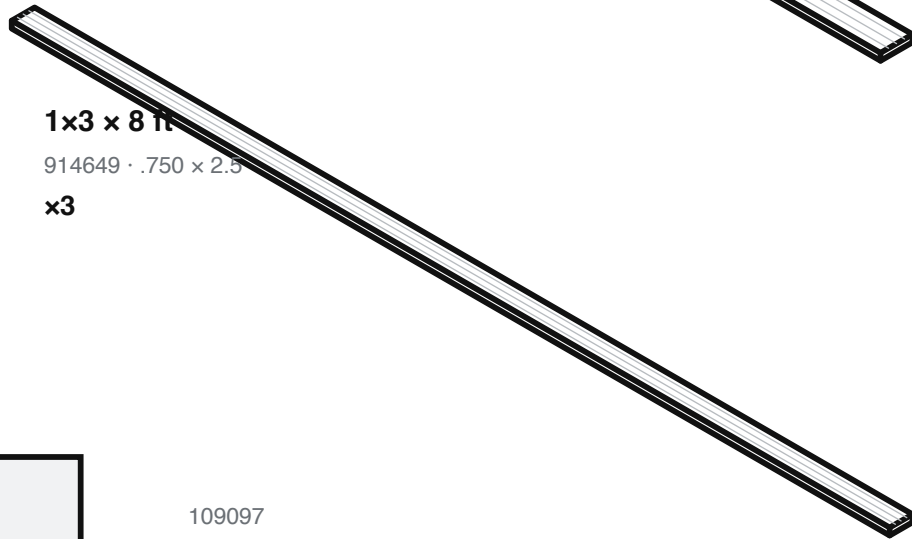


1x3 x 8 ft

914649 · .750 x 2.5

x3

1/2" MDF 2 x 4

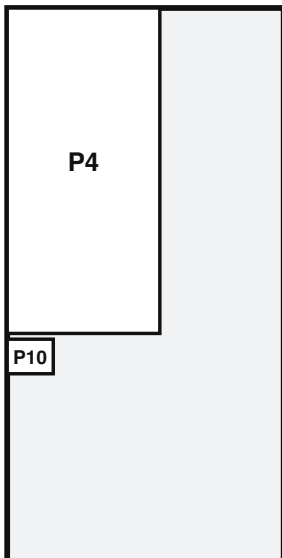

109097

**HOME DEPOT
CUTS THIS**

P4 13-1/4 x 28-1/4

P10 4 x 3

you never handle
a sheet good

B

2




3-1/2 x 30
1x4 x2

3



3-1/2 x 13-1/2
1x4 x2

8




2-1/2 x 28-1/2
1x3 x2

9



2-1/2 x 28-1/2
1x3 x2

4



13-1/4 x 28-1/4
MDF x1

7




2-1/2 x 13-1/2
1x3 x1

10



4 x 3
MDF x1


1



15 x 30 (ordered)
ACM x1

C

F1



WOOD SCREW, #6 x 1-1/4, FLAT HEAD

box, rail, cleats, rails. Pilot 7/64.

x40

F2




INSERT, THREADED, #8-32, BRASS, FOR WOOD

15 front + 6 rear. Drill 3/8. EPOXY.

x21

F3



SCREW, #8-32 x 1/2, BUTTON HEAD, BLACK

holds P1. Pin-torx if you want it tamper-resistant.

x15

F4



THUMBSCREW, #8-32 x 1/2

holds P4. Tool-free service.

x6

F5




BOLT, M4 x 12 + FLAT WASHER

monitor to P9, VESA 100.

x4

F6



SWITCH, 30 mm ANTI-VANDAL, MOM. SPST-NO

VERIFY the 30.5 cutout before P1 is cut.

x3

F7




INLET, IEC C14, PANEL MOUNT, FUSED

lower cavity, in the back or the bottom board.

x1

D

G1



WOOD GLUE, PVA (Titebond II)
every wood joint

G2



EPOXY, 5 MINUTE, 2-PART
the 21 inserts, nothing else

G3





SANDING SEALER or PRIMER
ALL SIX FACES of every part

G4












PAINT, SATIN BLACK
outside + visible edges




ALL SIX FACES

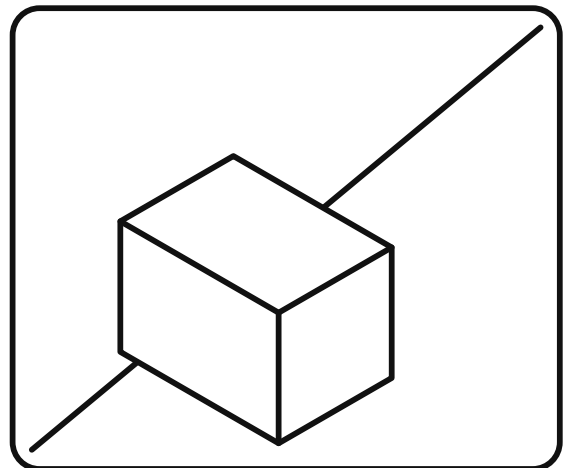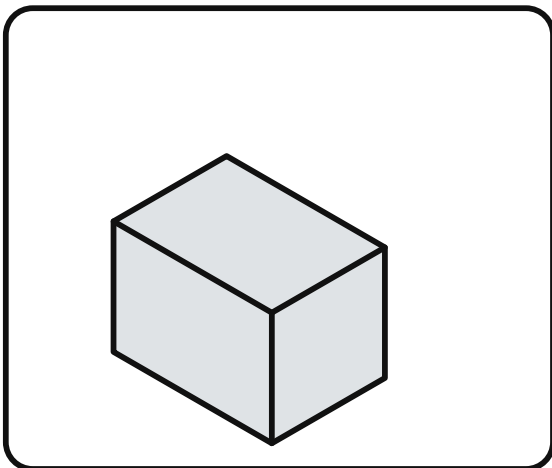

E

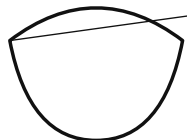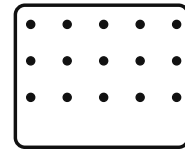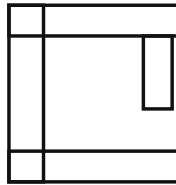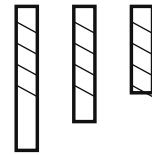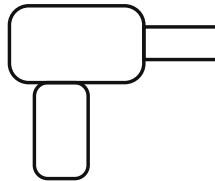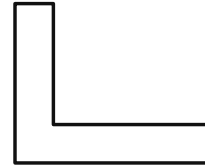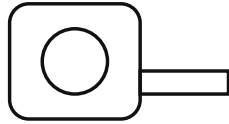

1

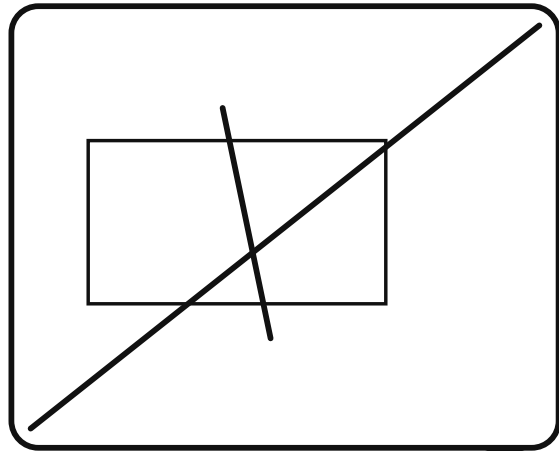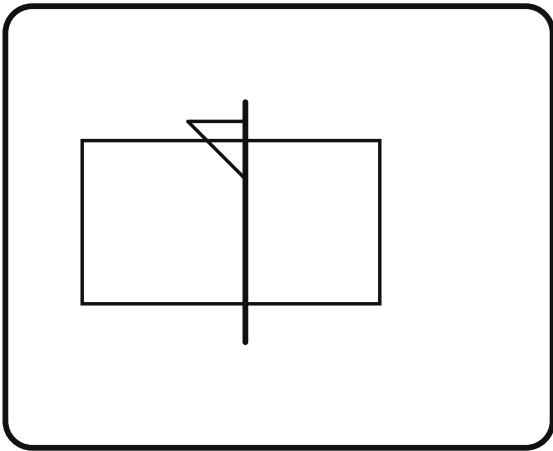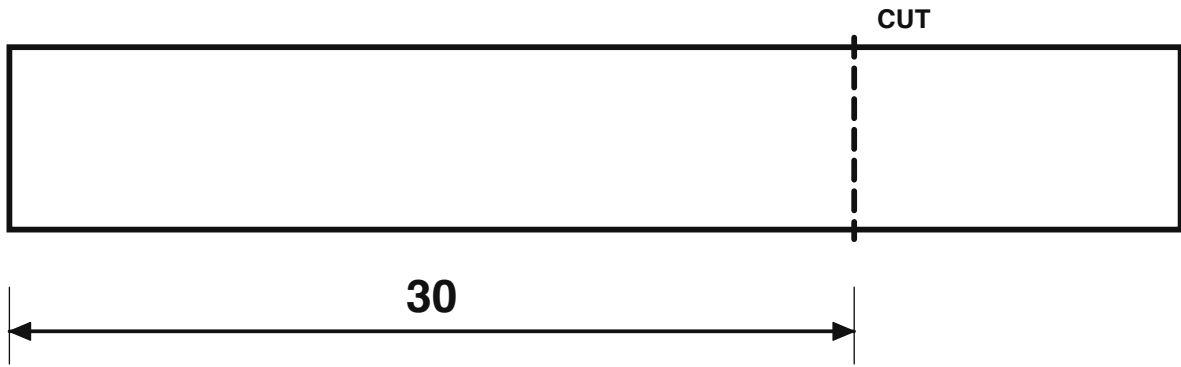


WASTE

BLADE HERE

2

1x4 #1 — 4 cuts




1x3 #1 — 3 cuts




1x3 #2 — 2 cuts



9 CUTS

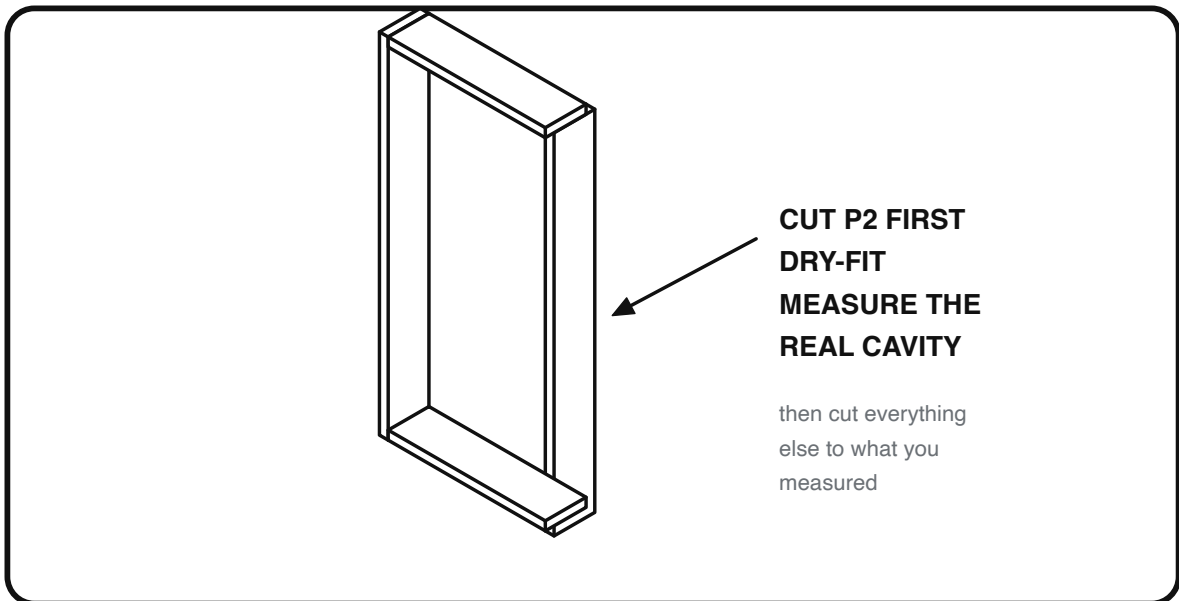


3

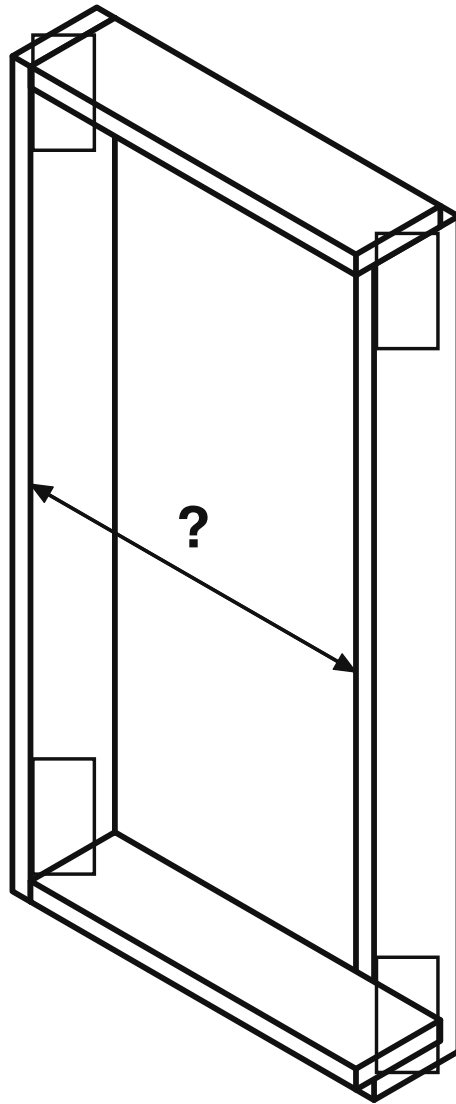


CLAMP · MEASURE · THEN CUT

4

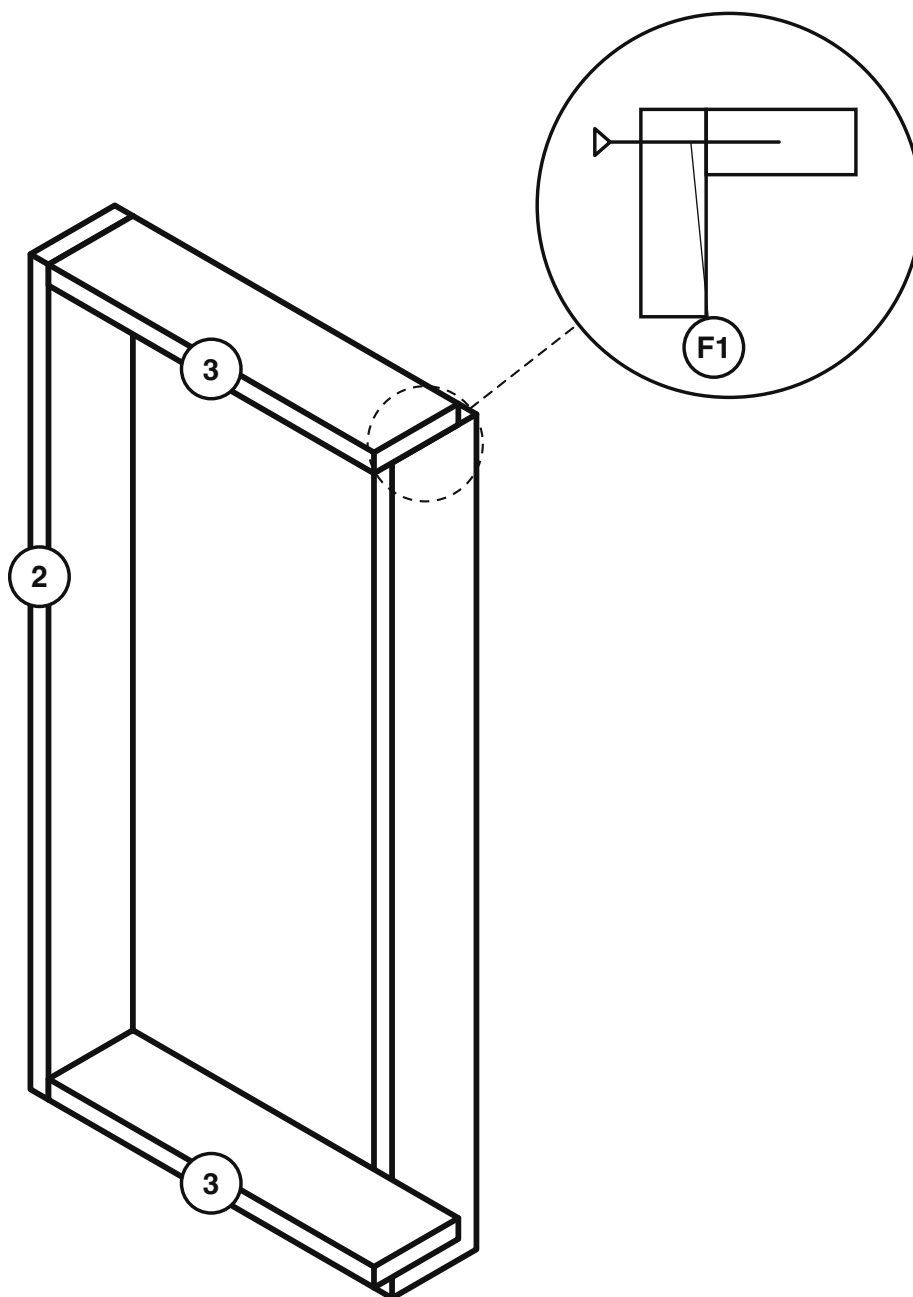


PILOT 7/64 · GLUE · SCREW

5

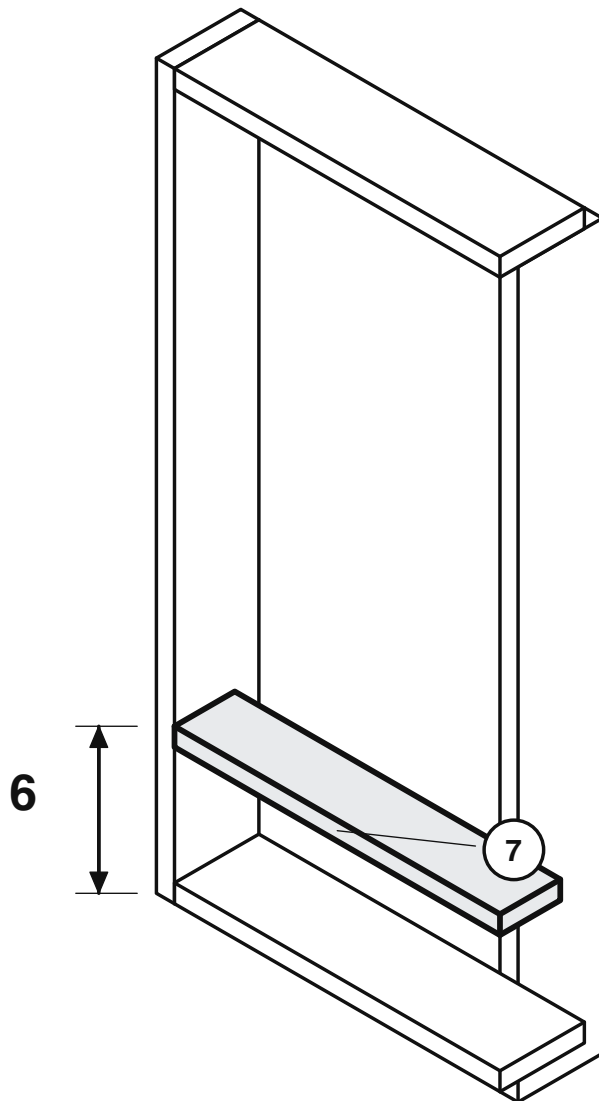


FRONT FLUSH

6

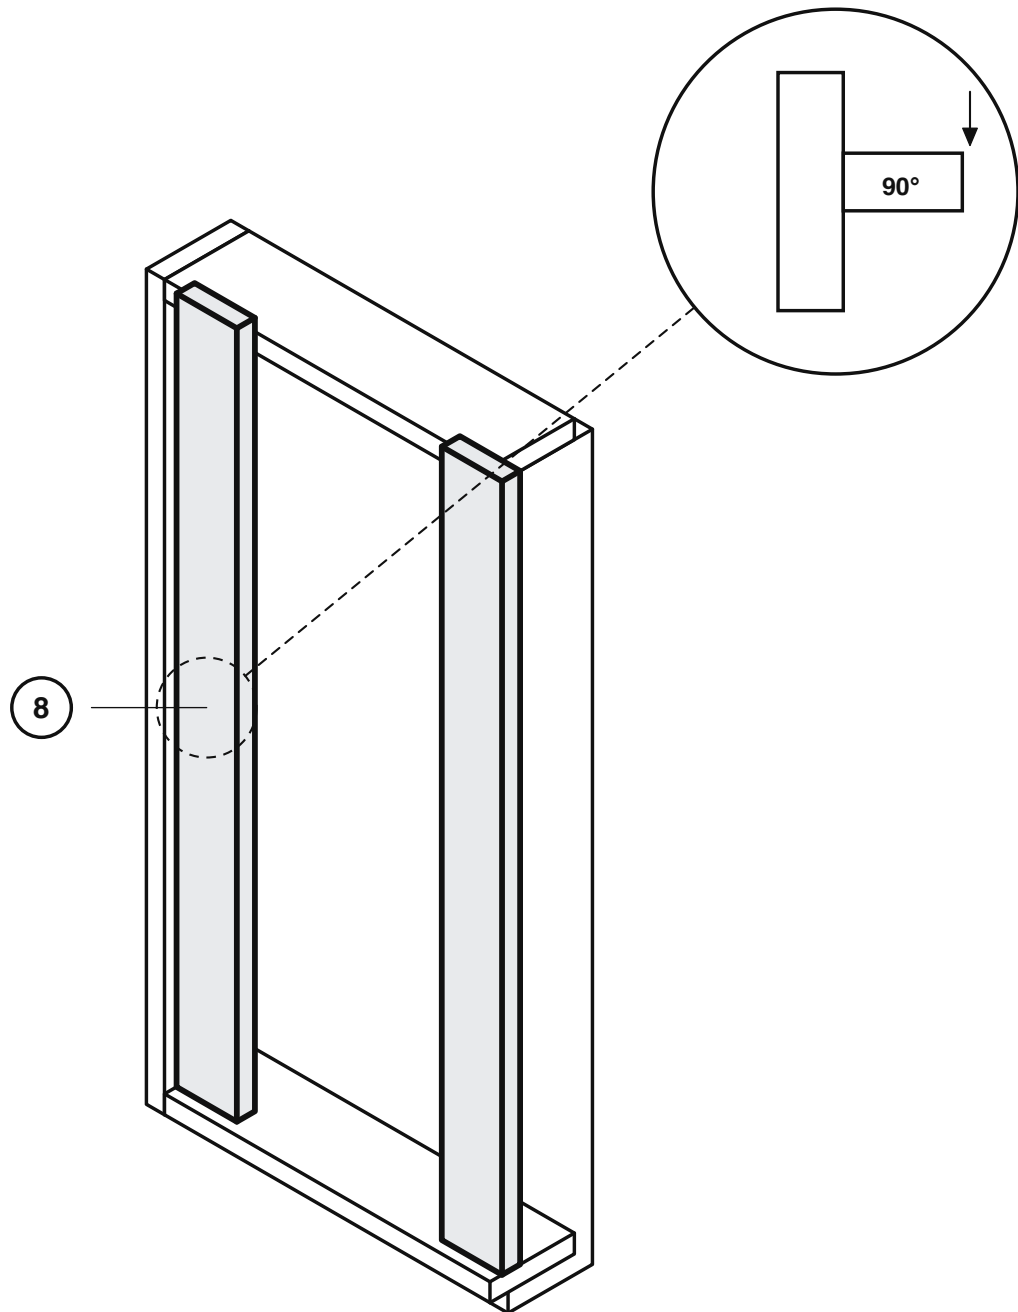

TURNED FLAT — 3/4 DEEP, BEHIND THE SCREEN


7

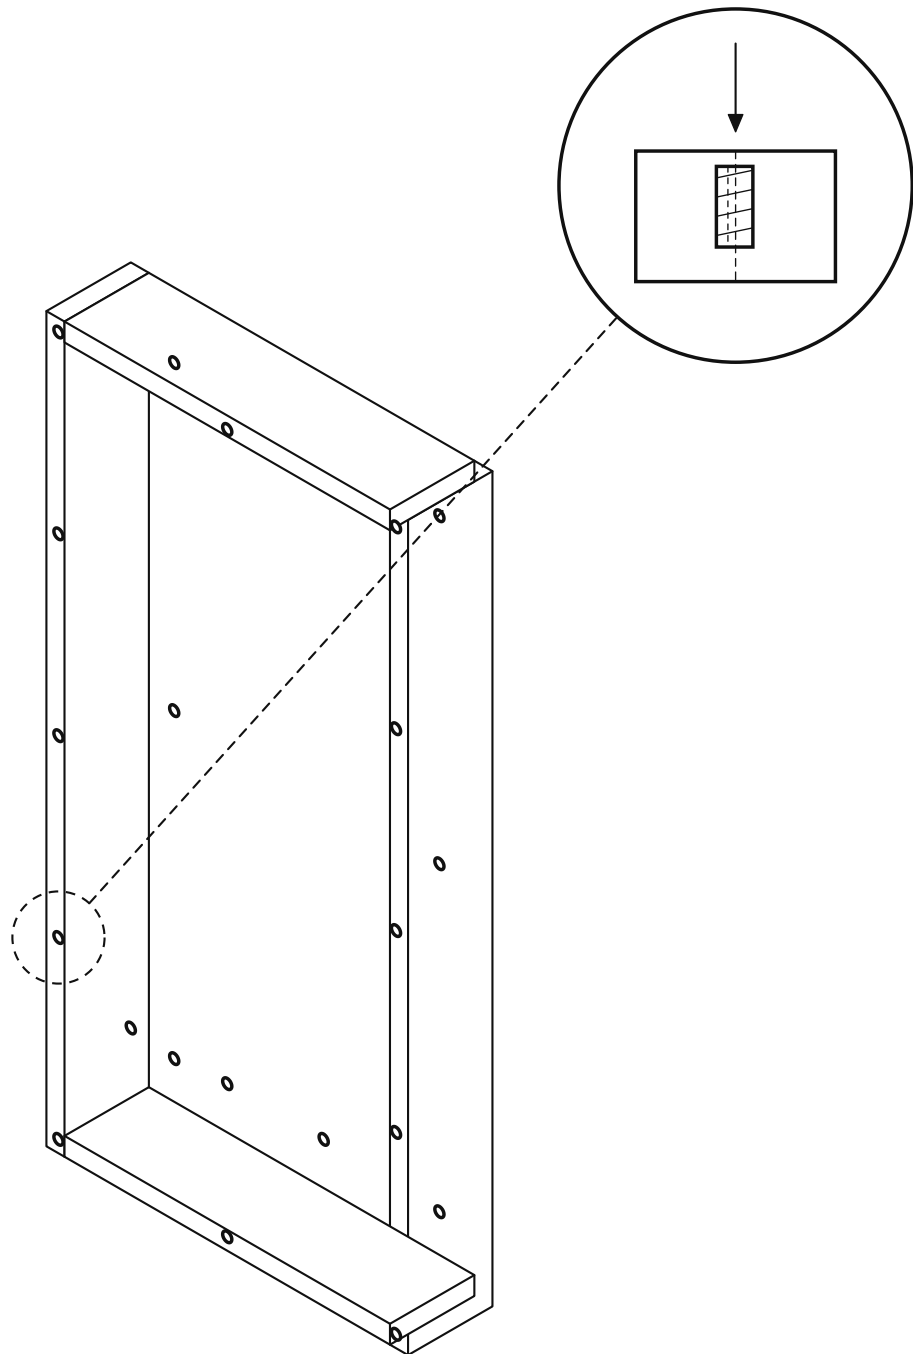

F2 x21


DRILL $\frac{3}{8}$ · EPOXY · FLUSH

8

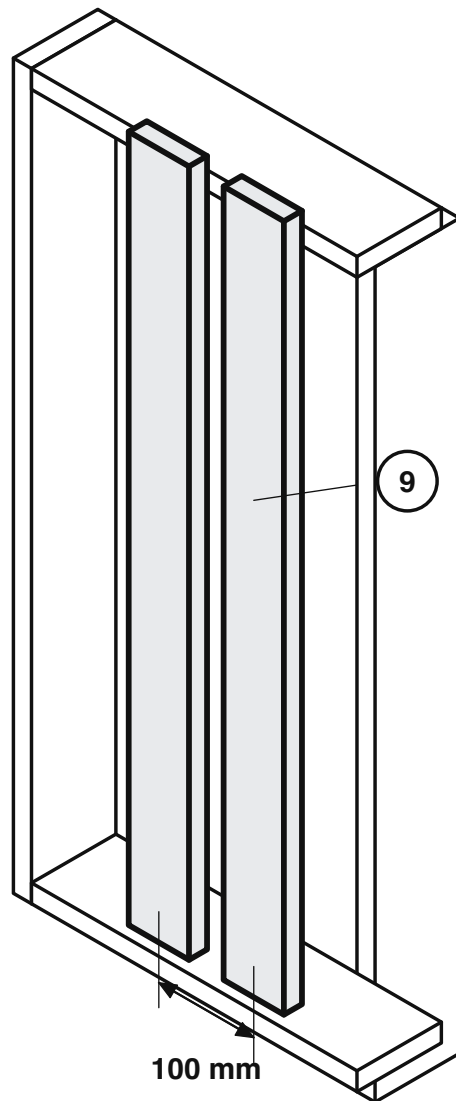


VESA 100

9

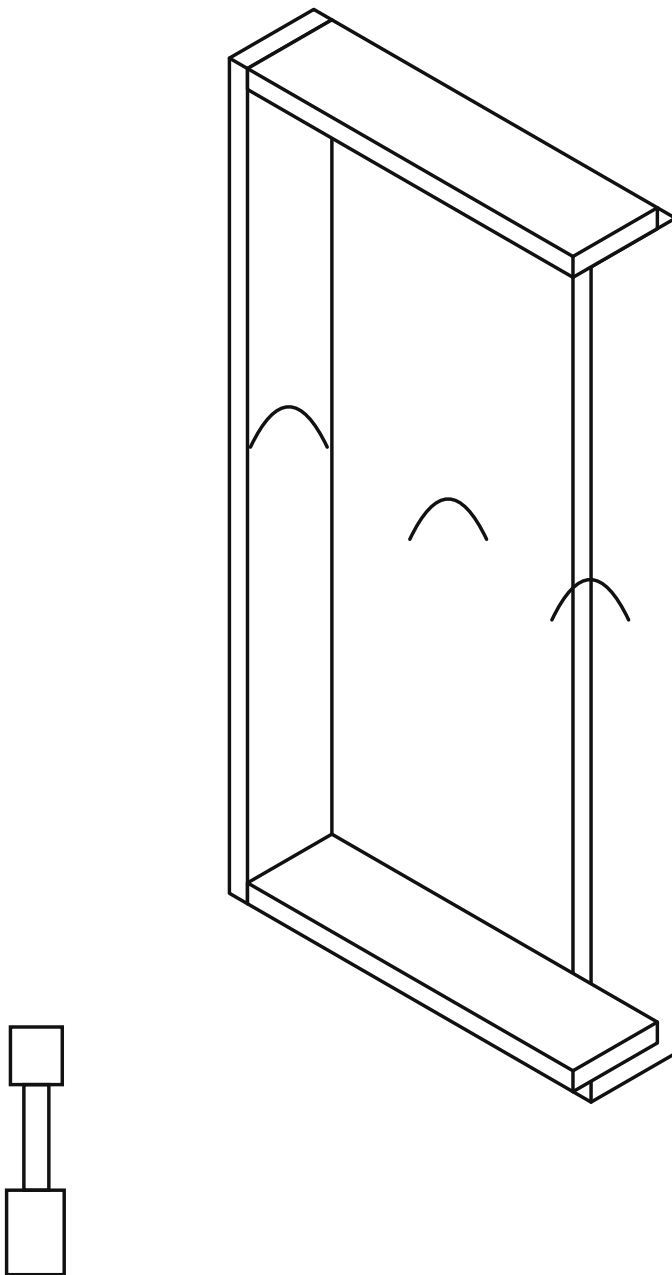

SEAL ALL SIX FACES — INSIDE TOO


10

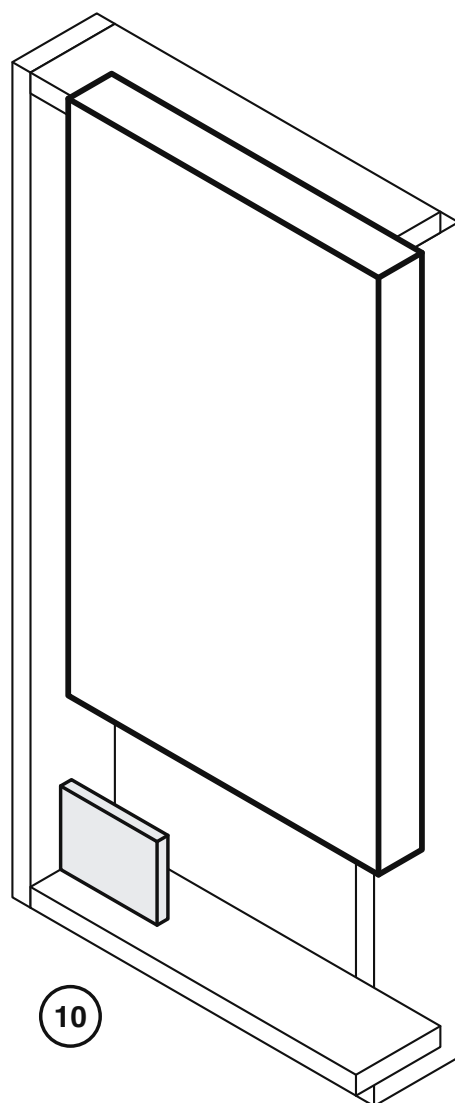

F5 x4


MONITOR ONTO THE RAILS

11

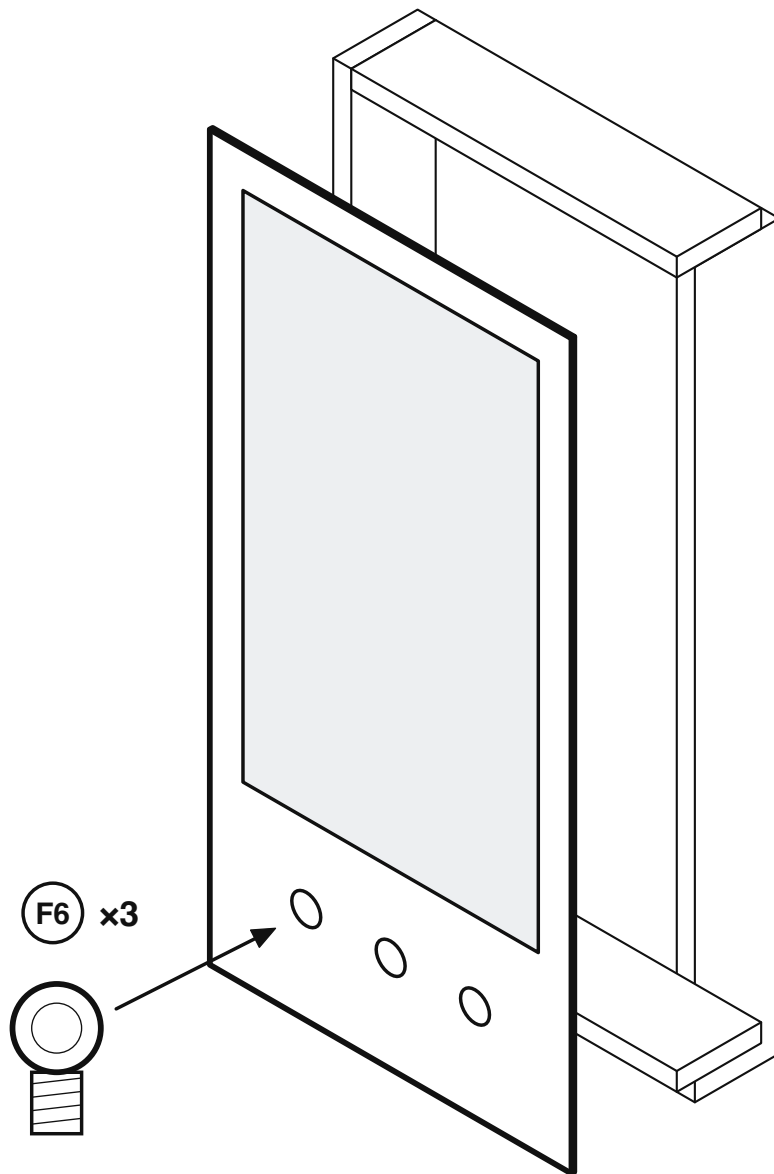

SWITCHES FIRST, THEN WIRE

12

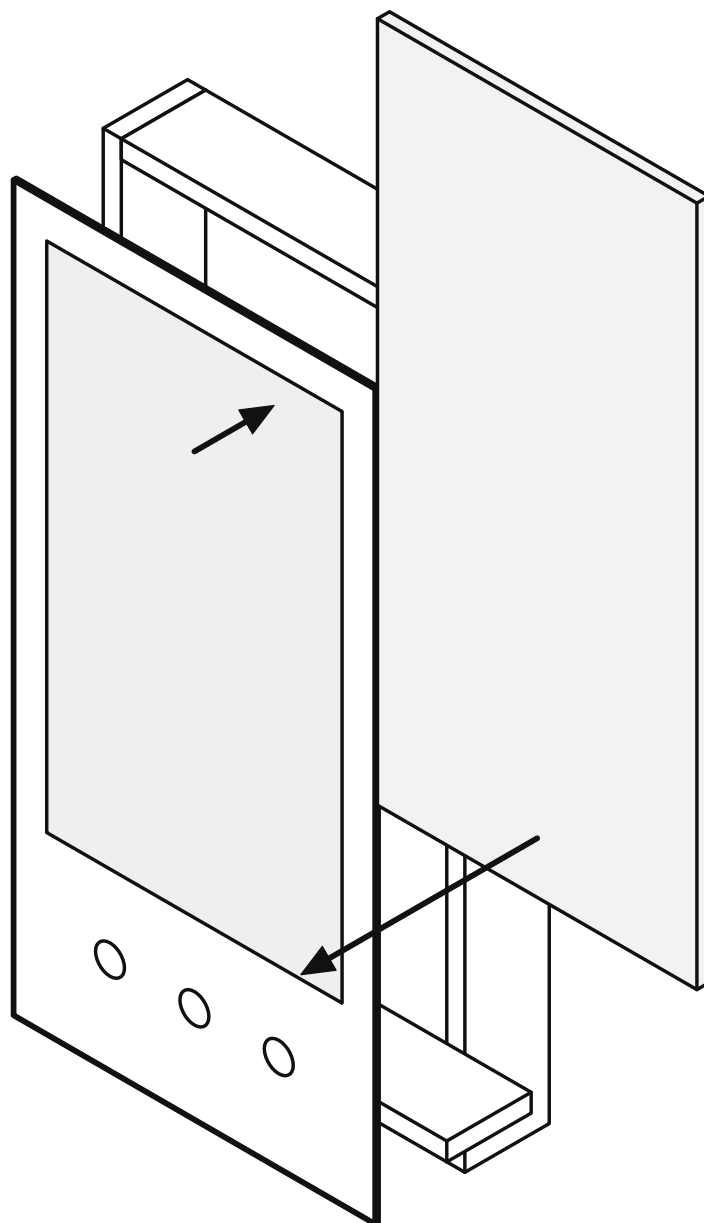

F3 x15

F4 x6

