


3280-K

BOX — BUILD COOKBOOK







CONCEPT — NOT A SHIPPED PRODUCT

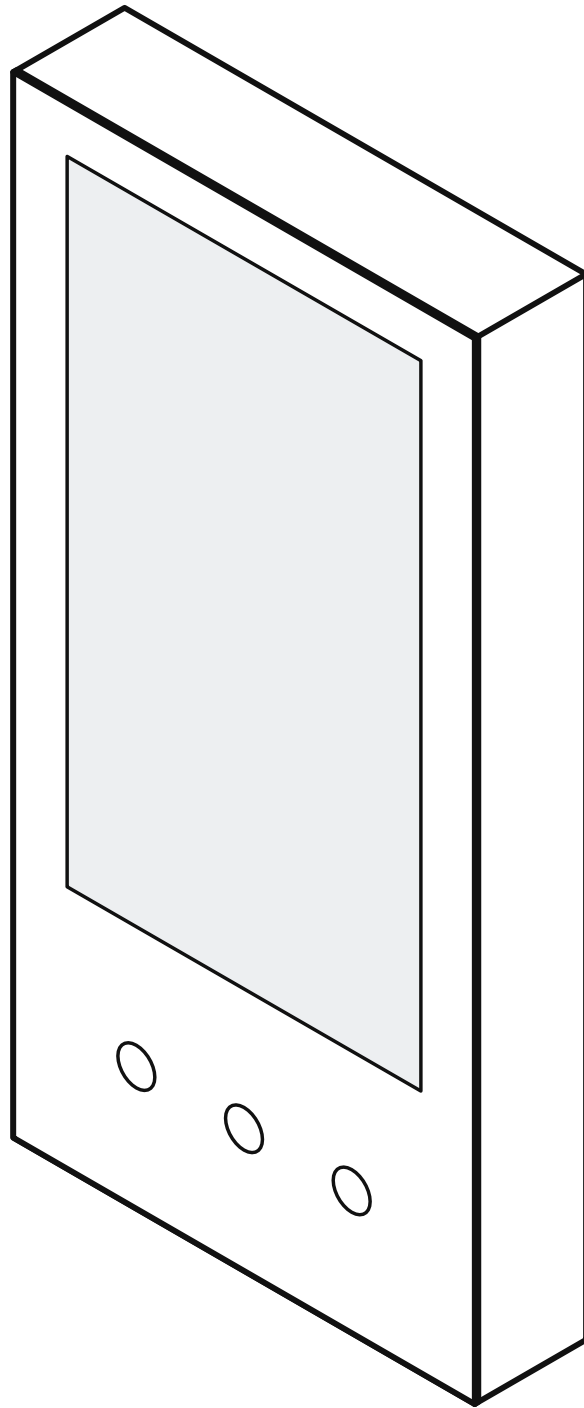


15 × 30 × 3-5/8"

9 crosscuts · no rips

≈ 24 lb

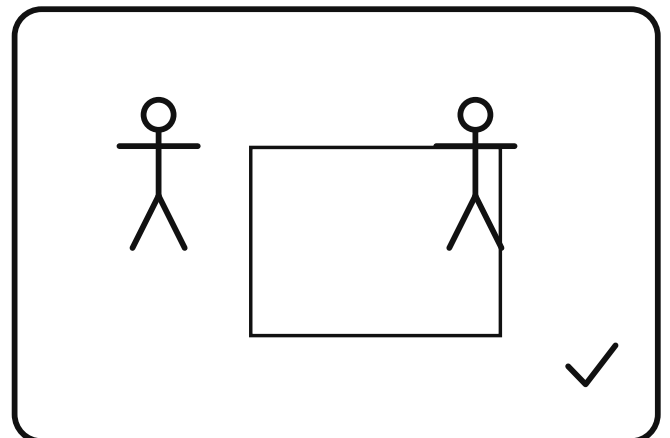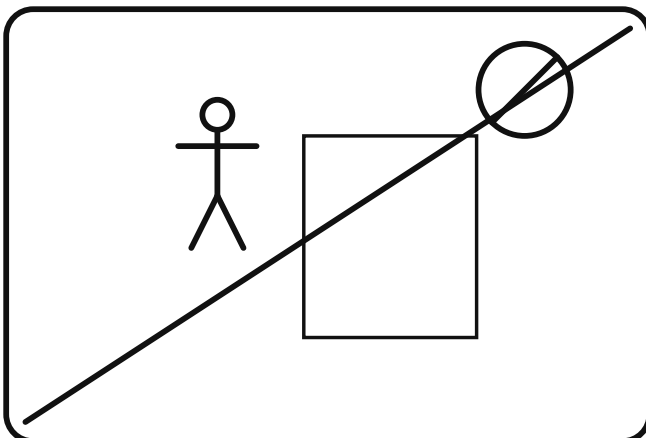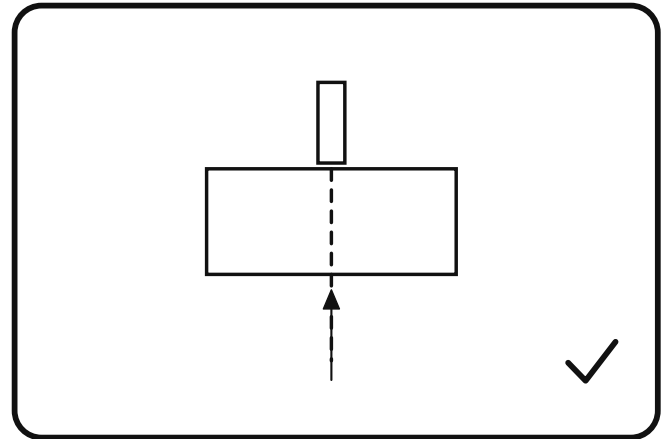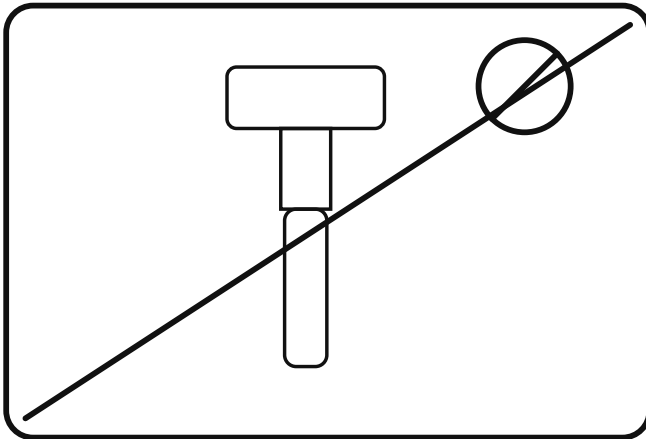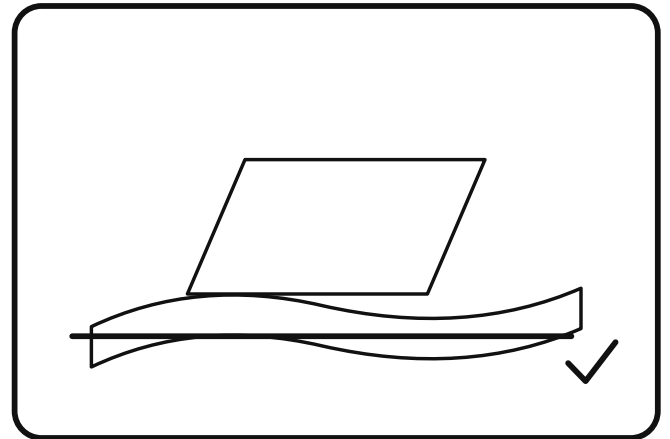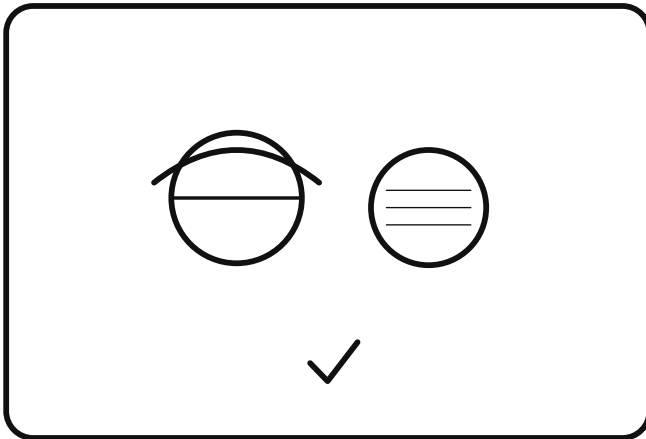


0

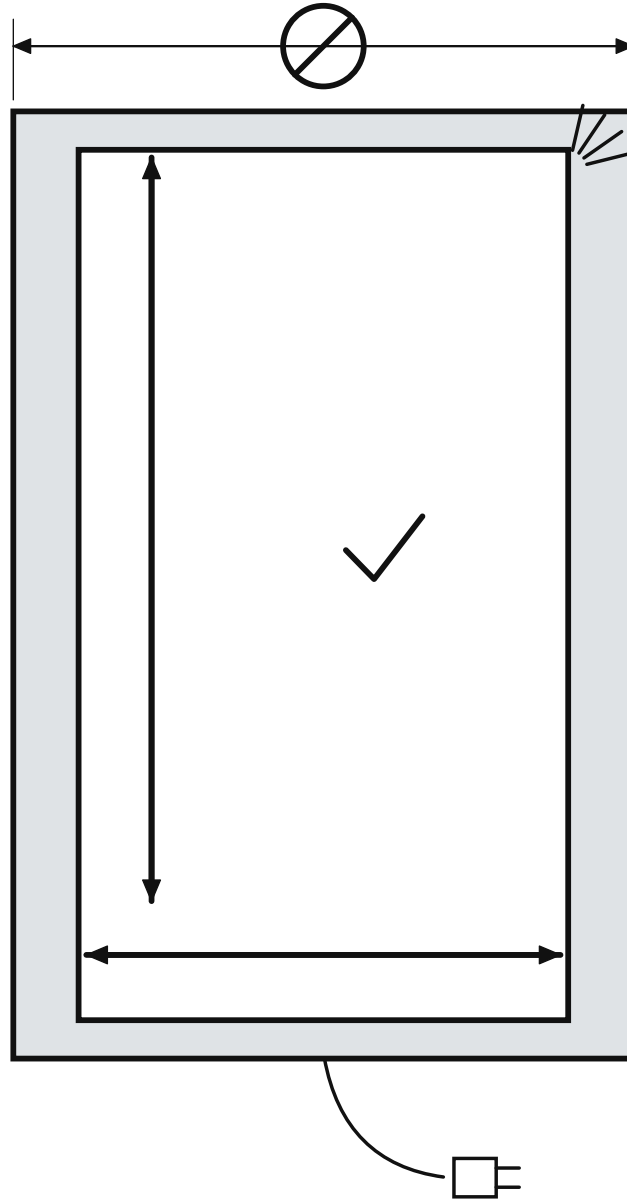


$\longleftrightarrow$  - $\frac{3}{16}$ = $\rightarrow$

$\updownarrow$  - $\frac{3}{16}$ = $\rightarrow$

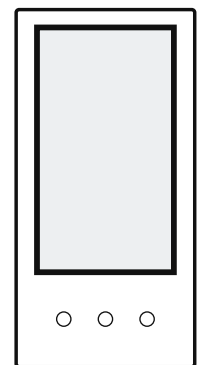


A

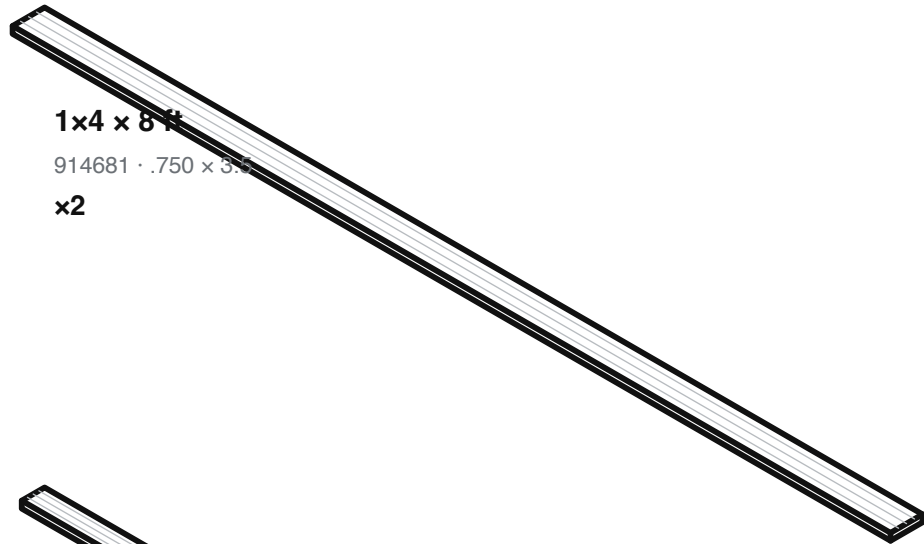

1x4 x 8 ft

914681 · .750 x 3.5

x2

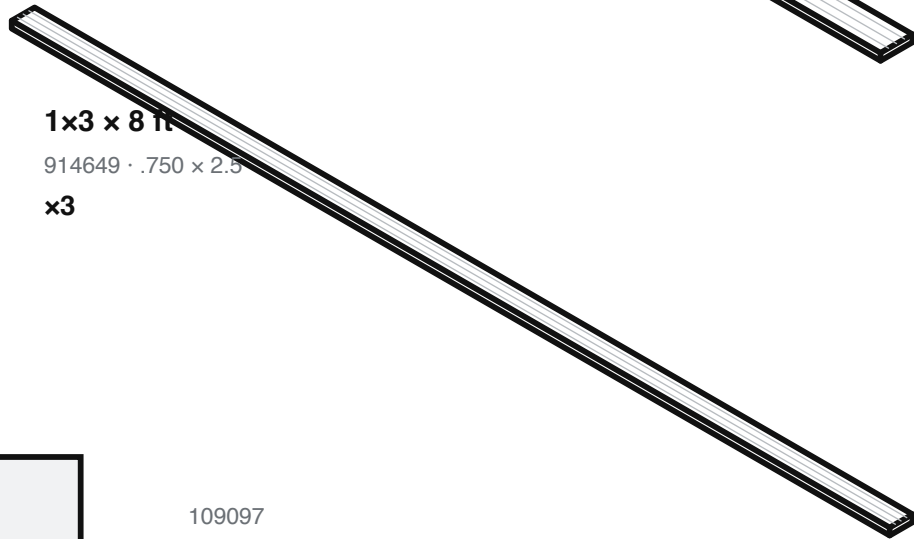


1x3 x 8 ft

914649 · .750 x 2.5

x3

1/2" MDF 2 x 4

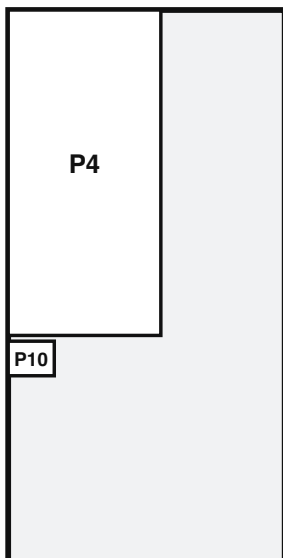

109097

**HOME DEPOT
CUTS THIS**

P4 13-1/4 x 28-1/4

P10 4 x 3

you never handle
a sheet good

B

2




3-1/2 x 30
1x4 x2

3



3-1/2 x 13-1/2
1x4 x2

8




2-1/2 x 28-1/2
1x3 x2

9



2-1/2 x 28-1/2
1x3 x2

4



13-1/4 x 28-1/4
MDF x1

7




2-1/2 x 13-1/2
1x3 x1

10



4 x 3
MDF x1


1



15 x 30 (ordered)
ACM x1

C

F1



WOOD SCREW, #6 x 1-1/4, FLAT HEAD
box, rail, cleats, rails. Pilot 7/64.

x40


F2



INSERT, THREADED, #8-32, BRASS, FOR WOOD
15 front + 6 rear. Drill 3/8. EPOXY.

x21

F3



SCREW, #8-32 x 1/2, BUTTON HEAD, BLACK
holds P1. Pin-torx if you want it tamper-resistant.

x15

F4



THUMBSCREW, #8-32 x 1/2
holds P4. Tool-free service.

x6


F5



BOLT, M4 x 12 + FLAT WASHER
monitor to P9, VESA 100.

x4

F6



SWITCH, 30 mm ANTI-VANDAL, MOM. SPST-NO
VERIFY the 30.5 cutout before P1 is cut.

x3


F7



INLET, IEC C14, PANEL MOUNT, FUSED
lower cavity, in the back or the bottom board.

x1

F8




FOAM TAPE, NEOPRENE, BLACK, 1/4 x 3/16, 10 ft
light seal on the BACK of P1. 65" used.

x1

D

G1



WOOD GLUE, PVA (Titebond II)
every wood joint

G2



EPOXY, 5 MINUTE, 2-PART
the 21 inserts, nothing else

G3





SANDING SEALER or PRIMER
ALL SIX FACES of every part

G4












PAINT, SATIN BLACK
outside + visible edges




ALL SIX FACES

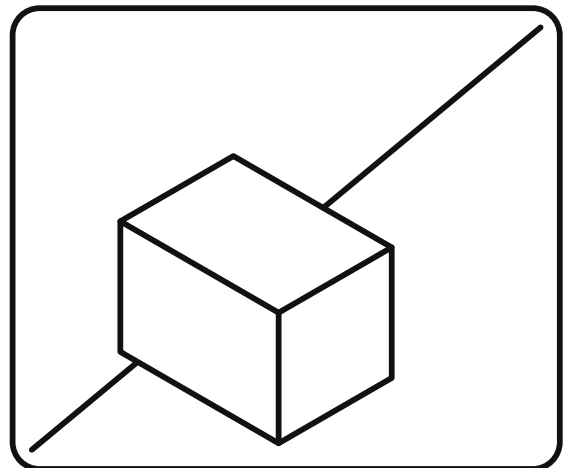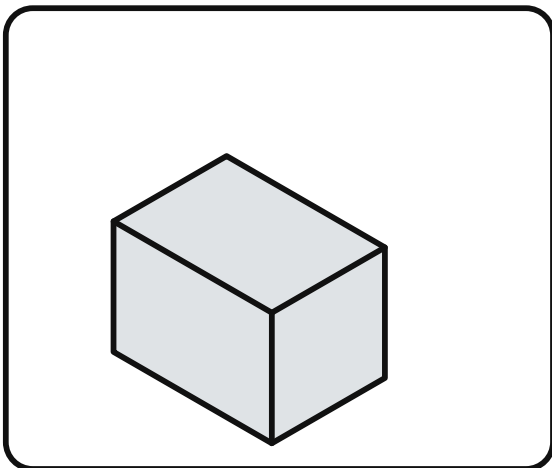

E

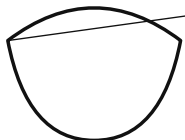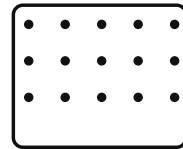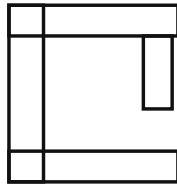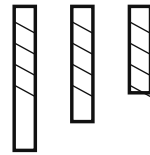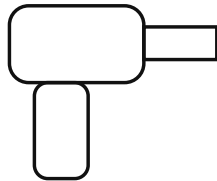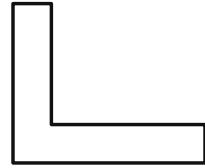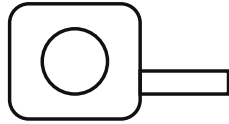

1

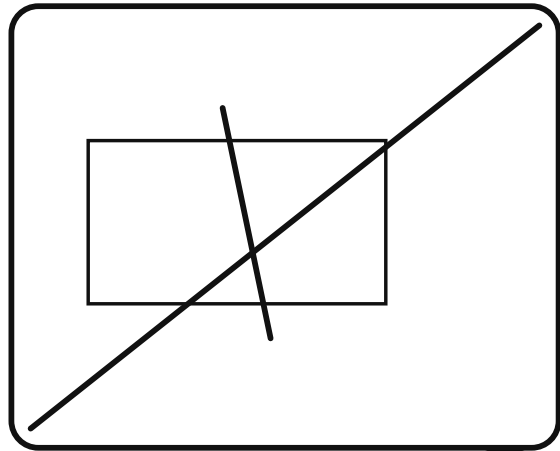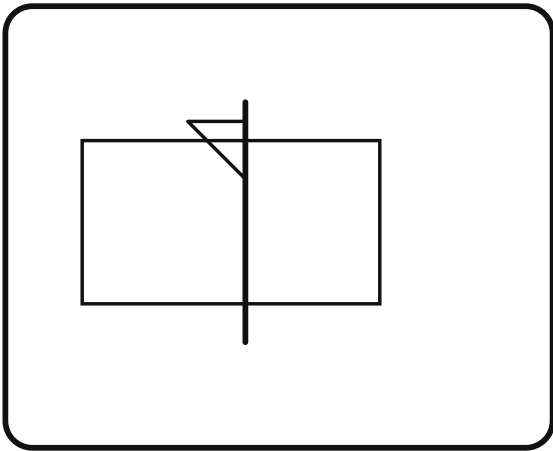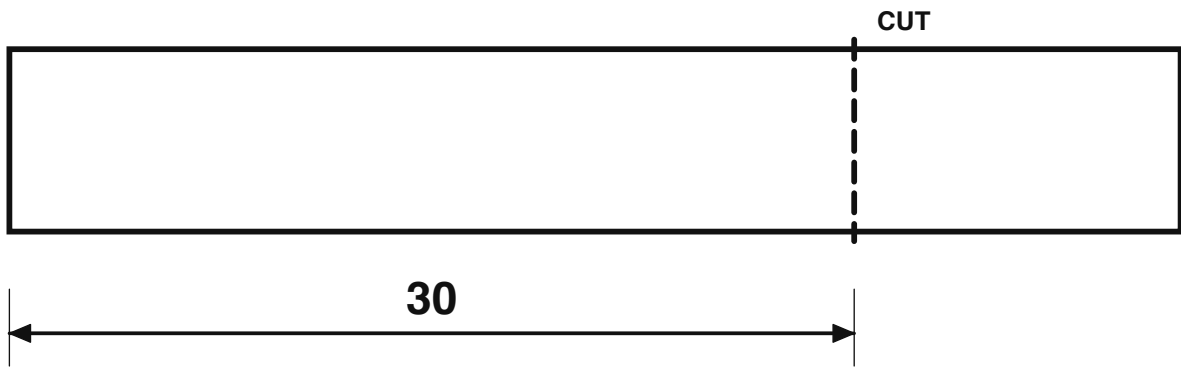


WASTE

BLADE HERE

2

1x4 #1 — 4 cuts




1x3 #1 — 3 cuts




1x3 #2 — 2 cuts



9 CUTS

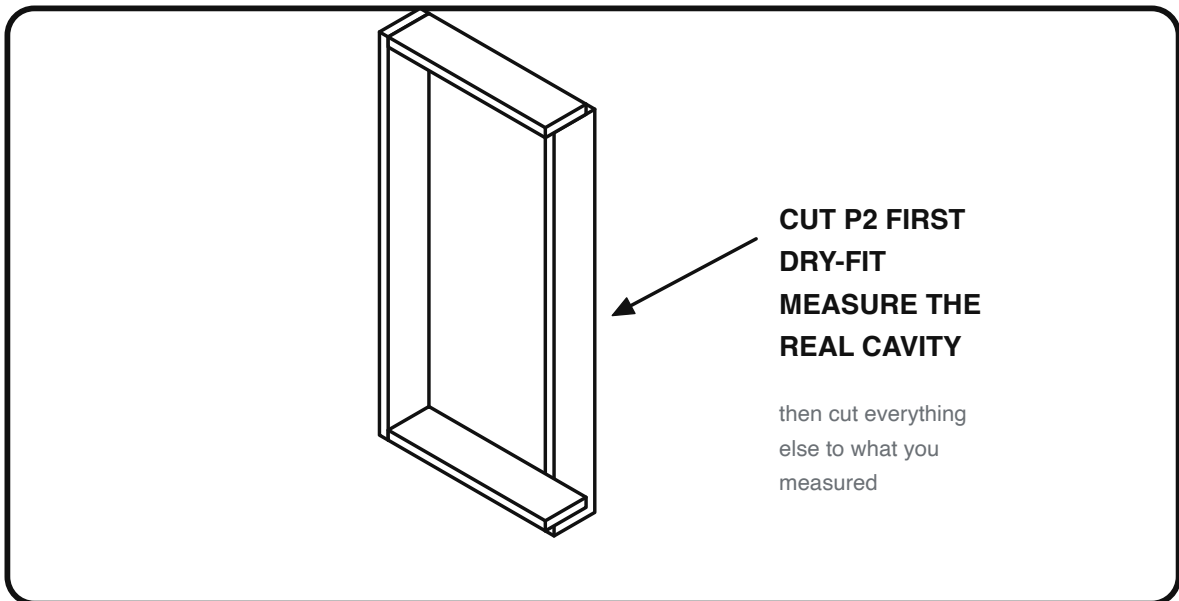


3

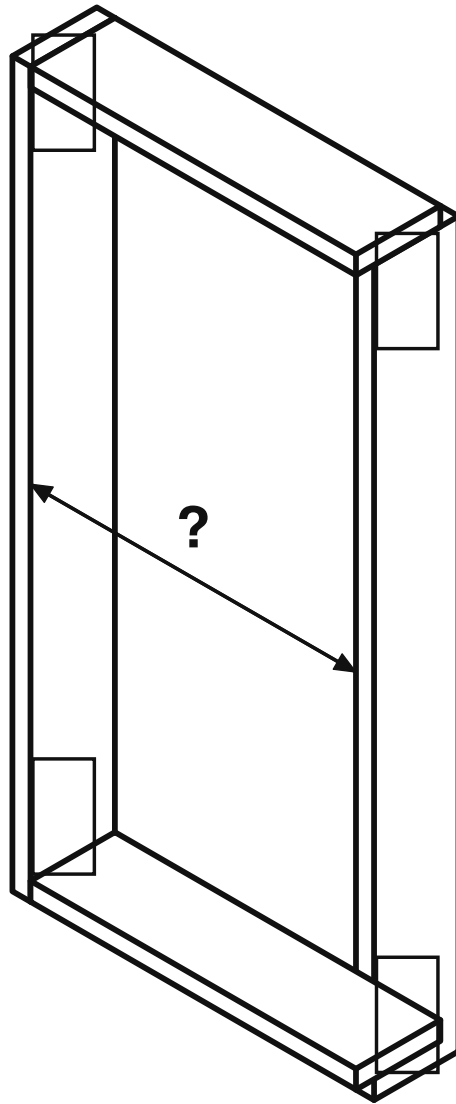


CLAMP · MEASURE · THEN CUT

4

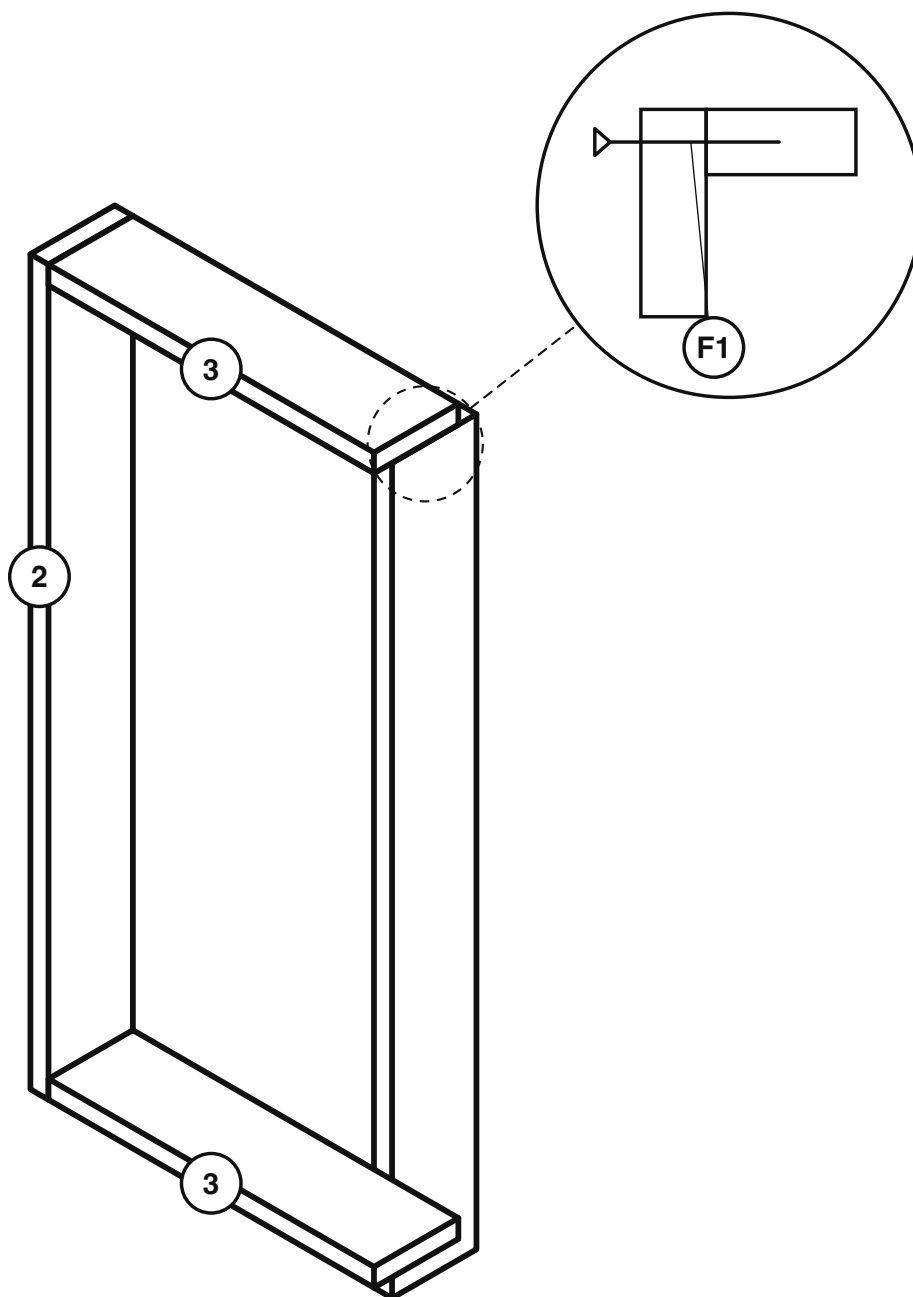


PILOT 7/64 · GLUE · SCREW

5

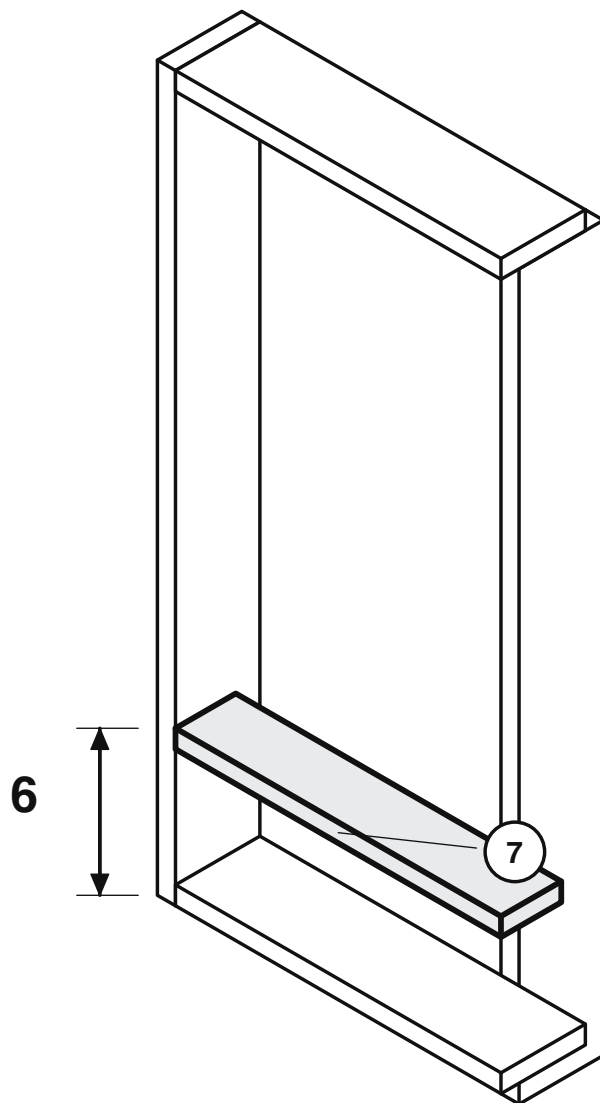


FRONT FLUSH

6

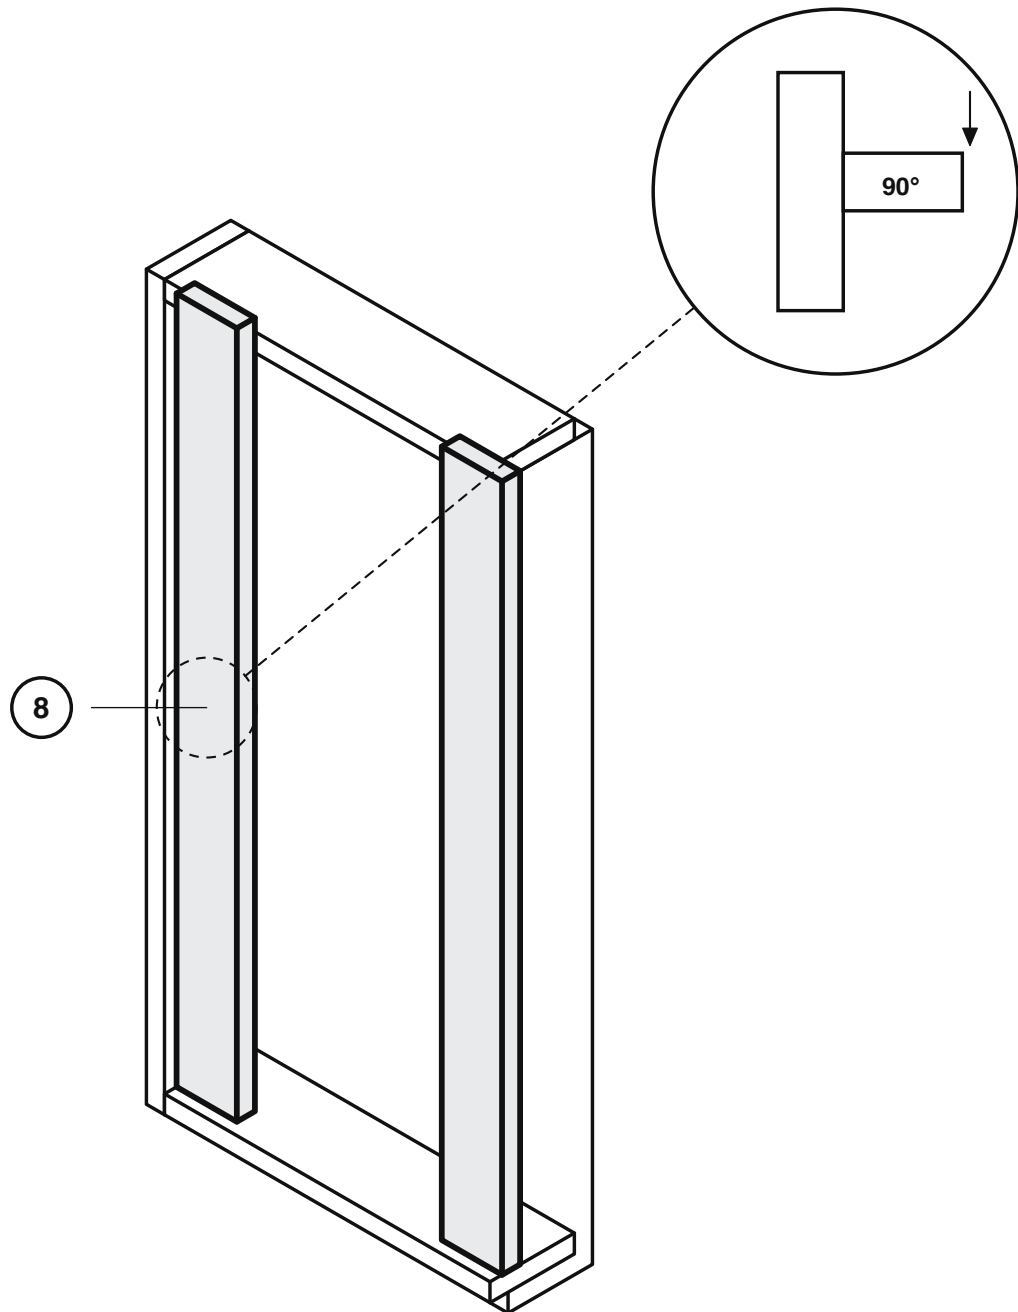

TURNUED FLAT — 3/4 DEEP, BEHIND THE SCREEN


7

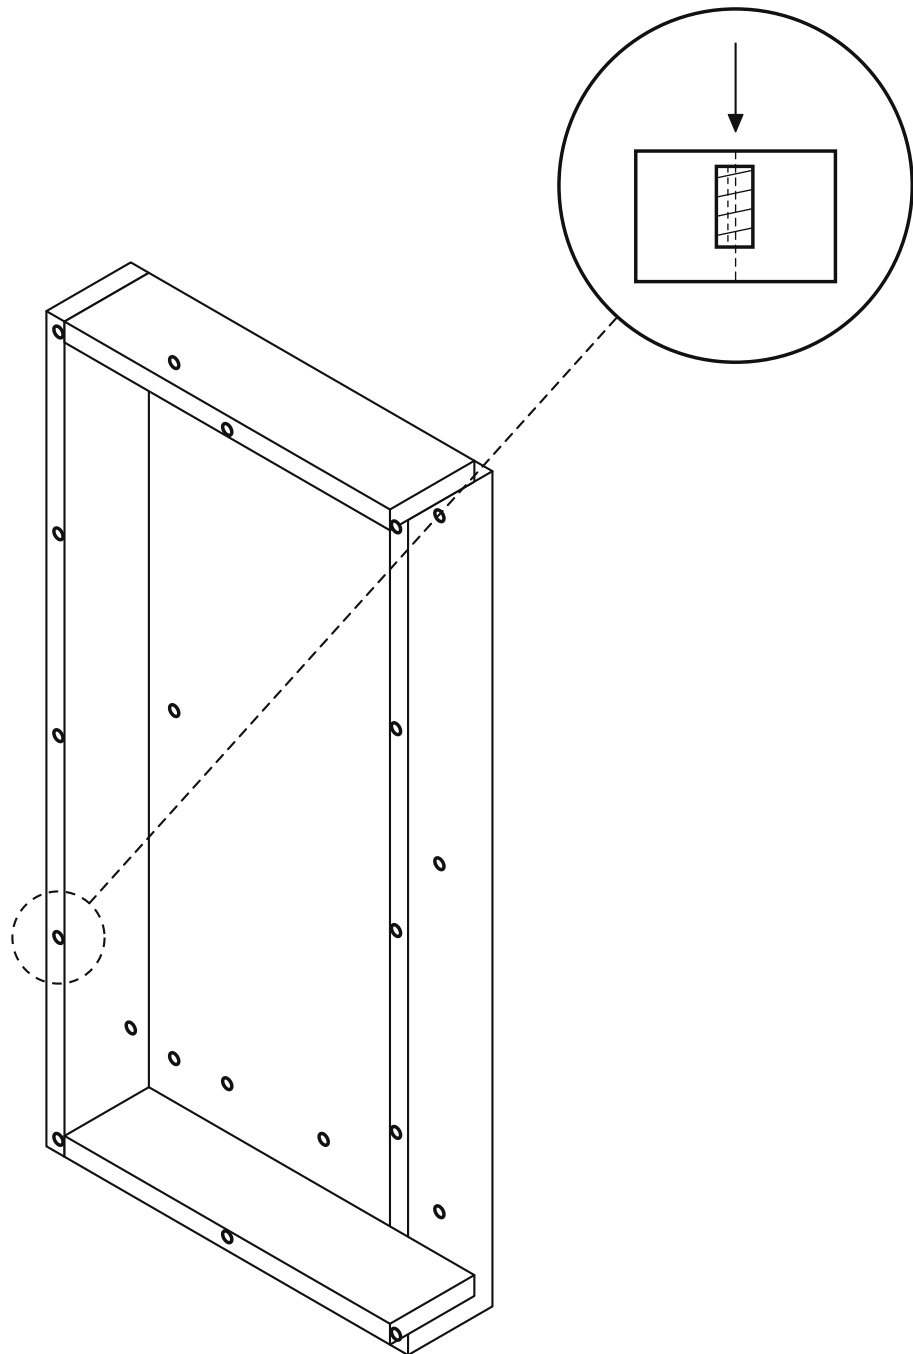

F2 x21


DRILL $\frac{3}{8}$ · EPOXY · FLUSH

8

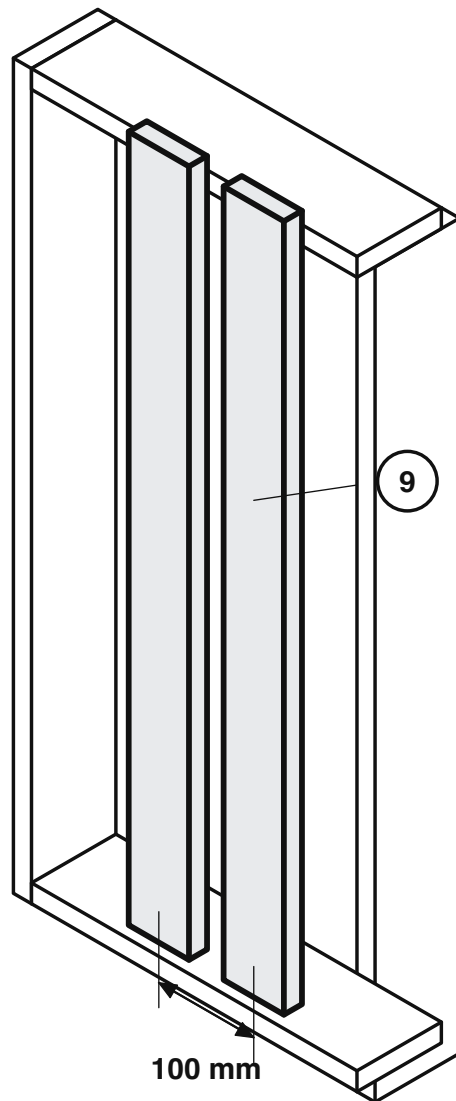


VESA 100

9

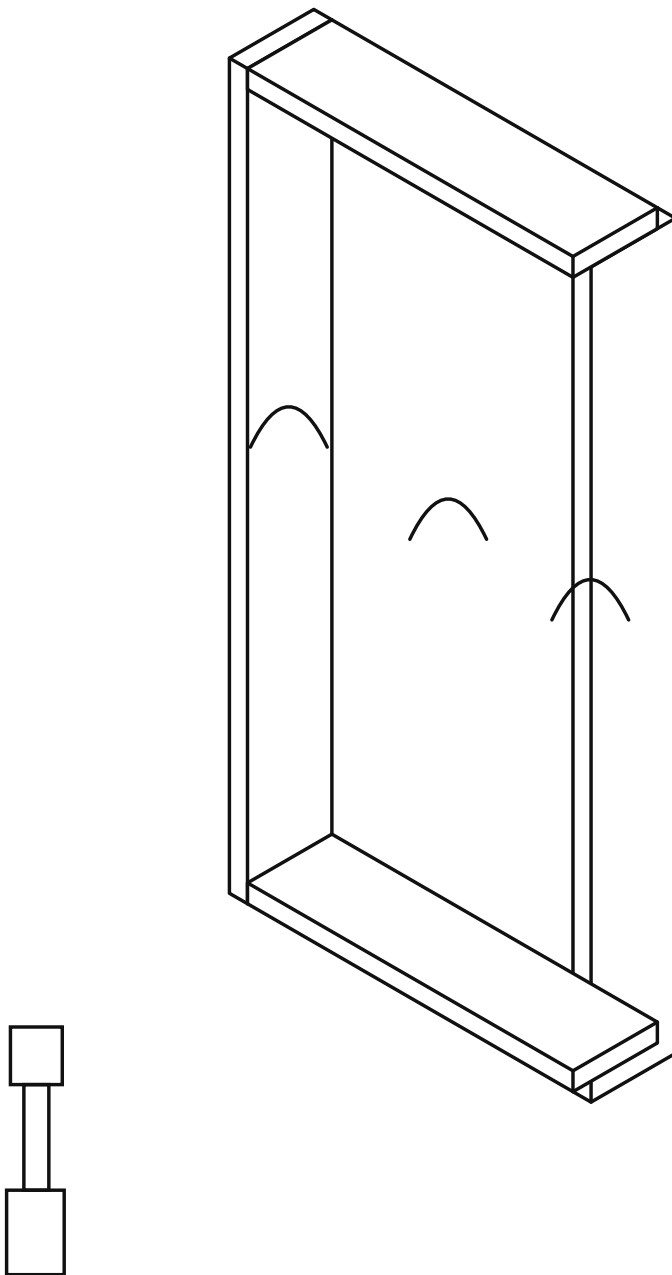

SEAL ALL SIX FACES — INSIDE TOO


10

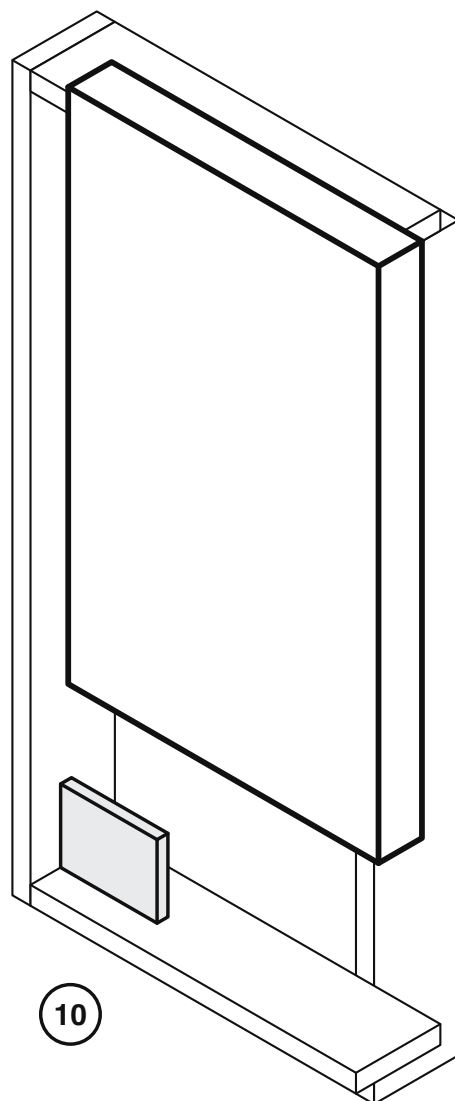

F5 x4




MONITOR ONTO THE RAILS

11

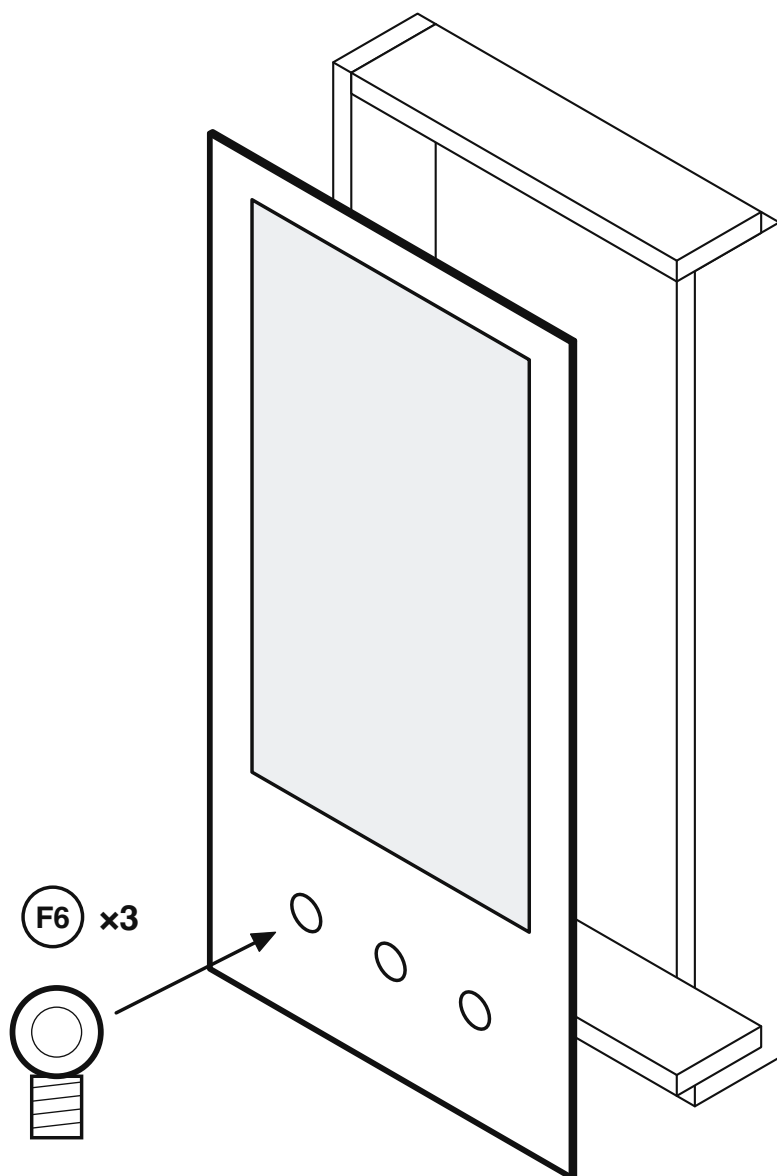


SWITCHES FIRST, THEN WIRE


12

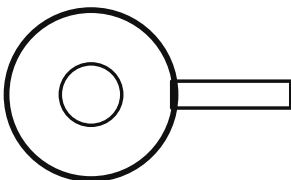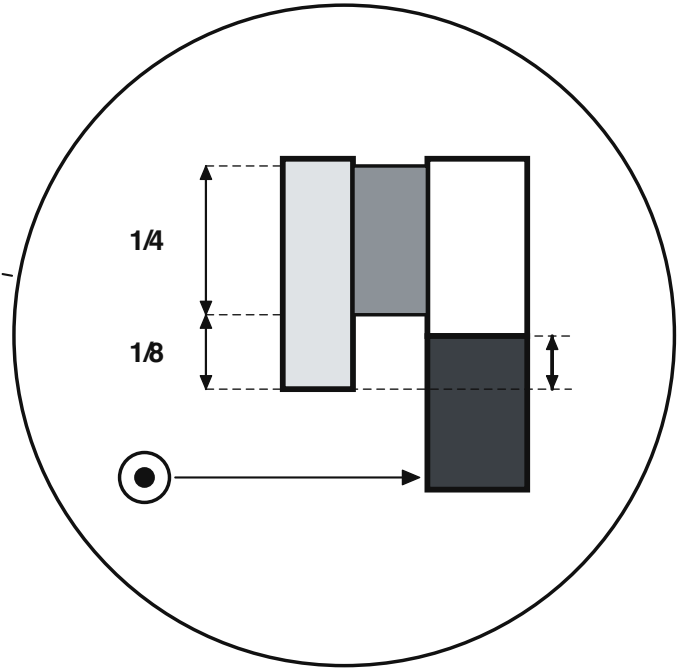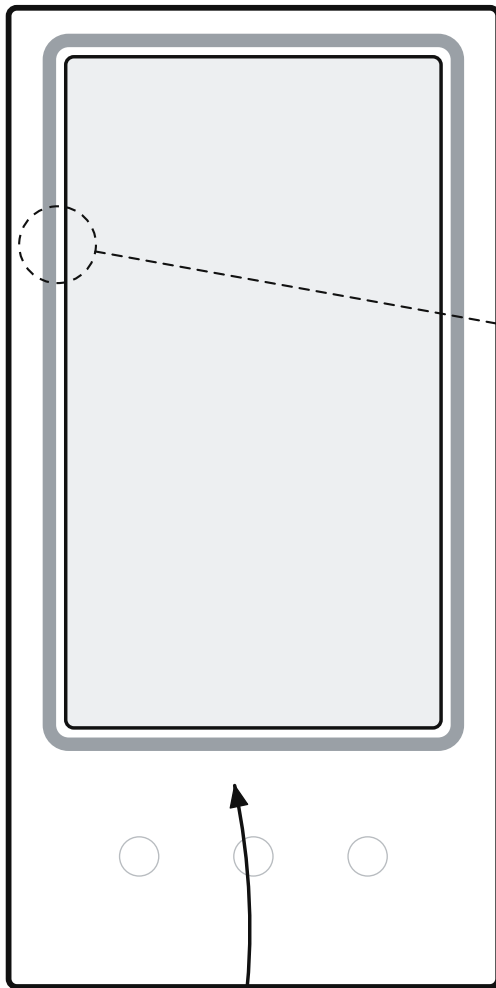

F8

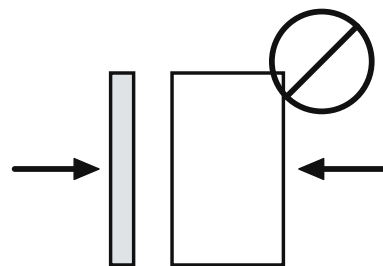

13

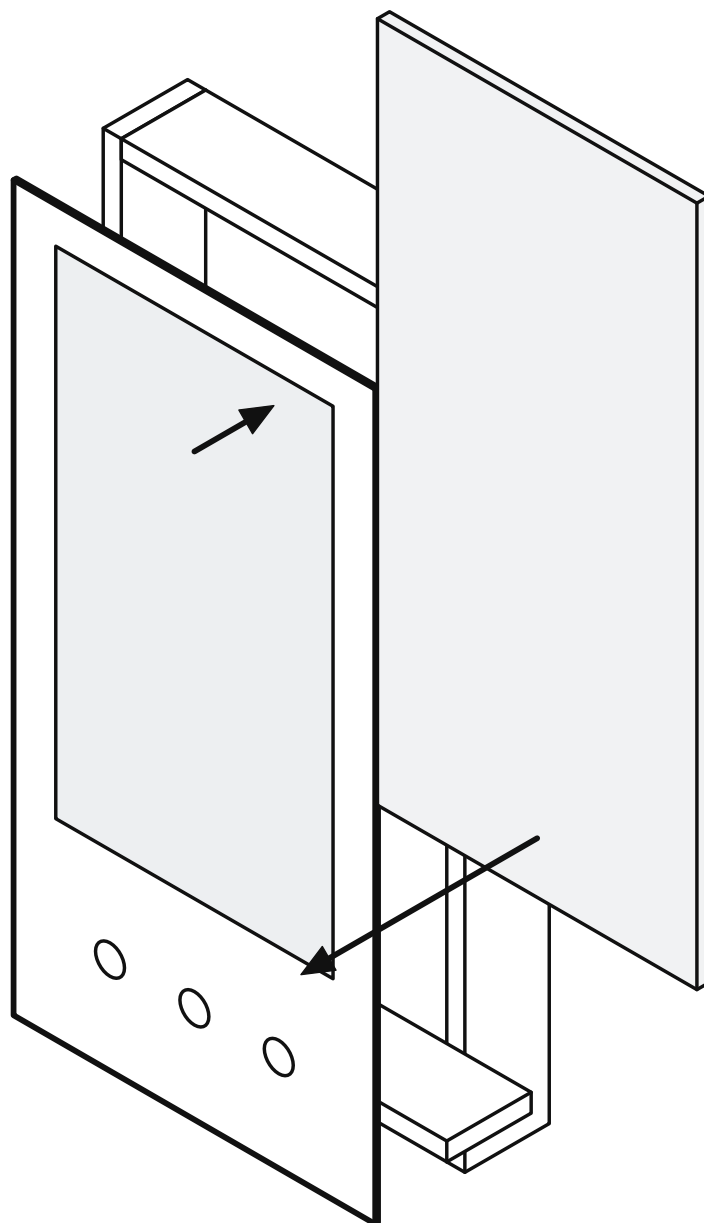

F3 x15

F4 x6

