
Nearside elevation (passenger side, sliding door)

Scale 1:15 on A3 (a 5.3 m van does not fit A3 at 1:10); verify on vehicle survey

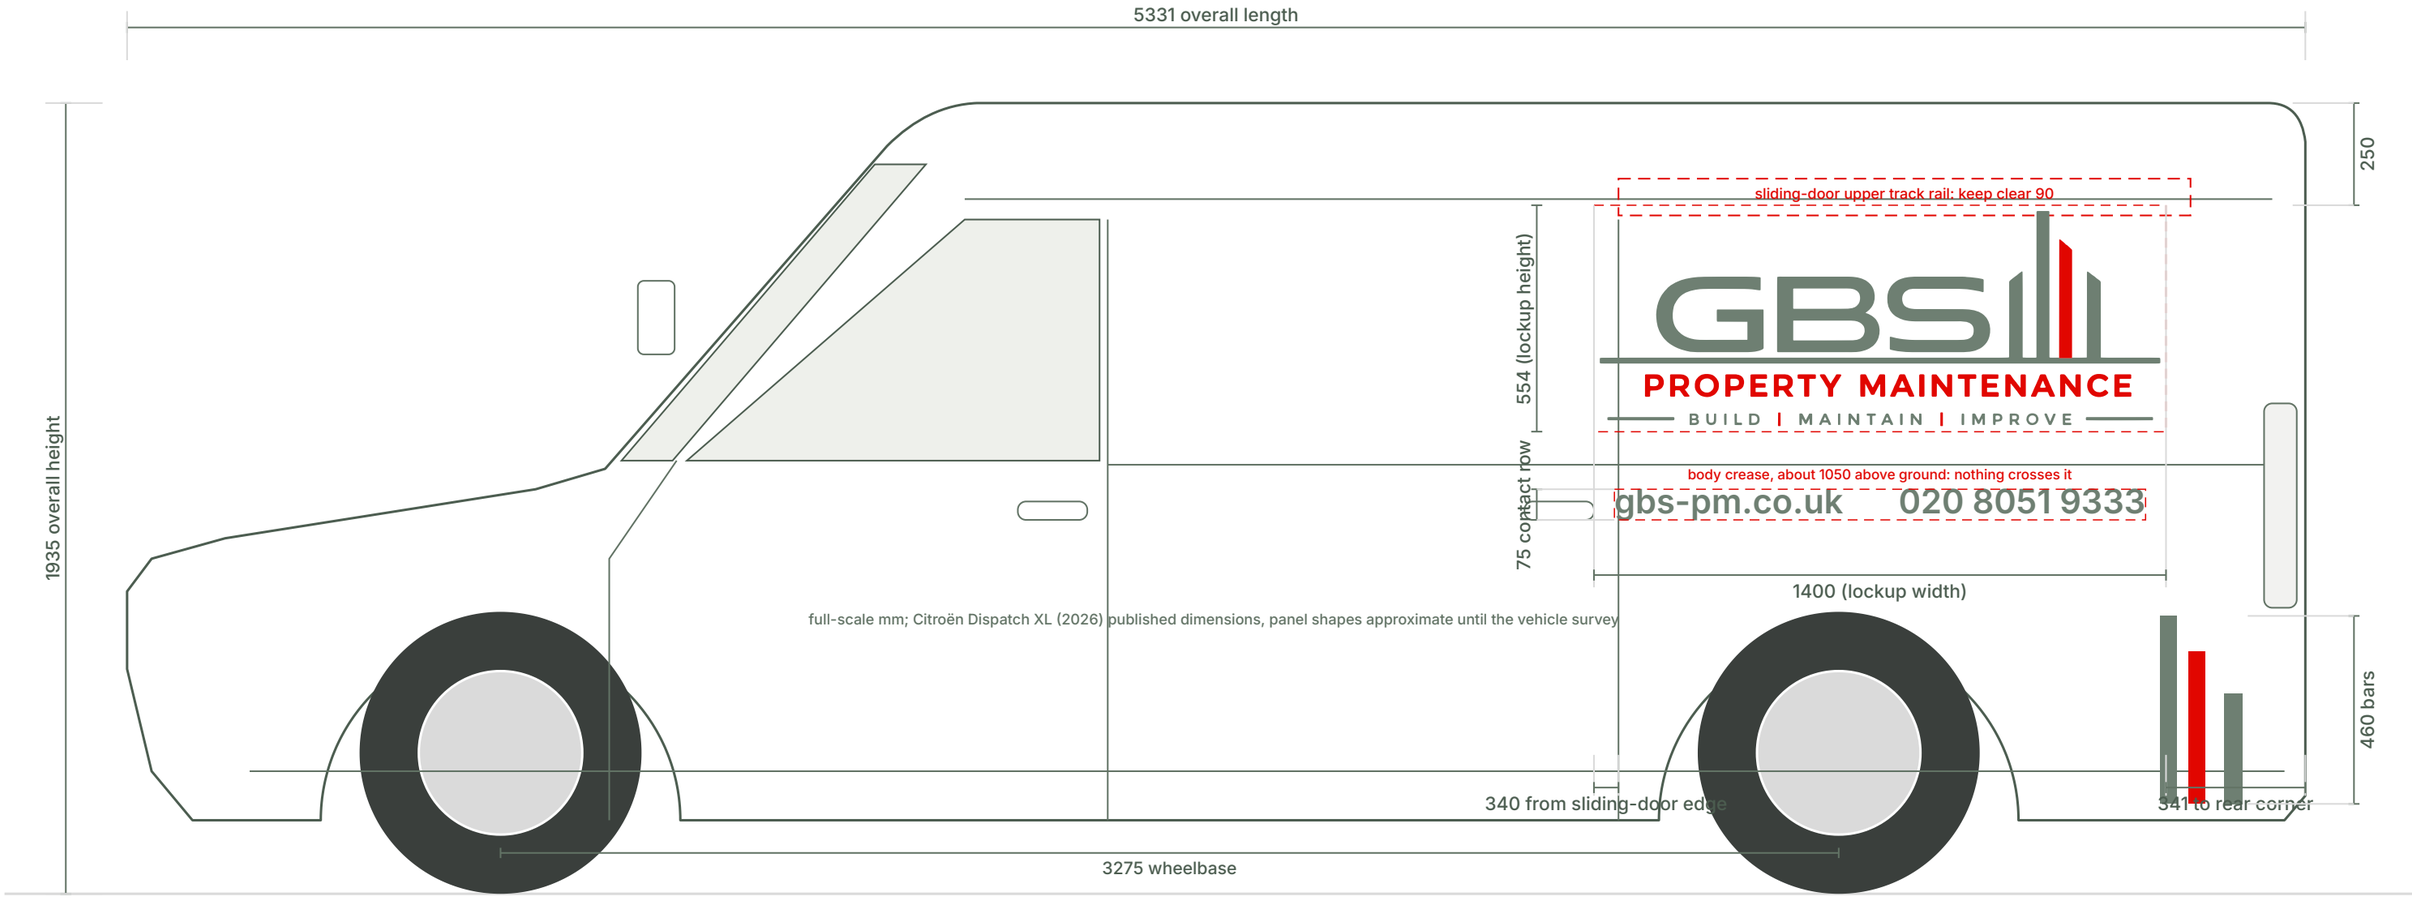

ELEMENTS ON THIS SIDE

- Side lockup: primary logo with strapline, 1400 × 554 mm, centred on the rear load panel at 4290 mm from the front (340 mm behind the sliding-door rear edge, 341 mm from the rear corner), top edge 250 mm below the roof line, above the body crease. File GBS_HORIZON_VAN_SIDE-LOCKUP_1400MM_SAGE-RED_v1.0.svg.
- Contact row: web address left, phone right, Inter SemiBold, 60 mm cap height, 1300 mm between outer edges, 60 mm below the body crease, aligned to the lockup. File GBS_HORIZON_VAN_SIDE-CONTACT_1300MM_SAGE_v1.0.svg (outlined).
- Rear-quarter bars: 201 × 460 mm, bottom edge on the sill line, 155 mm from the rear corner. File GBS_HORIZON_VAN_REAR-QUARTER-BARS_460MM_SAGE-RED_v1.0.svg.

KEEP CLEAR


- Door gaps, handles, the sliding-door upper track rail (100 mm band below the gutter) and the sliding-door travel: no graphic may bridge a gap or sit on a rail.
- Rear lamp wrap-around, side repeater, side sensors and any camera. 50 mm minimum to any panel edge, swage line or rubbing strip.
- Body crease at about 1050 mm above ground: the lockup sits above it and the contact row below it; nothing crosses it. Wheel-arch flare: nothing below the arch-top line (1380 on the drawing) within 500 mm of the rear axle.

SURVEY BEFORE CUTTING

- Measure the real panel between the sliding-door rear edge and the rear corner; recentre the lockup on that panel and scale to 1300-1400 mm so that at least 150 mm remains above and below.
- Record roof-line, sill, arch-top and track-rail heights; note swage lines (the lockup must sit within one flat field, or across a shallow swage only with a physical proof).
- Confirm the fuel-flap side and the number of sliding doors on the actual vehicle.

Offside elevation (driver side)

Scale 1:15 on A3 (a 5.3 m van does not fit A3 at 1:10); verify on vehicle survey

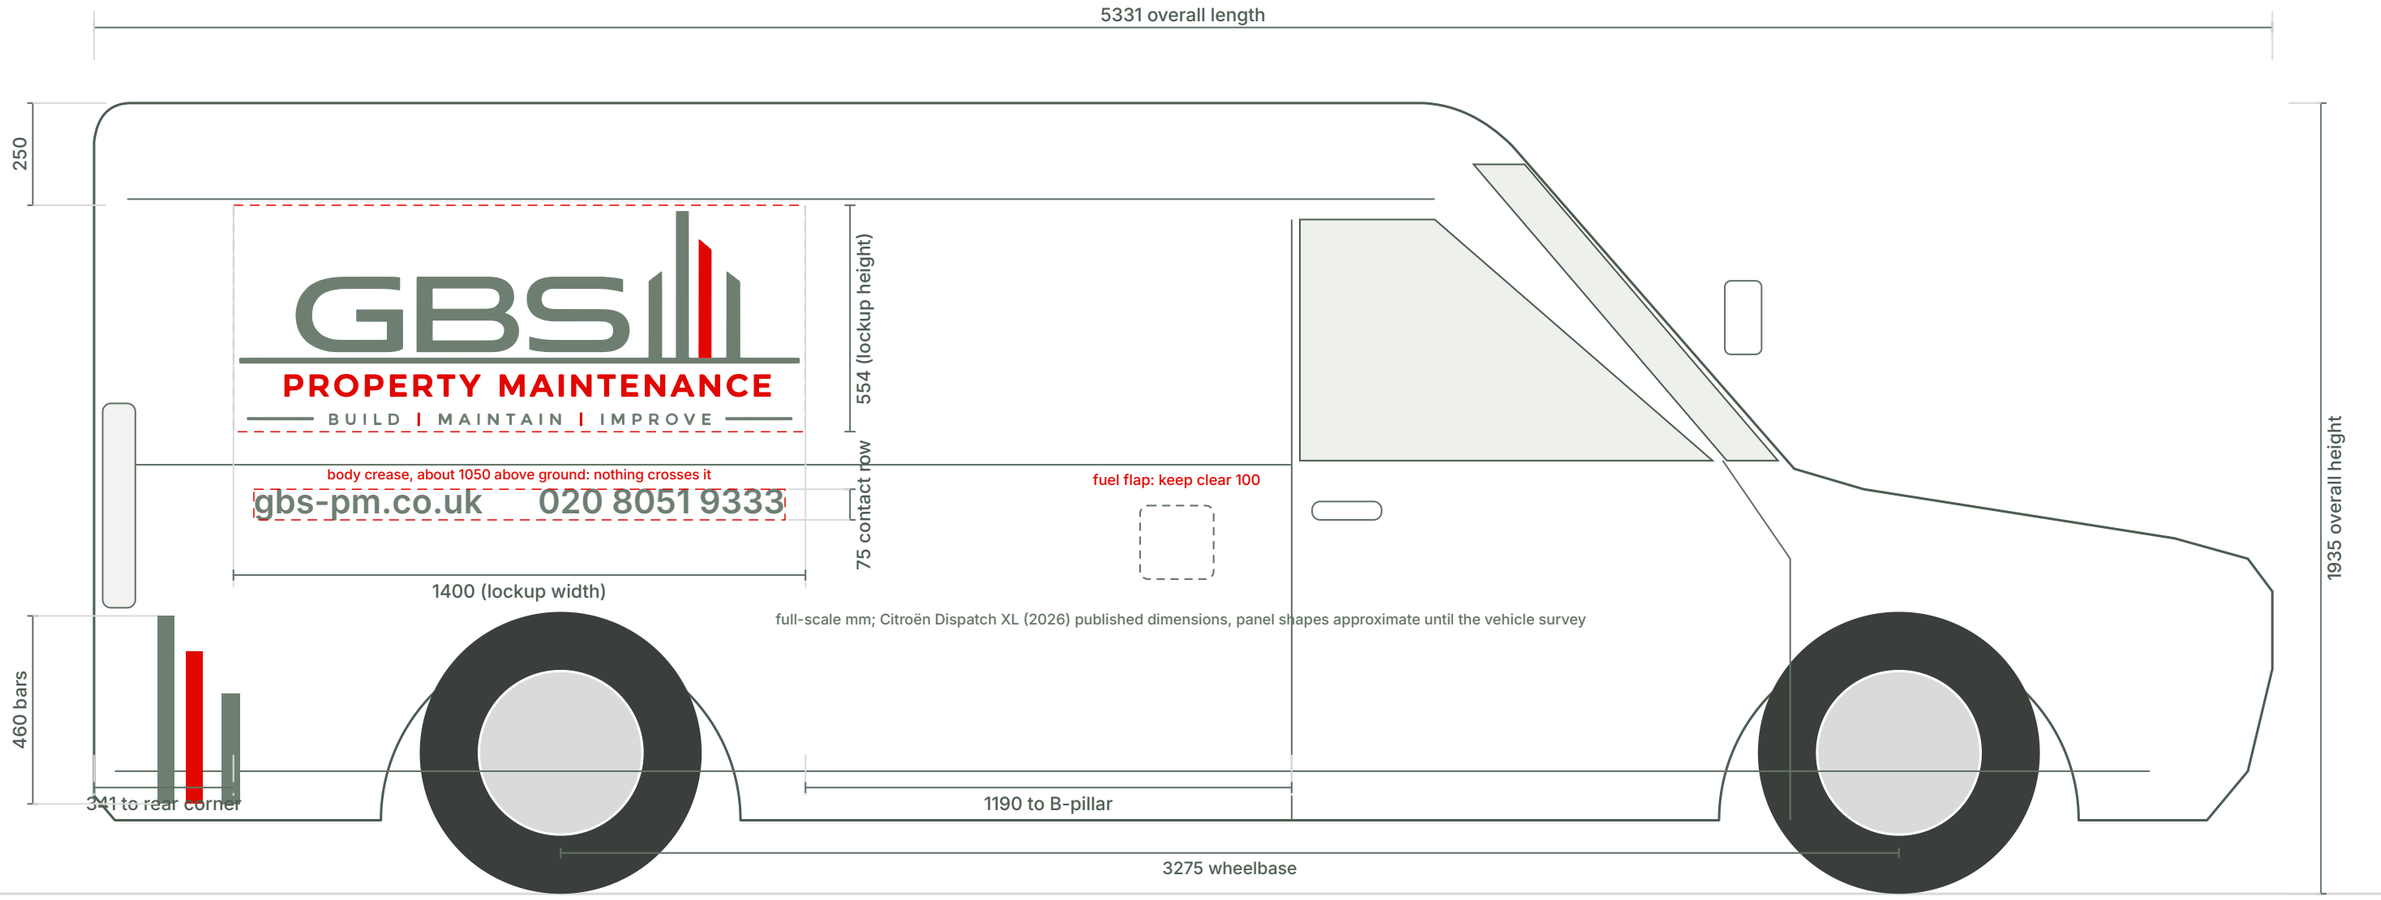

full-scale mm; Citroën Dispatch XL (2026) published dimensions, panel shapes approximate until the vehicle survey

ELEMENTS ON THIS SIDE

- Side lockup: primary logo with strapline, 1400 × 554 mm, centred on the rear load panel at 4290 mm from the front (340 mm behind the equivalent line, 341 mm from the rear corner), top edge 250 mm below the roof line, above the body crease. File GBS_HORIZON_VAN_SIDE-LOCKUP_1400MM_SAGE-RED_v1.0.svg.
- Contact row: web address left, phone right, Inter SemiBold, 60 mm cap height, 1300 mm between outer edges, 60 mm below the body crease, aligned to the lockup. File GBS_HORIZON_VAN_SIDE-CONTACT_1300MM_SAGE_v1.0.svg (outlined).
- Rear-quarter bars: 201 × 460 mm, bottom edge on the sill line, 155 mm from the rear corner. File GBS_HORIZON_VAN_REAR-QUARTER-BARS_460MM_SAGE-RED_v1.0.svg.

KEEP CLEAR


- Door gaps, handles, the fuel flap (100 mm all round) and the sliding-door travel: no graphic may bridge a gap or sit on a rail.
- Rear lamp wrap-around, side repeater, side sensors and any camera. 50 mm minimum to any panel edge, swage line or rubbing strip.
- Body crease at about 1050 mm above ground: the lockup sits above it and the contact row below it; nothing crosses it. Wheel-arch flare: nothing below the arch-top line (1380 on the drawing) within 500 mm of the rear axle.

SURVEY BEFORE CUTTING

- Measure the real panel between the sliding-door rear edge and the rear corner; recentre the lockup on that panel and scale to 1300-1400 mm so that at least 150 mm remains above and below.
- Record roof-line, sill, arch-top and track-rail heights; note swage lines (the lockup must sit within one flat field, or across a shallow swage only with a physical proof).
- Confirm the fuel-flap side and the number of sliding doors on the actual vehicle.

Rear doors

Scale 1:10 on A3; verify on vehicle survey

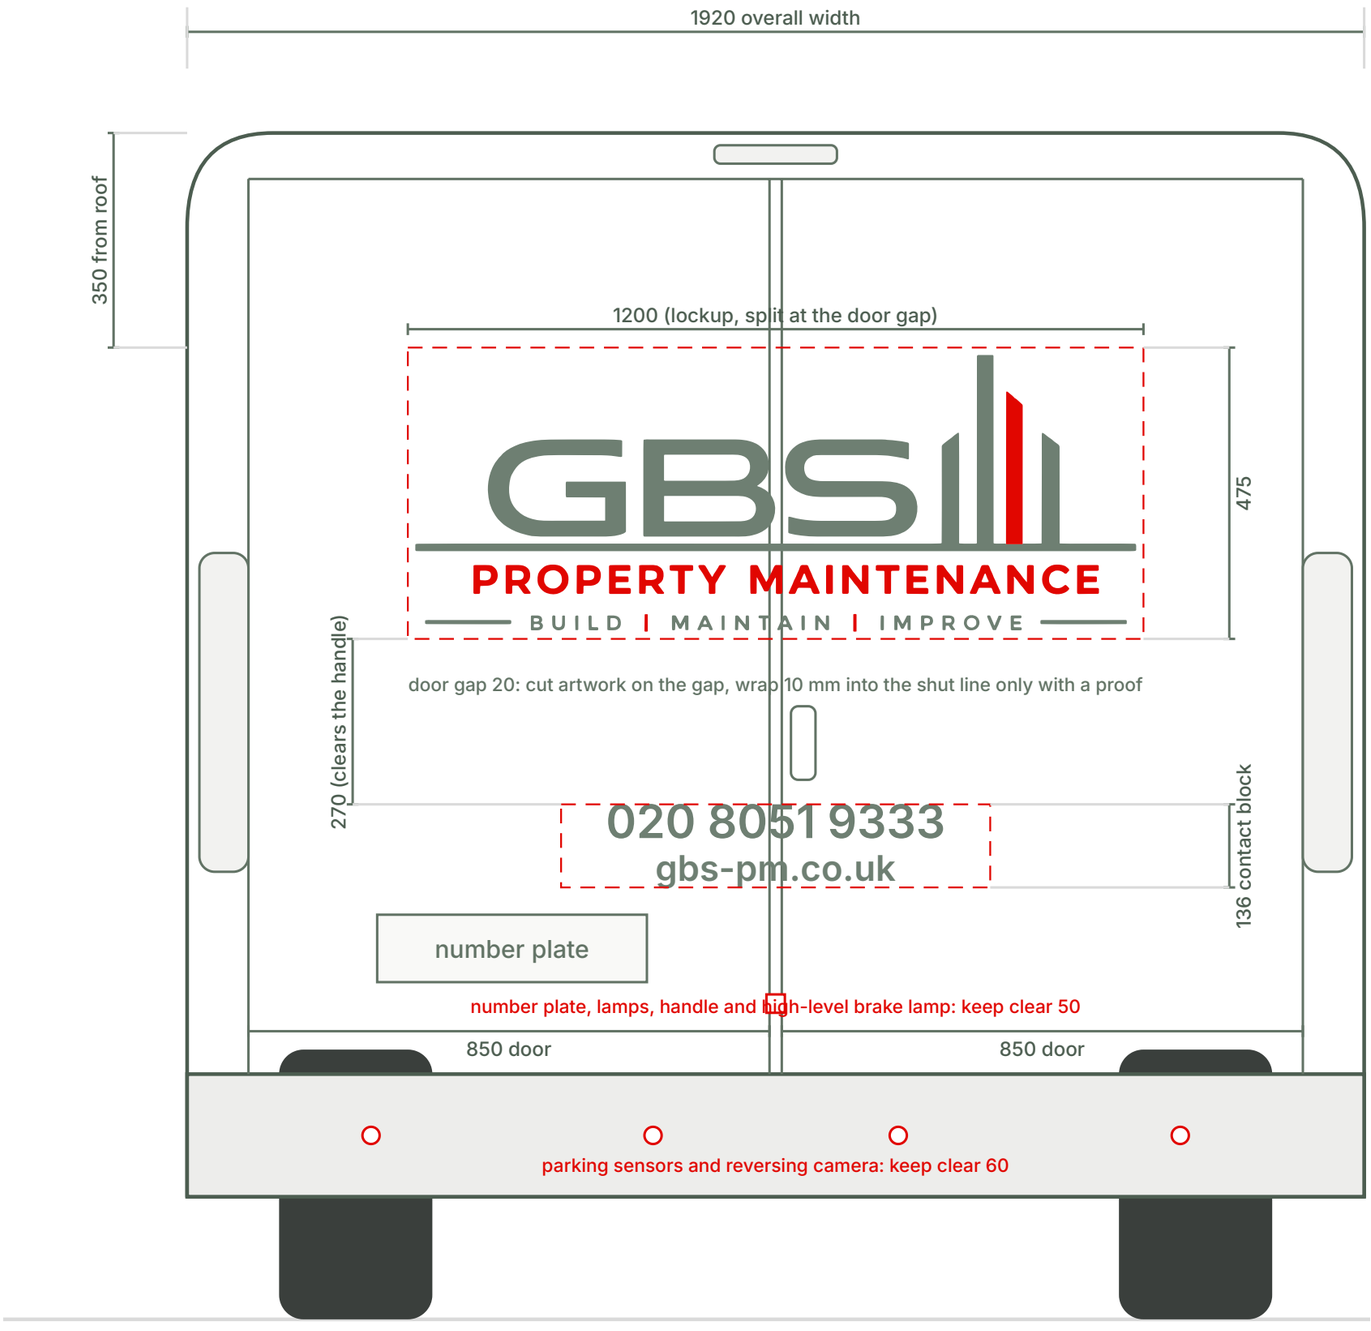

ELEMENTS

- Rear lockup: primary logo with strapline, 1200 × 475 mm, centred on the vehicle centre line across both doors, top edge 350 mm below the roof line. File GBS_HORIZON_VAN_REAR-LOCKUP_1200MM_SAGE-RED_v1.0.svg.
- Contact block: phone (55 mm cap height) over web address (42 mm cap height), Inter SemiBold, centred, 270 mm below the strapline so it sits between the door handle and the number plate. File GBS_HORIZON_VAN_REAR-CONTACT_700MM_SAGE_v1.0.svg (outlined).
- No bars graphic and no descriptor repeat on the rear: the lockup already carries them.

DOOR SPLIT

Cut the artwork at the door gap on a named cut layer. The split falls through the lockup; align both halves with the doors shut and check from 5 m. Where a door has a glazed window, move the block below the glass and re-dimension.

KEEP CLEAR


Number plate and plate lamp, rear lamp clusters, high-level brake lamp, wiper, camera, parking sensors, door handles and lock barrels, rear step. Nothing on the bumper.

SURVEY

Confirm door widths, glazing, hinge-side trim, the plate position and whether the doors are 180 or 250 degree opening with external hinges (keep 40 mm clear of hinge plates).

Front and bonnet

Scale 1:10 on A3; verify on vehicle survey

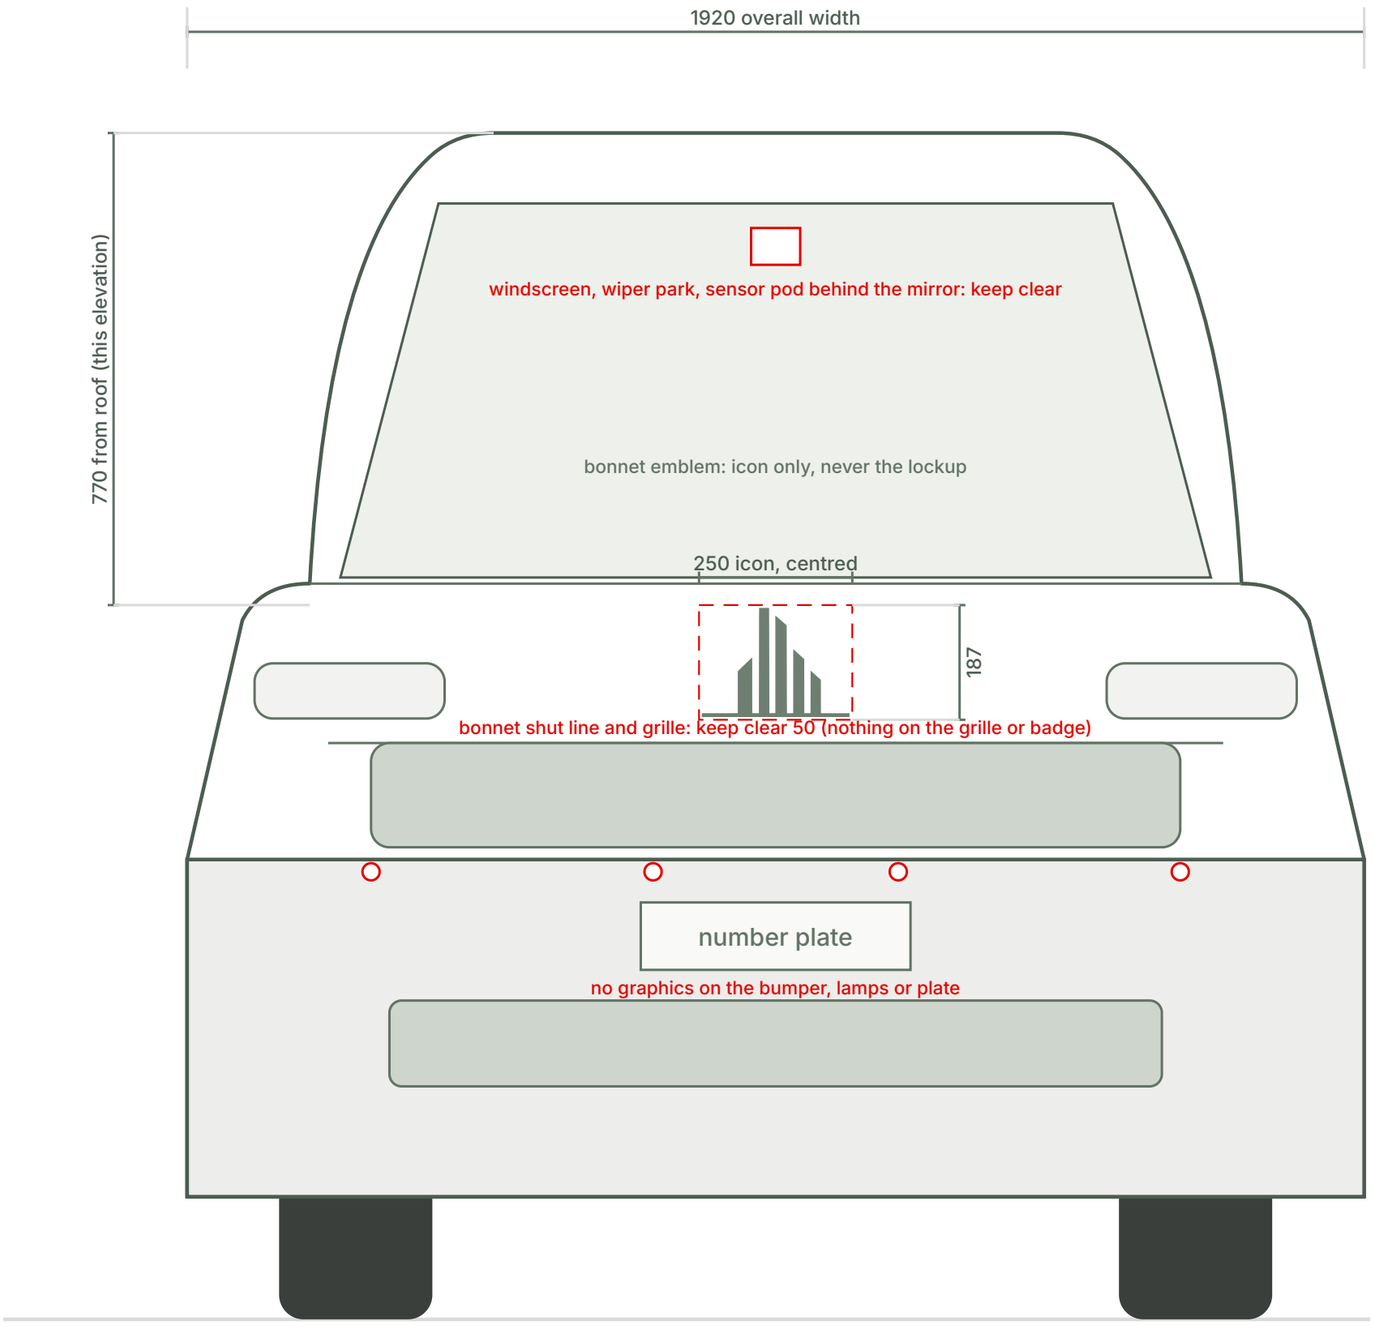

ELEMENT

- Bonnet emblem: icon only (sage/red), 250 × 187 mm, centred on the bonnet, 150 mm back from the leading edge measured along the panel; this elevation foreshortens the bonnet, so set out on the panel, not from the drawing. File GBS_HORIZON_VAN_BONNET-ICON_250MM_SAGE-RED_v1.0.svg.
- This is the most that goes on the bonnet. No lockup, descriptor, strapline or contact details on the front.

KEEP CLEAR

Manufacturer badge (100 mm), bonnet shut line, grille, headlamps, washer jets, windscreen and wiper park, the camera and sensor pod behind the mirror, front parking sensors, the number plate and the whole bumper.

NOTE ON THE HINGE LINE

Where the bonnet has a central swage or a raised power bulge, place the icon on the flat field to one side (driver side preferred) and record the offset on the survey sheet; otherwise omit the bonnet emblem rather than bridge a crease.

SURVEY

Measure the flat bonnet field and the badge position; photograph with a tape in shot.

Fabrication notes and schedule

Read with the production manual, section 06

MATERIALS

- Cast polymeric vinyl (not calendered) for every element, with a matching cast laminate over all printed vinyl. Cut-vinyl lettering and bars in cast coloured film; no laminate needed on single-colour cut film unless the installer specifies it.
- Colours: sage and red to the approved physical swatches (manual section 02). Supply draw-downs of the proposed films for sign-off before cutting; the digital values are provisional.
- Finish: gloss or satin to match across all elements on one vehicle. No chrome, metallic, reflective or textured films.

ARTWORK

- All panels are supplied as SVG at full vehicle scale, one millimetre per user unit, with the logo as outlined paths. Text panels (contact row and contact block) are already outlined from Inter SemiBold; if any text is re-set, outline it to paths before cutting and keep the font files (00_BRAND_CORE/fonts) out of the cut file.
- Keep the logo proportions, colour split and clear space exactly as supplied. Do not add keylines, shadows, gradients, rules or a white backing shape on a white vehicle.
- Place cut contours on named layers: LOGO, CONTACT, BARS, CUT-DOOR-GAP, KEEP-CLEAR. Regmarks on a separate layer. Report nest sizes and the number of pieces with the quote.
- Minimum cut-vinyl stroke 3 mm; the descriptor and strapline cut as one piece per word, with application tape.

VEHICLE AND SURVEY

- Vehicle: Citroën Dispatch XL panel van, 2026 model year (third generation, 2024 facelift), white, standard roof. Elevations are drawn to Citroën's published dimensions (5331 × 1920 × 1935 mm, wheelbase 3275 mm); panel shapes, crease and rail positions are approximate. Replace the outline with the manufacturer template (GetOutlines, Citroën Jumpy / Dispatch 3rd generation facelift panel van XL) when purchased, and cut nothing until the survey sheet has real measurements, photographs with a tape in shot and the panel map.
- Record: panel widths between gaps, swage lines, roof line, sill, wheel-arch tops, sliding-door track rails and travel, fuel-flap side, lamp wrap-around, sensors, cameras, plate position, glazing.
- Keep clear of lamps, number plates, sensors, cameras, wipers, washer jets, badges, handles, locks, rubbing strips and all door gaps. Nothing on bumpers or glass.

PROOF AND INSTALLATION

- First vehicle: full-size paper or low-tack proof of the side lockup and the rear doors on the vehicle, photographed from 5 m and 15 m and signed off by the GBS Director before vinyl is cut.
- Apply dry on a clean, degreased, dry panel at the film manufacturer's temperature range. Post-heat edges and any recess as specified. Replicate the nearside layout on the offside as a mirror of position, never of the artwork.
- Hand over a photo set (both sides, rear, front, close-ups), the film batch numbers and the aftercare note (no pressure washing closer than 300 mm, no jet washing of edges for 7 days).

SCHEDULE OF ELEMENTS

Element	Size (mm)	Position	File
Side lockup (x 2)	1400 x 554	Rear load panel, 250 below roof line, 341 from rear corner, above the body crease	GBS_HORIZON_VAN_SIDE-LOCKUP_1400MM_SAGE-RED_v1.0.svg
Side contact row (x2)	1300 x 75	60 below the body crease, aligned to lockup	GBS_HORIZON_VAN_SIDE-CONTACT_1300MM_SAGE_v1.0.svg
Rear-quarter bars (x2)	201 × 460	Bottom on sill line, 155 from rear corner	GBS_HORIZON_VAN_REAR-QUARTER-BARS_460MM_SAGE-RED_v1.0.svg
Rear lockup	1200 x 475	Centred across both doors, 350 below roof line	GBS_HORIZON_VAN_REAR-LOCKUP_1200MM_SAGE-RED_v1.0.svg
Rear contact block	700 × 136	Centred, 270 below strapline, between handle and plate	GBS_HORIZON_VAN_REAR-CONTACT_700MM_SAGE_v1.0.svg
Bonnet emblem	250 × 187	Centred on bonnet, 150 from leading edge	GBS_HORIZON_VAN_BONNET-ICON_250MM_SAGE-RED_v1.0.svg

Preview: GBS_HORIZON_VAN_SIDE-LOCKUP-PREVIEW-1-10_140MM_SAGE-RED_v1.0.png (300 dpi, 1:10). Contact details on every element come from company.json; the phone number shown is the one verified line.