

NICKY HAWKINS · PAINTER & DECORATOR

NH Estimator User Manual

A pocket guide to the paint-estimating app, from first measure to final invoice — measuring rooms, staircases and exteriors, pricing wallpaper and kitchen resprays, quoting through Xero, scheduling, and running the job on site.

App version 2.86.1 · Manual generated September 2026
Screenshots taken from the app with example data

NH Estimator is a phone-first web app for pricing decorating work. You walk round the property measuring up, and the app turns those measurements into a fully priced quote — labour, materials, markup, deposit and payment plan — which you can send straight into Xero. Once a quote is accepted, the same app schedules the job, tracks the materials and time you actually use on site, and builds the final invoice back into Xero when you're done.

This manual follows the life of a job in order: **set up** → **measure** → **quote** → **schedule** → **on site** → **invoice**. If you're brand new, read [Getting started](#) and [Measuring up](#) first — the rest will make sense as you need it.

1. Getting started

Your first half hour, in order: install it on your phone → put your own name on it → connect Xero → check your rates → start your first job. That's the whole setup. Everything after section 1 you can read as you need it.

Install it on your phone

The app lives at its own web address — if someone set this copy up for you, that link is the one they sent you. It's designed to be **installed to your home screen** so it opens full-screen like a normal app:

- **iPhone:** open the app in Safari → tap the Share button → **Add to Home Screen**.
- **Android:** open it in Chrome → menu (⋮) → **Add to Home screen / Install app**.

If your copy of the app has a password set, you'll be asked for it the first time you open the app on a device — **once per phone, and then not again**. The sign-in refreshes itself every time you use the app, so it only ever comes back if you go a full month without opening it, get a new phone, or clear the browser's data. Let your phone save the password to iCloud Keychain (or your password manager) on that first login and even those rare times are a Face ID tap rather than typing.

Setting a password is worth doing now that you can send clients an approval link: the link points at the same web address the app runs on, so a client who trimmed it back to the domain would otherwise land on your jobs. With a password set they get a sign-in screen and nothing else. If there's no password on your instance, guard the web address like you would any private page.



Make it yours

Do this before you send anything to a client. Until you enter your own details the app falls back to the name and logo it was built with, so a quote, a snag-list PDF or even your sign-in screen could go to a client with somebody else's business on it.

Menu (≡) → **Settings** → **Business**:

- **Business name** — replaces that fallback everywhere it appears.
- **Logo** — optional, and shown *instead of* the name in the header when you set one. Leave it empty and your business name is used on its own.

Between them they carry through to the app header, the sign-in screen, the top of every quote you send and its PDF, the snag-list PDF and your calendar feed. To check it landed, open any job and tap **Quote** ↑ — what you see there is what the client sees.

Connect Xero (one-off)

Almost everything works without Xero, but quoting and invoicing shine with it connected:

1. Open the menu (≡) → **Settings**.
2. Scroll to **Xero Integration** → tap **Connect Xero** and sign in.
3. Back in Settings, under **Materials (Xero Items)**, tap **Refresh from Xero** to pull in your paint products, then pick your default products (wall paint, ceiling, woodwork, primer, mist coat, masonry...). Every new room starts with these defaults, so set them once and forget them.
4. If you plan to record deposits through the app (see [Recording a deposit](#)), also pick a bank account under **Settings → Deposits (Xero)**.

Check your rates

The app ships with sensible defaults (day rate £300, 20% markup, 25% deposit, standard coverage rates), split across two screens off the menu: **Rates** holds the calculation tables, **Settings** holds everything else. Skim through both once and adjust anything that doesn't match how you price — every figure in a quote comes from these numbers.


Your first job

There's nothing to create before you can start measuring: the app opens on a starter job called **My Job**, and Measure, On Site and Summary are already pointed at it. Give it the real name before you go any further, though — a job's name is what you'll be searching for months later.

Menu (≡) → **Jobs** → tap the  on *My Job* and type the client's address or job name over it. From then on  on that same screen starts each new job. The one you're working on is marked **CURRENT**; Rates and Settings are global and apply to every job. There's more on all of it in [Jobs](#).

Then open  **Measure** and put a room in it — [Measuring up](#) picks up from there.


2. Finding your way around

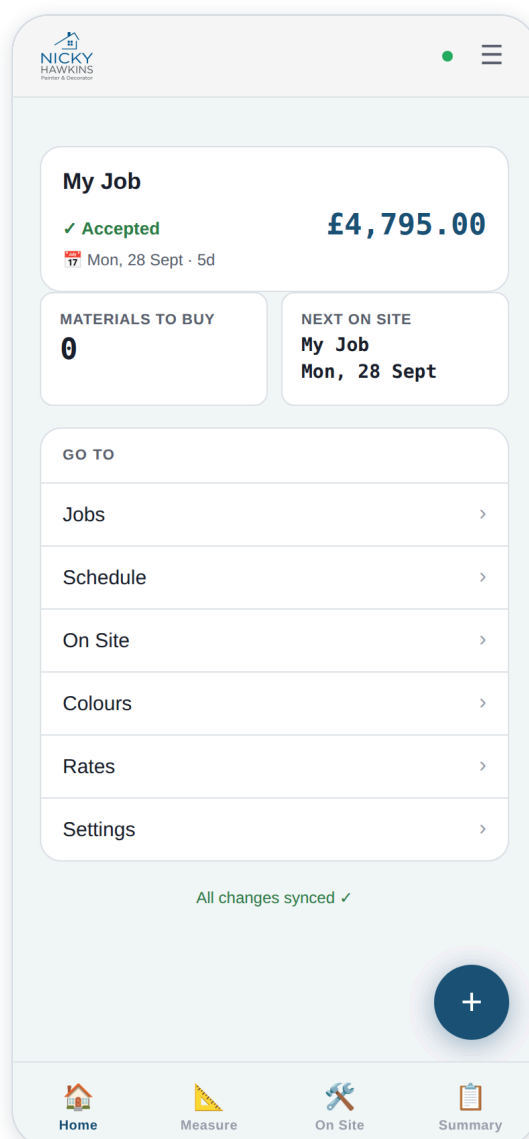

The **Home** screen is your morning glance: the current job and its status, a **Materials to buy** count, **Next on site** — the client you're due at next and the date — and shortcut links. The **+** button in the bottom corner starts a new job, the same as the one on the Jobs screen: type a name and you land back on Home with the new job as current. When something needs chasing — a quote that's gone unanswered too long, a finished job you haven't invoiced — it appears at the top of Home as an attention strip.

The **bottom bar** is always visible and follows the life of a job, left to right:

Tab	What it's for
 Home	Dashboard and reminders
 Measure	Everything measured for the current job — rooms, exterior items, kitchen, fitted units and custom lines
 On Site	Time, materials and variations while the job runs
 Summary	The priced quote, Xero, and job status

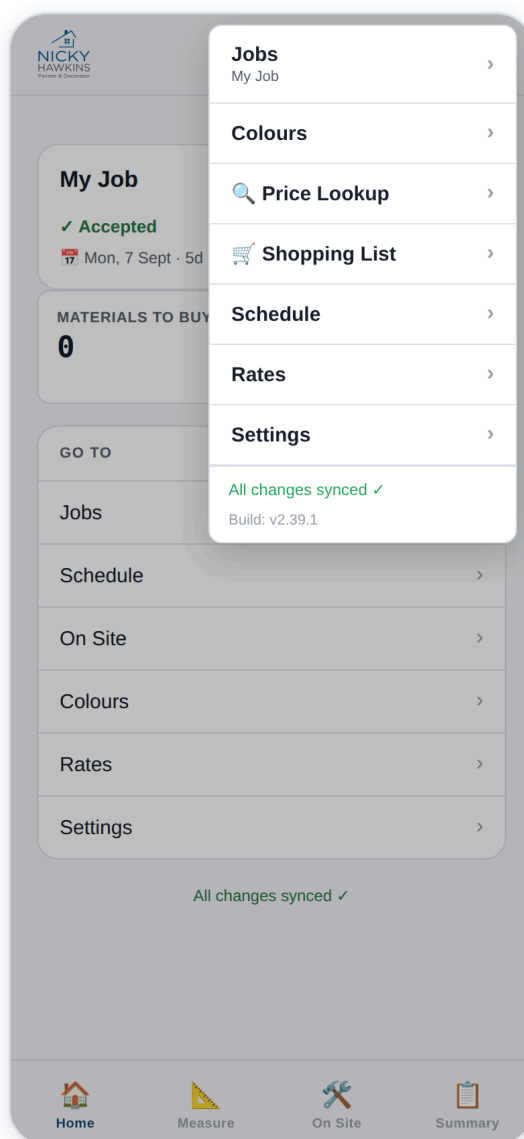


The **menu** (≡), top right on most screens, holds every other screen:

Item	What it's for
Jobs	Switch jobs, start a new one, import a pre-app Xero quote
Colours	Every surface's colour, decided or not, and paint-ordering quantities
 Price Lookup	A till-check: search any Xero sales item for its price
 Shopping List	A running pick-up list, separate from any one job
Schedule	The job calendar
Rates	Every number behind a calculated price
Settings	Business details, Xero, backup, appearance


Below those,  **Undo** appears whenever there's a recent change on the current job you can undo (see [Materials & Undo](#)), followed by the sync line — "All changes synced ✓" means everything you've entered is safely on the server — and the build number, so you can confirm a deploy has actually reached your phone. Everything saves automatically as you type; there is no save button to forget.

3. Measuring up

Open  **Measure**. This screen lists everything measured for the current job — **Interior** rooms, **Exterior** items, the **Kitchen**, **Fitted Units** and **Custom Lines** — each showing its cost and estimated days at a glance. The figures on this screen are your *labour cost before markup* (the banner at the top says so); the chip in the top bar shows the customer-facing quote total, and Summary has the full customer-facing breakdown.

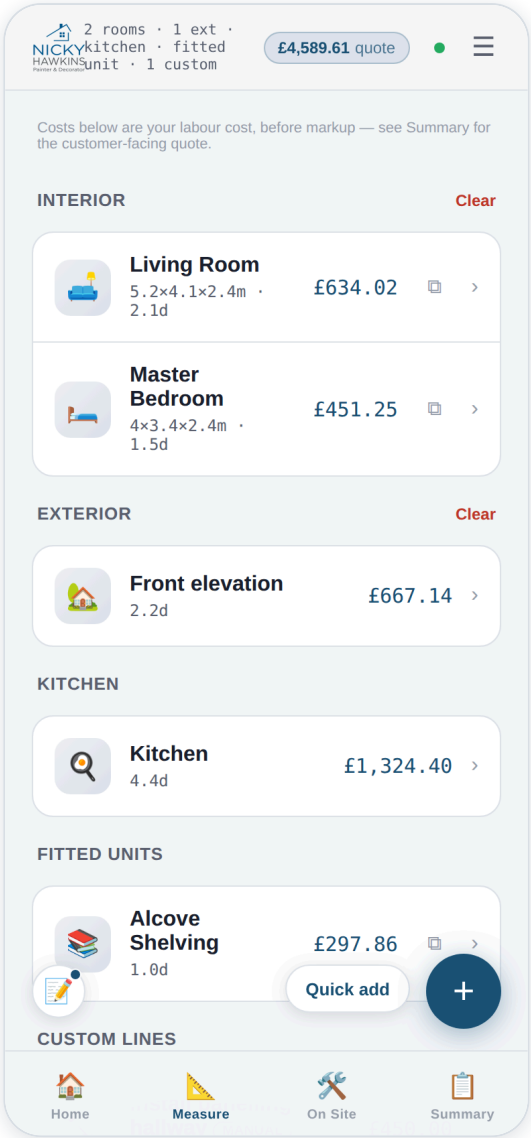


Tap the  **button** (bottom right) and choose what you're adding:

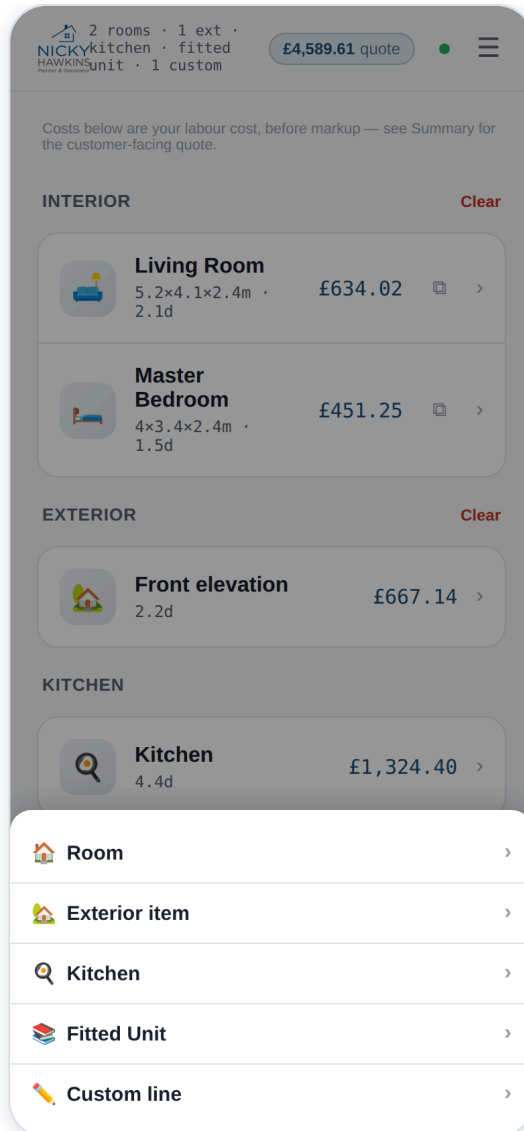

Quick add: walking a big house? Tap **Quick add** instead and just type the room names one after another — Living Room, Hall, Bedroom 1... — then go back round measuring each one on a second pass. Much faster than filling in a full form in every doorway.

Bulk edit

Once there's more than one room, **Bulk edit** appears on the Interior header. Tap it and every room gets a tick box — pick the ones you want (or **Select all**), then **Edit N rooms**:

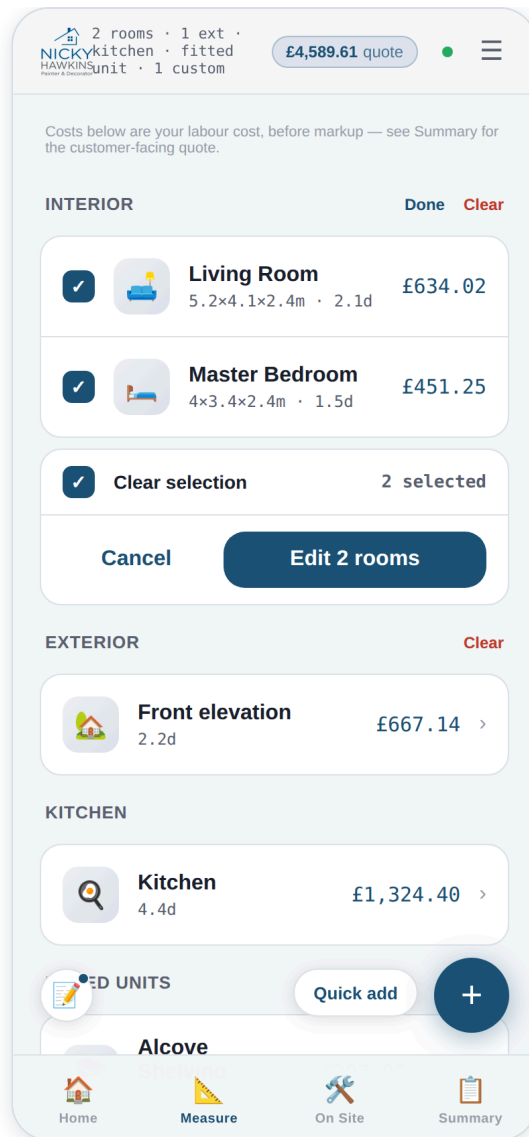

The panel that opens covers the fields worth doing in one go: a product and colour band for each of the seven paint roles (walls, ceiling, woodwork topcoat, woodwork primer — with a **None** option for a self-priming topcoat — mist coat, feature wall and panelling), coat counts for walls/ceiling/woodwork/doors/frames, a mist coat toggle for walls and ceiling, and the room's prep level (which covers doors and frames too):

2 rooms · 1 ext ·
kitchen · fitted
unit · 1 custom

£4,589.61 quote



Costs below are your labour cost, before markup — see Summary for

BULK EDIT · 2 rooms

Cancel

Leave a field alone and it is not touched on any room. A surface a room hasn't got is skipped, never created.

WALL PAINT

Product
overwrites the wall product on every selected room

— No change —

CEILING PAINT

Product
defaults to Settings on a room that has none

— No change —

WOODWORK TOPCOAT

Product
skirting, sills, windows, doors and frames

— No change —

WOODWORK PRIMER

Product
or None, for a self-priming topcoat

— No change —

MIST COAT PAINT

Product
only reaches rooms that have a mist coat, or are getting one below

— No change —

FEATURE WALL

Product
painted feature walls only

— No change —

Cancel

Preview changes

NICKY HAWKINS My J... 2 rooms £1,113.74 quote

Costs below are your labour cost, before markup — see Summary for

BULK EDIT · 2 rooms Cancel

Walls No change

Ceiling No change

Woodwork
skirting, sills, windows No change

Doors No change

Frames No change

MIST COAT
adds only — a surface left off never turns an existing mist coat off

Walls ☒

Ceiling ☐

Woodwork has no mist coat in this app — walls and ceilings are the only surfaces it is priced for.

PREPARATION
the room's prep uplift — doors and frames follow it too

No change Minimal Standard Heavy Custom

Cancel Preview changes

Every field starts on "No change" and stays there unless you set it — nothing carries over from the last time you used it, and a field you don't touch is left alone on every room. Two rules worth knowing: it **never invents a surface a room hasn't got** (ask for woodwork coats and a room with no woodwork is skipped, marked N/A in the preview), and **mist coat only ever adds** — ticking a surface turns it on where it's off, but leaving it unticked never turns an existing mist coat off. Coats work the other way and the form says so: the number you type is the exact coat count, not an increase.

Tap **Preview changes** to see exactly what would move, room by room, `old → new`, before anything is written:

2 rooms · 1 ext ·
NICKY kitchen · fitted
HAWKINS unit · 1 custom

£4,589.61 quote

Costs below are your labour cost, before markup — see Summary for

BULK EDIT · 2 rooms Cancel

Woodwork
skirting, sills, windows No change

Doors No change

Frames No change

MIST COAT
adds only — a surface left off never turns an existing mist coat off

Walls ☒

Ceiling ☐

REVIEW CHANGES Back

2 of 2 selected rooms will change. Nothing is written until you tap Apply.

Living Room
Wall coats: 2 → 3
Mist coat — walls: off → on

Master Bedroom
Wall coats: 2 → 3
Mist coat — walls: off → on


Back Apply to 2 rooms

Nothing is saved until you tap **Apply**; **Back** returns to the panel with every field still set. Afterwards the rooms are ordinary rooms — open any one and edit it as normal, nothing is locked. Staircase/HSL rooms take part too, but only for the fields that actually move their price: door coats, frame coats and every product override apply normally, while wall/ceiling/woodwork coats, the mist toggles and the prep level are skipped (a staircase room's total is worked out and frozen when you save the staircase form itself — change those on the staircase form instead).

Rooms and fitted units can also be **duplicated** — tap the  icon on their card in the Measure list. Everything copies: dimensions, coats, prep, colours and products, dropped in right below the original as "(copy)". This is the fast way to do bedrooms 2/3/4, or two matching alcove units either side of a chimney breast — measure one, copy it, change a couple of numbers. A copy always starts its own client sign-off from Pending (it never inherits the original's ✓), and on an accepted job it arrives flagged as a variation, same as anything else added after acceptance.

Putting the list in order

You measure in the order you walk the house, and the room you remembered on the way out lands at the bottom of the list. **Reorder** — on the **Interior**, **Exterior**, **Fitted Units** and **Custom Lines** headers, once that section has more than one row — walks them into the order you actually want:

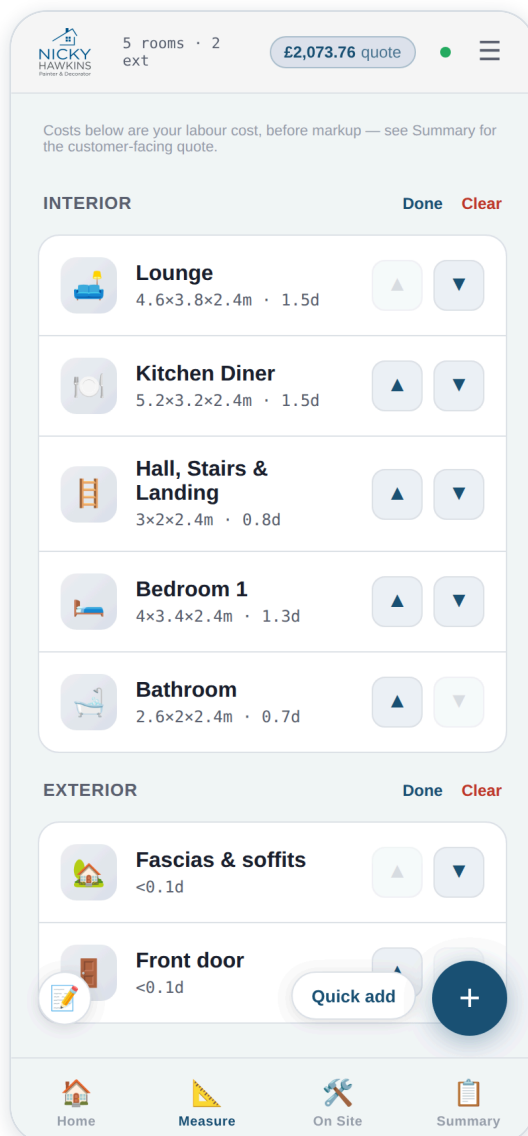

Tap it and every row swaps its cost for ▲▼ arrows; tap those to walk a row up or down. It's one mode for the whole screen — every section's link reads **Done** while it's on, and any of them turns it back off. A row only ever moves **within its own section** (a room never walks into the exterior list), and the sections themselves keep their order. While you're reordering, rows don't open when tapped and can't be swiped away, so nothing gets deleted or edited by a stray finger — and the arrow at the top of a list is greyed out because there's nothing above it.

The order you set is the order everything downstream reads: the Summary breakdown, the client-facing Quote view, the Xero quote, the CSV export and the final invoice. Each move saves as you make it, like any other change (offline included, queued until you're back in signal). Bulk edit and Reorder are one at a time — turning either on takes the other's link off the header until you're done.

Adding a room

Edit Room Save

ROOM DETAILS

Room Name

Staircase / HSL
Hall, stairs & landing — swaps in staircase geometry below ☐

DIMENSIONS

Room shape
Perimeter / Segments for L-shapes & odd rooms **Standard** Perimeter Segments

Length metres

Width metres

Ceiling height metres

Sloped ceiling
Slope makes length × width wrong — type the measured ceiling area instead ☐

BAY WINDOW & ALCOVE/DORMER

Home Measure On Site Summary

The form is in two halves, and it follows how you actually work: **walk the room** first — every card that asks you to look at something and count it — then **decide the scheme** once at the end, in the last three cards. Nothing makes you jump back and forth between measuring and pricing while you're stood there with a tape.

Every card is collapsed when the form opens, so what you see first is a short index of the room rather than a page to scroll past — tap a heading to open that card, tap it again to fold it away. The two exceptions are at the top: **Room Details** (the room name, the Staircase / HSL toggle, and — once the quote is accepted — the **Variation** toggle) is always on screen, since you touch them on every room, and **Dimensions** starts open because you fill it in every time. Dimensions is still an ordinary section, so once you've measured you can collapse it too and keep the rest of the form in view.

Only the top matters for a basic room:

1. **Room Name** — e.g. "Living Room".
2. **Dimensions** — pick the **Room shape** first:

- **Standard** — length × width × height, for a plain rectangular room (the default).
- **Perimeter** — type the wall perimeter and ceiling height directly, plus the ceiling area, when the footprint doesn't reduce to L×W.
- **Segments** — build the room from rectangular zones (each L×W) that sum into the wall run and ceiling area — made for L-shapes and rooms with big alcoves.

In any mode, the **Bay Window & Alcove/Dormer** add-ons cover the common awkward bits: bay window extra perimeter, alcove/dormer wall and ceiling area, and a sloped-ceiling toggle (type the measured ceiling area directly, since a slope makes length × width wrong). So loft rooms and bays no longer need fudged numbers. (The **Staircase / HSL** toggle above swaps this card for staircase geometry — see [Staircases](#) below.)

The screenshot shows the 'Edit Room' screen in a mobile app. At the top, there's a back arrow, the title 'Edit Room', and a 'Save' button. Below the title, a note explains the 'Segments' mode: '— e.g. the two legs of an L-shape, or main room + alcove. Walls and ceiling both sum across zones'. The interface lists two zones: Zone 1 with dimensions 3.2 x 4 and Zone 2 with dimensions 2.1 x 1.8. Below these, it shows calculated values: 'Wall perimeter' as 22.2 lm and 'Ceiling area' as 16.58 m². There is a '+ Add zone' button. Further down, 'Ceiling height metres' is set to 2.4. A 'Sloped ceiling' toggle is currently off, with a note: 'Slope makes length × width wrong — type the measured ceiling area instead'. At the bottom, there are four expandable sections: 'BAY WINDOW & ALCOVE/DORMER', 'DOORS & FRAMES', 'EXTRAS', and 'FEATURE WALL'. The bottom navigation bar has four icons: 'Home' (house), 'Measure' (ruler), 'On Site' (wrench), and 'Summary' (clipboard).

Walk the room

The rest of the measuring cards follow in the order you'd meet them moving round the room — all optional, all collapsed until you tap them, and you skip whatever the room hasn't got:

- **Doors & Frames** — doors and their frames are priced as separate line items, each with its own quantity and coats:

The screenshot shows the 'Edit Room' interface with a 'Save' button at the top right. It contains two main sections: 'DOOR' and 'FRAME'. Each section has a 'Qty' input field (set to 2) and a 'Coats' selector (set to 2). Below these are several toggle options: 'Both sides', 'Fire door (FD30/FD60)', 'Self-priming paint', 'Remove & refit ironmongery', and 'Mask ironmongery in place'. Each toggle has a descriptive text and a toggle switch. At the bottom, there is a navigation bar with four icons: Home, Measure, On Site, and Summary.

Leave a Door or Frame's quantity at 0 to price just the other one. Their prep comes from the room's **Preparation** card — there's one prep decision per room, not a separate one here. Per line you'll also find **Fire door** (an FD30/FD60 intumescent-compatible surcharge, edges included in the coverage calc), **ironmongery** (remove-and-refit, or mask-in-place — mutually exclusive), and **Both sides** (price the whole leaf as one line instead of just the face seen from this room — handy for a door between two painted rooms, split one face each). **Self-priming** for doors and frames is not here — it's with the rest of the woodwork's priming, under **Paint & Colour > Woodwork Primer** ([below](#)), and the row here just says so.

- **Extras** — windows (m²), window sills and radiators. Each adds its own time and paint. Putting a figure in **Radiators** also brings up the **Radiators** colour row in Paint & Colour below — see [Radiator colours](#).
- **Feature Wall** — one wall in a different finish: paint, or wallpaper (standard, wide vinyl or mural).
- **Wallpaper** — lining and finish paper for walls or ceiling, priced per roll with an automatic **rolls-to-order** count, plus a free-text note for the paper itself. **Finish paper takes that surface out of the paint** — no emulsion bought, no painting time charged, whatever

the Coats card says. Lining on its own still paints (it's hung *to be* painted over). Covered in detail in [Wallpaper](#) below.

- **Excluded Walls** — walls you're *not* painting (a tiled wall, wallpaper that's staying). Add its width × height and it's deducted.
- **Panelling** — wall panelling by area with its own coats (up to 4), prep and colour, independent of the room's own settings. Leave a wall's **–m²** chip on when the panelling sits on the room's own walls: its area comes off the painted walls *and* the wallpapered walls, so you can paper a room and paint its panelling without paying for either twice. For half-height panelling enter just the panelled part — the wall above keeps its paint or paper.

PANELLING

PANELLING

each wall as its own width × height, up to 4 coats; leave empty to skip. –m² takes that wall's area off the room walls so it isn't also priced as wall paint or hung with wallpaper — for half-height panelling enter just the panelled portion and the wall above stays in the room colour (or paper, as shorter drops). Skirt paints that wall's skirting with the panelling — it comes off the room's woodwork and is priced as panelling

Wall 1	–m² Skirt	3.67	×	1.2	2	×
Wall 2	–m² Skirt	3.34	×	1.2	2	×
Deducted from wall area					8.41 m²	
Skirting painted with panelling					3.67 m	
+ Add panelling wall						

The **Skirt** chip is for skirting painted in the panelling's paint and colour, which it usually is. With it on, that wall's skirting comes off the room's woodwork (both the time and the woodwork paint) and is priced as part of the panelling instead: the wall's width × a 0.15 m skirting board, at the panelling's coats, time rate and prep, out of the panelling tin.

Skirting painted with panelling under the rows shows how many metres have moved, and on Summary the room's line reads **Panelling (incl. skirting)**. Both chips start on for a new wall; tap **Skirt** off where the skirting is a different colour and it stays with the rest of the woodwork. Rooms saved before this chip existed keep their skirting as woodwork until you tap it on. It works on staircase rooms too.

- **Mist Coat** — for fresh plaster; tick walls and/or ceiling, with a manual area override for "only part of it is new plaster".
- **Wallpaper Stripping** — paper coming off before you paint. Tick **Walls** and **Ceiling** separately (a room papered on the walls with a painted ceiling is the usual case), and give each surface its own **paper type**:

WALLPAPER STRIPPING

Strip Wallpaper — Walls

Prices stripping the existing paper off this room's wall m², at the tier's minutes per m² from Rates

WALL PAPER TYPE

How hard it is to get off — the rate for each is on Rates > Wallpaper Stripping

Lining

Standard

Textured

Layers

Strip Wallpaper — Ceiling

Same, against this room's ceiling m²

CEILING PAPER TYPE

Set independently — a lining-paper ceiling over woodchip walls is an ordinary find

Lining

Standard

Textured

Layers

Walls: 36.00 m² × 12 min/m² = 432 min (£308.57)

Ceiling: 14.00 m² × 3 min/m² = 42 min (£30.00)

The four types are **Lining** (a single skim of lining paper), **Standard** (ordinary patterned or vinyl), **Textured** (woodchip, blown vinyl, heavy embossed) and **Layers** (papered over more than once — a steamer job). Each carries its own minutes per m², set once on [Rates > Wallpaper Stripping](#). The room's walls and ceiling are already measured for the paint, so there's nothing extra to measure: the time is *that surface's m² × its type's minutes per m²*, and the line under the toggles shows the sum it just priced. Walls you've put in **Excluded Walls** aren't stripped either — paper that's staying isn't work.

The time joins the room's labour like any other prep step, so it lifts the room's price *and* its days on the Schedule.

On the client's copy it gets a line of its own — *"Wallpaper Stripping — Back Bedroom"*, with the paper type underneath. That's the point of it: on a strip-out, or a strip-and-repaper, a room line reading *"Back Bedroom £480"* with nothing painted looks like a mistake rather than a day with a steamer. The money is **carved out** of the room's line, never added on top, so the total is exactly what it was — and a room that's *only* being stripped shows the one line rather than a £0.00 paint line beside it. Summary still counts it inside the room (that's the view that feeds the diary and the spec sheet) and marks the row *own quote line* so the two reconcile.

It's named in the quote description too, beside the mist coat: *"Existing wallpaper will be stripped from the walls prior to decoration."* (past tense on the invoice). It says the surfaces, not the paper type — the type is on the priced line, where it's what explains the figure. A job where **nothing is being painted** now reads properly as well: the description describes the stripping instead of leaving the painting paragraph empty.

Set the rates before you use it. The four minutes-per-m² figures ship at **0** — they're yours to calibrate, and the app won't guess a number for work it has never watched you do. With a type still at 0 the card says so in orange rather than quietly pricing the strip at nothing.

Decide the scheme

Once you've stopped measuring, the last three cards are the pricing decisions — made once, with the room already captured:

- **Coats** — walls, ceiling and woodwork each default to 2. Set any of them to 0 to skip that surface entirely (e.g. ceiling not being painted). Below the coat counts sit three independent **spray toggles** — one per surface:

The screenshot shows the 'Edit Room' screen with the following elements:

- Header:** A back arrow and 'Edit Room' text on the left, and a 'Save' button on the right.
- Coat Selection:** Three rows for 'Walls', 'Ceiling', and 'Woodwork'. Each row has a numeric selector with options 0, 1, 2, and 3. The number '2' is currently selected for all three.
- Spray Toggles:** Three toggle switches below the coat selection.
 - Spray walls:** The toggle is off. Description: 'Adds the Rates spraying uplift % to wall litres (on top of the standard or per-product rate), and this room's labour picks up the spray sundries bump. Labour time is unchanged'.
 - Spray ceiling:** The toggle is on. Description: 'On by default — ceilings are normally sprayed. Adds the spraying uplift % to ceiling litres; turn off for a rolled ceiling'.
 - Spray woodwork:** The toggle is on. Description: 'On by default — woodwork is normally sprayed. Adds the spraying uplift % to topcoat & primer litres; turn off for brushed woodwork'.
- PREPARATION:** A section header with a right-pointing chevron.
- PAINT & COLOUR:** A section header with a right-pointing chevron.
- PREVIEW:** A section containing a table with two rows:

Wall area	38.16 m ²
...	...
- Bottom Navigation Bar:** Four icons with labels: 'Home' (house icon), 'Measure' (ruler icon), 'On Site' (wrench icon), and 'Summary' (clipboard icon).

Spray walls is off by default (also adds the spray sundries bump for the extra masking); **Spray ceiling** and **Spray woodwork** are on by default, since ceilings and woodwork are normally sprayed. A surface's toggle adds the Rates spraying uplift % to its litres on top of the standard or per-product rate — labour time is unchanged either way.

- **Preparation** — Minimal / Standard / Heavy, or a custom percentage. This scales labour across the whole room, doors and frames included. **Making Good** adds a fixed £ amount for repairs.
- **Paint & Colour** — each surface takes your default product from Settings; override the product or colour band here when a room is different. The **colour** itself is a free-text box per surface (walls, ceiling, woodwork, and again on Feature Wall and Panelling), pre-filled with where it goes — leave it as it is and decide later. See [Colours](#). A room with radiators measured also gets a **Radiators** colour row here — see [Radiator colours](#).

Self-priming lives on this card, under **Woodwork Primer** — both toggles, together, rather than one in Doors & Frames and the other in Preparation:

The screenshot shows the 'Edit Room' interface with a 'Save' button at the top right. The settings are organized into sections:

- WOODWORK TOPCOAT**: Product dropdown set to 'Use default (S)' (defaults to Settings).
- WOODWORK PRIMER**: Product dropdown set to 'Use default (S)' (defaults to Settings, or None).
- Self-priming — doors & frames**: Toggle switch is off. Description: 'Skips the primer coat on doors and frames, adding one extra topcoat instead'.
- Self-priming — other woodwork**: Toggle switch is off. Description: 'Skirting, sills and windows — same thing for the woodwork that isn't doors or frames. Both toggles hand over to the product once the Woodwork Topcoat above has a Self-priming entry in Rates → Paint Coverage'.
- MIST COAT**: Product dropdown set to 'Use default (S)' (defaults to Settings).
- PREVIEW** table:

Wall area	31.64 m ²
Ceiling area	15.12 m ²
Estimated cost	£540.45
Estimated time	1.8d

At the bottom is a navigation bar with icons for Home, Measure, On Site, and Summary.

Self-priming — doors & frames and **Self-priming — other woodwork** (skirting, sills, windows) each skip the primer coat on their woodwork and add one extra topcoat in its place. Sitting them under the primer product is the point: with a toggle on, that primer isn't bought for that woodwork. The **Woodwork Topcoat** product a couple of rows above can take the decision off you entirely — give that paint a Coverage Rates entry in Rates

with **Self-priming** set, and both toggles are replaced by a note reading *On — {product}*, because the product has decided. Clear the entry and your toggles come back exactly as you left them.

Two cards at the bottom sum up what you've entered:

- **Preview** — the live estimated cost and time, updating as you type.
- **Paint Needed** — how many litres this room takes, per surface, at your coverage rates (with each surface's spray uplift already included, rounded up to the half litre):

The screenshot shows the 'Edit Room' screen in a mobile app. At the top, there's a header with a back arrow, the title 'Edit Room', and a 'Save' button. Below the header, there are two toggle switches: 'Remove & refit ironmongery' (with subtext 'Handles/hinges/locks taken off and refitted') and 'Mask ironmongery in place' (with subtext 'Cheaper than removing — mutually exclusive with removing'). Below these are several expandable sections: 'EXTRAS', 'WALLPAPER', 'MIST COAT', 'PANELLING', 'PREPARATION', and 'PAINT & COLOUR'. At the bottom, there's a 'PREVIEW' section containing a table with the following data:

PREVIEW	
Wall area	39.24 m ²
Ceiling area	21.32 m ²
Estimated cost	6634.02

At the very bottom, there's a navigation bar with four icons: 'Home' (house icon), 'Measure' (ruler icon), 'On Site' (wrench icon), and 'Summary' (clipboard icon).

These are the same figures Summary's materials list buys from — a feature wall in the room's own colour and product folds into the Walls line rather than getting its own row, since that's one tin of paint bought once.

Staircases (Hall, Stairs & Landing)

Stairwells are the hardest thing to measure by hand — big raking walls you can't get a tape across, hall and landing running into each other. The app does the geometry for you. Click the **Staircase / HSL** toggle at the top of the room form and the Dimensions card is replaced with

staircase geometry:

The screenshot shows a mobile app interface titled 'Add Room' with a 'Save' button in the top right. The interface is divided into several sections:

- ROOM DETAILS**:
 - Room Name**: A text field containing 'Hall, Stairs'.
 - Staircase / HSL**: A toggle switch that is currently turned on. Below it, the text reads: 'Hall, stairs & landing — swaps in staircase geometry below'.
- NUMBER OF FLOORS**:
 - Floors**: A selector with three options: '1', '2', and '3'. The '2' option is selected. Below the selector, it says 'inc ground floor'.
- GROUND FLOOR HALL**:
 - Length**: A text field with '4.2' and the unit 'metres' below it.
 - Width**: A text field with '1.9' and the unit 'metres' below it.
 - Height**: A text field with '2.4' and the unit 'metres' below it.
- STAIRCASE 1**:
 - Stair walls**: A selector with two options: '1' and '2'. The '1' option is selected. Below the selector, it says 'how many sides get painted'.

At the bottom of the screen is a navigation bar with four icons and labels: 'Home' (house icon), 'Measure' (triangle icon), 'On Site' (wrench and screwdriver icon), and 'Summary' (clipboard icon).

Work down the cards:

1. **Number of Floors** — 1, 2 or 3 including the ground floor. A typical two-storey house is **2**: ground-floor hall, one staircase, first-floor landing. Choose 3 and a second staircase and landing appear.
2. **Ground Floor Hall** — plain length $\times$ width $\times$ height, like any room.
3. **Staircase 1** — this is where the app earns its keep:

The screenshot shows the 'Add Room' screen in the NH Estimator app. At the top, there is a back arrow and the title 'Add Room', and a 'Save' button on the right. The screen is divided into two main sections: 'Stair walls' and '1ST FLOOR LANDING'.

Stair walls section:

- Stair walls:** how many sides get painted. A toggle switch is set to '1'.
- Steps:** count as you go up. Value: 13.
- Stair width:** metres — physical width of the stairs. Value: 0.9.
- Wall height at bottom:** metres. Value: 2.4.
- Riser:** default 220mm. Value: 0.22.
- Tread:** default 220mm. Value: 0.22.
- Top step:** metres — measure at the top, see diagram. Value: 0.25.

1ST FLOOR LANDING section:

- Length:** metres. Value: 3.0.
- Width:** metres. Value: 1.9.
- Height:** metres. Value: 2.4.

At the bottom, there is a navigation bar with four icons: Home (house icon), Measure (triangle icon), On Site (wrench icon), and Summary (clipboard icon).

- **Stair walls** — how many sides of the staircase get painted (1 or 2).
- **Steps** — count them as you go up.
- **Stair width** — the physical width of the stairs.
- **Wall height at bottom** — floor to ceiling at the foot of the stairs.
- **Riser** and **Tread** — pre-filled with the standard 220 mm; only touch these on an unusual staircase.
- **Top step** — the one measurement people get wrong, so it has its own diagram:

WALL 1 — Large raking stair wall: DERIVE the width, MEASURE the heights

Width is built UP from the bottom (hall + steps), NOT measured across the top — the upstairs landing length overlaps the stairwell void and double-counts. This avoids that error.



The trick, as the diagram shows, is that the big raking stair wall's width is **derived, never measured**: hall width + (steps × going) + top step. Measuring across the top instead double-counts the stairwell void; measuring along the bottom is impossible because the stairs are in the way. You measure only the easy things — heights straight up with a laser — and the app builds the wall from the step geometry.

4. **1st Floor Landing** (and 2nd, for three floors) — plain length × width × height again.
5. **Staircase Details** — spindles, newel posts and their woodwork coats. These are priced per piece, with their own timings editable under Rates → Time Rates.

The **Staircase Areas** card at the bottom shows its working — so you can see exactly what you're pricing and sanity-check it against the space you're standing in:

←

Add Room

Save

PREPARATION

PAINT & COLOUR

STAIRCASE AREAS

Hall wall area	29.28 m ²
Stair 1 wall width derived — hall width + steps + top step	5.01 m
Staircase 1 walls	13.23 m ²
1st floor landing walls	23.52 m ²
Total ceiling area	13.68 m ²
Total wall area	66.03 m²
Woodwork (doors, frames & skirtings)	£125.71
Staircase woodwork	£240.45
Estimated cost (ex markup)	£821.53
Estimated time	2.74 days

PAINT NEEDED

— estimated litres

Walls	10.5 L
Ceiling	2.5 L

Home

Measure

On Site

Summary

Here the derived stair wall width is 5.01 m (1.9 m hall + 13 steps × 0.22 m + 0.25 m top step), giving 13.23 m² of raking stair wall on top of the hall's 29.28 m² and the landing's 23.52 m² — a 66 m² job in total, priced at 2.74 days, without a tape measure going anywhere near the stairwell.

Wallpaper & rolls to order

Any room (including a staircase) can have wallpaper on the walls, the ceiling, or both. Open the **Wallpaper** section of the room form:

The screenshot shows the 'Edit Room' screen of an app. At the top, there's a back arrow and 'Edit Room' text, and a 'Save' button. Below is a 'Pattern / product note' section with a text area containing 'Cole & Son W' and a description: 'your own reference — pattern name, supplier, anything about the type. Never shown to the client'. This is followed by 'Walls' with a description 'both can be on — e.g. line out then finish' and two buttons: 'Lining' and 'Finish'. Then, 'Wall wallpaper labour' is shown as '£780.00'. The 'Rolls to order' section has a description 'does not feed the quote total — client buys the paper'. Below are 'Roll length' (10.05 metres) and 'Roll width' (0.53 metres). 'Pattern match' has three options: 'No match', 'Straight' (selected), and 'Offset'. 'Pattern repeat' is set to 32 cm. 'Spare roll' is a toggle switch that is turned on. At the bottom, 'Drop length' is calculated as 'Lining 2.50 m · Finish 2.82 m', and 'Drops per roll / needed' is 'Lining 4 / 33 · Finish 3 / 33'. A bottom navigation bar has icons for Home, Measure, On Site, and Summary.

- **Pattern / product note** — free text at the top of the card, for whatever you'll want to know later: the pattern name, the supplier, "paste-the-wall", "heavy vinyl, needs a seam roller". Write it while you're stood in the room looking at the paper, and it's there when you come to order or come back to the job. It's **your note, not the client's** — it never appears on the client quote, the Xero quote or the Colours screen, and it doesn't affect a single figure. Optional; leave it blank if the paper is unremarkable.
- **Lining / Finish** — tap either or both. Both on means "line out, then hang finish paper", and each is priced separately per roll (rates in Rates → Wallpaper Rates). The labour appears immediately.
- **Roll length / Roll width** — pre-filled with the standard 10.05 m × 0.53 m; check the label of the actual paper and adjust.
- **Pattern match** — *No match* (lining papers, plains), *Straight* or *Offset*. A pattern match wastes paper, and the calculation accounts for it.
- **Pattern repeat** — in cm, straight off the roll label.
- **Spare roll** — adds one extra to the order, just in case.

Below the inputs the app shows its working, batch-book style: the **drop length** (wall height plus trim allowance, lengthened to allow for the pattern repeat when there's a match), **drops per roll / drops needed**, and the bottom line — **Rolls to order**. Read that to the client off

your phone.

The screenshot shows the 'Edit Room' interface of a mobile app. At the top, there's a back arrow, the title 'Edit Room', and a 'Save' button. Below this is a 'Pattern match' section with three tabs: 'No match', 'Straight' (which is selected), and 'Offset'. The 'Pattern repeat' section shows a value of 32 with the unit 'cm — off the roll label'. The 'Spare roll' section has a toggle switch turned on, with the text 'order one extra, just in case'. The 'Drop length' section shows 'Lining 2.50 m · Finish 2.82 m'. The 'Drops per roll / needed' section shows 'Lining 4 / 33 · Finish 3 / 33'. The 'Rolls to order' section shows 'Lining 10 · Finish 12'. The 'Ceiling' section has a note 'both can be on — e.g. line out then finish' and two tabs: 'Lining' and 'Finish'. Below these are four expandable sections: 'EXCLUDED WALLS', 'PANELLING', 'MIST COAT', and 'COATS', each with a right-pointing arrow. At the bottom is a navigation bar with four icons: a house for 'Home', a triangle for 'Measure', a wrench and screwdriver for 'On Site', and a clipboard for 'Summary'.

The drops-needed figure now writes itself onto the quote. The Wallpapering and Painting & Papering templates open their wallpapering paragraph with "[X] lengths of [paper name/supplier] to be hung to..." — that [X] used to be yours to type, and is now filled in. It's the **lengths** (strips hung, added up across the whole job), not the rolls: rolls are what you order, and they're the figure above. A wall that's lined *and* papered counts **once** — how many strips go round a wall doesn't change with the paper, and the lining is already described as prep a paragraph earlier. A wide-vinyl feature wall counts (still hung in drops); a mural doesn't (one printed piece). The paper name is still yours to fill in.

Two things worth knowing:

Papering a surface stops it being painted. Measure a room the ordinary way — coats default to 2 — then tick **Finish** on the walls, and the wall emulsion and the wall painting time both come off: the paper is going over them. A note on the card says so, because the Coats card still reads 2 and the Paint Needed card just quietly drops a row. **Lining alone changes nothing** — lining is hung to be painted over, so a lined wall keeps its coats, its litres and its time. Setting coats to 0 by hand is still how you say "don't paint this" for anything else. A **painted feature wall** in a papered room keeps its paint and picks up its own labour line.

- The rolls figure is a **buying guide, not a charge** — the labour feeds the quote; the client buys the paper — and the app deliberately doesn't supply it.
- On a staircase/HSL room, wallpaper labour automatically picks up the **staircase multiplier**. Ceilings get their own multiplier the same way.
- **Panelling comes off the paper.** Any Panelling wall with its **–m²** chip on is taken out of the wall paper: a full-height panelled wall loses its drops altogether, and half-height panelling (wainscoting) leaves shorter drops above it, which the count cuts from the offcuts left on your rolls. Turn the chip off for panelling that isn't on the papered walls (a bath panel, boxing-in). Staircase rooms don't do this yet — their paper is still worked out from the full stair walls.

Besides the standard roll calculation above, two other wallpaper types are available (feature wall only, under Rates → Wallpaper Rates for pricing): **Wide Vinyl** (commercial 137 cm material, priced per metre/area) and **Mural** (printed to the wall size, priced per m² or a flat fee).

Adding an exterior item

←
Edit Exterior
Save

LABEL

Description
e.g. Front elevation, Rear fascias

Front elevat

MASONRY / RENDER

Area
m²

48

Coats

1 2 3

Textured render
Litres use the textured masonry coverage and labour uses the textured masonry rate — off means smooth

Spray render
Litres use the sprayed masonry coverage, and the masonry labour picks up the spray sundries bump. Labour time is unchanged

FASCIAS & SOFFITS

Length
linear metres

14

Coats

1 2 3

Home

Measure

On Site

Summary

NH Estimator — User Manual

29 / 124

Exterior work is priced per *item* — typically one per elevation ("Front elevation", "Rear + gable") or per job type ("Fascias all round"). Each item is a menu of exterior work; fill in only what applies:

- **Masonry / Render** — area in m² and coats, with toggles for **textured render** (more paint, more time) and **spray render**.
- **Fascias & Soffits** — linear metres and coats.
- **Exterior Doors & Frames** — same fire-door/ironmongery/self-priming options as interior doors, split the same way.
- **Garage Doors, Porch / Feature Door** — priced in days.
- **Windows** — now priced in their own fixture, [Windows and doors](#) below, with a drawing of each side of the house. The form's old *Exterior Windows* and *Sash Window Restoration* sections only appear on a job that already has windows priced that way, so nothing you quoted before changes.
- **Preparation** — Light (10%), Standard (25%) or Heavy (40%), or a custom percentage, on the item's labour. New items start on Light. An older item saved at 0% prep opens as **Custom** 0%, so its price stays the same. **Making Good** adds a fixed £ amount, as on rooms.
- **Paint Colours** — one masonry colour and one exterior woodwork colour per item, in the same free-text boxes the rooms use.

Access uplifts for 1st floor and 2nd floor+ work are applied per item automatically; the percentages live in Rates. Exterior paint litres are estimated from assumed areas per unit (window, sash, door, garage, fascia width) — calibrate these in **Rates → Exterior Paint Coverage & Areas** as real jobs prove them out.

Windows and doors

+ → **Windows and doors** on Measure. The outside faces of every window and door on the house, set up on a drawing of each side. (Inside faces stay in the room measures.)

1. The house. The **House** card sets up the drawing so it looks like the actual house. None of it changes the price; it's what the drawing looks like, and what each new window or door starts as.

- **Period** — Georgian, Victorian or Modern. This is just a starting point. Picking one fills in everything below with that period's usual choices: a Georgian house starts as a stucco mid terrace behind a parapet, with 6-over-6 sashes and a pedimented door; a Victorian one as a buff-brick semi with a pitched roof and 2-over-2 sashes; a Modern one as a rendered detached house with casements. Change any of it afterwards. If you've already changed something and then pick a different period, it asks before putting everything back to that period's defaults.
- **Finish** — stucco, buff brick, gault brick (paler and greyer), red brick, render or painted brick.
- **Form** — detached, semi, end terrace or mid terrace. This decides which sides there are to paint: a detached house has all four, a semi or end terrace has the front, the back and its **open side** (left or right, as you face the front), and a mid terrace just the front and back.

Neighbours are drawn faintly against a terraced or semi house so it reads as one.

- **Roof** — a **parapet**, a pitched roof with its **eaves to the street**, or a **front gable**.
- **Sides that differ** (tap to open) — for a side that doesn't match the rest of the house: a red-brick back behind a stucco front, or a gable at one end. Each side has its own **finish** and **roof** (*parapet*, *eaves* or *gable*: what that side shows). Leave it on **Same** to follow the house. Dormers follow that side's roof, so a side set to a parapet can't have them. Picking a new period puts every side back to **Same**.
- **Details** (tap to open) — the period's finer points. Georgian: the doorcase (pediment with a radial fanlight, plain fanlight, or portico), window heads (plain, or gauged brick arches on a brick finish), glazing (6 or 8 over 8), the band course and the front railings. Victorian: the sashes (1 or 2 over 2, or margin lights), heads (stone with a keystone, or brick arches), the entrance (recessed arched porch, open with a canopy, or gabled timber porch), bargeboards on a front gable, and plain or polychrome brick bands.

← Windows & Doors £694.80

HOUSE

Period
a starting point — sets the drawing's defaults and each new opening's; change anything after

Georgian **Victorian** Modern

Finish

Stucco **Buff brick** Gault brick Render Painted brick

Form
front, back and the open side

Detached **Semi** End terrace Mid terrace

Open side
as you face the front

Left Right

Roof

Parapet **Eaves to street** Front gable

▼ Details
sashes, window heads, entrance, bargeboards, brick detailing

Home Measure On Site Summary

←

Windows & Doors

£694.80

•

☰

▼ Details

sashes, window heads, entrance, bargeboards, brick detailing

Sashes

new sashes start with it

1 over 1

2 over 2

Margin lights

Window heads

Stone, keystone

Brick arch

Entrance

Recessed arched porch

Open, with canopy

Gabled timber porch

Bargeboards

on a front gable

☐

Brick detailing

on a brick finish

Plain

Polychrome bands

Default prep

every opening starts here — one can go up, never down

Light

Standard

Heavy

Restoration

Individual detail

mark single panes and frame parts for extra

☒

Home

Measure

On Site

Summary

←

Windows & Doors

£844.07

•

☰

Front finish

Same

Stucco

Buff brick

Gault brick

Red brick

Render

Painted brick

Front roof

what this side shows of it

Same

Parapet

Eaves

Gable

Back finish

Same

Stucco

Buff brick

Gault brick

Red brick

Render

Painted brick

Back roof

what this side shows of it

Same

Parapet

Eaves

Gable

► Details

doorcase, window heads, glazing, band course, front railings

Default prep

every opening starts here — one can go up, never down

Light

Standard

Heavy

Restoration

Individual detail


mark single panes and frame parts for extra

Home

Measure


On Site

Summary

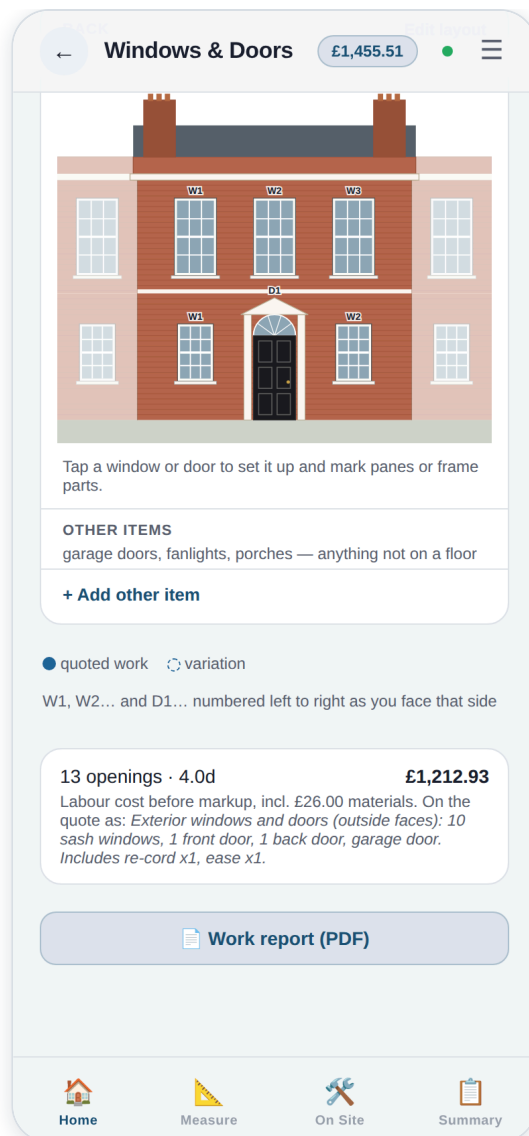


Every change redraws the house straight away, and applies to every side (except anything set under *Sides that differ*). If a change would hide a side that has windows or doors on it (a detached house changed to a mid terrace, say), or would remove dormers (changing the roof to a parapet), it tells you what will go and asks first. Those openings are deleted along with any work marked on them.

Once any side's layout is confirmed, the House card folds down to one line (*Georgian · stucco · mid terrace · parapet · light prep · individual detail*) to save space, and so does the Paint card (*2 coats · windows White · doors Black*). Tap either one, or **Edit**, to open it again, and **Hide** to fold it.

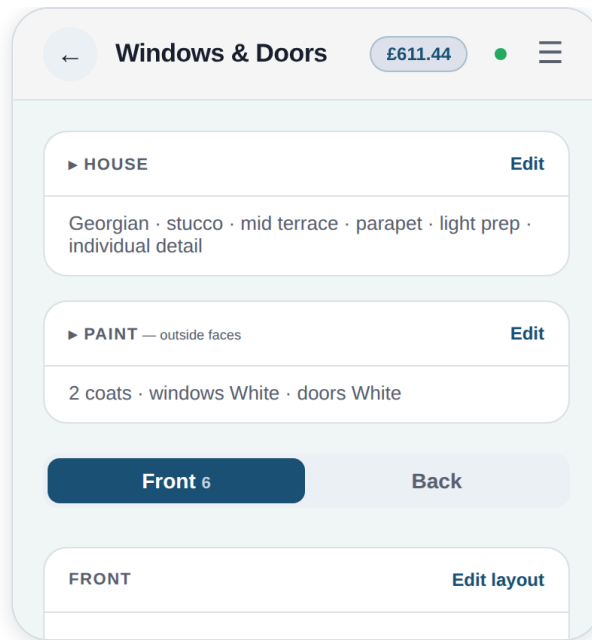

In the House card, set the **Default prep** for the job; every opening starts there. Leave **Individual detail** on for old windows, where you'll want to mark single panes and frame parts; turn it off for a job of new windows where that's never needed.

2. Each side. Tap a side — only the sides this house has are offered. Set the floors and how many windows (**W**) and doors (**D**) are on each — the drawing updates as you go. Doors start on the ground floor only; add one upstairs for a balcony or Juliet. The ends of the house draw as gables (or, under a front gable, as the eaves).

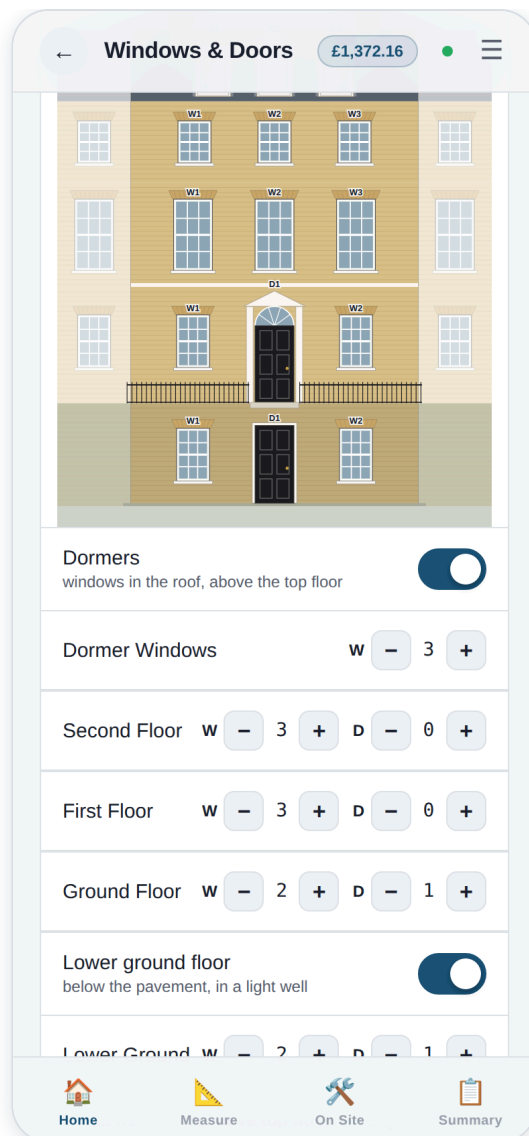

Two more levels can be switched on for each side, and both are priced like any other windows and doors:

- **Dormers** — windows in the roof, above the top floor (not with a parapet roof). Windows only. On a side where the roof shows as a gable, these are drawn as windows in the gable itself. A dormer window's detail view also has its **dormer fascia** and **left and right cheeks** to mark, alongside the window's own parts.
- **Lower ground floor** — a floor below the pavement, with its own windows and doors, drawn in its light well with railings along the top and a bridge across to the front door.

They're labelled *Front, dormer, W2* and *Front, lower ground, W1*.



On a Georgian house a new dormer starts as a **3-over-6** sash, one row fewer on top than the 6-over-6 windows below it (4-over-8 beside 8-over-8). Dormers added before v2.85.1 started as 3-over-3: open each one and set **Bottom sash rows** to 2.

←

Windows & Doors

£1,409.70

•

☰

Front, dormer, W1

Done

+ nickname (e.g. landing, above porch)

TYPE

Casement

Sash

Fixed

Top sash rows

−

1

+

Bottom sash rows

−

2

+

Pane columns

both sashes

−

3

+

3 over 6 · 9 panes

SIZE

Small

Medium

Large

X-Large

PREP


Light

Standard

Heavy

Restoration

3. Confirm layout. The windows and doors become real and tappable, numbered left to right as you face that side — W1, W2... and D1, D2... counted separately on each floor. **Edit layout** unlocks the side again; taking a count down removes openings from the end of that floor, and warns you first if any of them has work marked on it.

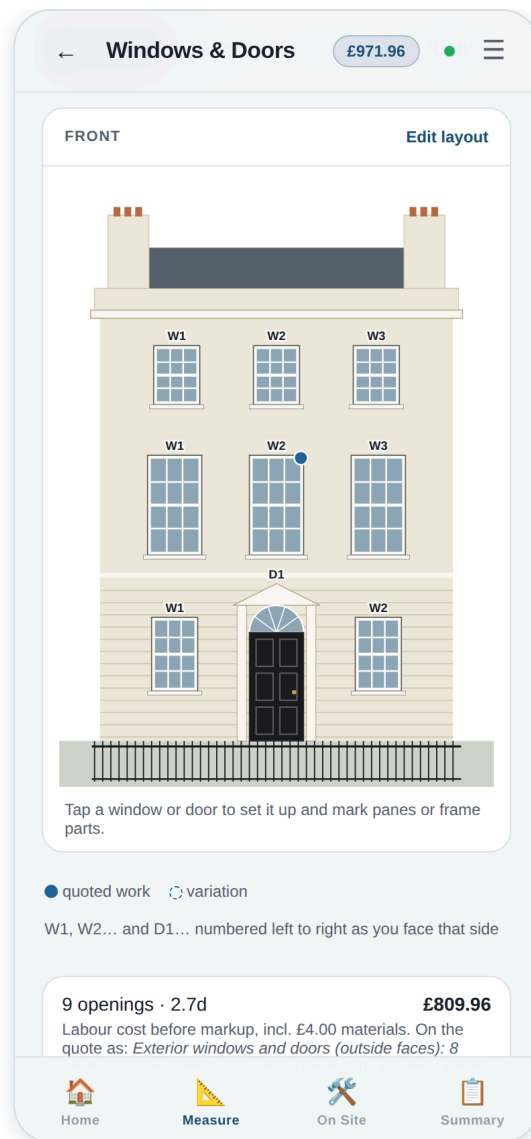

4. Tap a window or door to open its detail. Its label reads like *Front, first floor, W2*; add a **nickname** ("landing", "above porch") if that's how you'd say it on site.

- **Type** — casement, sash or fixed; or for doors panelled, flush, half glazed, fully glazed, stable or French (double).
- **Pane rows and columns** — on a sash window, the **top sash rows** and **bottom sash rows** are set separately, with the columns shared, so a 3-over-6 is 1 row over 2 rows of 3 columns. The line under them spells it out (*3 over 6 · 9 panes*). For doors these are the panel or glass grid.
- **Size** — each button shows the area it covers (Small is under 0.5m², Medium 0.5 to 1m², Large 1 to 2m², X-Large over 2m²).
- **Prep** — only levels at or above the job's default are offered. An opening can go up, never down.
- **Marking work** (with Individual detail on) — tap panes, or tap frame parts (head, stiles, rails, cill; for doors the panels, frame and threshold). A tick shows what's selected. You select one kind at a time: tapping a frame part while panes are selected starts a fresh selection. **Select all panes** and **Clear selection** do what they say. Then tap the work — **Reputty** or **Replace glass** for panes; **Filler**, **Resin repair** or **Splice timber** for parts, plus **Ironmongery off & on** and **Ease** on doors, and **Re-cord**, **Replace beads** and


Ease & overhaul on a sash window's parts — or **Remove work**. The selection clears after each one. On a sash, each mark is for that part: re-cording the left stile is the cords on that side, so mark both stiles for a full re-cord.

The screenshot shows the 'Windows & Doors' app interface. At the top, there's a back arrow, the title 'Windows & Doors', a price tag '£971.96', and a menu icon. Below this is a 'SIZE' section with four buttons: 'Small' (under 0.5m²), 'Medium' (0.5 to 1m²), 'Large' (1 to 2m², which is selected), and 'X-Large' (over 2m²). Underneath is a 'PREP' section with four buttons: 'Light' (selected), 'Standard', 'Heavy', and 'Restoration'. The main part of the interface is a window diagram with a 6-over-6 pane grid. The top two panes are blue with checkmarks, indicating they are selected for replacement. The middle three panes are orange, indicating work. The bottom three panes are blue. Below the diagram are two buttons: 'Select all panes' and 'Clear selection'. Below these is the text '2 panes selected — added to the quote'. There are three buttons: 'Reputty' (blue), 'Replace glass' (dark blue), and 'Remove work' (light blue). At the bottom, there's a section titled 'WORK ON THIS WINDOW' with a price '£158.61 quoted before markup'. Below this is a list of items: 'Paint, outside face · light prep' and 'Reputty x3 panes, resin repair (cill)'. Each item has a 'quote' link next to it.

Orange is work, blue is glass being replaced. Work marked here is **quoted** work and shows solid; work added on site shows dashed. Changing the type or the pane grid clears that opening's marks, so it asks first if there are any. The list under the diagram says, in words, everything on this opening.

Until you set a window's panes here, the house drawing shows it with the period's glazing (change Georgian 6-over-6 to 8-over-8 in Details and the drawing follows). Once you've set its type, rows or columns, the drawing shows the panes you set. The price always uses the panes set here.

Bays. Each floor in the layout also has a **B** count for bay windows. It's shown straight away on a Victorian house; on a Georgian or Modern house, tap **+ Bays** first. A bay is counted once, on the floor where it starts. On a Victorian house, a bay on the ground floor starts as a **two-storey** bay running up through the first floor, and the windows above are laid out around it.

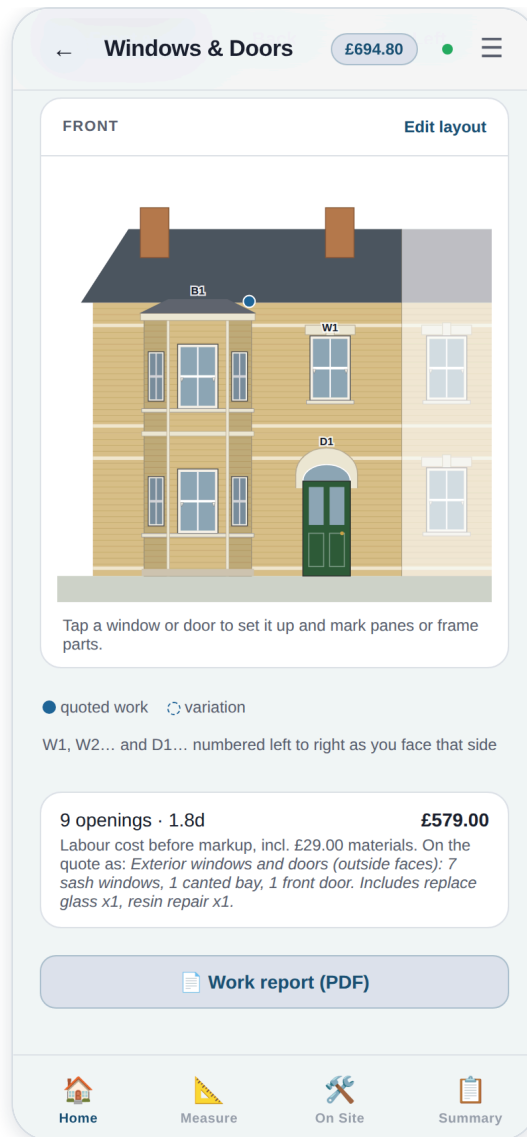

Tap a bay on the drawing to open the **bay view**. Set its **shape** (**canted**, with angled sides, or **square**), its **storeys** (one or two — two needs a floor above), and its prep. The strip shows its left, front and right windows, storey by storey. Tap any of them to open that window's normal detail view (< **B1, the whole bay** takes you back). Each window has its own type, size, panes and prep, and is labelled like *Front, ground floor, B1 front*. The bay's own timber — the **cornice**, **fascia**, left and right **mullions** and the **cill** — can be tapped and marked like a window's frame parts. A badge on a window in the strip means it has work marked on it.

←

Windows & Doors

£694.80

⋮

SHAPE

Canted

Square

STOREYS

a two-storey bay runs up through the first floor

One

Two

PREP

the bay's own timber — each window has its own

Light

Standard

Heavy

Restoration

canted bay, in plan

1 part selected — added to the quote

Filler

Resin repair

Splice timber

Clear selection

Remove work

WORK ON THIS BAY

A bay's price is its own **bay base minutes** (Rates, by shape and storeys, covering the cornice, fascia and mullions) plus each of its windows priced as a window. Making a two-storey bay single-storey removes the upper windows, asking first if any have work on them.

Other items. Garage doors, fanlights, porches and lean-tos don't sit on a floor. Under each side's drawing, **+ Add other item** asks what it is, then opens it. Give it the **minutes** to paint it (before prep), any **materials £** it needs beyond paint, and a **paint area** in m² (0 if you're not buying paint for it). **Painted in** sets whether it uses the doors' colour or the windows' colour. Prep works as it does on any opening. It's drawn as a tile under the house, numbered **01, 02...** and labelled *Front, 01 (Garage door)*. You can mark its **face** and **frame** like a door's parts (filler, resin, splice, ironmongery, ease). Changing a side's layout never touches its other items; **Remove this item** at the bottom of its sheet does. On the quote it's named in the fixture's line: *...1 front door, garage door.*

←

Windows & Doors

£1,455.51

•

☰

Diagram of a two-story house with windows and doors labeled W1, W2, W3, D1, and O1 (Garage door).

Tap a window or door to set it up and mark panes or frame parts.

OTHER ITEMS
garage doors, fanlights, porches — anything not on a floor

O1 Garage door	150 min · £20.00 materials >
-----------------------	------------------------------

+ Add other item

☒ quoted work
 ☐ variation

W1, W2... and D1... numbered left to right as you face that side

13 openings · 4.0d

£1,212.93

Labour cost before markup, incl. £26.00 materials. On the quote as: *Exterior windows and doors (outside faces): 10 sash windows, 1 front door, 1 back door, garage door. Includes re-cord x1, ease x1.*

Home

Measure

On Site

Summary

←

Windows & Doors

£802.59

•

☰

Front, 01 (Garage door)

Done

rename

Minutes

to paint it, before prep

150

Materials £

anything it needs beyond paint

20

Paint area m²

timber to buy paint for; 0 = none

6

PAINTED IN

Doors colour

Windows colour

PREP

Light

Standard

Heavy

Restoration

Garage door

Tap panes or frame parts to select them — one kind at a time. ■ work ■ glass - dashed = variation

WORK ON THIS ITEM

£159.29 quoted before markup

Paint · light prep

quote

Ease (face)

quote

Paint. The **Paint** card under the house settings sets the **coats** (2 to start), and a **product** and **colour** for the windows and for the doors — the satin on the sashes and the gloss on the black front door. The product pickers work like a room's: search the ranges, pick a colour band where the range has more than one, or leave it on *Use default (Settings)* for the exterior woodwork topcoat. The colours are the app's ordinary colour fields — type-ahead from the colour library, one-tap picks from colours already on the job — and they show on the Colours tab as *Exterior Windows* and *Exterior Doors*, beside every other area. Primer always follows the exterior primer in Settings.

← Windows & Doors £1,185.34

PAINT — outside faces

Coats 1 2 3

Windows product
topcoat — defaults to the exterior woodwork topcoat in Settings Johnstones Aqu

Colour band ▼ Select colour

Windows colour
White
Also on 1 other area · renaming here changes only this one

Doors product
topcoat — defaults to the exterior woodwork topcoat in Settings Dulux Trade We

Colour band ▼ (no band)

Doors colour
White
Also on 1 other area · renaming here changes only this one

Painted on the timber only: each window's size less its glass, from Rates > Windows & Doors > Paint areas. Litres use the exterior woodwork coverage, and join the exterior woodwork tins on Summary wherever the product and colour match.

Home Measure On Site Summary

The litres are for the **timber only** — a window is mostly glass. Each window starts from its own size (the middle of its size button's range: a Medium window is 0.75 m²) and takes the share of that which is timber: 35% for a casement, 40% for a sash, 25% for a fixed light, plus 2% for each extra pane's glazing bars, up to 60%. So a Medium 6-over-6 sash is 0.45 m² of paint, and a Large one 0.9 m². A door is its leaf less any glass, plus the frame. A bay adds 1.2 m² of its own timber per storey, painted with the windows. That's times the coats, at the exterior woodwork coverage, plus primer. Every figure is under **Rates → Windows & Doors → Paint areas**.

Rates	
Restoration	1.75
PAINT AREAS for litres only — the timber on the outside face, not the whole opening	
Small window m ² of the whole opening (under 0.5m ²)	0.35
Medium window m ² of the whole opening (0.5 to 1m ²)	0.75
Large window m ² of the whole opening (1 to 2m ²)	1.5
X-Large window m ² of the whole opening (over 2m ²)	2.5
Casement timber share of the opening, 0–1 — the rest is glass	0.35
Sash timber share of the opening, 0–1 — the rest is glass	0.4
Fixed timber share of the opening, 0–1 — the rest is glass	0.25
Per extra pane added to the timber share for each glazing bar's worth	0.02
Timber share cap however many panes	0.6
Standard door leaf	1.75
 Home  Measure  On Site  Summary	

The paint goes on Summary in the same **Exterior Woodwork** and **Exterior Primer** rows as any exterior item, using the exterior woodwork product from Settings, so windows and a fascia in the same colour are one lot of tins. It's also on the job spec sheet as its own rows. On a job whose materials list was already made, tap **Recalculate** on Summary to bring it in.

On the quote the whole fixture is **one line**, worded from what's in it — *Exterior windows and doors (outside faces): 5 sash windows, 1 front door. Includes reputty x3, resin repair x1.* (or, with the newer pieces, *...10 sash windows, 3 dormer windows, 1 canted bay, 1 lower ground door, 1 front door.*) — through Summary, the client's quote, Xero and the final invoice. The minutes behind it (see [Rates](#)) go into the job's time like any other labour.

The work report — what was done where, with the drawings — is covered under [On Site](#).

Site notes

Tap the  **button** (bottom left of Measure) any time to jot job notes — access arrangements, things agreed on the doorstep, snags you spotted. Notes save automatically and stay with the job.

J. Smith Decor

2 rooms · 1
ext · kitchen
· fitted unit
· 1 custom

£4,589.61 quote

Costs below are your labour cost, before markup — see Summary for the customer-facing quote.

INTERIOR

Clear



Living Room
5.2×4.1×2.4m ·
2.1d

£634.02






Master Bedroom
4×3.4×2.4m ·
1.5d

£451.25




EXTERIOR

Clear



Front elevation
2.2d

£667.14



KITCHEN



Kitchen
4.4d

£1,324.40



FITTED UNITS

SITE NOTES

Done

Key under the pot by the side gate.
Client happy for spraying in the kitchen.
Crack above bay window needs filling — allowed for in prep.

NH Estimator — User Manual

47 / 124

4. Kitchen cabinet respray

On **Measure**, tap **+** → **Kitchen** to open the dedicated cabinet-spray calculator — one kitchen per job, saved automatically. Once it has anything in it, the kitchen appears as its own priced line in the Measure list and the quote.

The screenshot shows the 'Kitchen' calculator interface. At the top, there's a back arrow, the title 'Kitchen', a quote value of '£1,589.28', a green status dot, and a menu icon. Below this are several sections: 'COATS' with a sub-note '— applies to every item below' and a 'Coat count' selector set to '2'; 'FACES' with a sub-note '— applies to every counted item below' and a toggle for 'Outside faces only' (currently off); 'PREP' with a sub-note '— applies to every counted item below' and a toggle for 'Strip original coating' (currently off). Below these are item count sections: 'DOORS' (10), 'DRAWER FRONTS' (5), 'END PANELS' (2), and 'FILLERS' (empty). At the bottom is a 'LINEAR ITEMS' section with a sub-note '— priced per metre, not per piece'. The bottom navigation bar has four icons: Home, Measure (active), On Site, and Summary.

- **Coat count** (1–4) applies to every item below.
- Tap open **Doors**, **Drawer Fronts**, **End Panels** and **Fillers** and enter how many of each size (Small / Medium / Large / X-Large). Each size has its own base price and per-coat price — tune them in Rates → Kitchen Rates. Each card shows its piece count on the header once collapsed, so you can shut them all and tally the kitchen at a glance.
- **Linear items** — cornices and plinths are priced per metre.
- **Carcass spraying** — toggle on to add a percentage uplift for spraying the cabinet interiors/carcasses.
- **Colour & Product** — pick the paint for the quote and materials list.

Two cards sit above the item counts and apply across everything below them:

Kitchen £938.28 quote

COATS — applies to every item below

Coat count: 1 **2** 3 4

FACES — applies to every counted item below

Outside faces only
Only the front of each piece is sprayed — halves doors, drawer fronts, end panels & fillers. Carcass spraying, cornices/plinths and stripping are unaffected ☒

PREP — applies to every counted item below

Strip original coating
Melamine/existing coating removal before spraying — adds prep time per item, based on the counts below ☐

DOORS 10 >

DRAWER FRONTS 5 >

END PANELS 2 >

FILLERS >

LINEAR ITEMS — priced per metre, not per piece

Home Measure On Site Summary

- **Outside faces only** — for jobs where only the fronts are being sprayed. Turn it on and doors, drawer fronts, end panels and fillers are all priced at **half** — the per-piece prices in Rates are whole-piece, both-faces figures, so half is one face. Carcass spraying, cornices/plinths and stripping deliberately stay at full price (the carcasses are the same surface either way; trim has one face to begin with), and the client's quote line reads "outside faces only" so the scope limit is on their copy too. Off by default, so nothing you've already quoted changes.
- **Strip original coating** — for spraying over melamine. Adds stripping time to every piece counted, at your day rate, worked out from the counts already entered — the line beneath the toggle shows the sum it priced so you can check it before it lands in the total. Off by default and the minutes-per-size are editable under Rates → Kitchen Rates.

5. Fitted units

+ → **Fitted Unit** on Measure — for bespoke built-ins: a bookcase or media unit with open shelving above and cabinet doors below. You can add several to one job, each auto-named "Fitted Unit N" (rename it — "Left alcove", "Media wall unit" — so multiple units read apart on the quote, materials and client view).

Fitted Unit £357.43 quote

UNIT — open shelving & cabinet doors, priced per shelf/bay/door

Name
shown on the quote breakdown, materials & client view — e.g. "Left alcove" Alcove 5

Bays
vertical sections 3

Height per bay
m — one shared height for every bay (fitted units are near-always a single consistent height — say if a per-bay height is ever needed). With depth & the bay widths below, drives the paint litres only 2.1

Depth
m — internal carcass depth, front to back, shared by every bay. Litres then use the real painted area per bay (back + both sides + top & bottom) and per shelf (top & underside), instead of the old flat guesses 0.35

Bay 1 width
m 0.6

Bay 2 width
m 1.2

Bay 3 width
m 0.6

Shelves
total across all bays, fixed area

Home Measure On Site Summary

Unlike the kitchen calculator's flat £ pricing, a fitted unit is priced in **minutes**, like rooms and doors, so it stacks properly into the day-rate maths:

- **Bays, Height per bay, Depth** — one shared height and depth for the whole unit (fitted units are near-always a consistent height); a width input appears per bay, so uneven layouts (a wide TV recess between narrower shelf bays) are no problem.
- **Shelves** — total across all bays, priced as a fixed spray time each (top, underside and front edge in one unit).
- **Cabinet doors** — priced at the interior door rate, **one face** by default (a built-in is normally painted from the front only). **Door size** scales this for cupboard-size ($\frac{1}{2}$) or wardrobe-size ($1\frac{1}{2} \times$) doors, and **Both sides** prices the whole leaf — doubling that unit's

door labour and litres — for units sprayed inside and out. Shelves and bay carcasses are unaffected by either.

- **Prep Level** — Bare/Primed (full prime + 2 coats) or Existing painted (light key-sand + topcoat, no primer bought).
- **Sprayed finish** — off by default; adds the Rates spraying uplift to the litres.
- **Complexity/Masking** — None / +10% / +20%, for recessed lighting, tight bays or electrics to mask off. Stacks on labour time before markup, same shape as the Commercial toggle.
- **Colour & Product** — defaults to your Settings woodwork topcoat.

The **Breakdown** card shows the priced result before markup, same as a room's Preview.

6. Custom line items

+ → **Custom line** on Measure — for one-off items that don't fit any pricing model: "Install panelling — £450", or "Extra sheet of ply — £40 × 2".

The screenshot shows the 'Add Custom Line' screen in the NH Estimator app. At the top, there is a back arrow and the title 'Add Custom Line', with a 'Save' button in the top right corner. The form is divided into two main sections: 'CUSTOM LINE' and 'MARKUP'. The 'CUSTOM LINE' section has a subtitle '— manual description & price, no calculation behind it'. It contains three input fields: 'Description' with a placeholder 'e.g. Install panelling to hallway' and a text input 'Install pane'; 'Unit price' with a subtitle '£ ex VAT, entered directly' and a numeric input '450'; and 'Quantity' with a subtitle 'default 1' and a numeric input '1'. Below these is a 'Line total (ex markup)' field showing '£450.00'. The 'MARKUP' section has a subtitle 'MARKUP' and an 'Apply markup' toggle switch, which is currently turned on. Below the toggle is explanatory text: 'On = joins the quote's commercial/markup calculation like any other line. Off = the price above goes on the quote exactly as entered (margin already baked in)'. At the bottom of the screen is a navigation bar with four icons: 'Home' (house icon), 'Measure' (ruler icon), 'On Site' (wrench icon), and 'Summary' (clipboard icon).

Type a **Description**, a **Unit price** (ex VAT) and an optional **Quantity** (default 1). The **Apply markup** toggle decides how it behaves on the quote: on (the default) joins the commercial/markup calculation like any other line; off, the price goes onto the quote *exactly* as entered — for ad-hoc prices that already have your margin baked in. Custom lines sit in their own section on Measure with a MANUAL tag so they never read as a calculation, are fully editable and swipe-deletable, and flow through to the Summary breakdown, the client-facing Quote view, the Xero quote and the final invoice. No sundries % is added to them either way.


7. Colours

You never have to decide a colour to finish a measure. Every painted surface starts out named after where it is — "Lounge Feature Wall", "Bedroom 1 Main Walls" — so a colour you haven't discussed yet still reads as something you recognise weeks later, instead of as "Colour 3". When the client makes their mind up, you type the real name over the top. Same box, same place, whenever it happens.

Each surface's colour is one free-text field, on the room form under **Paint & Colour** and again on this screen. Type into it and the built-in library of nearly 3,400 colours (Farrow & Ball, Little Greene, Dulux, Dulux Heritage, Paint & Paper Library, RAL Classic, Lick, COAT and Valspar) autocompletes as you go, filling in the brand and code the merchant needs. The search reads the **brand** as well as the name, so typing "lick", "coat" or "valspar" shows you what they do; for the brands whose colours are described rather than numbered it reads the description too, so "charcoal" brings up COAT's The Coal Drop and "anthracite" brings up RAL 7016. Eight matches show at a time, best first. Under each name you get the brand, plus its **No.** where the brand issues one (Farrow & Ball No. 28) or the shade in words where it doesn't (COAT · Charcoal Grey). **Valspar carries the name only** — B&Q tints to the colour's name at the counter, and Valspar's own chart codes come in four formats that don't agree with each other, so a code on the quote would be something nobody can order from. A colour that isn't in the library is fine as free text, and can be saved to the library for next time — including the same name under a second brand. Typing just a **brand** ("lick", "coat") is a way to browse what it does, so the field won't take a bare brand name as a colour — tap one of its colours from the list instead, or type a bit more.

Under the field are **quick-pick chips**: every other colour already on this job, one tap each. That's how a colour used in two places gets shared, so the job buys one tin between them rather than two. Typing the same name twice does the same thing — the second one joins the first rather than making a duplicate.

Menu (≡) → **Colours** is the job-wide view of all of it:

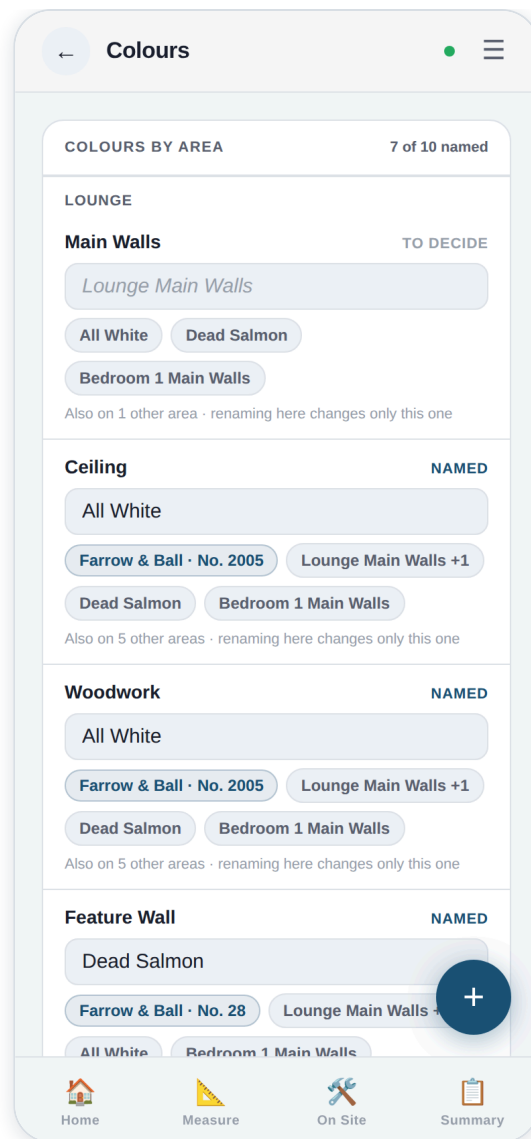

Colours by area lists every painted surface in the job, room by room, each with the same editable field and marked **Named** or **To decide** — so you can see at a glance what's still open and settle any of it from one screen. It's somewhere to look, not a step you have to complete.


Below that, **What to buy** is the ordering view, unchanged: each colour, the rooms and surfaces it covers, and **how much paint to order** — the same calculation Summary uses, so the two can never disagree. Look here, not at Summary, when you're actually buying paint.

Naming a shared colour only changes the one you're on. If six surfaces are all on the same undecided colour and you name one of them, that surface gets a colour of its own and the other five stay as they were — the field says so underneath while it's shared. To put them all on it, tap its quick-pick chip on each, or just type the name again.

8. Price Lookup & Shopping List


Two small tools off the menu, independent of any one job.

 **Price Lookup** searches every sales item in your Xero account by name or code and shows what it actually costs at the till — your **buy** price from Xero, inc VAT, with the ex-VAT figure underneath, which is the number printed on the supplier's price list. It is not your sell price: that has your markup on it, and belongs on quotes, not at the counter. An item with no buy price in Xero says **no buy price** rather than showing £0.00. It's a read-only till check, not tied to any quote:

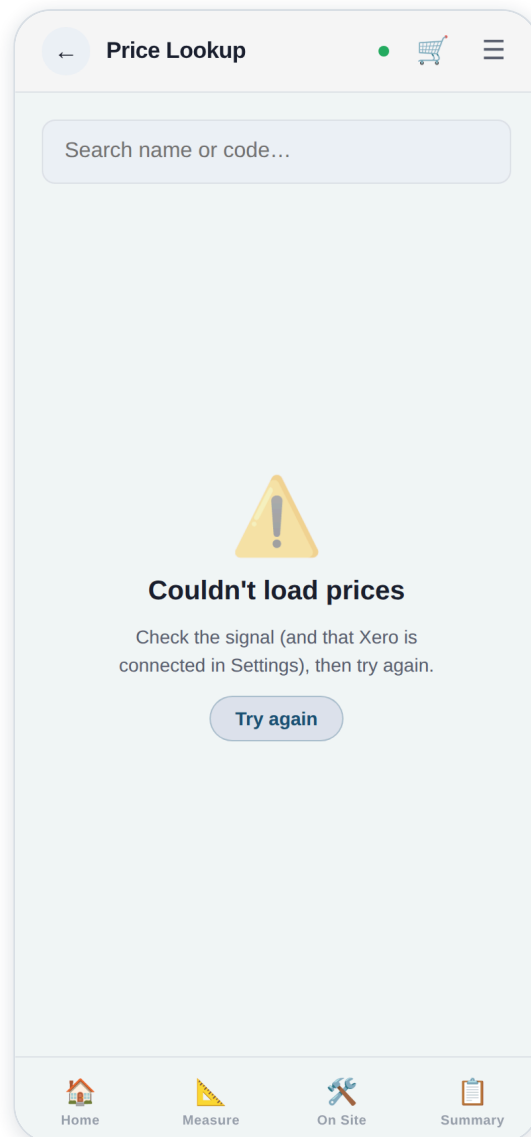

Tap the + on a result to add it straight to your Shopping List.


 **Shopping List** is a persistent, global pick-up list — not scoped to any one job, so a shop run can buy for whatever's on:

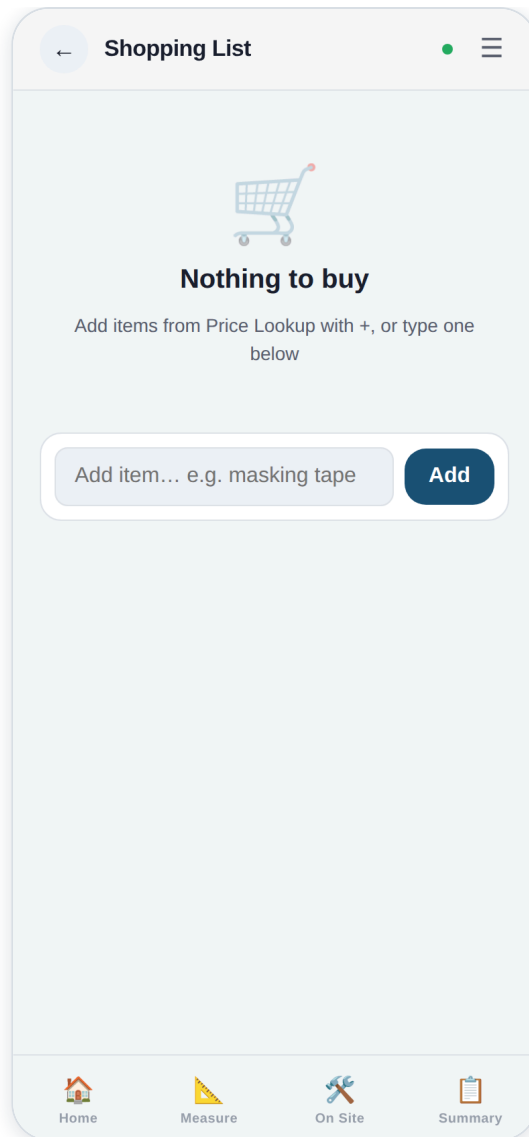

Items arrive from Price Lookup, or type one straight in ("masking tape") for anything that isn't a Xero item. They can also come off a job: tap  **Add to list** on any materials row on **On Site**, or on a materials row on **Summary** — see [Putting materials on the shopping list](#). Tick items off as you buy them and **Clear ticked** to reset for next time; items added from a job's materials carry that job's name as a tag, so the list says why something's on it.

9. The quote (Summary)

Open  **Summary** and the job becomes a priced quote:

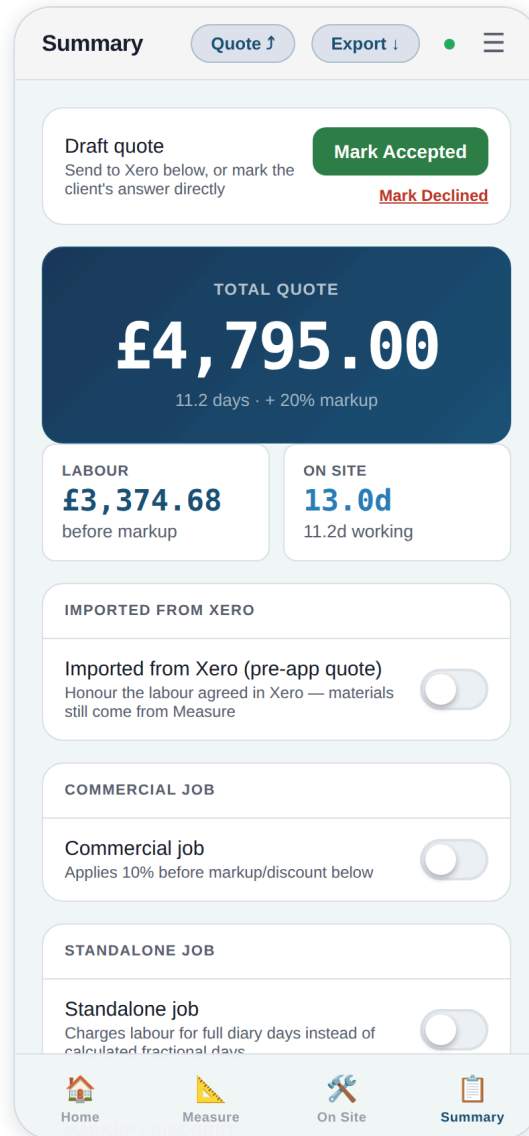

Summary

Quote ↑ Export ↓

Draft quote
Send to Xero below, or mark the client's answer directly

Mark Accepted

Mark Declined

TOTAL QUOTE

£4,795.00

11.2 days · + 20% markup

LABOUR
£3,374.68
before markup

ON SITE
13.0d
11.2d working

IMPORTED FROM XERO

Imported from Xero (pre-app quote)
Honour the labour agreed in Xero — materials still come from Measure

COMMERCIAL JOB

Commercial job
Applies 10% before markup/discount below

STANDALONE JOB

Standalone job
Charges labour for full diary days instead of calculated fractional days

Home Measure On Site Summary


The hero card shows the **total quote**, days on site, and the markup applied. Below it:

- **Labour** (before markup) and **On Site days** at a glance.
- **Imported from Xero (pre-app quote)** — a toggle for jobs originally agreed directly in Xero before this app existed. Turn it on to honour that agreed labour figure as-is instead of the app's own room calculation; materials still come from Measure as normal. It only applies to a handful of jobs, so it isn't shown on every one: it appears automatically on any job already using it and on any job brought in by **Import an accepted quote from Xero**. On an ordinary job you'll see a single line, "**Labour agreed in a pre-app Xero quote?**", in its place — tap that and the toggle appears. Leave it off for anything measured and priced in the app.
- **Commercial job** — a toggle that adds a percentage uplift (default 10%) before markup, for commercial rather than domestic work.

- **Standalone job** — for a job booked on its own, where 1.6 calculated days still blocks out 2 diary days: this toggle charges labour at whole diary days × your day rate (rounding up to a full or half day, per the setting in Rates). It never discounts — if the calculated labour already beats the rounded figure, nothing changes. Both figures stay visible on the quote maths, and the top-up flows through markup, deposit, Xero and the final invoice like any other labour. A job can be commercial, standalone, both or neither.
- **Markup / Discount** — this quote can override your default markup; enter a negative number for a discount.

Scroll further for the full breakdown — every room, exterior item, kitchen, fitted unit and custom line priced, labour subtotal, sundries, markup — followed by the **Materials** list: each paint totalled in litres and converted into tins to buy.

Materials list **one line per product and tin size**, the way On Site has always shown them, with the surfaces that line's tins are for underneath it: *"Lounge Main Walls · 2 · Bedroom 1 Main Walls · 1"*. The same paint in two rooms is one line of three tins, not two lines you can't tell apart. Once every colour on a line has a real name, the name replaces the generic colour band inside the product itself — *"Tikkurila Optiva 5 - Colours 3ltr"* becomes *"Tikkurila Optiva 5 - Farrow & Ball No. 28 Dead Salmon 3ltr"* — on Summary, on the client's quote and in Xero, exactly as it already reads on an invoice. Until then the line keeps the generic wording and the surfaces underneath say what it's for. Editing a quantity on one of these rows takes the change off the **largest colour first**, and never leaves a colour holding no paint at all — a wall missing off the shopping list costs you a second trip, a spare tin doesn't. When the colour you wanted cut isn't the one it chose, **tap the surfaces line** under the product (it reads *► ... · set each*) to open a **box per colour** and set them yourself; the row also opens itself straight after you type a total, so you can always see which colours it landed on. Type a total lower than the number of colours on the row and it holds at one each and says so, rather than deciding for you which wall goes unpainted — put **0** in a colour's own box to go below that. Deleting a row deletes that product, every colour of it.

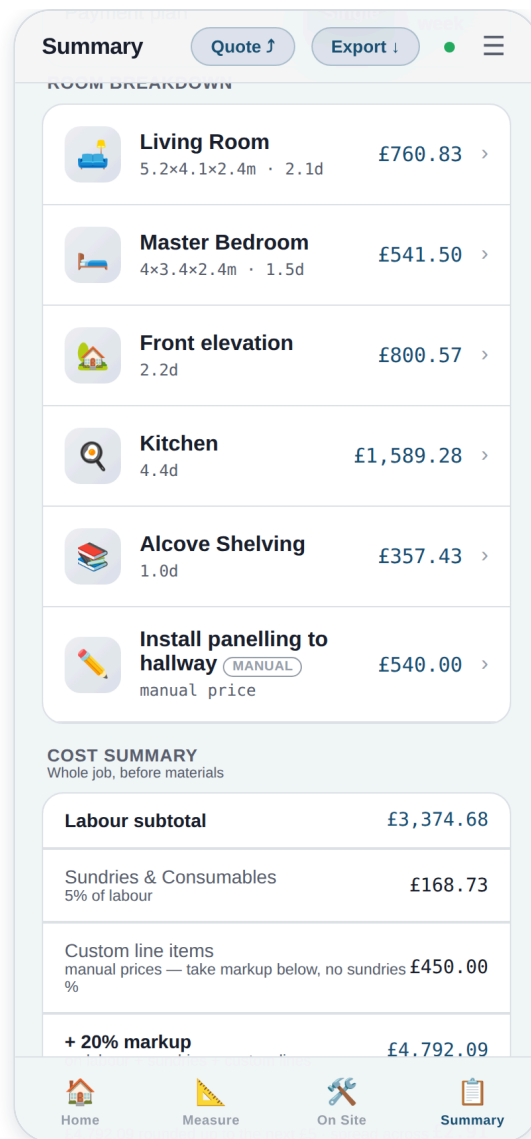

Materials & Undo

Materials are quoted as an estimate and — once the job runs — invoiced as used, so the list on Summary and On Site is the same list throughout a job's life. **Add Material** searches your Xero items (or free-text) for anything the calculation missed — an exterior plastic door, a kitchen, anything you've deleted the calculated line for and are entering by hand. Manually-added lines carry a **Chargeable** switch which is **on by default**, so what you add is on the quote, in the Materials subtotal and in the deposit like any other material. Turn it **off** to keep a line as tracking-only: it stays on your shopping list but is left out of the total, and the card then says how much is sitting there — *"Tracking only — not on the quote"* under the subtotal — so nothing is ever quietly missing off a price. A row you've already added shows **Chargeable** or **Tracking only** as a tag; tap the tag to switch it. **Recalculate** re-pulls the calculated lines from the rooms without throwing away your own additions: anything you added yourself is kept and tagged **"added by you"**, a quantity you've typed over is kept and tagged **"edited"** (with a **reset to N** link if you want the calculation's figure back), and if recalculating would drop something you edited by hand, you're asked first, by name.

Because the materials are an estimate, any quote with chargeable materials carries a note, asterisked against the balance: *"Material costs are estimated and may vary based on final colour and product selection. Any adjustments will be reflected in your final invoice. Significant changes in cost will always be discussed and agreed with you in advance."* It prints under the payment card on the client's quote and its PDF, under the balance on Summary, and at the end of the payment terms on the Xero quote. A labour-only quote doesn't get it.


Primer and topcoat in the same paint. If the woodwork primer in Settings (or a room's own primer pick) is the same product as the topcoat — a self-priming paint used for both — the app buys it once: one extra topcoat coat instead of a separate primer allocation of the same tins. The same goes for exterior woodwork and the windows and doors. The room form's self-priming rows say *primer is the same paint* when that's what decided it.

Almost anything you do to the materials list — recalculating, deleting a line, changing a quantity, adding a line — can be undone. Look for an **UNDO** button on the confirmation message right after the change, ↩ **Undo** at the top of the Materials list, or ↩ **Undo** in the ≡ menu if you missed the moment. It remembers the last 10 changes on the current job; switching job or closing the app starts it fresh.

Once a quote is accepted, its figures freeze

Everything in this app is calculated from your current Rates and Settings — right up until a client says yes. The moment a quote is **Accepted**, the app takes one snapshot of every figure — every room's price, the materials, the totals — and from then on the client-facing views read that frozen record, not a fresh recalculation. So nudging a coverage rate or a day rate next month can't silently move the price on a job someone already agreed to.

Because of that, an accepted job's Summary shows **one set of money**: the agreed one. The total at the top, then the **Accepted quote — Revision N** card underneath it with every line the client agreed, the materials, the deposit and balance **as agreed**, and the two things you can do to it — **Amend** and **History**.

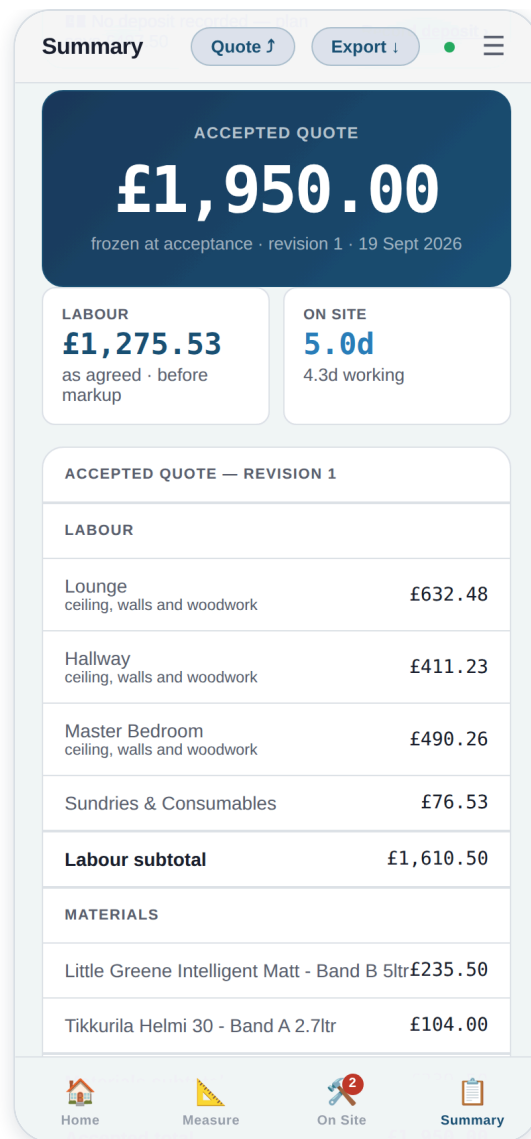

Below that card is the working side of the job: the **Room Breakdown** (where a room's days and per-surface detail live), the **Materials** shopping list, and the colours. Those are today's maths on the same job — you buy paint at today's prices — and a line above them says so.

What's no longer there, and why. Summary used to print today's price of the job beside the agreed one — *"Same job priced today: £X"* — with a rule across the screen marking where the agreed figures stopped, and the pricing controls greyed out with a strip explaining why. All of that has gone. Showing the live figure was how you *detected* a quote silently re-pricing itself, back before the snapshot existed to stop it happening; now that the agreed figures physically can't move, a second total on the same screen was just something to mistake for the first. Today's price is still worth seeing at the one moment it matters — when you're about to re-price the job — and that's where it now lives.

Amending an accepted quote

If the job genuinely needs to change after acceptance, **Amend → revision N+1** on the accepted-quote card opens a sheet showing what the change would mean *before* you commit to it:

Summary

Quote ↑

Export ↓

Tikkurila Helmi 30 - Band A 2.7ltr	£104.00
Materials subtotal	£339.50
Accepted total	£1,950.00
PAYMENT, AS AGREED	
Deposit due on acceptance	£487.50
Revision 2 priced now	£2,170.00 (+£220.00)

WHERE THE £220.00 DIFFERENCE IS

Agreed revision 1	£1,950.00
Same job priced today	£2,170.00 (+£220.00)

AGREED – TODAY

Labour	£1,607.17 → £1,826.64
Materials	£339.50 – unchanged
Rounding & upcharge	£3.33 → £3.86

WHICH LINES MOVED

Master Bedroom +£58.85	£490.26 → £549.11
Hallway +£49.36	£411.23 → £460.59
Sundries & Consumables +£10.45	£76.53 → £86.98

Changed since acceptance: Day Rate 300

At the top: the revision you agreed, and the same job priced now, with the difference between them. Under it, **Where the £X difference is** — labour agreed → today, materials agreed → today, the £5 rounding on its own line, and then **which lines moved**, room by room, biggest mover first.

Underneath that it says whether the Rates page had anything to do with it. Only the settings that actually price a job are checked (the rates, the coverage table, the kitchen rates, the product choices), so exporting a backup or changing a payment plan never reads as a rate change. It also checks **the app's own version**: the rates are only half of what prices a job, and an update that changes how a room is costed will move the figure with nothing on the job touched. Where the build has changed since you accepted, it names both versions — so an unexplained few pounds has an explanation instead of looking like the app inventing money.

The **Commercial job**, **Standalone job** and **Markup / Discount** controls are in this sheet too, because this is the one place they still do anything on an accepted job: they price the revision you're about to write, and the two figures at the top move as you change them. (On a job still being quoted they're where they always were, on Summary.)

Last, a box to say **what changed**, which goes on the revision and is what History shows you later. Nothing is written until you tap **Amend**. The old revision stays on record; nothing is overwritten. Once there's more than one, **History (N revisions)** lists every revision with its date, its total and what each amendment added or took off.

If the amend would absorb extras you'd already flagged as variations, the sheet says so before you commit — see [extra work in a room you already measured](#).

Client-facing quote view

Quote ↑ (top bar, next to Export ↓) opens a branded, read-only one-page quote at customer-facing prices — room by room, colour schedule, payment terms and total, with your logo and business colours. It opens inside the app; tap **Save PDF** and it builds a real PDF file (as many pages as it needs) and hands it to your phone's share sheet — save it, email it straight to the client, or send it to a printer. It works with no signal, so you can produce a quote PDF standing in a house with no bars. It's regenerated live every time you open it, so it never shows stale figures, and doesn't touch Xero at all.

Mostly it's one line per room. The exception is [wallpaper stripping](#), which gets a line of its own — *"Wallpaper Stripping — Back Bedroom"* with the paper type underneath — so the client can see what the labour is for. It's carved out of that room's line rather than added to it, so the total doesn't move, and the same split reaches the Xero quote and the final invoice. Everything else the room needs doing to it (mist coat, prep level, making good) stays inside the room's own price as it always has.

Recording a deposit

Once the job is **Accepted**, the status card carries the deposit line — unless you've turned off **Deposit required** (its own toggle, default on, for jobs that don't want one: a client who always pays, work squeezed in around a bigger job).

Summary [Quote ↑](#) [Export ↓](#) ● ☰

✓ **Accepted**
8/27/2026 · tracked in Materials > [Mark Completed](#)
[Move to Draft](#)

Starts Mon, 7 Sept · 5 days → Fri, 11 Sept
estimate now ~13 days, scheduled 5 [Reschedule](#) [Unschedule](#)

Received **1198.75** **08/27/2026** 📅

Note (option)
Plan says £1,198.75 — record what was **actually paid**, not what should have been.
[Save deposit](#) [Cancel](#)

Agreed figures — revision 1
frozen at acceptance · 27 Aug 2026. Rate changes since then do not move these numbers.
[Amend → revision 2](#)

ACCEPTED QUOTE — REVISION 1

LABOUR	
Living Room	£761.38
Master Bedroom	£541.89
Front elevation exterior	£801.15

Home Measure On Site **Summary**

1. **Record deposit** > — the amount is pre-filled from the quote's deposit figure; correct it to what was really paid, set the date the money arrived (matching your bank feed), add a note if you like, **Save deposit**.
2. **Sync to Xero** — creates it in Xero as Receive Money → Received as Prepayment, against the bank account chosen in Settings. **Don't also enter it in Xero yourself** — doing both double-counts the money against your bank feed.
3. **Apply it to the invoice in Xero** when you raise the invoice, exactly as before — the app can't do this step, since Xero won't let a payment be applied to a still-draft invoice.

The line then shows where things stand — *not in Xero yet*, *in Xero · unallocated*, or *in Xero · allocated* ✓ — read back from Xero, which stays the boss: void or delete the deposit there and the app notices and stops saying it's synced. A failed sync loses nothing — the deposit stays recorded, the line turns red with the reason, and **Try again** is safe. Fixing a mistake (a typo, a refund) is done in Xero, not here — the app never edits or deletes a deposit that's already landed.

The quote description

Under the breakdown sits the **Quote description** — the wording that rides the **first line item** on the Xero quote, and describes that line. It's written for you from the job: the app picks the wording template that fits the work (Painting, Wallpapering, Kitchen Cabinet Spraying and so on — all editable in **Settings → Quote & Invoice Text**), fills in your products and coats, and puts it in future tense for a quote and past tense for the final invoice.

A job with **both rooms and exterior items** gets the **Interior & Exterior** template, which has an INSIDE half and an OUTSIDE half — so a client reads the promise about their furniture and flooring *and* the one about their windows, doors and landscaping, instead of only the indoor one.

It says what you actually measured. Quote only the walls and it won't promise ceilings and woodwork. Measure a feature wall, panelling, radiators, window sills or a mist coat on new plaster and each one gets named — with its own product if you gave it one:

Ceilings finished in Tikkurila Anti Reflex 2, walls in Tikkurila Optiva 5, the feature wall in Farrow & Ball Estate Emulsion, and all woodwork including skirtings, window sills and radiators in Tikkurila Helmi 30, each applied in 2 coats. Existing wallpaper will be stripped from the walls prior to decoration. Newly plastered walls will be mist coated prior to finishing.

The two prep sentences at the end appear only where you ticked them, and in the order the work happens — [strip](#) first, then the mist coat.

A papered feature wall isn't listed as painted — it moves to the wallpapering line instead, which names what's being papered.

A job with no painting at all still gets described. Strip a room out and paint nothing, and the description is the stripping — not an empty paragraph under a heading about painting.

The number of lengths fills itself in too. The wallpapering paragraph's [X] is now {lengths} — the strips being hung across the job. See [Wallpaper](#). With no paper measured it goes back to [X] for you to fill in, exactly as before.

If you've edited your templates, two placeholders are new and your copy won't have them — `settings.textTemplates` takes a copy of the whole set the first time you edit any of it, and never re-reads the built-in ones.

- **{stripped}** — the wallpaper-stripping sentence. It rides `{surfaces}` in every template that has one, so those pick it up with no work from you. The **Wallpapering** template is the exception (no `{surfaces}`, because nothing is painted), so it carries `{stripped}` on its own line under PROTECTION & PREPARATION. **Don't put {stripped} in a template that already has {surfaces}** — the quote would say it twice.
- **{lengths}** — the number of lengths, in **Wallpapering** and **Painting & Papering**: replace the `[X]` in *"[X] lengths of [paper name/supplier]"* with `{lengths}`.

Add whichever you want by hand, or use **Reset all** to take the new defaults (which loses your other edits). Leave them out and nothing breaks — you just keep typing those bits yourself, as you do now.

It never states a paint the job doesn't use. It's a whole-job sentence, so woodwork measured in one room puts woodwork in the wording for the job — and where the rooms use *different* paints on the same surface, every one of them is named rather than whichever room came first:

Ceilings finished in Tikkurila Anti Reflex 2, walls in Tikkurila Optiva 5 and Dulux Diamond Matt, and all woodwork including skirtings in Tikkurila Helmi 30, each applied in 2 coats.

Only rooms that actually paint a surface get a say — an old product left on a room with no wall coats doesn't count as a second paint — and a surface no room paints at all keeps your Settings default. Coats work differently, because there's nothing to list: where the surfaces disagree, no coat figure is stated rather than a wrong one. Type the detail into the box yourself whenever you'd rather spell out which room gets which.

It describes one line, and every other line says what *it* is having. Each Xero line carries its own price, so the block opens *"Painting of Lounge:"* and describes the Lounge — not a list of every room in the job on a line priced for one of them. The protection and completion paragraphs are true of every room, so they appear once and the later lines just point back at them. Here are the Xero line descriptions the app writes, one after the other:

Painting of Lounge:

[protection · the Lounge's scope · completion]

Kitchen - same as above

Bedroom 1 - same as above

Bathroom

Ceilings finished in Tikkurila Anti Reflex 2 and walls in Tikkurila Optiva 5, each applied in 2 coats.

Preparation and completion as above.

W.C.

Walls in Tikkurila Optiva 5, applied in 2 coats.

Preparation and completion as above.

The first line isn't labelled twice. The block already opens by naming the room it sits on, so the room name is no longer put above it as well — that line used to read *"Lounge"*, then *"Painting of Lounge:"* one line below it. The label is still added wherever the block *doesn't* name the line: your own edited wording that never mentions the room, an exterior template with a fixed heading, or a line the block has moved onto because you dropped the room it was written for.

"Same as above" now means exactly that — same as the first line. A room matching it collapses, so identical bedrooms stay tidy and the detail appears only where a room genuinely differs. Your own client quote view gets the short version under each room name: *"ceiling, walls and woodwork"*, *"walls"*.

The box is editable: type in it and your version sticks from then on (↺ **Reset to template** goes back). **Editing it also turns the per-room lines off** — once the wording is yours, the app stops adding sentences underneath it that you didn't write and can't edit; every other line goes back to "same as above". Sending stamps the exact wording onto the quote, so a document you've already sent never changes underneath you. Sending doesn't count as editing, though — **Update quote in Xero** keeps each room's own lines exactly as the first send wrote them.

Exterior items get the same treatment, from what you measured on them — render (textured or not), fascias and soffits, windows, sash windows, doors, garage doors, a porch — with repairs and restoration noted where you've logged any. Each exterior line compares against the other *exterior* lines, so it only carries text where it genuinely differs from them.

Fitted units describe themselves too — *"Fitted units including 3 bays, 9 shelves and 4 doors painted both sides in Tikkurila Helmi 30, applied in 2 coats. Bare surfaces will be primed first."* — with the product coming from the unit's own picker (or your Settings woodwork topcoat) and the priming note following each unit's **Bare / Already painted** setting. The **kitchen** fills in its coat count; its product and colour aren't tracked in the app, so those stay as [product] and [colour/finish] markers for you to type over, along with the fitted units' [spray/brush] and the wallpaper templates' [paper name/supplier] .

On the Xero quote, the kitchen and fitted-unit *lines* still read "same as above" under the block — only rooms and exterior items get a per-line scope sentence.

If you've edited your templates in Settings, your saved copies keep whatever wording you gave them. To pick this up, put {surfaces} where the scope sentence should go (and {papered} where a wallpapering line names what's being papered) — or use **Reset to defaults** to take the supplied templates back.

Sending to Xero

Expand the **client panel** at the top of Summary:

1. **Client name** — start typing and existing Xero contacts autocomplete; picking one fills phone, email and address into blank fields only (anything you've already typed wins). **Sync to Xero** pushes the app's details the other way.
2. **Street address** autocompletes as you type; picking a suggestion fills street, town and postcode.
3. Add a **Reference** if you use them.
4. Tap **Send to Xero**. The quote is created in Xero, ready to send to the client from there, and the job's status becomes **Quoted**.

If you edit the job afterwards, the button becomes "**Update quote Q-*nnn* in Xero**" so re-sending updates the *same* quote — with a "Send as a NEW quote instead" option when you genuinely want a second version. Answers given in Xero flow back into the app when you next open it; an answer given in the app always wins.


When the client answers

- **Mark Accepted** — the job moves to Accepted (syncd to Xero), its figures freeze (see above), and scheduling and On Site tracking unlock.
- **Mark Declined** — the job files itself away under Declined.


Quotes that sit unanswered longer than your "chase quotes after" setting (default 14 days) pop up on Home so nothing slips.

10. Jobs

Menu (≡) → **Jobs**. The app holds any number of jobs; the one you're working on is marked **CURRENT**, and everything on Measure, Kitchen, Summary and On Site belongs to it. Tap another job to switch. Rates and Settings are global — they apply to every job.

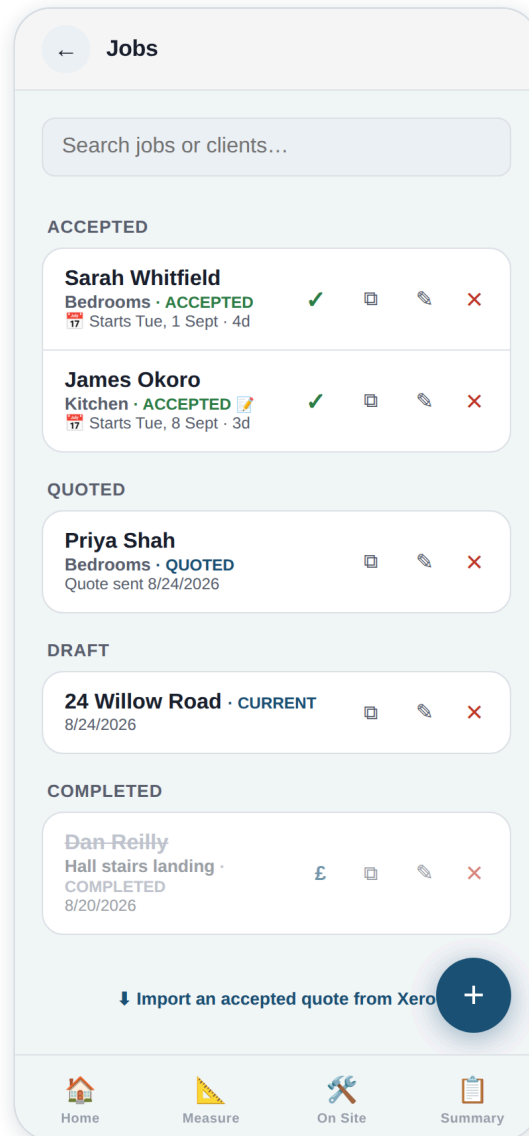


- **The client's name is the top line** of each row, with the job name and its status underneath — job names repeat ("Bedrooms" three times over), people don't. A job with no client saved shows its name on top instead; the client comes from the **Client** details on Summary's Xero panel.
- **Search** (top of the screen) filters every group as you type: client name, job name, calendar title, or a Xero quote/invoice number off a piece of paper. Several words all have to match, but not in the same field — "priya bedrooms" finds it. A count and a **Clear** link sit under the box, and the search resets each time you open the screen.

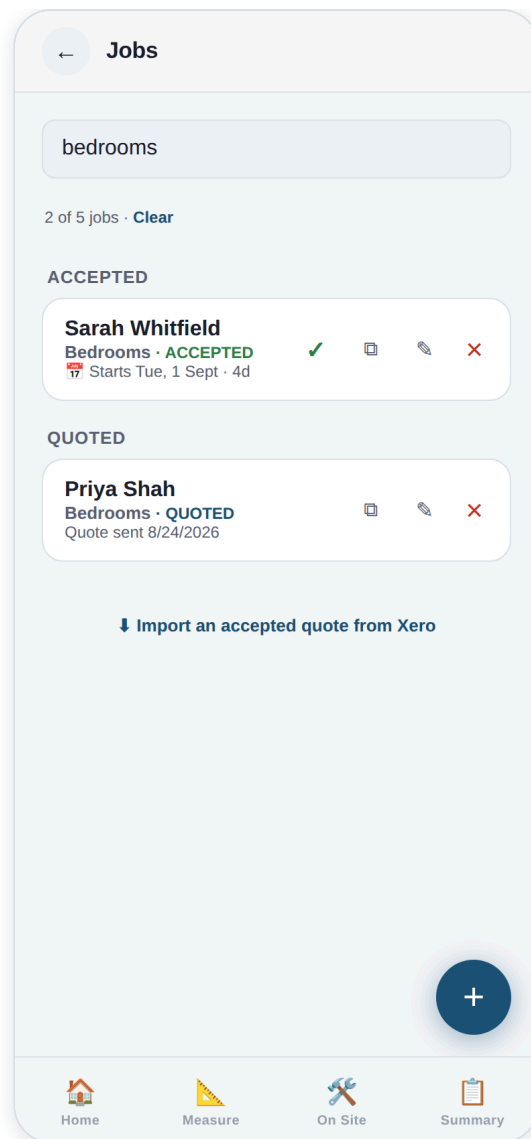

- Jobs group by status: **Draft → Quoted → Accepted / Declined → Completed → Invoiced.**
- **Recently invoiced** sits just above the Invoiced group: up to three jobs invoiced in the last 60 days, each with what was invoiced, whether it came in on, under or over its quoted days, and the markup banked on materials. Tap one to open its Summary and the full **Job Profitability** card. It's hidden while you're searching.
- **+** starts a new job. **✎** renames one. **📄** duplicates a job as a quick template (notes aren't copied). Each job is fully separate — its own rooms, kitchen, colours and materials.
- **Import an accepted quote from Xero** — took the job on before the app existed? Import the Xero quote and it becomes a job here, with the agreed price as the record (adjustable via the **Agreed figures** card, or the **Imported from Xero** toggle on Summary — see [The quote](#)). If a listed quote actually belongs to a job already in the app, use **"Already a job in the app? Link it >"** instead of importing a duplicate.

11. Schedule


Menu (☰) → **Schedule** — or tap **Schedule** > on an accepted job's Summary, which offers the next free slot automatically.

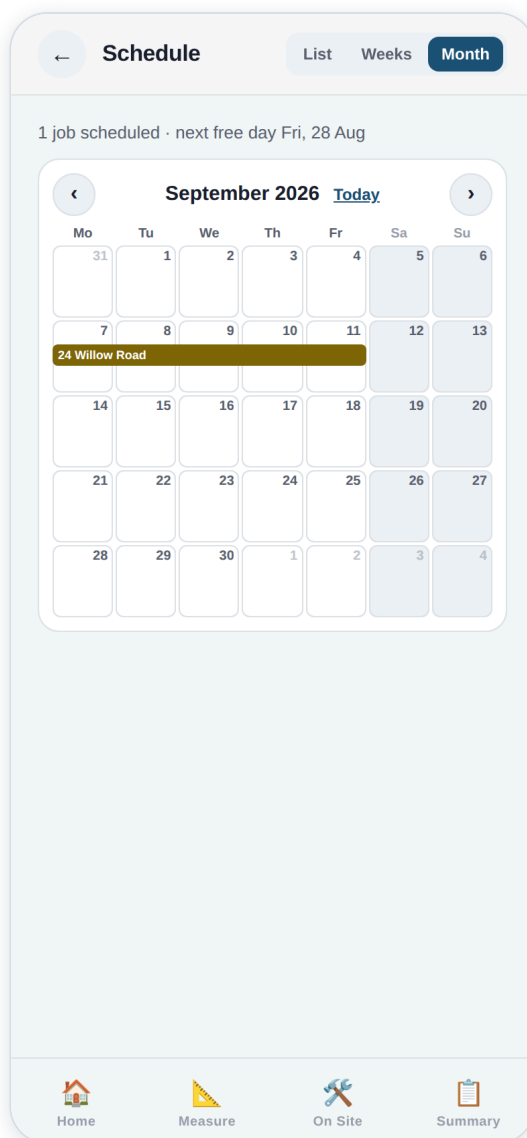

- Switch between **List**, **Weeks** and **Month** views. Jobs appear as coloured bars across their booked days; UK bank holidays are marked, and weekends are greyed out unless you've turned on **Work Saturdays** in Rates → Scheduling.
- **Tap a job's bar** → Open job, **Move start date** (then tap the new day), or **Unschedule**.
- **Tap an empty day** → start a job there, or **block days** for holidays and time off.
- The header tells you your **next free day** at all times.
- **What a job is called on the calendar:** entries read **client — job name — calendar title**, skipping anything the others already say. So a Kitchen job for Lauren Lowe reads "Lauren Lowe — Kitchen" whether or not you typed a calendar title, and an older job still named "Lauren Lowe - Kitchen" doesn't say her name twice. The client comes from the job's **Client** details (Xero panel on Summary) — if a job has no client saved, the entry is just the job name.

Blocking days off

Holidays, a day at the dentist, a week's decorating on your own house — tap the day and the sheet opens with the day's own actions first:

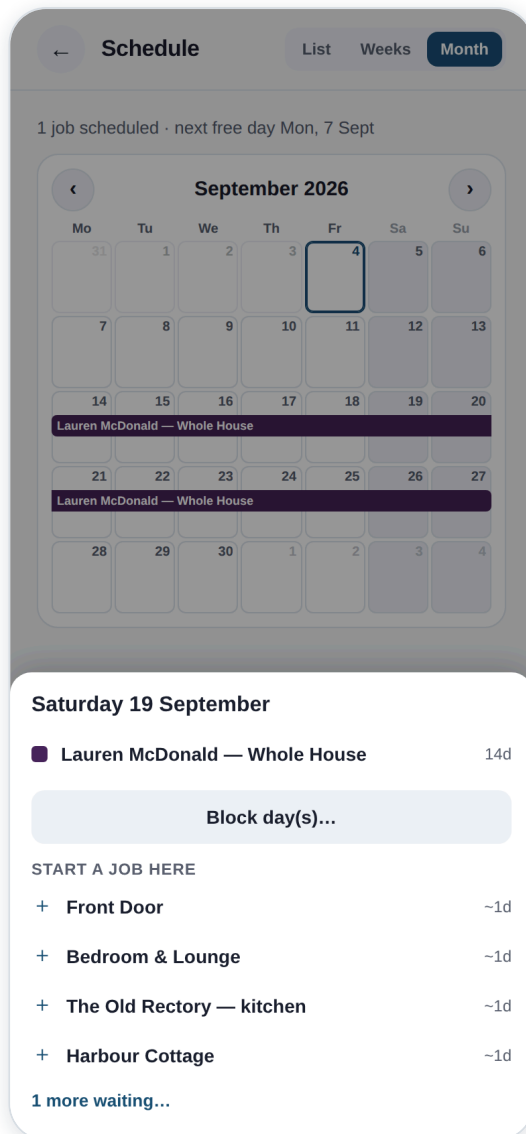

- **Block day(s)...** is offered on **every day from today onwards** — including Saturdays, Sundays and bank holidays. Your usual week may have those off, but a job set to *+ Saturdays* or *Every day* works them, and a block is the one thing that override never beats. The picture above is exactly that: a Saturday in the middle of a whole-house job.
- It takes a range: the day you tapped → an end date (the same day, for a single day off), plus an optional label such as *Holiday*. The day you tapped is always blocked. Days merely swept up in between are blocked only if you'd have been working them anyway — a weekend in the middle of a fortnight off is already off, so it isn't cluttered with a chip, unless a job was booked across it.
- Blocked days draw as a dashed grey bar across the calendar, are never offered as a start date, and booked jobs stretch **around** them. Your phone calendar feed agrees, so a blocked fortnight is a gap there too.
- Tap a blocked day for **Unblock this day**, or **Unblock all N days** to clear the whole run in one go.

- **Start a job here** lists the accepted jobs still waiting for a date, four at a time — tap **N more waiting...** for the rest. Blocking stays at the top of the sheet however many are waiting.

A one-off day out of the ordinary, without changing anything globally: tap the day itself → **start a job here** (or move a job there), and the confirm tells you what switches on — a Saturday turns on "Saturdays for this job only", a Sunday or bank holiday turns on "Every day for this job only". From an accepted job's own **Schedule** > form, the same idea is the **Days worked** picker (Usual / + Saturdays / Every day), which switches itself if you pick such a start date. Automatic slot suggestions still only ever offer your usual working days, and your own blocked days always win.

See jobs in your phone calendar: Rates → Scheduling → turn on **Calendar feed**, then tap the link to copy it and subscribe in your calendar app. Booked jobs then appear alongside everything else in your life.

12. On Site — running the job

Once a job is accepted, the 🚧 **On Site** tab is your day-to-day companion:

The screenshot shows the 'On Site' mobile app interface for a job titled '24 Willow Road'. At the top, there's a header with 'On Site' and an 'Invoice >' button. Below the header, a status bar shows 'Accepted' with a green checkmark, a calendar icon, 'Mon, 7 Sept · 5d', and a 'Mark Completed' button. A table displays financial data: 'Estimated' (£0.00), 'Actual (so far)' (£0.00), and 'Variance' (£0.00), with a note 'Everything ticked off'. The 'TIME ON SITE' section shows 'No days logged yet · estimated ~13 on site' and a '+ Log today (full day)' button, with a link to 'Log a different day'. The 'MATERIALS' section states 'No materials yet. Recalculate the snapshot on Summary, or add what you bought below.' The 'ADD MATERIAL THE ESTIMATE MISSED' section has input fields for 'Product' (with a search button), 'Description' (with an example 'e.g. Extra r'), and 'Colour' (with a dropdown menu set to 'No colour'). At the bottom is a navigation bar with icons for 'Home', 'Measure', 'On Site' (active), and 'Summary'.

- **Estimated vs Actual** — the card at the top tracks what the materials are really costing against what you quoted, with the variance.
- **Time on Site** — tap **+ Log today (full day)** at the end of each day (or *Log a different day* to back-fill). This builds the true labour record for the job.
- **Materials** — the quote's materials list becomes a shopping list. Tick items off as you buy them, and correct quantities/prices to what you actually paid — see [Materials & Undo](#) for how edits and Recalculate interact, and Undo if something goes wrong. Any row here can also go on your **Shopping List**, or the whole list can go to your merchant with ✉ **Send to supplier** — see below.
- **Add material the estimate missed** — extra sundries or a forgotten tin: search the product, set the price, done.

- **Variations** — the client asks for "just one more room" mid-job? Add the room (or exterior item, fitted unit) on Measure and flick its **Variation** toggle, in the **Room Details** card at the top of the form, with the room's name (it only appears once the quote has been accepted, and on a new room added after that it starts **on** — turn it off if the room is a correction to the original quote rather than extra work):


The screenshot shows the 'Add Room' form. At the top, there's a header with a back arrow, the title 'Add Room', and a 'Save' button. Below this is a section titled 'ROOM DETAILS'. It contains a 'Room Name' field with the text 'Utility Room'. Below that is a 'Staircase / HSL' section with a toggle switch that is currently off. Below that is a 'Variation' section with a toggle switch that is currently on. The 'Variation' section has a description: 'Extra scope on top of the accepted quote — listed under On Site > Variations. Turn off if this is a correction to the original quote'. Below the 'ROOM DETAILS' section is a section titled 'DIMENSIONS'. It contains a 'Room shape' section with three options: 'Standard' (selected), 'Perimeter', and 'Segments'. Below this are three input fields: 'Length' (0), 'Width' (0), and 'Ceiling height' (2.4). At the bottom of the 'DIMENSIONS' section is a 'Sloped ceiling' section with a toggle switch. The bottom of the screen shows a navigation bar with four icons: 'Home', 'Measure', 'On Site', and 'Summary'.

It's priced with the same engine but kept separate from the accepted quote, and appears in its own Variations card here. Each variation carries a status — tap ✓ **Approved by client** to record their yes (with an optional note; the date is stamped automatically), or mark one Declined to drop it from the totals and the final invoice while keeping the record. Anything still Pending gets called out before the final invoice will let it through. For extra work added *inside* a room you already measured, see [below](#).

- **Spec sheet** — what's being done in every area, what colour each thing is going, and how far through it is. Tick Prep and Painted off as you go. See below.
- **Snags** — the punch list for the job, above everything else once there's something on it. See below.
- **Invoice** > (top right) shows the materials list formatted for invoicing, with a **Copy** button.

Putting materials on the shopping list

This is the screen you have open standing in the room, so it's the one that answers *"do I still need to buy this?"* — and every materials row carries a  **Add to list** chip, the quoted tins as well as the sundries you added yourself. Tap it and the product goes on your **Shopping List** with its price and this job's name, and the chip changes to ✓ **On list**:

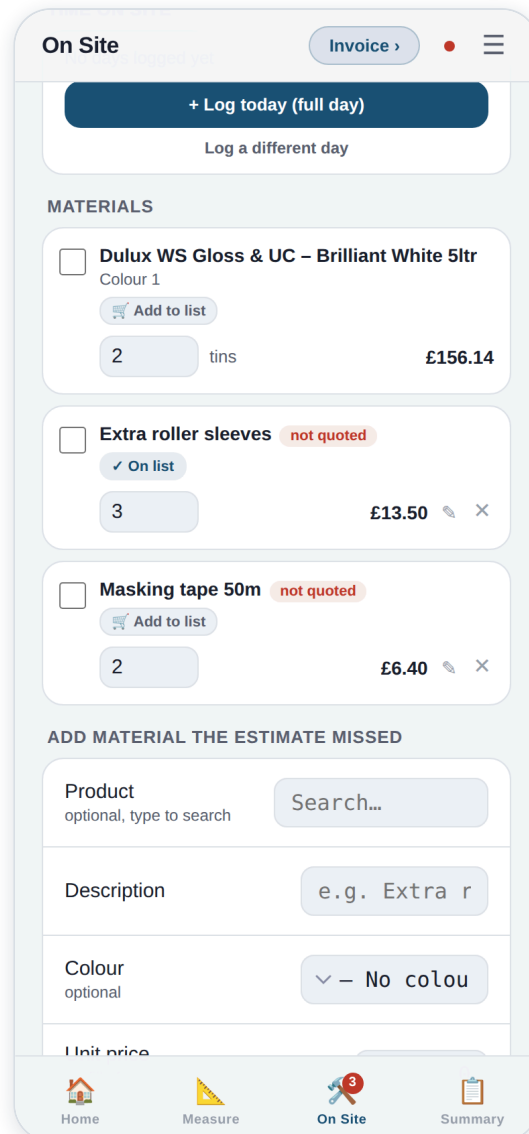

The screenshot shows the 'On Site' app interface. At the top, there's a header with 'On Site' and an 'Invoice' button. Below the header, there's a button '+ Log today (full day)' and a link 'Log a different day'. The main section is titled 'MATERIALS' and contains three rows of materials:

- ☐ **Dulux WS Gloss & UC – Brilliant White 5ltr**
Colour 1
 **Add to list**
2 tins £156.14
- ☐ **Extra roller sleeves** not quoted
✓ **On list**
3 £13.50  
- ☐ **Masking tape 50m** not quoted
 **Add to list**
2 £6.40  

Below the materials list, there's a section titled 'ADD MATERIAL THE ESTIMATE MISSED' with a form to add new materials:

- Product** (optional, type to search)
- Description**
- Colour** (optional)
- Unit price**

At the bottom, there's a navigation bar with four icons: Home, Measure, On Site (active), and Summary.

It's per row and never automatic — plenty of what's on a job is already in the van. Summary's materials list has the same chip on the quoted lines, and either route lands on the same list: one line per product, no duplicates however many times you tap, and both job names on it if two jobs need the same thing. Paint sold by the litre goes on **without a price**, because the figure on the row is a price per litre, not what a tin costs at the till. Ticked something off in the shop and then ran out? Tap the chip again and it goes back on the list.

Sending a materials order to your supplier

When you'd rather the merchant delivered (or had it ready to collect) than go round the shop yourself, tap  **Send to supplier** at the top of the On Site materials list. It builds an order from the job's calculated materials and opens it as a ready-written email in your phone's mail app.

This is separate from the [Shopping List](#), which is for when you're standing in the shop — and there are **no prices anywhere on it**.

- **Jobs** — the job you came from is ticked. Tick any other accepted job to put its materials on the same order: the same product and size on two jobs becomes one line with the quantities added together, exactly as On Site groups them.
- **The lines** — every line is ticked to start with. Paint reads with its **real colour in place of the colour band** (*Optiva 5 - Dead Salmon 3ltr*, not *Optiva 5 - Colours 3ltr*), the same as your invoices. A product covering two colours gets the split in brackets in the email, so the merchant knows how many to tint of each. Use – / + to change a quantity for this order only — the job's own materials don't change.
- **⚠ no colour set** — a line whose colour is still just a room name (nobody has picked the colour yet) is flagged, and a banner above the Send button counts them. It won't stop you sending; the email just shows the colour band for that line.
- **Extra item** — anything the calculator doesn't produce (caulk, tape, filler): type it, set a quantity, **Add**. Extras belong to this order only.
- **Already ordered** — a line you've ordered before starts **unticked** and says so: *Ordered · Brewers · 24 Sept*. Tick it again if you really do want more. If only one of the jobs on the order has had it, it starts ticked at the other job's quantity.

- **Needs more since you ordered** — add a room after ordering and the job may now need more than you sent. That line says so — *Ordered 3 · now needs 5 · Brewers · 24 Sept* — and starts **ticked at just the difference** (2), so the next order tops it up. Ordering more than the calculation (spares) never gets flagged.

Then choose the **supplier** and how it's arriving:

Send to supplier

Decorators caulk extra 3 ×

Extra item... e.g. decorat 1 **Add**

SUPPLIER

▼ Brewers

DELIVERY

Collect **To site** To home

Delivery address this order only

12 Ermine Street, Huntingdon, PE29 1AA

Delivery notes optional

Leave in the porch, gate code 1234

Required by optional 10/02/2026 📅

⚠ 1 line has no colour set — the email will show the colour band instead.

Send to Brewers

Copy order text


Home Measure On Site Summary

- **Collect** — no delivery address; the email names the supplier's branch and its address from Settings.
- **To site** — fills in the job's address. With more than one job on the order, pick which job's address it goes to.
- **To home** — fills in your home delivery address from Settings (or your business address if that's blank).

It starts on **To site** for one job and **To home** for several. The address box is editable for this order only — nothing you type there changes the job or Settings. **Delivery notes** (where to leave it, a gate code) and **Required by** are optional; anything left empty is simply left off the email.

Tap  **Send to [supplier]** and your mail app opens with the email ready — subject *Order: [business name] (Acc [account number])*, the lines, your account number, the job names as the reference, the delivery details, and your name, business name and phone to sign it off. Check it and send it from there. No mail app on this device? **Copy order text** copies the email so you can paste it anywhere.

The app can't see whether you actually pressed Send in your mail app, so when you come back it asks:

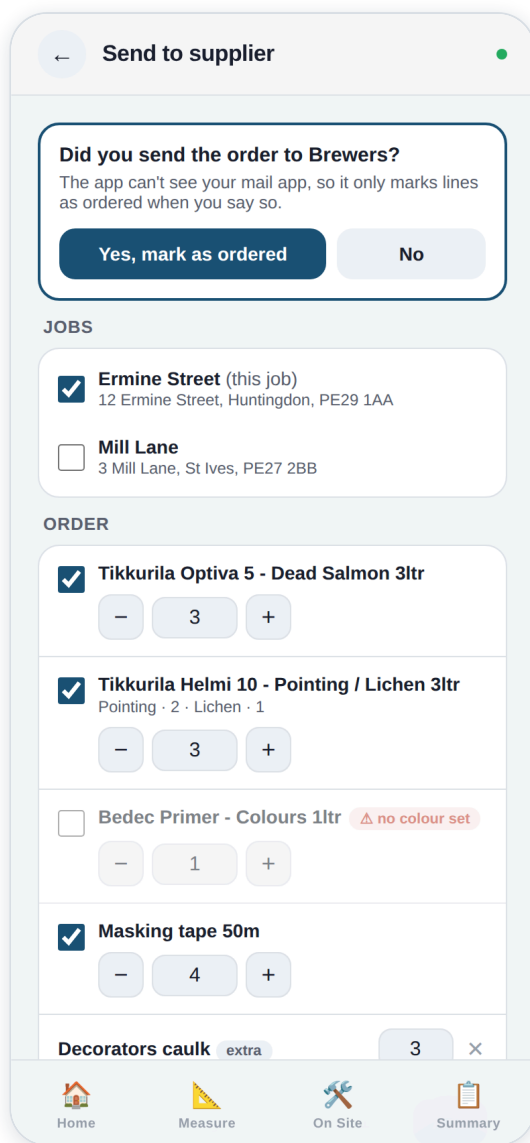

← Send to supplier

Did you send the order to Brewers?
The app can't see your mail app, so it only marks lines as ordered when you say so.

Yes, mark as ordered No

JOBS

☒ **Ermine Street** (this job)
12 Ermine Street, Huntingdon, PE29 1AA

☐ **Mill Lane**
3 Mill Lane, St Ives, PE27 2BB

ORDER

☒ **Tikkurila Optiva 5 - Dead Salmon 3ltr**
- 3 +

☒ **Tikkurila Helmi 10 - Pointing / Lichen 3ltr**
Pointing · 2 · Lichen · 1
- 3 +


☐ **Bedec Primer - Colours 1ltr** ⚠ no colour set
- 1 +

☒ **Masking tape 50m**
- 4 +

Decorators caulk extra 3 ×

Home Measure On Site Summary

Yes, mark as ordered logs the order and marks its lines as ordered on each job it covered. **No** logs nothing. After a Yes, if you left any lines unticked that still haven't been ordered, you're offered  **Add unordered to shopping list** — one tap puts them on your Shopping List with each job's name on them, or close the card to skip it:

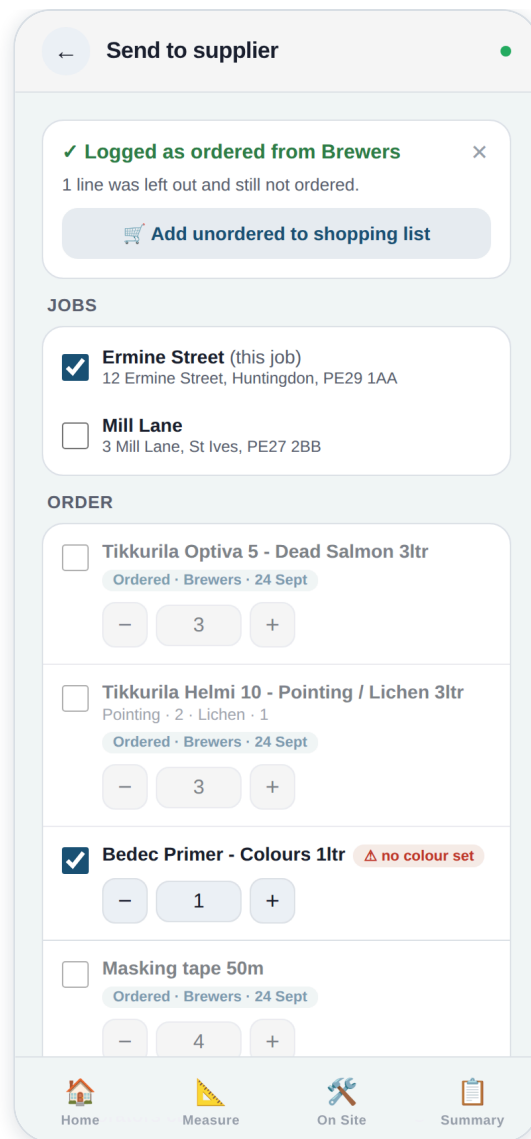

Every order a job was part of is listed under **Orders** on its On Site screen — supplier, date, how it's arriving and how many items. Tap one to read the email exactly as it went. Orders can't be edited or re-sent from there. Ordered rows on On Site also carry the *Ordered · supplier · date* label (or *Ordered 3 · now needs 5* if the job has grown since).

Tapped **Yes, mark as ordered** by mistake? Open the order under **Orders** and tap **Delete this order**. Its lines go back to not ordered — on every job the order covered — so the next order includes them again. It only removes the app's record; the email itself is still in your mail app's Sent folder.

Works without signal: the order is saved on the phone and syncs when you're back online (the order shows *waiting to sync* until it has). Another job's materials can only be added offline if that job has been opened on this phone before.

The spec sheet — what's going where, and how far through

On site the questions are small and constant: *which walls am I painting in here, what colour is the radiator going, what have I still not touched*. All of it was already in the app — just spread across the room screen, the Colours tab and the materials list, which are screens for putting numbers in, not for looking things up with a brush in your hand.

The **Spec sheet** puts the answers on one screen, and lets you tick them off. It sits on On Site next to Snags, headed with how much is still outstanding:

On Site

Invoice ›

12 Ermine Street

✓ Accepted

Mark Completed

SPEC SHEET (13)

Open ›

Prep 3/13 · Painted 1/14

Estimated

£0.00

Actual (so far)

£0.00

Variance

£0.00

Everything ticked off

TIME ON SITE

No days logged yet

+ Log today (full day)

Log a different day

MATERIALS

No materials yet. Recalculate the snapshot on Summary, or add what you bought below.

ADD MATERIAL THE ESTIMATE MISSED

Product

optional, type to search

Search...

Description

e.g. Extra r

Colour

optional

▼ – No colou

Home

Measure

On Site

Summary

Tap **Open** and you get the whole job, area by area:

Spec sheet
13 outstanding · Prep 3/13 · Painted 1/14 Done

By room **By stage** **Fold all**

Find a room, surface or colour

LOUNGE 5 open ▾

Panelling 2 coats
Farrow & Ball No. 2005 All White
Fill and sand. Caulk joints. Mask adjoining surfaces.
☒ **Prep** Fri, 18 Sept · via link ☐ **Painted**

Woodwork 2 coats
Farrow & Ball No. 2005 All White
Including skirtings, door frames, doors, window frames and sills
Primer
☐ **Prep** ☐ **Painted**

Radiators
Farrow & Ball No. 2005 All White
Clean and key. Mask the wall and pipework.
☐ **Prep** ☐ **Painted**

Walls (excl. feature wall) 2 coats
Farrow & Ball No. 28 Dead Salmon
Mist coat
☐ **Prep** ☐ **Painted**

Feature wall 2 coats
Farrow & Ball No. 79 Card Room Green
Fill and sand. Tape switches, sockets and edges.
☐ **Prep** ☐ **Painted**

Ceiling 2 coats

Every row is one surface in one area, in the order you'd actually work a room — **ceiling**, **panelling**, **woodwork** (with what it includes, and **radiators** right under it), **walls**, and the **feature wall last**. The colour is the biggest thing on the row, because it's the thing you came to look up. Under it sits the product and the prep, and under that the two boxes.

It's built from the job, not typed twice. The rows come from your rooms, exterior items, kitchen, fitted units and custom lines every time you open it, so they can't drift from what you've actually measured. Rename a colour on the Colours tab and the sheet says the new name straight away. A surface with no coats on it simply isn't there. Nothing on this screen can be edited except the ticks — colours, coats and prep are changed where they live, so there's only ever one place to change them.

No prices anywhere on it — not on the screen, not in the PDF, not on the shared link. It's a working document, not a quote.

Ticking it off

Two boxes per row: **Prep**, then **Painted**. They're independent — tick Painted without Prep if the prep was done last week or there wasn't any, or tick Prep on its own. Each one keeps the date you ticked it.

- **Prep** strikes through the prep line. The row is still open — half done is not done.
- **Painted** clears the row: struck through, dimmed, and dropped to the bottom of its area. It stays on the list, because at the end of the job the list *is* the record of what got done. Untick anything and it goes straight back where it was.

Cleared rows sink to the bottom of their area and cleared areas sink to the bottom of the sheet, exactly like snags — so three weeks in, what's left is at the top. One thing worth knowing: that beats the working order, so a feature wall you haven't touched sits *above* a ceiling you've finished. It's last in the room's sequence, not last on the screen.

Papered surfaces and custom lines get one box, Done — there's no separate prep step to a roll of wallpaper or to a line you typed in yourself.

By room, by stage, and finding things

By stage flattens the whole house: every ceiling in the job together, then all the panelling, then the woodwork, and so on, with the room name on every row. Use it to do one thing everywhere in one pass. Kitchen, fitted units, exterior items and custom lines stay as their own blocks at the end — there's nothing to batch between a kitchen and a garage door.

Spec sheet

13 outstanding · Prep 3/13 · Painted 1/14

Done

By room

By stage

Fold all

Find a room, surface or colour

CEILINGS

2 open

Ceiling 2 coats · Landing

Farrow & Ball No. 2005 All White

Fill and sand. Mask edges and fittings.

Prep Fri, 18 Sept

Painted

Ceiling 2 coats · Master Bedroom

Farrow & Ball No. 2005 All White

Fill and sand. Mask edges and fittings.

Prep

Painted

Ceiling 2 coats · Lounge

Farrow & Ball No. 2005 All White

Fill and sand. Mask edges and fittings.

Prep Thu, 17 Sept

Painted Thu, 17 Sept

PANELLING

1 open

Panelling 2 coats · Lounge

Farrow & Ball No. 2005 All White

Fill and sand. Caulk joints. Mask adjoining surfaces.

Prep Fri, 18 Sept · via link

Painted

WOODWORK

5 open

Woodwork 2 coats · Lounge

Farrow & Ball No. 2005 All White

Including skirtings, door frames, doors, window frames and sills

Primer

Every heading folds, same as the snag list: tap it and its rows fold away, leaving the name and the count. An area you've finished with is folded to start with, so a big house opens as the rooms that still have work in them — unless *everything* is done, in which case it all opens, because you only opened it to read the record. **Fold all** does the lot and turns into **Open all**.

The find box matches the surface, the colour, the room and the product, and works in both views:

The screenshot shows a mobile app interface titled "Spec sheet" with a subtitle "13 outstanding · Prep 3/13 · Painted 1/14" and a "Done" button. Below the title are three buttons: "By room" (selected), "By stage", and "Fold all". A search bar contains the text "radiator". Below the search bar, there are two sections for "LOUNGE" and "LANDING", each with a "1 open" indicator. Each section displays "Radiators" for the respective room, followed by "Farrow & Ball No. 2005 All White". Below this, it says "Clean and key. Mask the wall and pipework." and has two checkboxes: "Prep" and "Painted". At the bottom, there are two buttons: "Share PDF" and "Start a link". Below these buttons, there is a note: "Read-only apart from the ticks — colours, coats and prep are edited where they live. A shared link shows the sheet as of this phone's last sync, and anyone holding it can tick."

Type *radiator* and you get every room's radiator row with its colour. Type a colour name and you get everywhere that colour is used. Clear it and the whole sheet comes back.

The prep lines

Each row carries a prep line. Where the job records prep for that surface, that wins — **Mist coat** with its product on new plaster, **Primer** with its product where the room actually buys one, the fitted unit's prep level, the kitchen's **Strip original coating**. Everything else gets the built-in line for that surface ("*Fill and sand. Tape switches, sockets and edges.*"). The Prep box belongs to whichever line is showing.

Variations on the sheet

Extras show up with everything else, tagged. An approved one reads **Variation** ✓; one still waiting reads **Variation, awaiting approval** — shown on purpose, and tagged so it can't be read as a go-ahead. You *can* tick it; the tag is the warning. A declined variation isn't on the sheet at all.

Extra work added inside a room you already measured is different, because the app knows the room has grown but not *which* surface grew — so there's nothing to tag, and putting "Variation" on all five of that room's rows would say something untrue about four of them. The room's heading says it instead: *Landing — includes extra work, awaiting approval*, or ✓ once it's approved, or **includes extra work the client declined**. That last one is the one to read: the work is still typed into the room, so it's still on the sheet with a box beside it, and this is the only thing on the screen telling you not to paint it. (See [Extra work in a room you already measured](#).) The heading carries it in **By room**, and on the kitchen, unit and exterior blocks in By stage — a By stage section covering ceilings across the whole house belongs to no one room, so it doesn't claim to.


Sharing it: PDF

Share PDF at the foot of the sheet builds a one-file copy and hands it to your phone's share sheet (on a computer it downloads). It's named for the job and the day you exported it — *NH-Spec-12-Ermine-Street-2026-09-19.pdf* — and stamped **Correct as of** the date and time, because a spec sheet moves.

It prints **the view you're looking at, in the order you're looking at it**, so you can check the file against the screen: your business band at the top, the job and the address, then how many are outstanding and how many done, then each area with two boxes per row — empty for what's left, filled and dated for what's done. It builds from what's on your phone, so a row you ticked in a cellar with no bars is already ticked in the file. The client's name, phone and email are not on it.

Sharing it: a live link anyone can tick

Share link creates a private web page for this job and hands you the URL. Whoever you send it to opens it on their phone — no login, no app — and sees the same sheet, with the same By room / By stage toggle, the same find box and the same two boxes per row. **They can tick things off**, and their ticks show up on your phone within about half a minute. Yours show up on their page the same way.

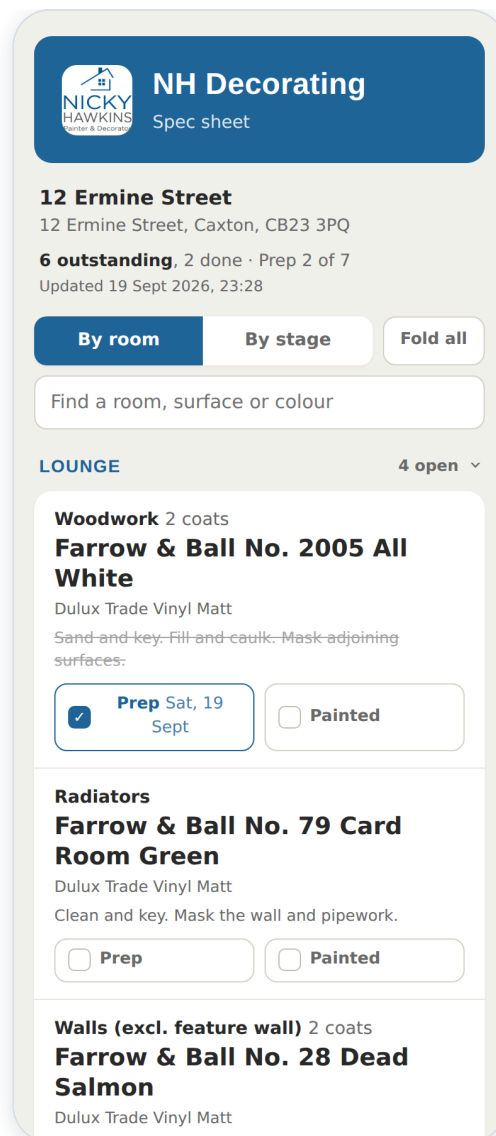

- **It's a different link from the client approval one.** That page has Approve and Decline buttons on it; this one doesn't, and handing a helper the wrong link would hand them those buttons. Either can be stopped without touching the other.
- **The rows are as of your phone's last sync.** The page says **Updated** and when. Edit a room, change a colour, and the page catches up within a couple of seconds if you've got signal — and when you haven't, it keeps showing the last version and its timestamp says how old that is.
- **The ticks are live either way.** They're not part of what gets published, so a tick never waits for a sync and never triggers one.
- **You can see which ticks came from the link.** Any step ticked from the page is marked *via link* on your phone, and you can untick anything.
- **Anyone with the link can tick.** That's the point of it, and it's worth knowing: forward it on and whoever holds it can tick rows. There are no prices and no client contact details on it, so what's exposed is progress. **Stop sharing** kills the link for everyone — and **leaves every tick where it is**, because the work happened whether or not anybody's still allowed to look at the page.

Radiator colours

Radiators normally go out in the woodwork colour, and that's what the sheet shows. When a room wants something else, the room screen has a **Radiators** row under the colours on the **Paint & Colour** card — **Same as woodwork** is on by default, and switching it off gives you the ordinary colour field:

The screenshot shows the 'Edit Room' screen with the following sections:

- Lounge Radiators**: Also on 7 other areas · renaming here changes only this one
- Woodwork**: leave blank to decide later. Options: All White, Farrow & Ball · No. 2005, Dead Salmon, Card Room Green, Landing Main Walls, Lounge Radiators. Also on 7 other areas · renaming here changes only this one
- Radiators**: they follow the woodwork unless you say otherwise. Option: Same as woodwork
- Colour**: leave blank to decide later. Options: Lounge Radiators, All White, Dead Salmon, Card Room Green, Landing Main ...
- WALL PAINT**: Product defaults to Settings. Option: Use default (S)
- CEILING PAINT**: Product defaults to Settings. Option: Use default (S)
- WOODWORK TOPCOAT**: Product defaults to Settings. Option: Use default (S)

The bottom navigation bar includes: Home, Measure, On Site, and Summary.

The row appears **once the room has radiators measured** — put the figure in **Extras > Radiators** and it's there; a room with no radiators doesn't carry a radiator colour to decide.


The field works exactly like every other colour field: type and your library offers matches with brand and number, the colours already on this job are one tap each underneath, and leaving it blank means *not decided yet* — which is a different thing from *same as the woodwork*, so the chip and the blank field don't mean the same. Set one and it shows on the spec sheet, on the Colours tab as an area in its own right, and on the client's colour schedule (*Woodwork/Radiators: Wimborne White* where they match, on their own line where they don't). **It never changes what you buy** — radiators are priced as labour and use no paint of their own, so a colour that's only on a radiator never turns up as a tin on the list.

The spec sheet and signal

Same as everything else on On Site: tick things off in a house with no bars and every tick queues on the phone and goes up when you're back in signal. The sheet opens offline, the PDF generates offline with your queued ticks in it, and a tick that hasn't synced yet is never overwritten by what the server still thinks.

Snags — the punch list


The last few days of a job are a list of small things: a scuff by the switch, a handle to refit, a staircase that wants one more coat. That list goes here, and On Site puts it above everything else while anything on it is still open.

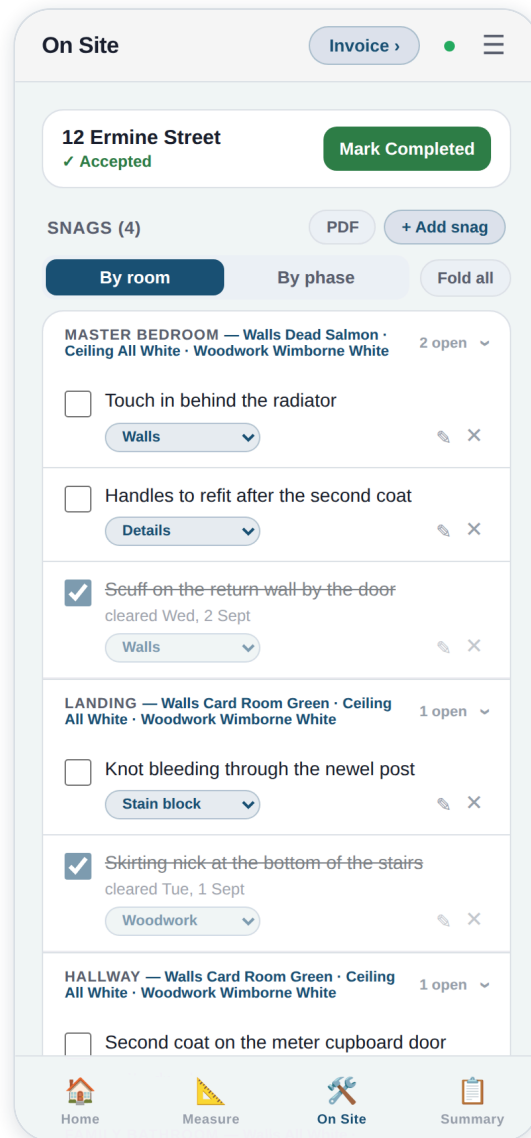

- **The section only shows up when there's something to show.** No snags yet, and there's just a quiet + **Start a snag list** at the bottom of the screen. Tick the last one off and it drops back down there too, collapsed to **All n cleared** ✓ — tap it to reopen the record.
- **Grouped by room**, with that room's colours next to its name, read straight from the Colours tab — each surface named where they differ (*Walls Dead Salmon · Ceiling All White*), or just the colour where the whole room is one. So you don't have to leave the

screen to find out what to open. Rooms the quote never priced — the airing cupboard, the garage step — can have snags too, and you can give those a colour by hand (see below).

- **Ticking one off doesn't remove it — it drops to the bottom.** The row goes struck through with the date you cleared it and stays on the list, which is the point: at the end of the job the list *is* the evidence of what got done. But it moves below everything still open in that room, so three weeks in, with thirty things ticked off, the handful you've still got to do are the ones at the top rather than scattered through them. A room where everything's cleared drops below the rooms that still have work in them, and the same rule applies in the **By phase** view. Untick anything you tick by mistake and it goes straight back up where it was.
- **Phase** on each row (the little dropdown) is the pass it belongs to — Prep, Stain block, Woodwork, Walls, Ceiling, Details, Final access. Set it and the room re-sorts itself into working order, with anything that blocks the space once it's done (floor cleans, stair recoats) last. Snags with no phase yet sit at the top of their room so they're not forgotten.
- **By room / By phase.** The toggle flattens the whole house into phase order instead — every stain-block job in the building together, so you get the stain block out once. Room order is what it opens on.
- **Every group folds.** Tap a room heading (or a phase heading in the other view) and its snags fold away, leaving the heading, its colours and its count — *2 open*, or *all done ✓*. Tap it again to open it back up. A room you've finished with is folded to start with, so a forty-snag house opens as the rooms that still have work in them. Once you've tapped a heading yourself your choice sticks for the rest of the visit — the app won't fold a room back up under you when you tick its last snag off. **Fold all** (beside the toggle) folds the lot in one go and turns into **Open all**. Folding rooms doesn't touch the **By phase** view, or the other way round, and none of it is remembered between visits.
- **PDF** (next to + **Add snag**) saves the list as it stands right now — see below.

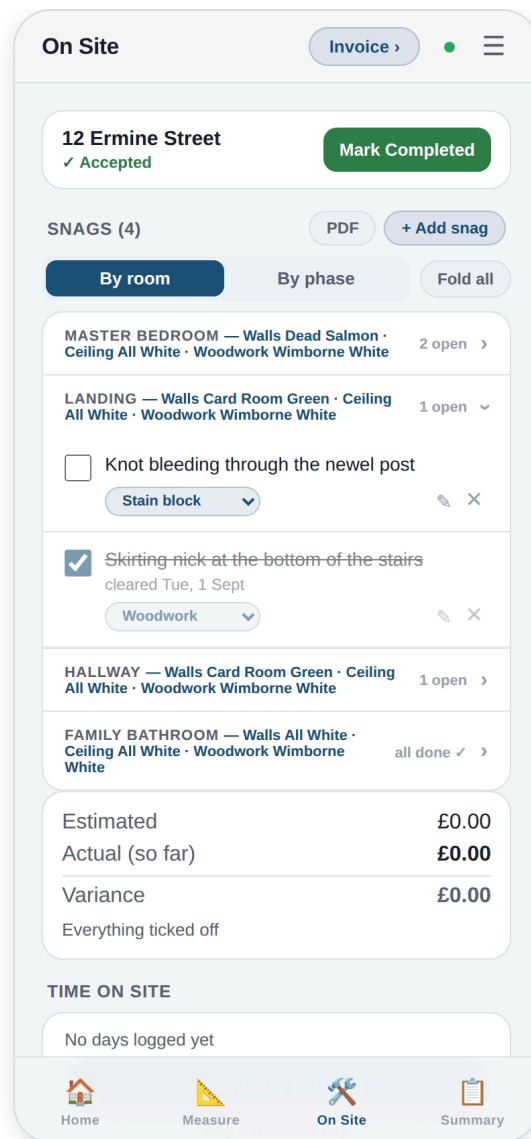

The snag list as a PDF

PDF at the top of the Snags section builds a one-file copy of the list and hands it to your phone's share sheet, so it can go straight to the client, to whoever's working with you, or into an email as a record. On a computer it downloads instead. It's named for the job and the day you exported it (*NH-Snags-12-Ermine-Street-2026-09-04.pdf*), because a snag list moves — two exports a week apart *should* be two different files.

What's in it: your business name and logo at the top, the job, the client and the address, then **how many are outstanding and how many are cleared**, then the list room by room in the same order the screen is showing it — colours beside each room name, the phase against each snag, an empty box for anything still to do and a filled one, struck through and dated, for anything cleared.

It builds from what's on your phone, not from what's reached the server, so a snag you ticked in a cellar with no bars is already ticked in the file. It works with no signal at all. Once everything's cleared, **Export PDF** sits under the reopened list at the bottom of the screen — that copy is the completed punch list, which is the one worth sending on.

Adding snags

+ **Add snag** opens a sheet with two ways in.

One snag — pick the room (or **Custom...** and type a name), type the snag, set the phase if you know it. The sheet stays open on the same room afterwards, because snags come in runs.

Paste a list — for the list the client emails you, or the notes off your own phone. Paste it as it came: a line on its own is a room, and lines starting **-**, ***** or **1.** are the snags under it. **- []** and **- [x]** checkboxes are fine — **both come in as still to do**, because on someone else's list a tick means "I've flagged this", not "you've fixed it".

On Site Invoice »

12 Ermine Street

REVIEW SNAGS

Back

5 snags in 2 rooms. Fix anything the paste got wrong before it is added — a sentence read as a room heading becomes an item with ↑ **item**.

ROOM

Master Bedroom

Walls Dead Salmon · Ceiling All White · Woodwork Wimborne White

Touch in behind the radiator

Walls

Scuff on the return wall by the door

Walls

Handles to refit after the second coat

Details

ROOM

↑ item

Landing

Walls Card Room Green · Ceiling All White · Woodwork Wimborne White

Recoat the handrail

Woodwork


Stair treads — final coat, then keep off

Back Add 5 snags


Nothing is written until you've looked at it. The review sheet shows exactly what it made of the paste, and everything on it is editable: room names, the snags themselves, and the phase on each one (pasted snags start with none — the app never guesses a phase from the wording, because it would guess wrong). If a stray sentence got read as a room heading, ↑ **item** folds it back into the room above; × drops a line. Then **Add n snags**.

Colours on rooms you never measured

On a job that came in from Xero there are no measured rooms at all, so there's nothing for the snag headings to read a colour from. Any room heading with no measured room behind it gets a + **colour** tap instead:

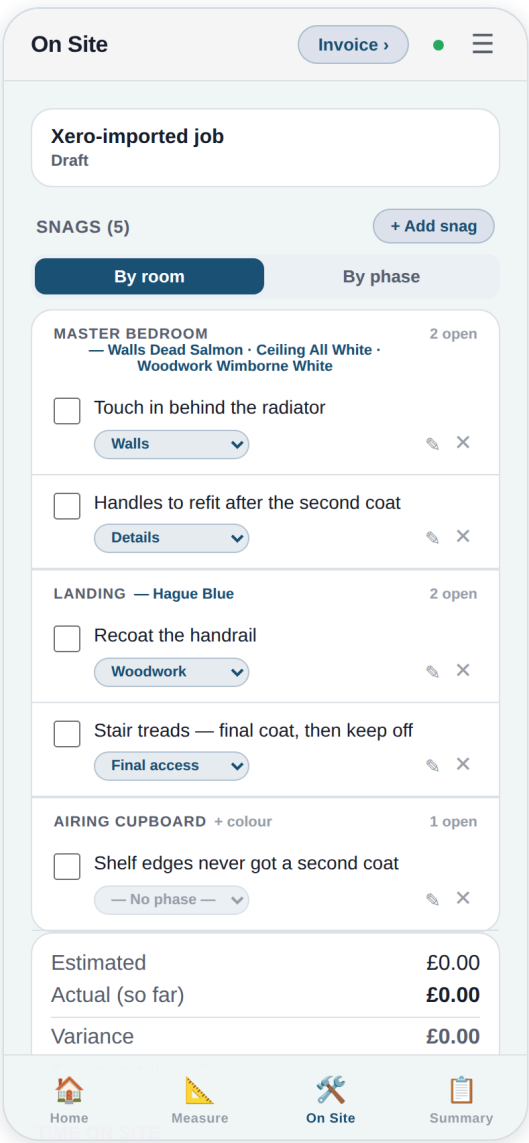

Tap it and you get the same colour field as everywhere else in the app: start typing and your colour library offers matches with their brand and number, so "dead sal" finds Farrow & Ball No. 28 Dead Salmon and fills the rest in for you.

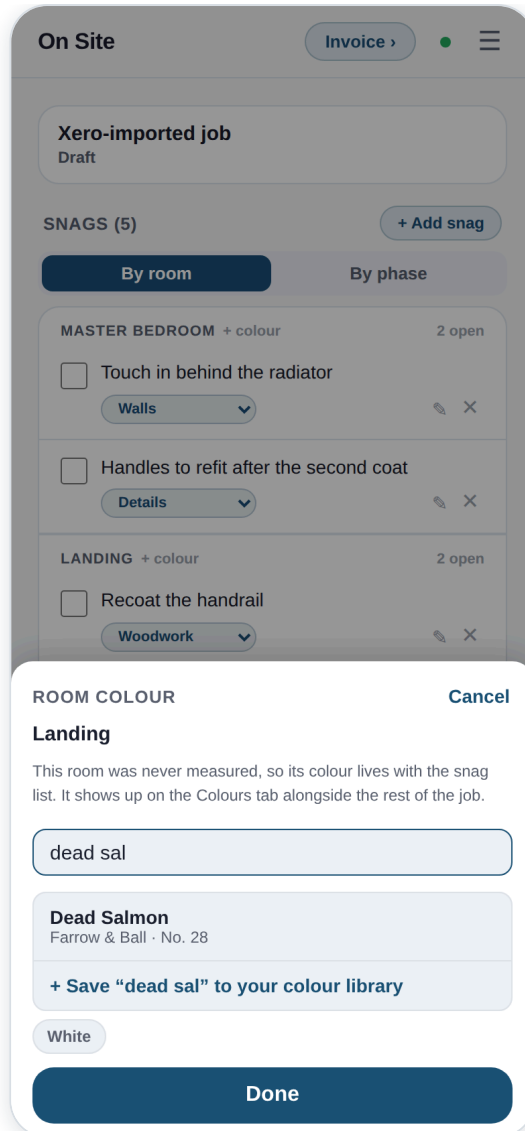

Under the field, the colours already on this job are one tap each. A name the library has never heard of is fine too — type it and it's yours; the dropdown also offers to **save it to your colour library** with a brand and code, so it's there for the next job. **Clear colour** puts a room back to undecided without losing the colour itself.

Rooms that aren't one colour. Most rooms aren't — the walls one thing, the ceiling another, the woodwork a third. Switch the sheet to **By surface** and you get a field each for walls, ceiling, woodwork, feature wall and panelling:

The heading then names each one — *Master Bedroom — Walls Dead Salmon · Ceiling All White · Woodwork Wimborne White* — and each surface shows up on the Colours tab in its own right, exactly as a measured room's would. **Whole room** and **By surface** are either/or: setting one clears the other, so a room only ever has one answer. Measured rooms already worked this way; this just brings the ones you never measured into line.

Once a room has a colour it shows on the heading (**Landing — Dead Salmon**) and joins the **Colours** tab alongside everything else, marked *from the snag list* so you can tell it apart from a room you measured. Rooms still waiting on one are listed there too, under **Snag rooms — no colour yet**, so you can work through them from either screen.

A room you *did* measure works the other way round, unchanged: its colour comes from the Colours tab and the snag heading just shows it. There's only ever one place a given room's colour is set.


Snags and signal

Snags sync exactly like the rest of On Site — tick things off in a house with no bars and every change queues on the phone and goes up when you're back in signal, same as your materials and your logged days. The sync dot in the corner counts them with everything else.

Extra work in a room you already measured

The bullet above covers the client asking for *another room*. This covers the commoner one: **"while you're here, can you do the radiators in these two?"** — extra work inside rooms you measured and quoted months ago.

Just add it where it belongs. Open the room on **Measure**, put the radiators in, and save it as you normally would. The app does the noticing:

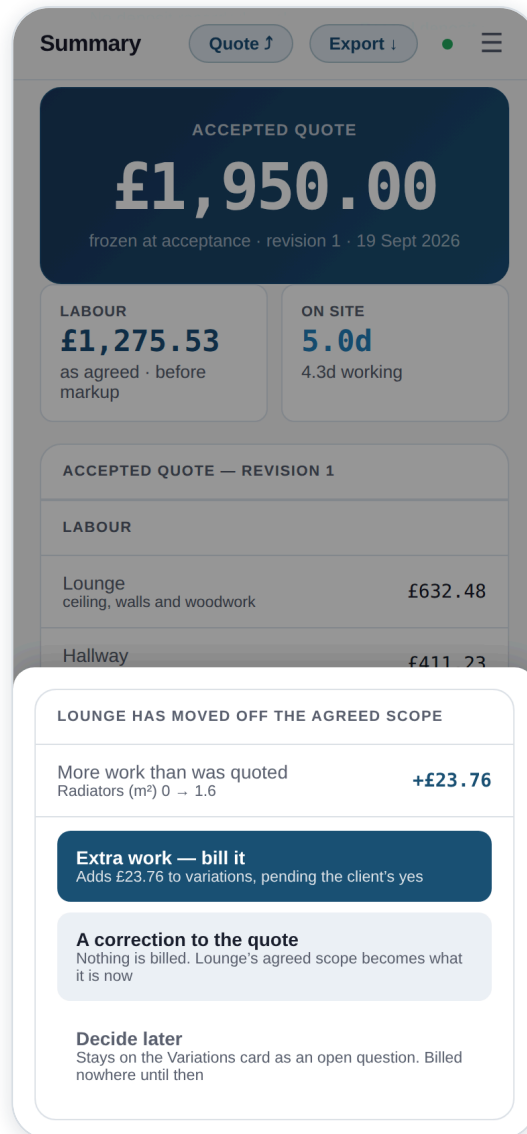

It knows because, at the moment the quote was accepted, it froze a copy of **what every room was measured as** — not just what the job was worth. So when you save a room that's grown past that, it can price exactly the difference, name the field that changed, and ask the only question it can't answer for you:

- **Extra work — bill it.** The difference becomes a variation line, *Lounge — extra work*, priced through the same engine as everything else and sitting on the Variations card with the rest. Pending until the client says yes, exactly like any other variation.
- **A correction to the quote.** Nothing is billed — you mismeasured, or forgot a wall, and the room's agreed scope becomes what it is now. Recorded with a date so it's a decision, not a gap.

- **Decide later.** It stays on the Variations card as an open question, billed nowhere until you answer it.

Whichever you pick, **the agreed quote does not move**. The room still bills at what was agreed; the extra bills separately, or not at all. Three things worth knowing:

- **Small changes don't interrupt you.** Under £5 and it goes straight onto the Variations card as an open question rather than throwing a sheet at you on site — but it's never silently swallowed, because that's the money this exists to stop losing.
- **A rate change is never mistaken for extra work.** The difference is worked out by pricing the old scope and the new scope *at the same rates*, so putting your day rate up next month doesn't make every room on every accepted job look like it grew.
- **The kitchen and fitted units ask when you leave the screen** rather than on save, because those forms save as you type.
- **Less work than quoted?** It'll tell you, but a reduction is a credit, not a variation — so the only real answer is **A correction**, and a genuine credit is agreed by amending the quote.

On Measure, a room carrying an extra is chipped + **EXTRA**; one with a change nobody's ruled on yet is chipped **SCOPE ?**.


If the frozen scope ever goes missing. That copy of what a room was measured as is saved with the room, and the room is saved separately from the job itself — so in rare cases (a save lost in a dead spot, a job opened on a second device before it had synced, a restore) a room can come back without it. Without the copy there is nothing to compare against, so the app can't work out what the extra was worth. It says so rather than going quiet: the room is chipped **EXTRA ?** in red on Measure, and the Variations card carries a red row at the top naming it, with the figure the client approved for it if they'd already said yes. **Put this right** gives you two answers — put the agreed figure back as a priced line (prefilled with what they approved), or write it off, which re-agrees the room as it now stands and bills nothing. It deliberately doesn't put the money back on its own: with the frozen copy gone, the room's own line on the final invoice still has that extra work inside it, so adding a variation line automatically would bill the same work twice.

If you edit that room again afterwards — a fourth radiator, say — the extra re-prices itself. If the client had already approved it, the card says so: *"Changed since sign-off — £22.63 agreed, £29.47 now."* It doesn't quietly throw away their answer; it tells you the figure moved so you can go back to them or leave it.

Jobs accepted before this existed get their frozen scope the first time you open them, taken from the job as it stands that day — so anything already typed in is treated as agreed, and it's changes from then on that get tracked.

Let the client approve extras themselves

Under the Variations card, **Send for approval** creates a private web page for this job and puts the link on your clipboard — text it, WhatsApp it, or email it to the client.

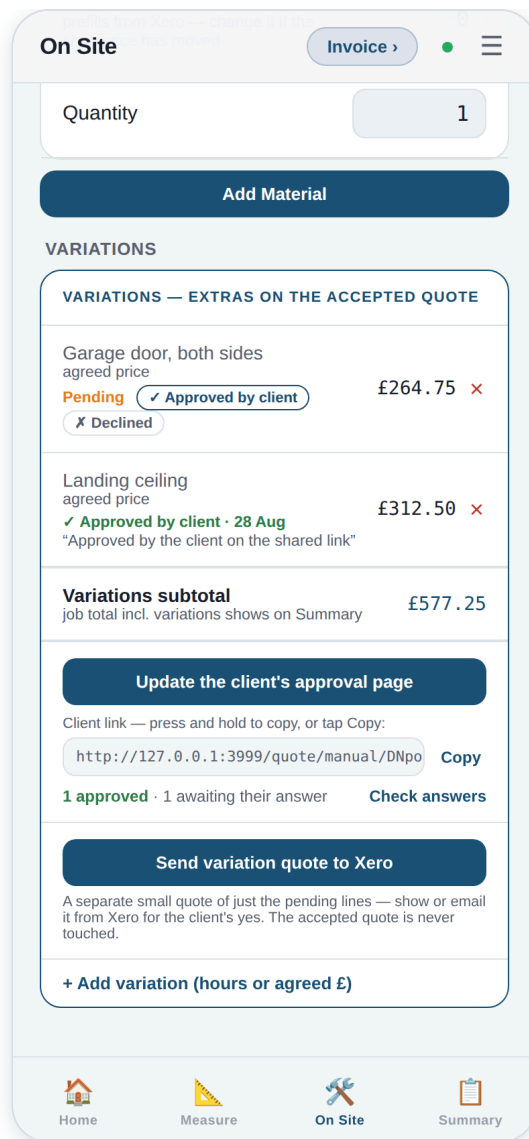

They open it on their phone. No login, no app to install:

NH Estimator
Painting & Decorating

Quote for Mrs Fielding
14 Ermine Street

ORIGINAL QUOTE

As agreed **£4,250.00**

The price already agreed for the original scope of work. Unchanged.

EXTRAS SINCE THEN

Landing ceiling **£312.50**
✓ **Approved** · 28 Aug 2026

Garage door, both sides **£264.75**
Awaiting your answer · sent 28 Aug 2026

Approve **Decline**

Tap Approve or Decline on each item above.
Nothing extra is charged unless you approve it.

TOTAL SO FAR **£4,562.50**
Original quote + 1 approved extra

Approved extras are added to your final invoice.
Any questions, just reply to the message this link came in.

The page shows **the original quote as a single total** (never the itemised breakdown — they've already had that document), then every extra since, with **Approve** and **Decline** buttons on the ones still waiting. The total at the bottom is the original quote plus the extras they've said yes to — pending ones aren't in it, so the figure is never a bill for work they haven't agreed to.

A few things worth knowing:

- **Their answer comes back to you.** Tap **Check answers** on the card, or just reopen the job — the app pulls their taps in and sets the line's status for you, with a note saying it came from the link. If *you* already recorded an answer by hand, yours stands: the person who was there wins.
- **Nothing goes to Xero.** This is entirely separate from **Send variation quote to Xero** below it. Approved extras still reach Xero the usual way — as lines on the final invoice.
- **Prices are frozen once they answer.** Re-measure a room after the client approved that extra and the page keeps the figure they agreed to. Tapping **Send for approval** again updates the same page — it never creates a second link — and refreshes the prices only on the extras still awaiting an answer.

- **Withdrawing an extra.** Remove or unflag a variation and it disappears from their page next time you send — unless they'd already answered it, in which case it stays as the record.
- **The link is the password.** Anyone with it can see this job's totals and answer its extras, so treat it like the quote itself. It's specific to one job and doesn't expire.
- **What the client can reach.** The link only opens that one job's page. But it's the same web address the app runs on, so if someone trims the link back to the domain they land on the app's front door — which is why setting the app password matters (see [Getting started](#)): with it set they get a sign-in screen and nothing else, and it costs you one login per phone, not one per opening. A custom domain makes the link read as your business rather than as a hosting provider, but it doesn't change what's behind the front door — the password does.

Windows and doors on site

Old windows are where the surprises are. On a job with [Windows and doors](#) set up, On Site has a  **Windows & doors** card near the top. It opens the same drawings and the same detail view, with two differences:

- **Anything you add here is a variation.** New marks, and prep raised on an opening (you can raise it, never lower it), are extra work on top of the quote. They show dashed on the diagram and as a dashed badge on the elevation.
- **Bays, dormers and lower ground windows work the same way** — open a bay and tap one of its windows to mark it, or mark the bay's own parts.
- **The quote's own work is locked.** It's shown, solid, so you can see what was already allowed for, but you can't take it off here — and type, size and pane layout are as quoted. The quote is the floor: nothing done on site ever takes money off it.

←

Windows & Doors · On Site

•

☰

Basin window · 12 panes · as quoted

PREP

raised on site from Light — a variation

Heavy

Restoration

Select all panes

Clear selection

1 part selected — added as a variation

Filler

Resin repair

Splice timber

Remove work

WORK ON THIS WINDOW

£207.14 variation before markup

Paint, outside face · light prep

quote

Prep raised to heavy, replace glass x4 panes

variation · draft

Tick off as done. On site, each window's sheet ends with a **Tick off as done** list: every piece of work on it, quoted or added on site, one line each (*Reputty · top pane 3*). Tap a line as you finish it, or **tick all**. Ticks don't change the price. They decide what the work report shows, because the report lists only what was done. The On Site card counts how many are ticked off. Work on a variation the client declined isn't listed.

NH Estimator — User Manual

101 / 124

←

Windows & Doors · On Site

•

☰

Sash window · 12 panes · as quoted

PREP

Light

Standard

Heavy

Restoration

Select all panes

Tap panes or frame parts to select them — one kind at a time. ■ work · ■ glass · dashed = variation · the quote's marks are locked here

WORK ON THIS WINDOW

Paint, outside face · light prep
 quote

Re-cord (left stile)
 quote

TICK OFF AS DONE

1 of 1 done

✓

Re-cord — left stile

Everything you mark collects into one **draft** variation, worded for you from the marks — *Front, first floor, W2: reputty x4 panes, resin repair (cill)*. — and shown at the top of the screen. It sits on the Variations card like any other extra; **reword for the client** changes what they'll read. Prep raised on site is charged as the difference between the old prep level and the new one.

On Site Invoice

shop price has moved

Quantity 1

Add Material

VARIATIONS

VARIATIONS — EXTRAS ON THE ACCEPTED QUOTE

Windows and doors — Front, ground floor, W1: prep raised to heavy, replace glass x4 panes, splice timber (left stile). draft — marked on site — [open](#) - [reword for the client](#) £309.60

Pending ☒ Approved by client ☐ Declined

Sundries £15.48
same % as the main quote

Variations subtotal £325.08
job total incl. variations shows on Summary

Send for approval

Creates a private link showing the original quote total, these extras and an Approve/Decline on each. No login for them, nothing to Xero.

Send variation quote to Xero

A separate small quote of just the pending lines — show or email it from Xero for the client's yes. The accepted quote is never touched.

+ Add variation (hours or agreed £)

Home Measure On Site Summary

Send for approval puts the draft on the client's page like any other extra. Once it's sent — or you've recorded their answer by hand — the draft is closed, and the next thing you mark starts a new one. Work on a variation the client has already answered is locked too.

The work report

Once any work is ticked off as done, the fixture screen has a **Work report (PDF)** button. It builds the report as a PDF on the phone — it works with no signal — and hands it to the share sheet to save, email or print. The same report appears on the client's approval page, under their extras.

On the invoice. When you build the final invoice, a tick box — on whenever there's a report — attaches it to the Xero invoice as a PDF the client can open from the online invoice. Untick it to leave it off. If any quoted or approved work still isn't ticked off, a red warning under it says how much. That work would be left out of the report, so tick it on site first.

Final Invoice

Sundries — variations

£5.57

×

MATERIALS — AS USED

⚠ No materials were ticked as bought — this invoice bills labour only. If that's wrong, log actuals on the On Site screen first.

ALREADY RECEIVED — APPLY IN XERO

Reference only — **not deducted from the invoice**. The draft goes out at the full amount; apply these payments against it in Xero as usual.

Deposit received

prefilled from the plan — correct to what was really paid

311.25

Instalments received

none planned

0

Invoice total

£1,362.00

Payments to apply in Xero

– £311.25

Balance the client will owe

£1,050.75

☒

Attach the windows & doors report

What was done where, with the drawings — no prices. Added to the Xero invoice as a PDF the client can open from it.

Create draft invoice in Xero

Created as a DRAFT — review in Xero before sending.

Home

Measure

On Site

Summary

The first time, **Xero needs reconnecting once** (Summary → Connect Xero) so it grants the app permission to add attachments; until then the invoice is still created, and the message says the report wasn't attached and why. Once the job has its invoice, the fixture screen also has  **Attach the report to invoice INV-...** — for a report that didn't go on first time, or to replace it after a change (attaching again replaces the earlier copy).

NH Estimator — User Manual


104 / 124

WINDOWS AND DOORS: WHAT WAS DONE

Outside faces only. Openings are numbered left to right as you face each side of the house.

work glass replaced agreed as a variation

FRONT

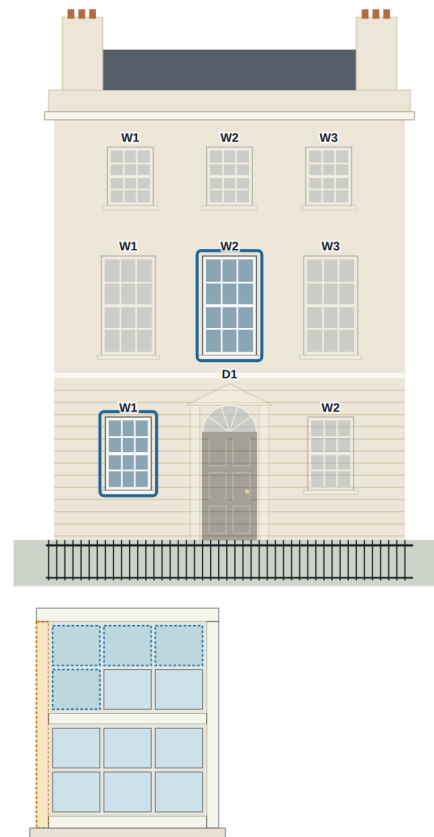

For each side with work on it, it shows the elevation with the windows and doors that had work picked out, then a drawing of each of those with the panes and parts marked, and a list of the work split into **quoted work** and **approved variations** (with the date each was approved). Openings with no work are left out, work not yet ticked off isn't on it, variations still waiting for an answer aren't on it, and **there are no prices anywhere on it** — the invoice itself keeps one total line for the whole fixture.

When the work's done, tap **Mark Completed** — the job moves on, and Home reminds you it needs invoicing until you do.

13. The final invoice

On a **Completed** job, On Site shows **Build final invoice**. The builder assembles the whole money story in one list:

- labour **as quoted** (the frozen accepted figure, not the hours it took),
- plus **approved variations** (including the ones the client approved on their own link),
- plus the **actual materials** used (from your ticked-off list),
- minus any **deposit already recorded and synced to Xero**.

The invoice's lines are worded the same way the quote's are (see §9): the invoice version of your template block rides the **first work line**, and the work lines after it read "*Bedroom - same as above*" or carry their own scope where they differ. **Lines that aren't measured work are left to speak for themselves** — *Sundries & Consumables*, a custom line you typed a price into, and the diary-day/price rounding line. They're a percentage or a price of their own, not painting, so they never get the block and never read "same as above".

Review the lines, adjust anything, then send — the app writes **one draft invoice into Xero** and marks the job **Invoiced**. You approve and send the invoice from Xero as usual, so nothing goes to the client without your say-so. Applying the recorded deposit to this invoice, once it exists in Xero, is still done in Xero.

Billing part way through: interim invoices

On a long job you don't have to wait until the end to invoice. While a job is **Accepted**, the Summary status card has an **Invoices** line with **Interim invoice** >. Each interim bills the rooms (or parts of rooms) finished so far, plus the materials you've bought. The final invoice then bills only what's left.

Interim Invoice

LABOUR

Set every line to
quoted £3,800.00 · 0% invoiced
so far · lines already further on
keep their %

Match quote stage
sets every line to the
cumulative % through the
stage

Lounge
quoted £1,500.00

100 % **Done**

Hall, stairs & landing
quoted £1,800.00

50 % **Done**

Front bedroom
quoted £500.00

0 % **Done**

Each line is **cumulative** — how far through that room or
item is in total. Sundries are billed on the final invoice.

MATERIALS BOUGHT — NOT YET INVOICED

☒ Tikkurila Optiva 5 Matt 10L — Hague
Blue **£193.00**
2 × £96.50

☒ Johnstone's Trade Aqua Satin 2.5L —
White **£114.60**
3 × £38.20

APPROVED VARIATIONS

Variation: Paint garage
door

50 % **Done**
quoted £180.00

Home Measure On Site Summary

- **Labour is billed room by room.** Every line from the accepted quote (each room, exterior item, fitted unit or custom line) has its own % box and a **Done** button.
 - Tap **Done** when a room is finished, and the whole of its quoted price goes on this invoice.
 - Type a % when it's part-done, e.g. **50** when half the room is painted.
 - The % is **cumulative**: how far through that room is **in total**. If the Hall went on the last invoice at 50% and you now tap Done, this invoice bills the other 50% and reads *"Hall — complete (previously invoiced 50%)"*.
 - A room already invoiced in full shows ✓ **invoiced in full**. A % can't go down or above 100.
 - **Set every line to** sets all rooms to the same % in one go, handy for "40% of everything". **Match quote stage** does the same using a stage from the quote's payment plan (deposit, weekly instalments, balance). Neither pulls down a room you've already set higher.
 - When every room is at the same %, the invoice shows **one labour line**, *"Labour: 40% of quoted works (previously invoiced 0%)"*, rather than a row per room. The app still tracks each room behind the scenes, so on a later invoice you can switch to marking rooms Done and it carries on from 40% correctly.

- **Sundries & Consumables** aren't on interims. They're billed in full on the final invoice.
- **Materials are itemised.** Every product you've ticked as **bought** on the On Site list and haven't invoiced yet is listed, with its quantity and price. These are the same lines and prices the final invoice uses. They're all ticked to start with; untick anything you'd rather hold back until later. If you bought 2 tins, invoiced them, then bought a third, the next interim offers just the one. A product with no price is shown in red and can't be billed until you set its price on the On Site screen.
- **Approved variations** work the same way as rooms: a % box and **Done** for each one, so you can bill half an extra now and the rest later.

← Interim Invoice

APPROVED VARIATIONS

Variation: Paint garage door

50 % Done

quoted £180.00

PREVIEW

Lounge — complete	£1,500.00
Hall, stairs & landing — 50% complete	£900.00
Variation: Paint garage door — 50% complete	£90.00

MATERIALS

Tikkurila Optiva 5 Matt 10L — Hague Blue	£193.00
2 × £96.50	
Johnstone's Trade Aqua Satin 2.5L — White	£114.60
3 × £38.20	

Subtotal	£2,797.60
Less deposit	– £1,250.00
Amount due	£1,547.60

Previously billed	£0.00
This invoice	£2,797.60
Remaining to bill	£2,382.40

of £5,180.00 — the quote plus approved variations

The deposit is **not** a line on the Xero invoice — it is already in Xero as a prepayment. Allocate it to this invoice there, as you do on the final one.

Issue interim invoice

Fill this in anywhere — it saves as you go. Issuing needs a connection: it goes to Xero as a DRAFT, to review and send from there.

Home

Measure

On Site

Summary

- **Deposit to take off.** While some of the deposit hasn't been set against an invoice yet, a **Deposit** box appears. It starts at all of what's left, up to the invoice total. Lower it to keep a float for materials on the next invoice. For example, take £600 of a £1,250 deposit now, and the other £650 is offered on the next invoice. Whatever's still unused comes off the final invoice. If the deposit covers the whole invoice, that's allowed; there's just nothing for the client to pay on it.

← Interim Invoice

APPROVED VARIATIONS

Variation: Paint garage door

quoted £180.00

0 % Done

DEPOSIT

Deposit to take off

£1,250.00 received · £1,250.00 left.

Take less to keep a float for the next invoice.

600

PREVIEW

Lounge — complete

£1,500.00

MATERIALS

Tikkurila Optiva 5 Matt 10L — Hague Blue

2 × £96.50

£193.00

Johnstone's Trade Aqua Satin 2.5L — White

3 × £38.20

£114.60

Subtotal

£1,807.60

Less deposit

– £600.00

Amount due

£1,207.60

Previously billed

£0.00

This invoice

£1,807.60

Remaining to bill

£3,372.40

of £5,180.00 — the quote plus approved variations

The deposit is **not** a line on the Xero invoice — it is already in Xero as a prepayment. Allocate **£600.00** of it to this invoice there. £650.00 stays unallocated for the next invoice.

Issue interim invoice

Fill this in anywhere — it saves as you go. Issuing needs a

Home

Measure

On Site


Summary

The **Preview** shows the invoice line by line (each room that bills something, e.g. "*Lounge — complete*" or "*Hall, stairs & landing — 50% complete*", then variations, then a **MATERIALS** heading with each product, just as the final invoice lays them out), then **Less deposit** and the **Amount due**.

The total is always a clean £5, like the quote. If the lines come to £2,797.60, the invoice is £2,795.00. Only the labour of rooms that are **part-done** on this invoice is trimmed. A room you've marked **Done** bills its exact price, pennies and all, and materials stay at their real prices. It's always rounded **down**, so an interim never asks for more than the work done. If every room on the invoice is being completed, nothing is trimmed and the total is exact. The few pounds or pennies trimmed aren't lost: the next invoice that bills that room picks them up, and whatever's left at the end goes on the final invoice, which is exact to the penny. The preview tells you how much was held over.

Underneath, it tells you exactly how much of the deposit prepayment to allocate to this invoice in Xero, and how much stays unallocated. Below that are the running totals: already billed, this invoice, and what's left to bill against the quote plus approved variations. The app warns you before issuing an invoice that would take billing past the quote.

You can fill the builder in with no signal; it saves as you go. **Issue interim invoice** needs a connection. It records the invoice, then creates it in Xero as a **draft** with its own number, the same contact and the same accounts as the final invoice. The deposit is **not** a line on the Xero invoice, because it's already in Xero as a prepayment. Allocate the prepayment to the first interim in Xero, as you would for the final invoice.

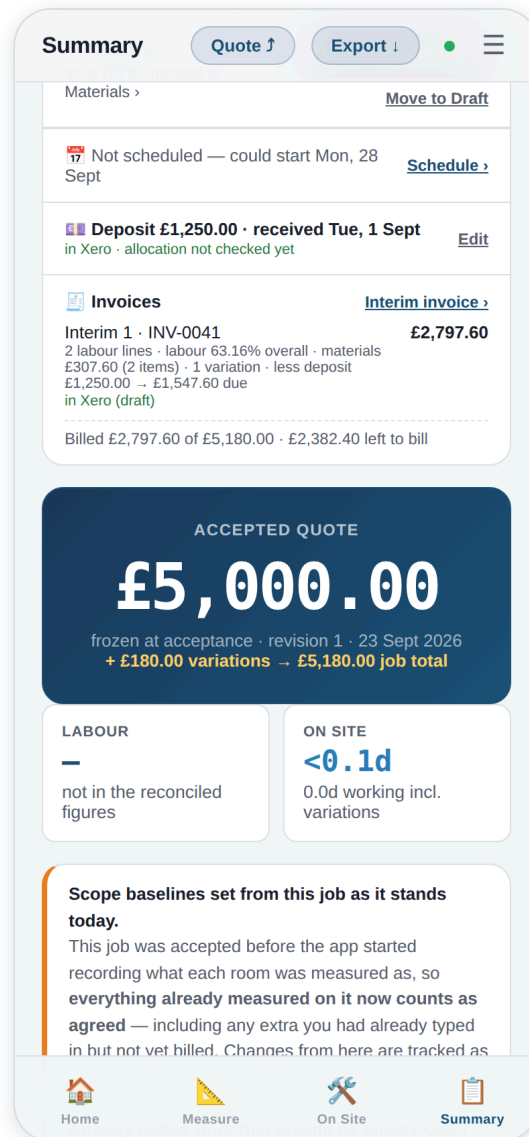

Each invoice then appears on the status card with its Xero state, which the app reads back from Xero whenever you open Summary:

- *in Xero (draft)*: not on the client's page yet.
- *approved in Xero · awaiting payment*: now on the client's page.
- *paid* ✓.
- *voided in Xero*.

If the send to Xero failed, you'll see the reason in red, and **Try again** is safe: it can never create the invoice twice. **Discard** removes the most recent interim if it never reached Xero.

Correcting an interim that's already in Xero: tap **Void & reissue** on the most recent interim.

- If it's still a draft in Xero, it's deleted. If it's been approved, it's marked **VOID**, so it stays in Xero as a record and drops off the client's page.
- The builder then opens with that invoice's figures already filled in (each room's %, the extras, the deposit share), so you only change what was wrong and issue it again. The corrected invoice gets a new number.
- If a payment or the deposit has been allocated to the invoice in Xero, the app won't void it. Remove the payment or allocation in Xero first, then try again. The app never unwinds money.
- It only works on the **most recent** interim, and not once the final invoice exists, because later invoices refer back to it.

If you void an invoice directly in Xero instead, open Summary and tap **Discard** on it. That has the same effect, without the pre-filled builder.

The client sees what's been invoiced. Once an interim (or the final invoice) is **approved in Xero**, it appears on the client's link under **Invoices so far**, with its number, date, amount, and whether it's paid. There's also a running *"Invoiced so far"* against the job total. Drafts are never shown, so nothing reaches the client's page before you've checked and sent it.



NH Estimator
 Painting & Decorating

Quote for Laura Holmes
 Holmes — whole house

ORIGINAL QUOTE
 As agreed **£5,000.00**
 The price already agreed for the original scope of work. Unchanged.

EXTRAS SINCE THEN
 Nothing extra has been added to this job.

TOTAL SO FAR **£5,000.00**
 Original quote, no extras approved yet

INVOICES SO FAR
Interim invoice INV-0042 **£1,807.60**
 23 Sept 2026 · Awaiting payment

Invoiced so far **£1,807.60 of £5,000.00**

Approved extras are added to your final invoice.
 Any questions, just reply to the message this link came in.

The final invoice with interims. When the job is completed, the final invoice is built as before, with two differences:

- **Materials already invoiced are left off.** The final lists only what no interim has billed. A product that was part-billed shows just the remainder, with a note of how many were already invoiced. Materials are never billed twice and never need a deduction line.
- **Labour and variations are billed in full, then each interim's share comes off.** Every quote line, the sundries and every approved variation appear as usual. Then comes one "**Less: interim invoice INV-...**" line per interim, for the labour and variations it billed. An interim that only billed materials has no deduction line. What's left to pay is the rooms that weren't invoiced, the unbilled parts of the rest, and the sundries.

If you've since returned a tin that an interim already billed, the final invoice flags it so you can credit the difference in Xero. The deposit box now shows only the part of the deposit that hasn't already been set against an interim. The final invoice can't be created until every interim is in Xero.

Once a job is Invoiced, Summary shows a read-only **Job Profitability** card telling three separate stories: **Billing** (quoted vs invoiced, with a note if they differ), **Schedule** (days quoted vs days actually logged), and **Materials** (quoted materials vs the real trade cost of what was used, with your markup on materials banked as its own figure). On a job billed in stages, the **Billing** section shows the quoted total (including approved variations), what has been invoiced to date across the interim and final invoices, what's left to bill, and each invoice listed underneath. It's reference only — nothing here feeds back into pricing.

14. Rates

Menu (≡) → **Rates** — every number the calculator uses, grouped by what it prices. A change here applies to every future calculation, and reprices any open (un-accepted) draft immediately — accepted quotes are unaffected, since **their figures are already frozen**.

Rates

The figures behind every calculated price. Business settings — day rate, markup, Xero, backup — live on [Settings >](#)

PAINT COVERAGE

How many m² a litre covers — the standard rates, the per-product overrides that beat them, and the assumed areas behind exterior litres.

COVERAGE RATES

Wall Emulsion

m² per litre — rolled

13

Spraying uplift

% extra litres when a surface's Spray toggle is on (walls off, ceiling & woodwork on by default; fitted unit has its own) — applied on top of the standard or per-product rate, one global figure rather than a sprayed rate per product

30

Ceiling Emulsion

m² per litre — un-sprayed base; rooms' Spray ceiling toggle (on by default) adds the uplift below on top

17

Gloss / Satinwood

m² per litre — un-sprayed base; rooms' Spray woodwork toggle (on by default) adds the uplift below on top

9

Mist Coat

m² per litre — thinned product

15

Panelling

m² per litre per coat — draft default, check against your usual product

8

Home

Measure

On Site

Summary

NH Estimator — User Manual

113 / 124

Section	Card	What's in it
Paint Coverage	Coverage Rates	Standard m ² /litre per surface, the spraying uplift %, and per-product rates that beat the standard figure for a specific paint range
Paint Coverage	Exterior Paint Coverage & Areas	Assumed areas and coverages behind exterior litres
Labour Times	Time Rates	Minutes per m ² (or per item) for every surface, doors/frames, sills, mist, panelling, staircase parts
Labour Times	Wallpaper Stripping	Minutes per m ² to strip paper off, one figure per difficulty — lining, standard/vinyl, textured/woodchip, multiple layers. These ship at 0 and are yours to fill in — see Walk the room
Labour Times	Exterior Rates	Minutes per coat for masonry, fascias, windows, doors, garage, sash extras, access uplifts
Item & Job-Type	Doors & Frames	Paintable areas per face, fire-door surcharge, ironmongery prices
Item & Job-Type	Wallpaper Rates	Per-roll rates, ceiling/staircase multipliers, minimum price, wide vinyl & mural rates
Item & Job-Type	Kitchen Rates	The full price matrix per item type × size, linear rates, carcass %, strip-original-coating minutes
Item & Job-Type	Fitted Unit / Shelving	Shelf and bay spray times, fallback areas behind fitted-unit litres
Item & Job-Type	Windows & Doors	Window base minutes per size tier, minutes per pane, sash/casement/fixed adjustment, door base minutes per type and size, bay base minutes per shape and storeys, prep multipliers, each marked-work action's minutes and material £, and the paint areas (each size's m ² , the timber share per type, door leaf and frame, bay timber per storey)
Scheduling	Scheduling	Daily overhead, schedule buffer, Work Saturdays, bank-holiday region, calendar feed

Windows & Doors prices each opening as *(base minutes for its size and type + panes × minutes per pane) × its prep multiplier*, plus the minutes of any work marked on it — all at your day rate, like every other timed task. The prep multipliers start at Light ×1.10, Standard ×1.25, Heavy ×1.40 and Restoration ×1.75; the material £ (glass is £25 a pane to start) is per pane or part marked, before markup. The sash actions start at Re-cord 40 min and £6, Replace beads 20 min and £4, and Ease & overhaul 45 min and £3, each per part; a door's Ease starts at 30 min. Other items aren't on Rates: each has its own minutes and £. Every figure is a starting guess to calibrate.

Rates

Bay's minutes are (base + panels + per-pane) x prep.
 Add the minutes of any work marked on it — converted at

your day rate like every other timed task. Materials are per element marked, before markup. Starting defaults — calibrate against real jobs.

WINDOW BASE MINUTES

by size tier — the tier button shows the area guide

Small under 0.5m ²	30
Medium 0.5 to 1m ²	40
Large 1 to 2m ²	55
X-Large over 2m ²	75

Minutes per pane covers cutting in the glazing bars	4
---	---

TYPE ADJUSTMENT

× on the window base — sash has more parts to paint

Casement	1
Sash	1.3
Fixed	0.8

DOOR BASE MINUTES

standard / oversized

Home

Measure

On Site

Summary

Bay base minutes are a bay's own cornice, fascia and mullions, by shape and storeys — canted 90 minutes for one storey and 160 for two, square 70 and 125 to start. They're on top of the bay's windows, which are priced as windows, and the bay's prep multiplies them. A dormer's fascia and cheeks have no minutes of their own; work marked on them uses the frame actions' minutes.

Rates

French (double)

150

200

BAY BASE MINUTES

a bay's own cornice, fascia and mullions — one storey / two — on top of its windows, which price as windows

Canted bay

90

160

Square bay

70

125

PREP MULTIPLIERS

× on the painted opening — an opening can go up from the job's default, never down

Light

1.1

Standard

1.25

Heavy

1.4

Restoration

1.75

PAINT AREAS

for litres only — the timber on the outside face, not the whole opening

Small window

m² of the whole opening (under 0.5m²)

0.35

Medium window

m² of the whole opening (0.5 to 1m²)

0.75

Home

Measure

On Site

Summary

Calibrate as you go: after a few jobs, compare the logged time and actual materials on On Site with what was estimated, and nudge the time and coverage rates here. The estimates get sharper with every job.

15. Settings

Menu (≡) → **Settings**. Everything that isn't a calculation rate lives here: your business identity, pricing defaults, Xero, and backup.

Settings

BUSINESS

Business name

shown in the app header, on the login screen and in the calendar feed

e.g. J.

Logo

optional — shown instead of the name in the header

Upload...

PRICING

Day Rate

£ per day

300

Hours Per Day

7

Markup

%

20

Commercial job adjustment

% — default when a quote's Commercial job toggle is on, applied before markup/discount

10

Standalone job rounding

when a quote's Standalone job toggle is on, diary days round up to this

Full day

Sundries & Consumables

% of labour, before markup

5

Spray sundries bump

Home

Measure

On Site

Summary

Section	What's in it
Business	Your business name and logo — shown in the app header, on the sign-in screen, at the top of every quote you send and its PDF, and in the calendar feed. Also your name, business phone, business address and home delivery address, used on supplier orders
Suppliers	The merchants you order materials from — name, email, and optionally your account number, branch name and branch address (the branch is used when you Collect). Add, edit (✎) or delete (✕); deleting one doesn't remove orders already sent to them
Pricing	Day rate, hours per day, markup %, sundries %, spray sundries bump, deposit %, commercial job adjustment, standalone-job rounding (full or half days), and how many days before an unanswered quote gets flagged
Deposits (Xero)	The bank account a recorded deposit lands in, and the account code it posts to
Xero Integration	Connect / disconnect
Materials (Xero Items)	Refresh your product list from Xero and set the default product for each role
Quote & Invoice Text	The per-job-type wording templates for quotes and final invoices
Calibration	What your finished jobs say about two of your settings — see below
Appearance	Light / Dark / Auto theme (this device only)
Backup	Export and import everything — see below

Settings

BUSINESS

Business name

shown in the app header, on the login screen, on your quotes and their PDFs, and in the calendar feed

Nicky Hæ

Logo

optional — shown instead of the name in the header

Upload...

Your name

signs off supplier orders

Nicky Hawkins

Business phone

under your name on supplier orders

07700 900123

Business address

1 Yard Road, Huntingdon

Home delivery address

for supplier orders sent to Deliver to home — blank uses the business address

Same as business address

SUPPLIERS

Brewers

orders@brewers.example · Acc NH4471 · Cambridge

Johnstones Decorating Centre

Home

Measure

On Site


Summary

Calibration — let finished jobs correct your settings

Some of the figures behind your prices started life as sensible guesses. This card compares them against what actually happened on your last few finished jobs.

NH Estimator — User Manual

119 / 124

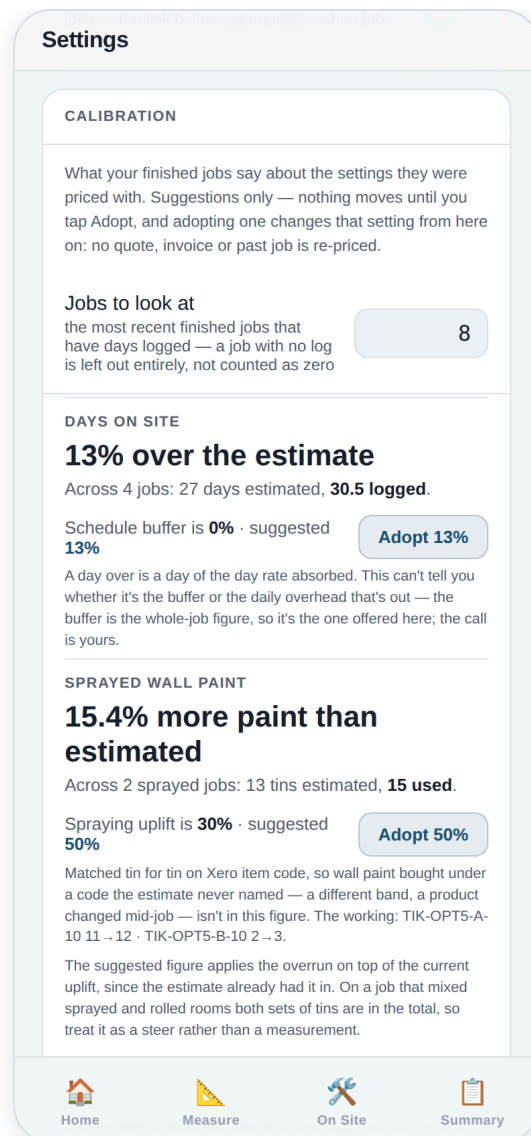

Days on site adds up the days you logged on *On Site* → *Time on site* and compares them with the days those jobs were quoted for. If you're consistently running over, the percentage is the **Schedule buffer** you should probably be padding quotes with.

Sprayed wall paint does the same for tins: on jobs where at least one room had **Spray walls** on, it compares the wall paint the estimate asked for against what you logged as used, and turns the difference into a **Spraying uplift** figure.

Three things worth knowing:

- **Jobs with nothing logged are left out completely** — not counted as zero. A job you never logged days for says nothing about how long jobs take, so it isn't allowed to. The card tells you when it has left jobs out, and why.
- **Nothing changes until you tap Adopt.** Adopting sets that one setting for quotes from now on. No quote, invoice or finished job is re-priced — accepted quotes are frozen anyway.
- **Change "Jobs to look at"** to widen or narrow the sample. Eight is a reasonable default; drop it to 3 if you've recently changed how you work.

If a suggestion says *"not enough data yet"*, it's telling you what's missing — usually that no sprayed job in the sample has its materials logged. It'll appear on its own once the data does.

The sundries % and the exterior assumed areas aren't offered here, and that's deliberate: nothing in the app tracks what you actually spend on sundries, and an exterior paint overrun could be the assumed area or the coverage rate — there's no way to tell which. Those stay your judgement call.

16. Backups

Settings → **Backup**:

- **Export everything** downloads a single JSON file containing every job, room, setting and colour — and your suppliers and supplier order history. Do this regularly — Home will nag you when the last backup is getting old.
- **Import backup** restores from a file, adding to what's already there — imported jobs get fresh identities, so it can never overwrite existing data. Restoring settings is a separate opt-in on the import preview, since it's the one thing an import *can* overwrite. Suppliers come back too (one you already have is left as it is), and each imported job brings its supplier orders with it, so its lines still read *Ordered* and the next order won't repeat them. The shopping list isn't in the backup — it's a pick-up list, not a record. Backup files up to 64MB are accepted, which is far more than a full job history comes to; if anything is ever wrong with a file, the app now tells you what in plain English rather than showing a syntax error.

17. Tips & troubleshooting

The dot in the top bar is your sync status: green = everything saved to the server, amber = saving now, red = offline. If you lose signal mid-measure, keep working — changes are kept on your phone ("Offline — N changes queued on this phone") and pushed up when the connection returns; the menu's sync line confirms with "All changes synced ✓".

Opening the app with no signal. The app keeps a copy of itself on the phone, so it opens in a dead spot exactly as it does anywhere else — everything you've measured is on the phone, not fetched from the server. It has to have been opened *once* somewhere with signal first, to save that copy; if it hasn't, you'll get a short page saying so rather than the browser's "no internet" screen.

If you've had launches that hung on a blank screen in a dead spot, that's fixed as of v2.61.0. The cause was a phone showing a bar of signal with nothing actually getting through — not the same as being cleanly offline, and the app used to sit waiting on it. It now gives the network a few seconds and then opens from the phone's own copy. The same deadline applies to saving: a change made where the signal is dead is queued on the phone within seconds instead of hanging, so the dot goes red and tells you what's waiting rather than sitting on amber.

Starting a job with no signal. You can now do this too — pull up outside a house with no bars, add the job, and measure straight into it. The job is created on the phone and appears on the server when you're next in signal, along with everything you put in it. (Before v2.61.0 nothing happened when you tapped it.)

Switching jobs with no signal. A job is kept on the phone once you've opened it in signal, so you can switch between the jobs you've been working on with no bars at all and each one comes back with its own rooms, colours and materials. The last dozen jobs you've opened are kept; older ones drop off and reload the next time you open them in signal.

If you try to switch to a job this phone hasn't got a copy of, it now tells you so and stays where it is — rather than opening the job looking empty. That matters: before v2.62.0 it opened with every room gone, and anything you then measured would have replaced that job's real rooms on the server when the signal came back. If you see that message, the job is fine — the phone just hasn't downloaded it yet.

A price looks wrong? Work backwards: room Preview → Summary breakdown → Rates. The calculation is always *areas × time rates × day rate*, plus *areas ÷ coverage = litres → tins*, plus sundries and markup. One of those numbers will be the culprit — usually a coverage or time rate that doesn't match how you actually work. If the job is already **Accepted**, remember its figures are frozen — a rate change won't move it; you'd need **Amend → revision N+1** on Summary.

Xero button not working? Tokens occasionally expire for good if the app hasn't talked to Xero in a long while. Settings → Disconnect Xero → Connect Xero puts it right in under a minute.

Sent a quote, then client wants changes? Just edit the rooms and hit **Update quote Q-nnn in Xero** on Summary — same quote number, new figures.

Materials you added by hand not in the total? Check the row's tag on Summary's materials list. A line tagged **Tracking only** is deliberately left off the quote — tap the tag to make it **Chargeable** and it joins the subtotal, the Xero quote and the deposit straight away. The card also prints *"Tracking only — not on the quote"* with a figure whenever anything on the list isn't being billed, so you can see at a glance whether money is sitting outside the price. (Lines added before September 2026 may have been saved as tracking-only by default — one tap each puts them on.)

Extra work mid-job? Always add it as a **Variation** rather than editing the accepted rooms — the original quote stays honest, and the extra shows separately on the final invoice where the client expects to see it.

Recording a deposit but the option's greyed out? A linked Xero contact is required before you can sync to Xero — the app will point you at Sync to Xero on the client details. You can still record the deposit locally in the meantime.

The build number at the bottom of the ☰ menu is how you check a new version has actually reached your phone after a deploy.

Manual for NH Estimator v2.86.1. Screenshots taken from the app with example data.

*Keeping this manual up to date: edit this file, then run `npm run build:manual` to regenerate the PDF edition (*NH-Estimator-User-Manual.pdf*) and commit both together. The cover picks up the app version and date automatically.*