

NICKY HAWKINS · PAINTER & DECORATOR

NH Estimator User Manual

A pocket guide to the paint-estimating app, from first measure to final invoice — measuring rooms, staircases and exteriors, pricing wallpaper and kitchen resprays, quoting through Xero, scheduling, and running the job on site.

App version 3.9.1 · Manual generated October 2026
Screenshots taken from the app with example data

NH Estimator is a phone-first web app for pricing decorating work. You walk round the property measuring up, and the app turns those measurements into a fully priced quote — labour, materials, markup, deposit and payment plan — which you can send straight into Xero. Once a quote is accepted, the same app schedules the job, tracks the materials and time you actually use on site, and builds the final invoice back into Xero when you're done.

This manual follows the life of a job in order: **set up** → **measure** → **quote** → **schedule** → **on site** → **invoice**. If you're brand new, read [Getting started](#) and [Measuring up](#) first — the rest will make sense as you need it.

1. Getting started

Your first half hour, in order: install it on your phone → put your own name on it → connect Xero → check your rates → start your first job. That's the whole setup. Everything after section 1 you can read as you need it.


Install it on your phone

The app lives at its own web address — if someone set this copy up for you, that link is the one they sent you. It's designed to be **installed to your home screen** so it opens full-screen like a normal app:

- **iPhone:** open the app in Safari → tap the Share button → **Add to Home Screen**.
- **Android:** open it in Chrome → menu (⋮) → **Add to Home screen / Install app**.

If your copy of the app has a password set, you'll be asked for it the first time you open the app on a device — **once per phone, and then not again**. The sign-in refreshes itself every time you use the app, so it only ever comes back if you go a full month without opening it, get a new phone, or clear the browser's data. Let your phone save the password to iCloud Keychain (or your password manager) on that first login and even those rare times are a Face ID tap rather than typing.

Setting a password is worth doing now that you can send clients an approval link: the link points at the same web address the app runs on, so a client who trimmed it back to the domain would otherwise land on your jobs. With a password set they get a sign-in screen and nothing else. If there's no password on your instance, guard the web address like you would any private page.

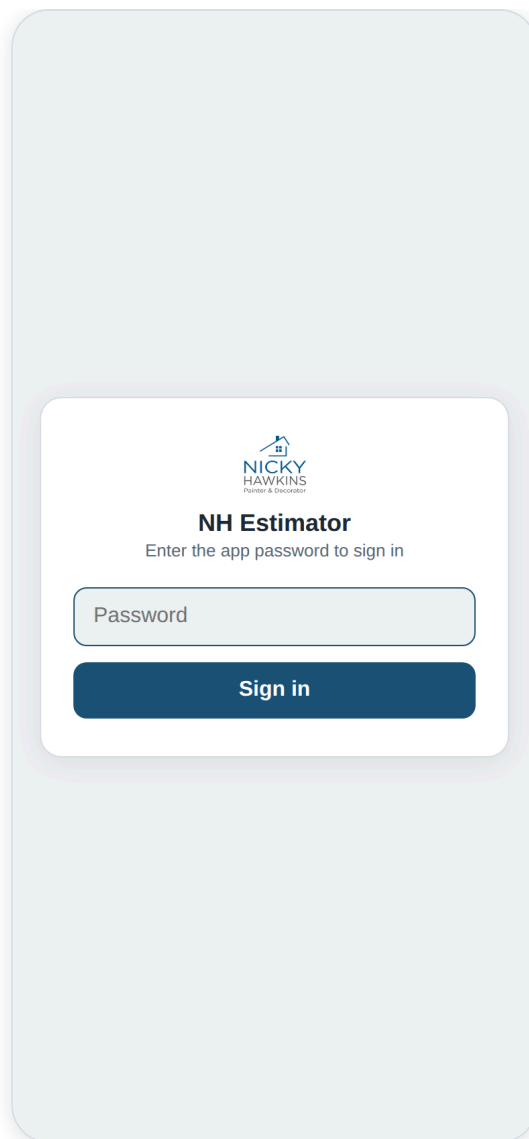

Make it yours

Do this before you send anything to a client. Until you enter your own details the app falls back to the name and logo it was built with, so a quote, a snag-list PDF or even your sign-in screen could go to a client with somebody else's business on it.

Menu (≡) → **Settings** → **Business**:

- **Business name** — replaces that fallback everywhere it appears.
- **Logo** — optional, and shown *instead of* the name in the header when you set one. Leave it empty and your business name is used on its own.

Between them they carry through to the app header, the sign-in screen, the top of every quote you send and its PDF, the snag-list PDF and your calendar feed. To check it landed, open any job and tap **Open** on **Quote** on the Documents tab — what you see there is what the client sees.

Connect Xero (one-off)

Almost everything works without Xero, but quoting and invoicing shine with it connected:

1. Open the menu (≡) → **Settings**.
2. Scroll to **Xero Integration** → tap **Connect Xero** and sign in.
3. Back in Settings, under **Materials (Xero Items)**, tap **Refresh from Xero** to pull in your paint products, then pick your default products (wall paint, ceiling, woodwork, primer, mist coat, masonry...). Every new room starts with these defaults, so set them once and forget them.
4. If you plan to record deposits through the app (see [Recording a deposit](#)), also pick a bank account under **Settings → Deposits (Xero)**.

Check your rates

The app ships with sensible defaults (day rate £300, 20% markup, 25% deposit, standard coverage rates), split across two screens off the menu: **Rates** holds the calculation tables, **Settings** holds everything else. Skim through both once and adjust anything that doesn't match how you price — every figure in a quote comes from these numbers.


Your first job

There's nothing to create before you can start measuring: the app opens on a starter job called **My Job**, and Measure, On Site and Summary are already pointed at it. Give it the real name before you go any further, though — a job's name is what you'll be searching for months later.

Menu (≡) → **Jobs** → tap the  on *My Job* and type the client's address or job name over it. From then on  on that same screen starts each new job. The one you're working on is marked **CURRENT**; Rates and Settings are global and apply to every job. There's more on all of it in [Jobs](#).

Then open  **Measure** and put a room in it — [Measuring up](#) picks up from there.


2. Finding your way around

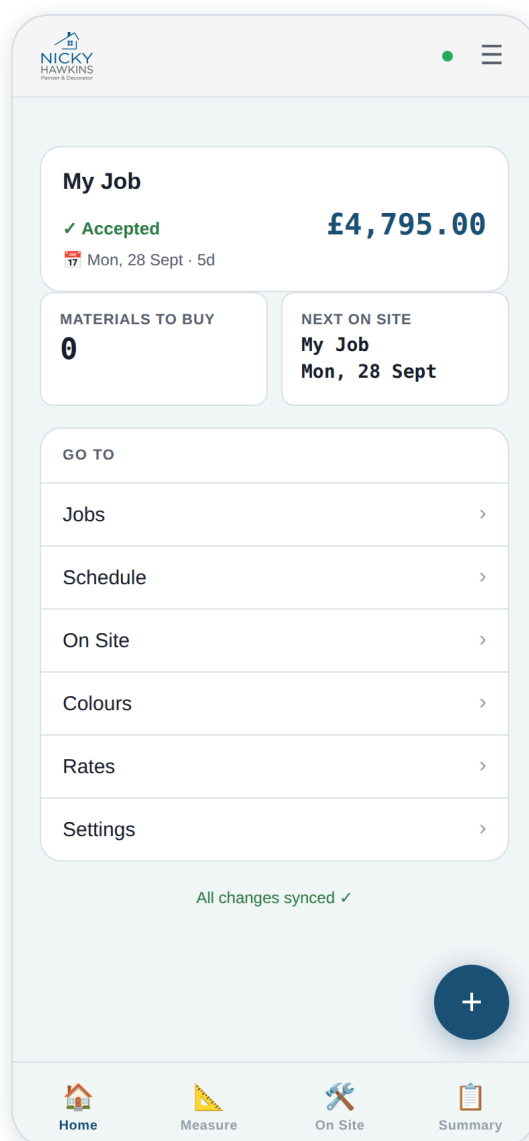

The **Home** screen is your morning glance: the current job and its status, a **Materials to buy** count, **Next on site** — the client you're due at next and the date — and shortcut links. The **+** button in the bottom corner starts a new job, the same as the one on the Jobs screen: type a name and you land back on Home with the new job as current. When something needs chasing — a quote that's gone unanswered too long, a finished job you haven't invoiced — it appears at the top of Home as an attention strip.

The **bottom bar** is always visible and follows the life of a job, left to right:

Tab	What it's for
 Home	Dashboard and reminders
 Measure	Everything measured for the current job — rooms, exterior items, kitchen, fitted units and custom lines
 On Site	Time, materials and variations while the job runs
 Summary	The priced quote, Xero, and job status
 Documents	Every report, PDF, sheet and link for the job — see The Documents tab

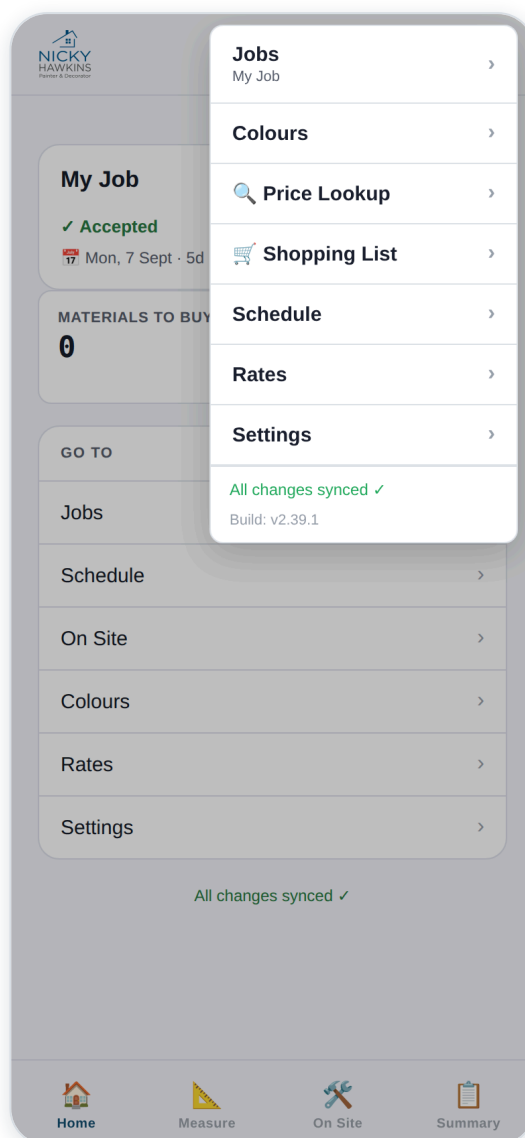

The **menu** (≡), top right on most screens, holds every other screen:

Item	What it's for
Jobs	Switch jobs, start a new one, import a pre-app Xero quote
Colours	Every surface's colour, decided or not, and paint-ordering quantities
 Price Lookup	A till-check: search any Xero sales item for its price
 Shopping List	A running pick-up list, separate from any one job
Schedule	The job calendar
Rates	Every number behind a calculated price
Settings	Business details, Xero, backup, appearance


Below those,  **Undo** appears whenever there's a recent change on the current job you can undo (see [Materials & Undo](#)), followed by the sync line — "All changes synced ✓" means everything you've entered is safely on the server — and the build number, so you can confirm a deploy has actually reached your phone. Everything saves automatically as you type; there is no save button to forget.


The Documents tab

Every report, PDF, sheet and link a job has is on one tab,  **Documents**, at the right of the bottom bar. It's the only place they live, so nothing for the client is tucked away on a working screen. It's in two groups:

- **For the client:** the **Quote** (preview and PDF), **Where we are**, the **Windows and doors work report** (and, once the final invoice is in Xero, attaching it), the **Spec sheet** (open it to tick things off, as a PDF, or as a shared link), the **Snag list** PDF, and the **Client's page** link (copy it, or open it to see what they see).
- **For you and the team:** **Work to do**, **Price per window**, **Forecast**, **window by window**, **Repair size adjustments**, and **Export (CSV)**.


Each one says what it's for, with **Open** (and **Share** where it's a PDF to send). One that doesn't apply yet stays on the list, greyed, saying why: *No snags on this job*, *Once the quote is accepted*, *This job has no windows and doors set up*. The tab loads the job's latest on the way in; with no signal it works from what's on the phone.

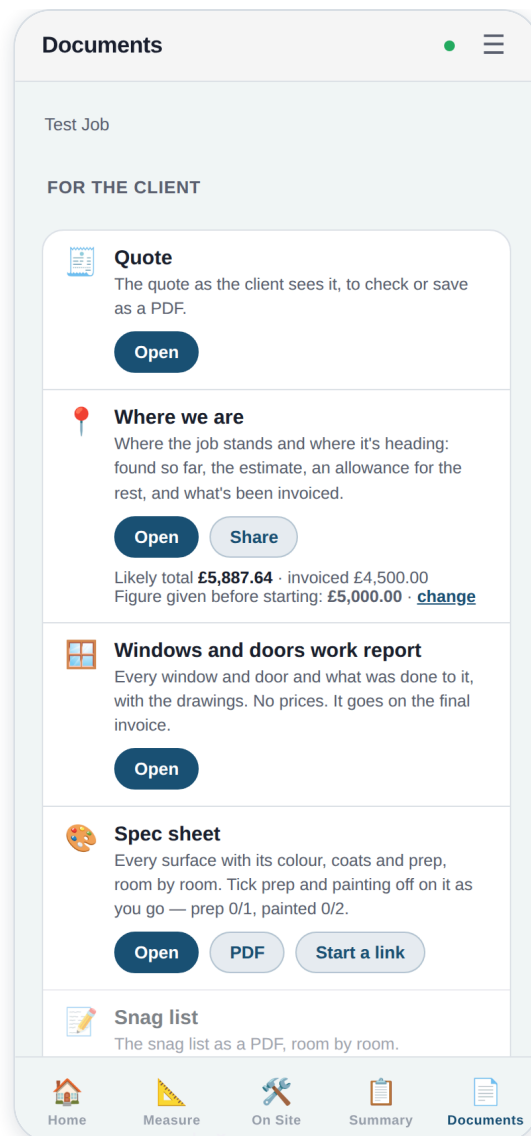

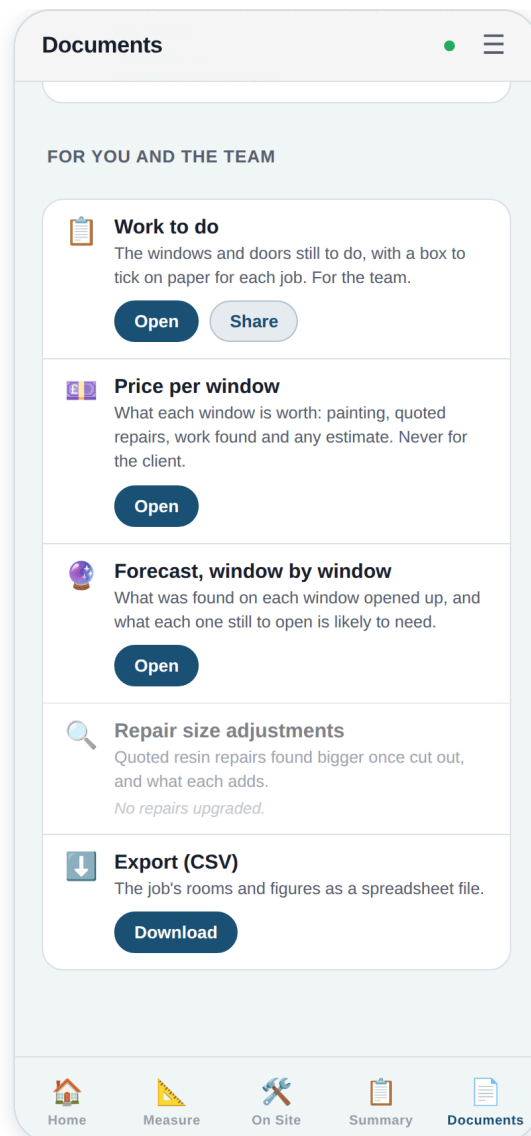


3. Measuring up

Open  **Measure**. This screen lists everything measured for the current job — **Interior** rooms, **Exterior** items, the **Kitchen**, **Fitted Units** and **Custom Lines** — each showing its cost and estimated days at a glance. The figures on this screen are your *labour cost before markup* (the banner at the top says so); the chip in the top bar shows the customer-facing quote total, and Summary has the full customer-facing breakdown.

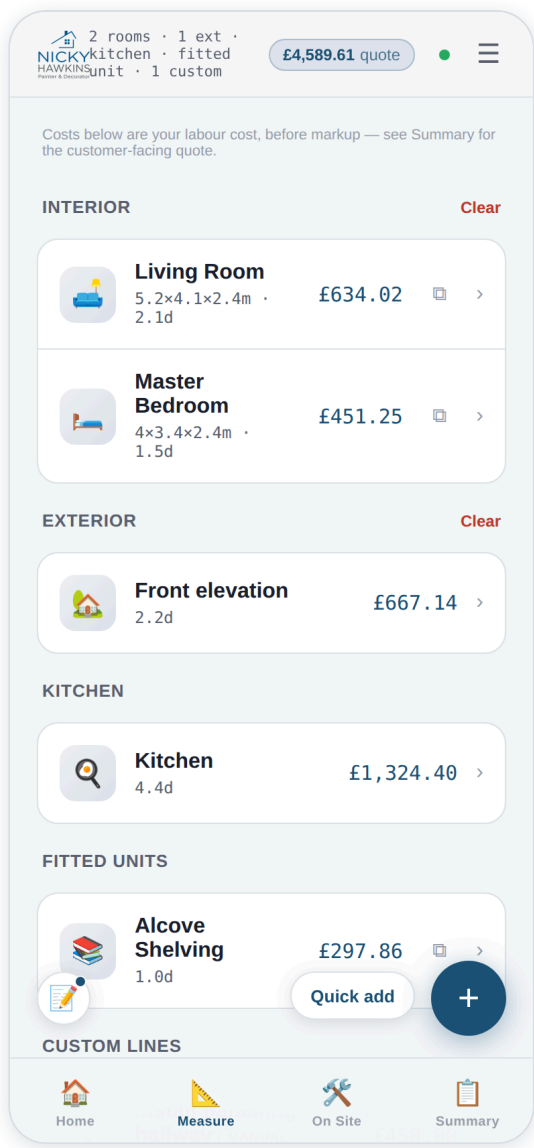


Tap the  **button** (bottom right) and choose what you're adding:

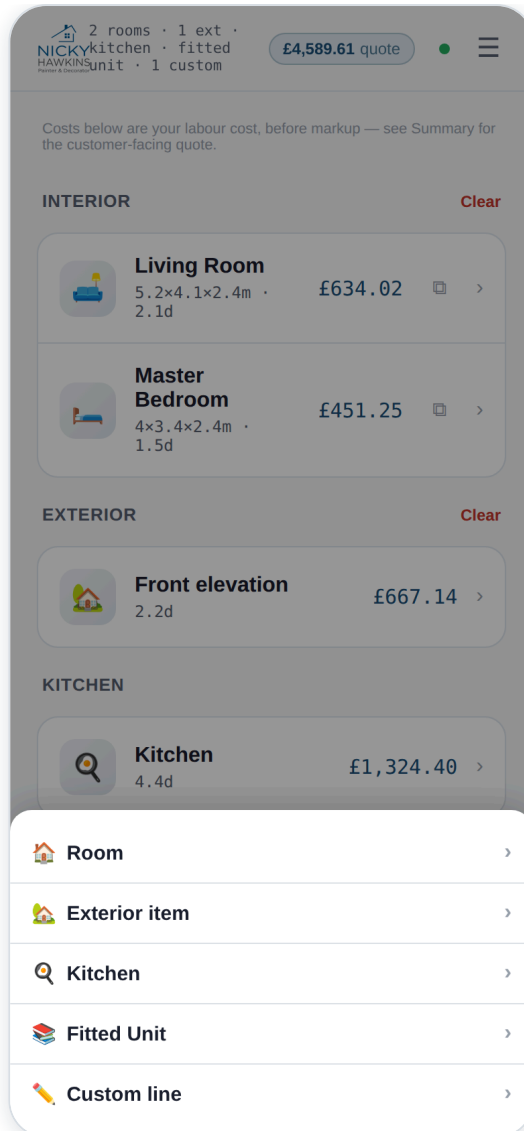

Quick add: walking a big house? Tap **Quick add** instead and just type the room names one after another — Living Room, Hall, Bedroom 1... — then go back round measuring each one on a second pass. Much faster than filling in a full form in every doorway.

Bulk edit

Once there's more than one room, **Bulk edit** appears on the Interior header. Tap it and every room gets a tick box — pick the ones you want (or **Select all**), then **Edit N rooms**:

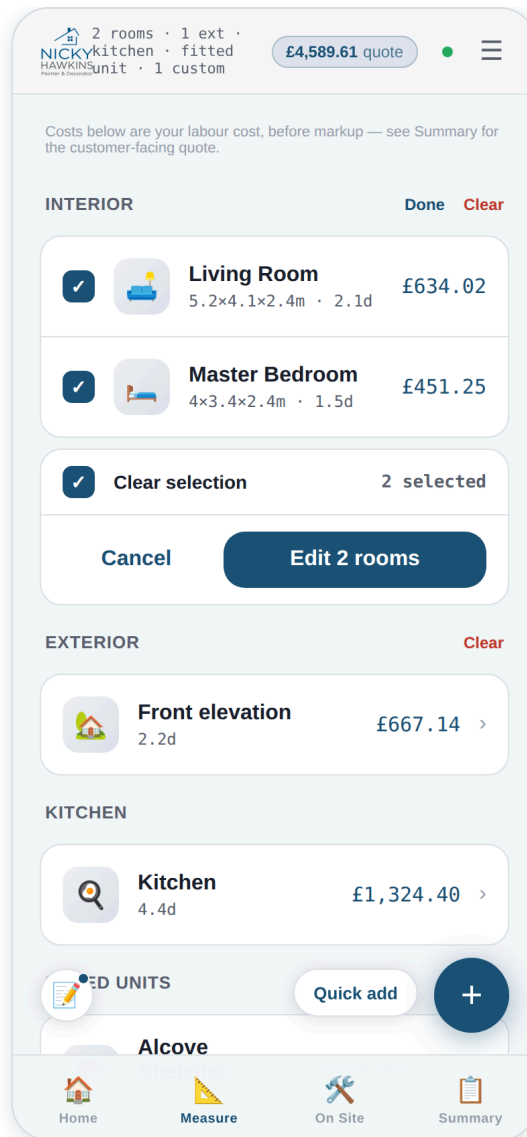

The panel that opens covers the fields worth doing in one go: a product and colour band for each of the seven paint roles (walls, ceiling, woodwork topcoat, woodwork primer — with a **None** option for a self-priming topcoat — mist coat, feature wall and panelling), coat counts for walls/ceiling/woodwork/doors/frames, a mist coat toggle for walls and ceiling, and the room's prep level (which covers doors and frames too):

2 rooms · 1 ext ·
kitchen · fitted
unit · 1 custom

£4,589.61 quote



Costs below are your labour cost, before markup — see Summary for

BULK EDIT · 2 rooms

Cancel

Leave a field alone and it is not touched on any room. A surface a room hasn't got is skipped, never created.

WALL PAINT

Product
overwrites the wall product on every selected room

— No change —

CEILING PAINT

Product
defaults to Settings on a room that has none

— No change —

WOODWORK TOPCOAT

Product
skirting, sills, windows, doors and frames

— No change —

WOODWORK PRIMER

Product
or None, for a self-priming topcoat

— No change —

MIST COAT PAINT

Product
only reaches rooms that have a mist coat, or are getting one below

— No change —

FEATURE WALL

Product
painted feature walls only

— No change —

Cancel

Preview changes

BULK EDIT · 2 rooms Cancel

Walls No change

Ceiling No change

Woodwork
skirting, sills, windows No change

Doors No change

Frames No change

MIST COAT
adds only — a surface left off never turns an existing mist coat off

Walls ☒

Ceiling ☐

Woodwork has no mist coat in this app — walls and ceilings are the only surfaces it is priced for.

PREPARATION
the room's prep uplift — doors and frames follow it too

No change Minimal Standard Heavy Custom

Cancel Preview changes

Every field starts on "No change" and stays there unless you set it — nothing carries over from the last time you used it, and a field you don't touch is left alone on every room. Two rules worth knowing: it **never invents a surface a room hasn't got** (ask for woodwork coats and a room with no woodwork is skipped, marked N/A in the preview), and **mist coat only ever adds** — ticking a surface turns it on where it's off, but leaving it unticked never turns an existing mist coat off. Coats work the other way and the form says so: the number you type is the exact coat count, not an increase.

Tap **Preview changes** to see exactly what would move, room by room, old → new, before anything is written:

2 rooms · 1 ext ·
NICKY kitchen · fitted
HAWKINS unit · 1 custom

£4,589.61 quote

Costs below are your labour cost, before markup — see Summary for

BULK EDIT · 2 rooms Cancel

Woodwork
skirting, sills, windows No change

Doors No change

Frames No change

MIST COAT
adds only — a surface left off never turns an existing mist coat off

Walls ☒

Ceiling ☐

REVIEW CHANGES Back

2 of 2 selected rooms will change. Nothing is written until you tap Apply.

Living Room
Wall coats: 2 → 3
Mist coat — walls: off → on

Master Bedroom
Wall coats: 2 → 3
Mist coat — walls: off → on


Back Apply to 2 rooms

Nothing is saved until you tap **Apply**; **Back** returns to the panel with every field still set. Afterwards the rooms are ordinary rooms — open any one and edit it as normal, nothing is locked. Staircase/HSL rooms take part too, but only for the fields that actually move their price: door coats, frame coats and every product override apply normally, while wall/ceiling/woodwork coats, the mist toggles and the prep level are skipped (a staircase room's total is worked out and frozen when you save the staircase form itself — change those on the staircase form instead).

Rooms and fitted units can also be **duplicated** — tap the  icon on their card in the Measure list. Everything copies: dimensions, coats, prep, colours and products, dropped in right below the original as "(copy)". This is the fast way to do bedrooms 2/3/4, or two matching alcove units either side of a chimney breast — measure one, copy it, change a couple of numbers. A copy always starts its own client sign-off from Pending (it never inherits the original's ✓), and on an accepted job it arrives flagged as a variation, same as anything else added after acceptance.

Putting the list in order

You measure in the order you walk the house, and the room you remembered on the way out lands at the bottom of the list. **Reorder** — on the **Interior**, **Exterior**, **Fitted Units** and **Custom Lines** headers, once that section has more than one row — walks them into the order you actually want:

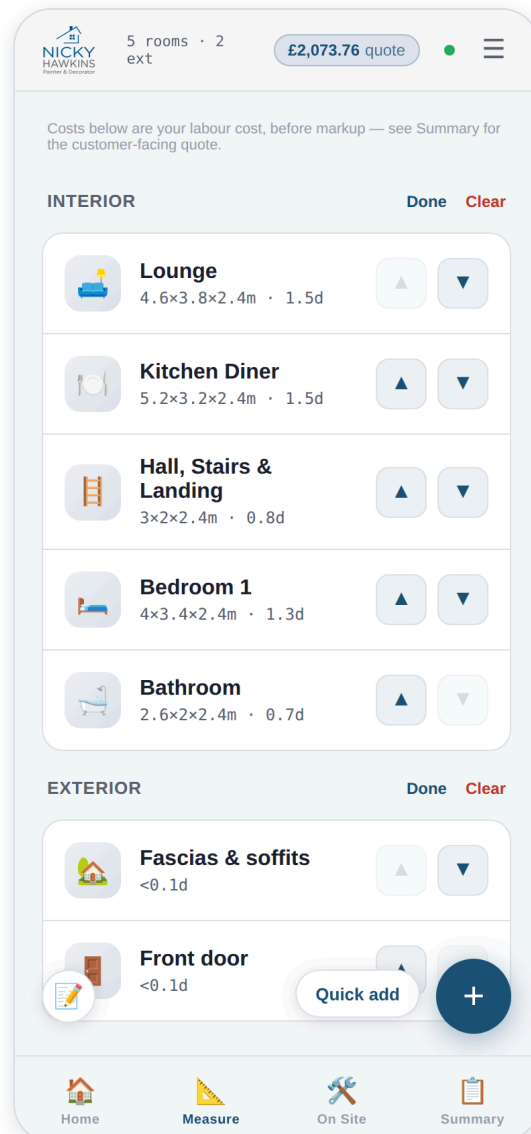

Tap it and every row swaps its cost for ▲▼ arrows; tap those to walk a row up or down. It's one mode for the whole screen — every section's link reads **Done** while it's on, and any of them turns it back off. A row only ever moves **within its own section** (a room never walks into the exterior list), and the sections themselves keep their order. While you're reordering, rows don't open when tapped and can't be swiped away, so nothing gets deleted or edited by a stray finger — and the arrow at the top of a list is greyed out because there's nothing above it.

The order you set is the order everything downstream reads: the Summary breakdown, the client-facing Quote view, the Xero quote, the CSV export and the final invoice. Each move saves as you make it, like any other change (offline included, queued until you're back in signal). Bulk edit and Reorder are one at a time — turning either on takes the other's link off the header until you're done.

Adding a room

Edit Room Save

ROOM DETAILS

Room Name

Staircase / HSL
Hall, stairs & landing — swaps in staircase geometry below ☐

DIMENSIONS

Room shape
Perimeter / Segments for L-shapes & odd rooms
Standard Perimeter Segments

Length
metres

Width
metres

Ceiling height
metres

Sloped ceiling
Slope makes length × width wrong — type the measured ceiling area instead ☐

BAY WINDOW & ALCOVE/DORMER

Home Measure On Site Summary

The form is in two halves, and it follows how you actually work: **walk the room** first — every card that asks you to look at something and count it — then **decide the scheme** once at the end, in the last three cards. Nothing makes you jump back and forth between measuring and pricing while you're stood there with a tape.

Every card is collapsed when the form opens, so what you see first is a short index of the room rather than a page to scroll past — tap a heading to open that card, tap it again to fold it away. The two exceptions are at the top: **Room Details** (the room name, the Staircase / HSL toggle, and — once the quote is accepted — the **Variation** toggle) is always on screen, since you touch them on every room, and **Dimensions** starts open because you fill it in every time. Dimensions is still an ordinary section, so once you've measured you can collapse it too and keep the rest of the form in view.

Only the top matters for a basic room:

1. **Room Name** — e.g. "Living Room".
2. **Dimensions** — pick the **Room shape** first:

- **Standard** — length × width × height, for a plain rectangular room (the default).
- **Perimeter** — type the wall perimeter and ceiling height directly, plus the ceiling area, when the footprint doesn't reduce to L×W.
- **Segments** — build the room from rectangular zones (each L×W) that sum into the wall run and ceiling area — made for L-shapes and rooms with big alcoves.

In any mode, the **Bay Window & Alcove/Dormer** add-ons cover the common awkward bits: bay window extra perimeter, alcove/dormer wall and ceiling area, and a sloped-ceiling toggle (type the measured ceiling area directly, since a slope makes length × width wrong). So loft rooms and bays no longer need fudged numbers. (The **Staircase / HSL** toggle above swaps this card for staircase geometry — see [Staircases](#) below.)

The screenshot shows the 'Edit Room' interface with a back arrow and 'Save' button at the top. Below the title, a note explains that the measurement is for zones like an L-shape or a room with an alcove, where walls and ceiling are summed across zones. The interface includes two zones for measurement: Zone 1 (3.2 x 4) and Zone 2 (2.1 x 1.8). Below these, it displays calculated values: Wall perimeter (22.2 lm) and Ceiling area (16.58 m²). There is a '+ Add zone' button and a 'Ceiling height' field set to 2.4 metres. A 'Sloped ceiling' toggle is present, with a note that it's for when a slope makes length x width wrong. At the bottom, there are four expandable sections: 'BAY WINDOW & ALCOVE/DORMER', 'DOORS & FRAMES', 'EXTRAS', and 'FEATURE WALL'. The bottom navigation bar has four icons: Home, Measure, On Site, and Summary.

Walk the room

The rest of the measuring cards follow in the order you'd meet them moving round the room — all optional, all collapsed until you tap them, and you skip whatever the room hasn't got:

- **Doors & Frames** — doors and their frames are priced as separate line items, each with its own quantity and coats:

Edit Room Save

DOOR
leave qty at 0 to price frames only

Qty

Coats (0 1 2 3)

FRAME
leave qty at 0 to price doors only

Qty

Coats (0 1 2 3)

Both sides
Price the whole leaf (both faces) in this qty — off prices just the side visible from this room ☐

Fire door (FD30/FD60)
Intumescent-compatible coating surcharge; includes edges in the coat/coverage calc ☐

Self-priming paint
set in Paint & Colour > Woodwork Primer, with the rest of the woodwork's priming ☒

Remove & refit ironmongery
Handles/hinges/locks taken off and refitted ☐

Mask ironmongery in place
Cheaper than removing — mutually exclusive with removing ☐

Home Measure On Site Summary

Leave a Door or Frame's quantity at 0 to price just the other one. Their prep comes from the room's **Preparation** card — there's one prep decision per room, not a separate one here. Per line you'll also find **Fire door** (an FD30/FD60 intumescent-compatible surcharge, edges included in the coverage calc), **ironmongery** (remove-and-refit, or mask-in-place — mutually exclusive), and **Both sides** (price the whole leaf as one line instead of just the face seen from this room — handy for a door between two painted rooms, split one face each). **Self-priming** for doors and frames is not here — it's with the rest of the woodwork's priming, under **Paint & Colour > Woodwork Primer** (below), and the row here just says so.

- **Extras** — windows (m²), window sills and radiators. Each adds its own time and paint. Putting a figure in **Radiators** also brings up the **Radiators** colour row in Paint & Colour below — see [Radiator colours](#).
- **Feature Wall** — one wall in a different finish: paint, or wallpaper (standard, wide vinyl or mural).
- **Wallpaper** — lining and finish paper for walls or ceiling, priced per roll with an automatic **rolls-to-order** count, plus a free-text note for the paper itself. **Finish paper takes that surface out of the paint** — no emulsion bought, no painting time charged, whatever

the Coats card says. Lining on its own still paints (it's hung *to be* painted over). Covered in detail in [Wallpaper](#) below.

- **Excluded Walls** — walls you're *not* painting (a tiled wall, wallpaper that's staying). Add its width × height and it's deducted.
- **Panelling** — wall panelling by area with its own coats (up to 4), prep and colour, independent of the room's own settings. Leave a wall's **–m²** chip on when the panelling sits on the room's own walls: its area comes off the painted walls *and* the wallpapered walls, so you can paper a room and paint its panelling without paying for either twice. For half-height panelling enter just the panelled part — the wall above keeps its paint or paper.

PANELLING

PANELLING

each wall as its own width × height, up to 4 coats; leave empty to skip. –m² takes that wall's area off the room walls so it isn't also priced as wall paint or hung with wallpaper — for half-height panelling enter just the panelled portion and the wall above stays in the room colour (or paper, as shorter drops). Skirt paints that wall's skirting with the panelling — it comes off the room's woodwork and is priced as panelling

Wall 1

–m²

Skirt

3.67

×

1.2

2

×

Wall 2

–m²

Skirt

3.34

×

1.2

2

×

Deducted from wall area

8.41 m²

Skirting painted with panelling

3.67 m

+ Add panelling wall

The **Skirt** chip is for skirting painted in the panelling's paint and colour, which it usually is. With it on, that wall's skirting comes off the room's woodwork (both the time and the woodwork paint) and is priced as part of the panelling instead: the wall's width × a 0.15 m skirting board, at the panelling's coats, time rate and prep, out of the panelling tin.

Skirting painted with panelling under the rows shows how many metres have moved, and on Summary the room's line reads **Panelling (incl. skirting)**. Both chips start on for a new wall; tap **Skirt** off where the skirting is a different colour and it stays with the rest of the woodwork. Rooms saved before this chip existed keep their skirting as woodwork until you tap it on. It works on staircase rooms too.

- **Mist Coat** — for fresh plaster; tick walls and/or ceiling, with a manual area override for "only part of it is new plaster".
- **Wallpaper Stripping** — paper coming off before you paint. Tick **Walls** and **Ceiling** separately (a room papered on the walls with a painted ceiling is the usual case), and give each surface its own **paper type**:

WALLPAPER STRIPPING

Strip Wallpaper — Walls

Prices stripping the existing paper off this room's wall m², at the tier's minutes per m² from Rates

WALL PAPER TYPE

How hard it is to get off — the rate for each is on Rates > Wallpaper Stripping

Lining

Standard

Textured

Layers

Strip Wallpaper — Ceiling

Same, against this room's ceiling m²

CEILING PAPER TYPE

Set independently — a lining-paper ceiling over woodchip walls is an ordinary find

Lining

Standard

Textured

Layers

Walls: 36.00 m² × 12 min/m² = 432 min (£308.57)

Ceiling: 14.00 m² × 3 min/m² = 42 min (£30.00)

The four types are **Lining** (a single skim of lining paper), **Standard** (ordinary patterned or vinyl), **Textured** (woodchip, blown vinyl, heavy embossed) and **Layers** (papered over more than once — a steamer job). Each carries its own minutes per m², set once on [Rates > Wallpaper Stripping](#). The room's walls and ceiling are already measured for the paint, so there's nothing extra to measure: the time is *that surface's m² × its type's minutes per m²*, and the line under the toggles shows the sum it just priced. Walls you've put in **Excluded Walls** aren't stripped either — paper that's staying isn't work.

The time joins the room's labour like any other prep step, so it lifts the room's price *and* its days on the Schedule.

On the client's copy it gets a line of its own — *"Wallpaper Stripping — Back Bedroom"*, with the paper type underneath. That's the point of it: on a strip-out, or a strip-and-repaper, a room line reading *"Back Bedroom £480"* with nothing painted looks like a mistake rather than a day with a steamer. The money is **carved out** of the room's line, never added on top, so the total is exactly what it was — and a room that's *only* being stripped shows the one line rather than a £0.00 paint line beside it. Summary still counts it inside the room (that's the view that feeds the diary and the spec sheet) and marks the row *own quote line* so the two reconcile.

It's named in the quote description too, beside the mist coat: *"Existing wallpaper will be stripped from the walls prior to decoration."* (past tense on the invoice). It says the surfaces, not the paper type — the type is on the priced line, where it's what explains the figure. A job where **nothing is being painted** now reads properly as well: the description describes the stripping instead of leaving the painting paragraph empty.

Set the rates before you use it. The four minutes-per-m² figures ship at **0** — they're yours to calibrate, and the app won't guess a number for work it has never watched you do. With a type still at 0 the card says so in orange rather than quietly pricing the strip at nothing.

Decide the scheme

Once you've stopped measuring, the last three cards are the pricing decisions — made once, with the room already captured:

- **Coats** — walls, ceiling and woodwork each default to 2. Set any of them to 0 to skip that surface entirely (e.g. ceiling not being painted). Below the coat counts sit three independent **spray toggles** — one per surface:

The screenshot shows the 'Edit Room' screen in the NH Estimator app. At the top, there are back and save arrows. Below are three sections for 'Walls', 'Ceiling', and 'Woodwork'. Each section has a row of four buttons labeled 0, 1, 2, and 3. The '2' button is selected for all three. Below these are three toggle switches: 'Spray walls' (off), 'Spray ceiling' (on), and 'Spray woodwork' (on). Each toggle has a descriptive text block. Below the toggles are three expandable sections: 'PREPARATION', 'PAINT & COLOUR', and 'PREVIEW'. The 'PREVIEW' section shows 'Wall area' as 38.16 m². At the bottom is a navigation bar with four icons: Home, Measure, On Site, and Summary.

Spray walls is off by default (also adds the spray sundries bump for the extra masking); **Spray ceiling** and **Spray woodwork** are on by default, since ceilings and woodwork are normally sprayed. A surface's toggle adds the Rates spraying uplift % to its litres on top of the standard or per-product rate — labour time is unchanged either way.

- **Preparation** — Minimal / Standard / Heavy, or a custom percentage. This scales labour across the whole room, doors and frames included. **Making Good** adds a fixed £ amount for repairs.
- **Paint & Colour** — each surface takes your default product from Settings; override the product or colour band here when a room is different. The **colour** itself is a free-text box per surface (walls, ceiling, woodwork, and again on Feature Wall and Panelling), pre-filled with where it goes — leave it as it is and decide later. See [Colours](#). A room with radiators measured also gets a **Radiators** colour row here — see [Radiator colours](#).

Self-priming lives on this card, under **Woodwork Primer** — both toggles, together, rather than one in Doors & Frames and the other in Preparation:

The screenshot shows the 'Edit Room' interface with a 'Save' button at the top right. The settings are organized into sections:

- WOODWORK TOPCOAT**
 - Product: Use default (S) (defaults to Settings)
- WOODWORK PRIMER**
 - Product: Use default (S) (defaults to Settings, or None)
- Self-priming — doors & frames**
 - Skips the primer coat on doors and frames, adding one extra topcoat instead. ☐
- Self-priming — other woodwork**
 - Skirting, sills and windows — same thing for the woodwork that isn't doors or frames. Both toggles hand over to the product once the Woodwork Topcoat above has a Self-priming entry in Rates → Paint Coverage. ☐
- MIST COAT**
 - Product: Use default (S) (defaults to Settings)
- PREVIEW**

Wall area	31.64 m ²
Ceiling area	15.12 m ²
Estimated cost	£540.45
Estimated time	1.8d

At the bottom is a navigation bar with icons for Home, Measure, On Site, and Summary.

Self-priming — doors & frames and **Self-priming — other woodwork** (skirting, sills, windows) each skip the primer coat on their woodwork and add one extra topcoat in its place. Sitting them under the primer product is the point: with a toggle on, that primer isn't bought for that woodwork. The **Woodwork Topcoat** product a couple of rows above can take the decision off you entirely — give that paint a Coverage Rates entry in Rates

with **Self-priming** set, and both toggles are replaced by a note reading *On — {product}*, because the product has decided. Clear the entry and your toggles come back exactly as you left them.

Two cards at the bottom sum up what you've entered:

- **Preview** — the live estimated cost and time, updating as you type.
- **Paint Needed** — how many litres this room takes, per surface, at your coverage rates (with each surface's spray uplift already included, rounded up to the half litre):

The screenshot shows the 'Edit Room' screen in a mobile app. At the top, there's a header with a back arrow, 'Edit Room', and a 'Save' button. Below the header, there are two toggle switches: 'Remove & refit ironmongery' (with subtext 'Handles/hinges/locks taken off and refitted') and 'Mask ironmongery in place' (with subtext 'Cheaper than removing — mutually exclusive with removing'). Below these are several expandable sections: 'EXTRAS', 'WALLPAPER', 'MIST COAT', 'PANELLING', 'PREPARATION', and 'PAINT & COLOUR'. At the bottom, there's a 'PREVIEW' section containing a table with the following data:

PREVIEW	
Wall area	39.24 m ²
Ceiling area	21.32 m ²
Estimated cost	6624.02

At the very bottom is a navigation bar with four icons: Home, Measure, On Site, and Summary.

These are the same figures Summary's materials list buys from — a feature wall in the room's own colour and product folds into the Walls line rather than getting its own row, since that's one tin of paint bought once.

Staircases (Hall, Stairs & Landing)

Stairwells are the hardest thing to measure by hand — big raking walls you can't get a tape across, hall and landing running into each other. The app does the geometry for you. Flick the **Staircase / HSL** toggle at the top of the room form and the Dimensions card is replaced with

staircase geometry:

The screenshot shows a mobile app interface titled 'Add Room' with a 'Save' button in the top right. The interface is divided into several sections:

- ROOM DETAILS**
 - Room Name**: A text input field containing 'Hall, Stairs'.
 - Staircase / HSL**: A toggle switch that is currently turned on. Below it, the text reads: 'Hall, stairs & landing — swaps in staircase geometry below'.
- NUMBER OF FLOORS**
 - Floors**: A selection of three radio buttons labeled '1', '2', and '3'. The '2' button is selected. Below the buttons, the text reads: 'inc ground floor'.
- GROUND FLOOR HALL**
 - Length**: A text input field containing '4.2', with 'metres' written below it.
 - Width**: A text input field containing '1.9', with 'metres' written below it.
 - Height**: A text input field containing '2.4', with 'metres' written below it.
- STAIRCASE 1**
 - Stair walls**: A selection of two radio buttons labeled '1' and '2'. The '1' button is selected. Below the buttons, the text reads: 'how many sides get painted'.

At the bottom of the screen is a navigation bar with four icons and labels: 'Home' (house icon), 'Measure' (triangle icon), 'On Site' (wrench and screwdriver icon), and 'Summary' (clipboard icon).

Work down the cards:

1. **Number of Floors** — 1, 2 or 3 including the ground floor. A typical two-storey house is **2**: ground-floor hall, one staircase, first-floor landing. Choose 3 and a second staircase and landing appear.
2. **Ground Floor Hall** — plain length × width × height, like any room.
3. **Staircase 1** — this is where the app earns its keep:

The screenshot shows the 'Add Room' screen in the NH Estimator app. At the top, there is a back arrow and the title 'Add Room', and a 'Save' button. The screen is divided into two main sections: 'Stair walls' and '1ST FLOOR LANDING'.

Stair walls section:

- Stair walls:** how many sides get painted. A toggle switch is set to '1'.
- Steps:** count as you go up. Value: 13.
- Stair width:** metres — physical width of the stairs. Value: 0.9.
- Wall height at bottom:** metres. Value: 2.4.
- Riser:** default 220mm. Value: 0.22.
- Tread:** default 220mm. Value: 0.22.
- Top step:** metres — measure at the top, see diagram. Value: 0.25.

1ST FLOOR LANDING section:


- Length:** metres. Value: 3.0.
- Width:** metres. Value: 1.9.
- Height:** metres. Value: 2.4.

At the bottom, there is a navigation bar with four icons: Home (house icon), Measure (triangle icon), On Site (wrench icon), and Summary (clipboard icon).

- **Stair walls** — how many sides of the staircase get painted (1 or 2).
- **Steps** — count them as you go up.
- **Stair width** — the physical width of the stairs.
- **Wall height at bottom** — floor to ceiling at the foot of the stairs.
- **Riser** and **Tread** — pre-filled with the standard 220 mm; only touch these on an unusual staircase.
- **Top step** — the one measurement people get wrong, so it has its own diagram:

WALL 1 — Large raking stair wall: DERIVE the width, MEASURE the heights

Width is built UP from the bottom (hall + steps), NOT measured across the top — the upstairs landing length overlaps the stairwell void and double-counts. This avoids that error.

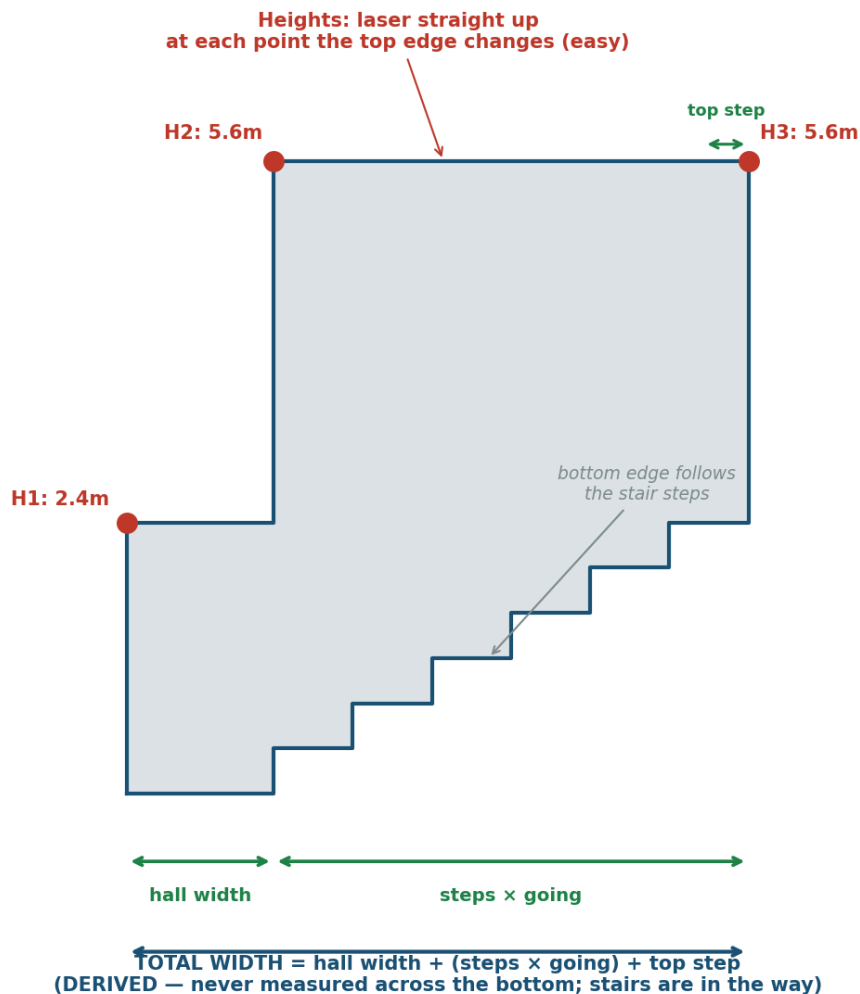

The trick, as the diagram shows, is that the big raking stair wall's width is **derived, never measured**: hall width + (steps × going) + top step. Measuring across the top instead double-counts the stairwell void; measuring along the bottom is impossible because the stairs are in the way. You measure only the easy things — heights straight up with a laser — and the app builds the wall from the step geometry.

4. **1st Floor Landing** (and 2nd, for three floors) — plain length × width × height again.
5. **Staircase Details** — spindles, newel posts and their woodwork coats. These are priced per piece, with their own timings editable under Rates → Time Rates.

The **Staircase Areas** card at the bottom shows its working — so you can see exactly what you're pricing and sanity-check it against the space you're standing in:

←

Add Room

Save

PREPARATION

PAINT & COLOUR

STAIRCASE AREAS

Hall wall area	29.28 m ²
Stair 1 wall width derived — hall width + steps + top step	5.01 m
Staircase 1 walls	13.23 m ²
1st floor landing walls	23.52 m ²
Total ceiling area	13.68 m ²
Total wall area	66.03 m²
Woodwork (doors, frames & skirtings)	£125.71
Staircase woodwork	£240.45
Estimated cost (ex markup)	£821.53
Estimated time	2.74 days

PAINT NEEDED — estimated litres

Walls	10.5 L
Ceiling	2.5 L

Home

Measure

On Site

Summary

Here the derived stair wall width is 5.01 m (1.9 m hall + 13 steps × 0.22 m + 0.25 m top step), giving 13.23 m² of raking stair wall on top of the hall's 29.28 m² and the landing's 23.52 m² — a 66 m² job in total, priced at 2.74 days, without a tape measure going anywhere near the stairwell.

Wallpaper & rolls to order

Any room (including a staircase) can have wallpaper on the walls, the ceiling, or both. Open the **Wallpaper** section of the room form:

The screenshot shows the 'Edit Room' screen of an app. At the top, there's a back arrow and 'Edit Room' text, and a 'Save' button. Below is a 'Pattern / product note' section with a text area and a 'Cole & Son W' button. The 'Walls' section has a text area and 'Lining' and 'Finish' buttons. A 'Wall wallpaper labour' section shows '£780.00'. The 'Rolls to order' section has a text area. The 'Roll length' section has a text area and a '10.05' button. The 'Roll width' section has a text area and a '0.53' button. The 'Pattern match' section has 'No match', 'Straight' (selected), and 'Offset' buttons. The 'Pattern repeat' section has a text area and a '32' button. The 'Spare roll' section has a text area and a toggle switch. The 'Drop length' section shows 'Lining 2.50 m · Finish 2.82 m'. The 'Drops per roll / needed' section shows 'Lining 4 / 33 · Finish 3 / 33'. At the bottom, there's a navigation bar with 'Home', 'Measure', 'On Site', and 'Summary' icons.

- **Pattern / product note** — free text at the top of the card, for whatever you'll want to know later: the pattern name, the supplier, "paste-the-wall", "heavy vinyl, needs a seam roller". Write it while you're stood in the room looking at the paper, and it's there when you come to order or come back to the job. It's **your note, not the client's** — it never appears on the client quote, the Xero quote or the Colours screen, and it doesn't affect a single figure. Optional; leave it blank if the paper is unremarkable.
- **Lining / Finish** — tap either or both. Both on means "line out, then hang finish paper", and each is priced separately per roll (rates in Rates → Wallpaper Rates). The labour appears immediately.
- **Roll length / Roll width** — pre-filled with the standard 10.05 m × 0.53 m; check the label of the actual paper and adjust.
- **Pattern match** — *No match* (lining papers, plains), *Straight* or *Offset*. A pattern match wastes paper, and the calculation accounts for it.
- **Pattern repeat** — in cm, straight off the roll label.
- **Spare roll** — adds one extra to the order, just in case.

Below the inputs the app shows its working, batch-book style: the **drop length** (wall height plus trim allowance, lengthened to allow for the pattern repeat when there's a match), **drops per roll / drops needed**, and the bottom line — **Rolls to order**. Read that to the client off

your phone.

Edit Room Save

Pattern match No match **Straight** Offset

Pattern repeat cm — off the roll label 32

Spare roll order one extra, just in case ☒

Drop length Lining 2.50 m · Finish 2.82 m

Drops per roll / needed Lining 4 / 33 · Finish 3 / 33

Rolls to order Lining 10 · Finish 12

Ceiling both can be on — e.g. line out then finish Lining Finish

EXCLUDED WALLS >

PANELLING >

MIST COAT >

COATS >

Home Measure On Site Summary

The drops-needed figure now writes itself onto the quote. The Wallpapering and Painting & Papering templates open their wallpapering paragraph with "[X] lengths of [paper name/supplier] to be hung to..." — that [X] used to be yours to type, and is now filled in. It's the **lengths** (strips hung, added up across the whole job), not the rolls: rolls are what you order, and they're the figure above. A wall that's lined *and* papered counts **once** — how many strips go round a wall doesn't change with the paper, and the lining is already described as prep a paragraph earlier. A wide-vinyl feature wall counts (still hung in drops); a mural doesn't (one printed piece). The paper name is still yours to fill in.

Two things worth knowing:

Papering a surface stops it being painted. Measure a room the ordinary way — coats default to 2 — then tick **Finish** on the walls, and the wall emulsion and the wall painting time both come off: the paper is going over them. A note on the card says so, because the Coats card still reads 2 and the Paint Needed card just quietly drops a row. **Lining alone changes nothing** — lining is hung to be painted over, so a lined wall keeps its coats, its litres and its time. Setting coats to 0 by hand is still how you say "don't paint this" for anything else. A **painted feature wall** in a papered room keeps its paint and picks up its own labour line.

- The rolls figure is a **buying guide, not a charge** — the labour feeds the quote; the client buys the paper — and the app deliberately doesn't supply it.
- On a staircase/HSL room, wallpaper labour automatically picks up the **staircase multiplier**. Ceilings get their own multiplier the same way.
- **Panelling comes off the paper.** Any Panelling wall with its **–m²** chip on is taken out of the wall paper: a full-height panelled wall loses its drops altogether, and half-height panelling (wainscoting) leaves shorter drops above it, which the count cuts from the offcuts left on your rolls. Turn the chip off for panelling that isn't on the papered walls (a bath panel, boxing-in). Staircase rooms don't do this yet — their paper is still worked out from the full stair walls.

Besides the standard roll calculation above, two other wallpaper types are available (feature wall only, under Rates → Wallpaper Rates for pricing): **Wide Vinyl** (commercial 137 cm material, priced per metre/area) and **Mural** (printed to the wall size, priced per m² or a flat fee).

Adding an exterior item

Edit Exterior Save

LABEL

Description
e.g. Front elevation, Rear fascias Front elevat

MASONRY / RENDER

Area
m² 48

Coats 1 2 3

Textured render
Litres use the textured masonry coverage and labour uses the textured masonry rate — off means smooth ☐

Spray render
Litres use the sprayed masonry coverage, and the masonry labour picks up the spray sundries bump. Labour time is unchanged ☐

FASCIAS & SOFFITS

Length
linear metres 14

Coats 1 2 3

Home Measure On Site Summary

Exterior work is priced per *item* — typically one per elevation ("Front elevation", "Rear + gable") or per job type ("Fascias all round"). Each item is a menu of exterior work; fill in only what applies:

- **Masonry / Render** — area in m² and coats, with toggles for **textured render** (more paint, more time) and **spray render**.
- **Fascias & Soffits** — linear metres and coats.
- **Windows, doors, garage doors and porches** — now priced in their own fixture, [Windows](#) and [doors](#) below, with a drawing of each side of the house. The form's old sections for these (*Exterior Windows*, *Sash Window Restoration*, *Exterior Doors*, *Garage Doors*, *Porch / Feature Door*) only appear on a job that already has them priced that way, so nothing you quoted before changes. A note in the form points to the fixture instead.

← Add Exterior Save

Spray render
Litres use the sprayed masonry coverage, and the masonry labour picks up the spray sundries bump. Labour time is unchanged ☐

FASCIAS & SOFFITS ▾

Length
linear metres

Coats

Windows, doors, garage doors and porches are priced in their own fixture now, with a drawing of each side of the house: [Measure > + > Windows and doors >](#)

PREPARATION ▾

Prep Level **Light** Standard Heavy Custom

Self-priming paint
Fascia/windows/garage woodwork — skips the primer coat, adds one extra topcoat instead. Old-style doors/frames, where shown, have their own toggle. ☐

Making Good
£ fixed cost

Home Measure On Site Summary

- **Preparation** — Light (10%), Standard (25%) or Heavy (40%), or a custom percentage, on the item's labour. New items start on Light. An older item saved at 0% prep opens as **Custom** 0%, so its price stays the same. **Making Good** adds a fixed £ amount, as on rooms.
- **Paint Colours** — one masonry colour and one exterior woodwork colour per item, in the same free-text boxes the rooms use.

Access uplifts for 1st floor and 2nd floor+ work are applied per item automatically; the percentages live in Rates. Exterior paint litres are estimated from assumed areas per unit (window, sash, door, garage, fascia width) — calibrate these in **Rates → Exterior Paint Coverage & Areas** as real jobs prove them out.

Windows and doors

+ → **Windows and doors** on Measure. The outside faces of every window and door on the house, set up on a drawing of each side. (Inside faces stay in the room measures.)

1. The house. The **House** card sets up the drawing so it looks like the actual house. None of it changes the price; it's what the drawing looks like, and what each new window or door starts as.

- **Period** — Georgian, Victorian or Modern. This is just a starting point. Picking one fills in everything below with that period's usual choices: a Georgian house starts as a stucco mid terrace behind a parapet, with 6-over-6 sashes and a pedimented door; a Victorian one as a buff-brick semi with a pitched roof and 2-over-2 sashes; a Modern one as a rendered detached house with casements. Change any of it afterwards. If you've already changed something and then pick a different period, it asks before putting everything back to that period's defaults.
- **Finish** — stucco, buff brick, gault brick (paler and greyer), red brick, render or painted brick.
- **Form** — detached, semi, end terrace or mid terrace. This decides which sides there are to paint: a detached house has all four, a semi or end terrace has the front, the back and its **open side** (left or right, as you face the front), and a mid terrace just the front and back. Neighbours are drawn faintly against a terraced or semi house so it reads as one.
- **Roof** — a **parapet**, a pitched roof with its **eaves to the street**, or a **front gable**.
- **Sides that differ** (tap to open) — for a side that doesn't match the rest of the house: a red-brick back behind a stucco front, or a gable at one end. Each side has its own **finish** and **roof** (*parapet*, *eaves* or *gable*: what that side shows). Leave it on **Same** to follow the house. Dormers follow that side's roof, so a side set to a parapet can't have them. Picking a new period puts every side back to **Same**.
- **Details** (tap to open) — the period's finer points. Georgian: the doorcase (pediment with a radial fanlight, plain fanlight, or portico), window heads (plain, or gauged brick arches on a brick finish), glazing (6 or 8 over 8), the band course and the front railings. Victorian: the sashes (1 or 2 over 2, or margin lights), heads (stone with a keystone, or brick arches), the entrance (recessed arched porch, open with a canopy, or gabled timber porch), bargeboards on a front gable, and plain or polychrome brick bands.

←

Windows & Doors

£694.80

•

☰

HOUSE

Period

a starting point — sets the drawing's defaults and each new opening's; change anything after

Georgian

Victorian

Modern

Finish

Stucco

Buff brick

Gault brick

Render

Painted brick

Form

front, back and the open side

Detached

Semi

End terrace

Mid terrace

Open side

as you face the front

Left

Right

Roof

Parapet

Eaves to street

Front gable

▼ Details

sashes, window heads, entrance, bargeboards, brick detailing

Home

Measure

On Site

Summary

←

Windows & Doors

£694.80

•

☰

▼ Details

sashes, window heads, entrance, bargeboards, brick detailing

Sashes

new sashes start with it

1 over 1

2 over 2

Margin lights

Window heads

Stone, keystone

Brick arch

Entrance

Recessed arched porch

Open, with canopy

Gabled timber porch

Bargeboards

on a front gable

☐

Brick detailing

on a brick finish

Plain

Polychrome bands

Default prep

every opening starts here — one can go up, never down

Light

Standard

Heavy

Restoration

Individual detail

mark single panes and frame parts for extra

☒

Home

Measure

On Site

Summary

←

Windows & Doors

£844.07

•

☰

Front finish

Same

Stucco

Buff brick

Gault brick

Red brick

Render

Painted brick

Front roof

what this side shows of it

Same

Parapet

Eaves

Gable

Back finish

Same

Stucco

Buff brick

Gault brick

Red brick

Render

Painted brick

Back roof

what this side shows of it

Same

Parapet

Eaves

Gable

► Details

doorcase, window heads, glazing, band course, front railings

Default prep

every opening starts here — one can go up, never down

Light

Standard

Heavy

Restoration

Individual detail


mark single panes and frame parts for extra

Home

Measure


On Site

Summary

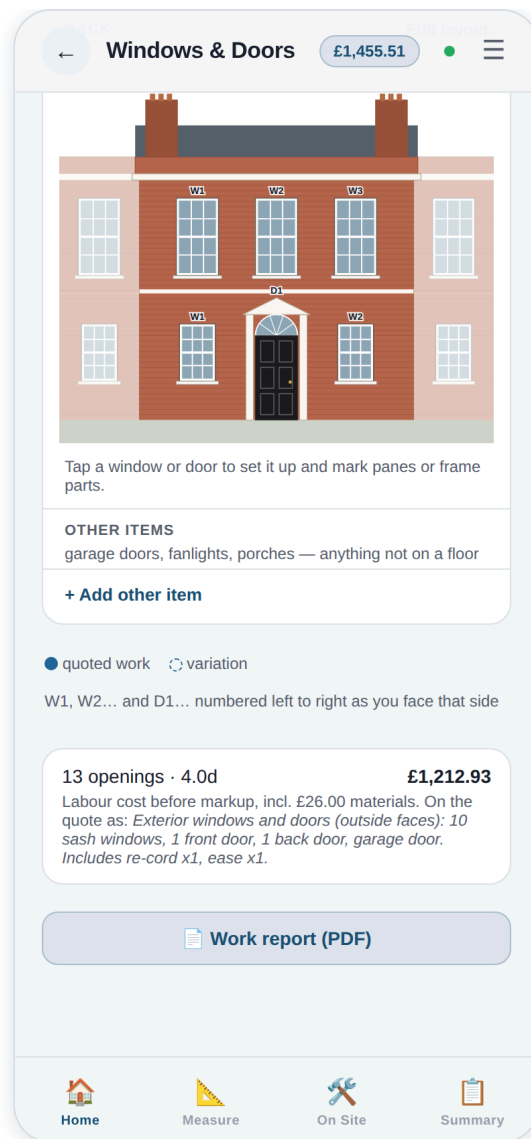


Every change redraws the house straight away, and applies to every side (except anything set under *Sides that differ*). If a change would hide a side that has windows or doors on it (a detached house changed to a mid terrace, say), or would remove dormers (changing the roof to a parapet), it says which ones it will hide and asks first. **Nothing is deleted.** While hidden, those windows and doors and any work marked on them are left off the price, the quote wording, the paint and the reports. Change the house back and they return exactly as they were, work included. So it's safe to try a different house type to show someone. (Before v2.88.2 this deleted them. If that happened on a job, they can be put back from a database backup; ask for the Windows and doors restore.)

Once any side's layout is confirmed, the House card folds down to one line (*Georgian · stucco · mid terrace · parapet · light prep · individual detail*) to save space, and so does the Paint card (*2 coats · windows White · doors Black*). Tap either one, or **Edit**, to open it again, and **Hide** to fold it.

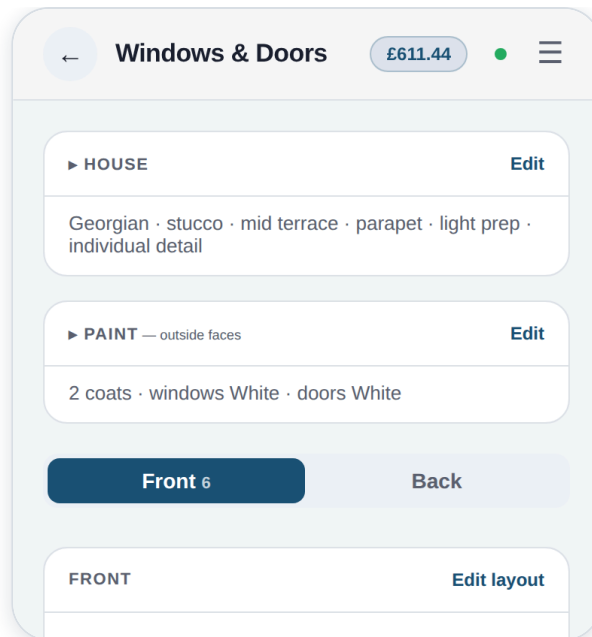

In the House card, set the **Default prep** for the job; every opening starts there. Leave **Individual detail** on for old windows, where you'll want to mark single panes and frame parts; turn it off for a job of new windows where that's never needed.

2. Each side. Tap a side — only the sides this house has are offered. Set the floors and how many windows (**W**) and doors (**D**) are on each — the drawing updates as you go. Doors start on the ground floor only; add one upstairs for a balcony or Juliet. The ends of the house draw as gables (or, under a front gable, as the eaves).

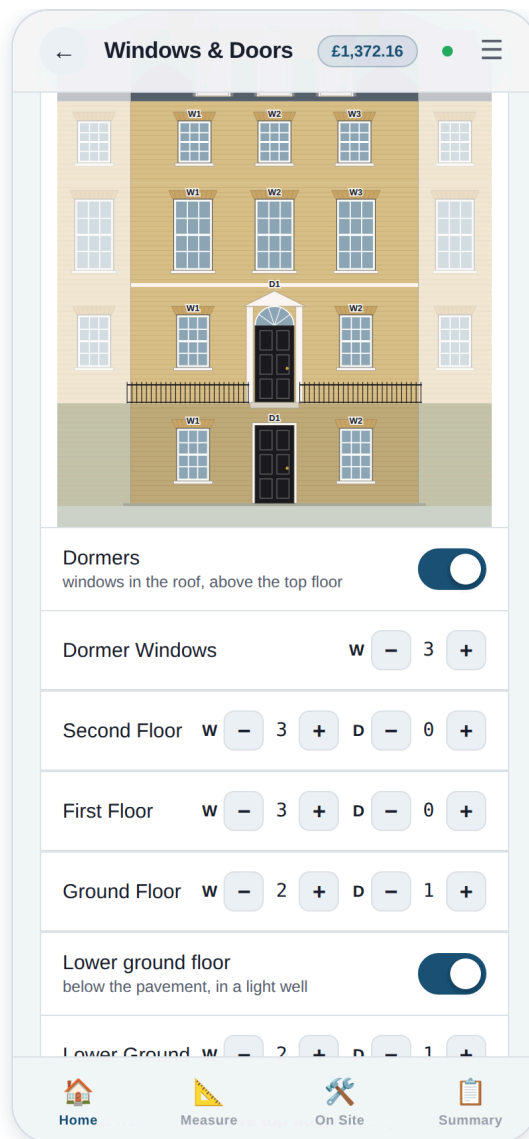

Two more levels can be switched on for each side, and both are priced like any other windows and doors:

- **Dormers** — windows in the roof, above the top floor (not with a parapet roof). Windows only. On a side where the roof shows as a gable, these are drawn as windows in the gable itself. A dormer window's detail view also has its **dormer fascia** and **left and right cheeks** to mark, alongside the window's own parts.
- **Lower ground floor** — a floor below the pavement, with its own windows and doors, drawn in its light well with railings along the top and a bridge across to the front door.

They're labelled *Front, dormer, W2* and *Front, lower ground, W1*.



On a Georgian house a new dormer starts as a **3-over-6** sash, one row fewer on top than the 6-over-6 windows below it (4-over-8 beside 8-over-8). Dormers added before v2.85.1 started as 3-over-3: open each one and set **Bottom sash rows** to 2. A sash with more rows in one half than the other is drawn with its meeting rail where the rows put it: a 3-over-6's top sash is a third of the window, so every pane is the same size, as on the real thing.

←

Windows & Doors

£1,409.70

•

☰

Front, dormer, W1

Done

+ nickname (e.g. landing, above porch)

TYPE

Casement

Sash

Fixed

Top sash rows

−

1

+

Bottom sash rows

−

2

+

Pane columns

both sashes

−

3

+

3 over 6 · 9 panes

SIZE

Small
under 0.5m²

Medium
0.5 to 1m²

Large
1 to 2m²

X-Large
over 2m²

PREP


Light

Standard

Heavy

Restoration

3. Confirm layout. The windows and doors become real and tappable, numbered left to right as you face that side — W1, W2... and D1, D2... counted separately on each floor. **Edit layout** unlocks the side again; taking a count down removes openings from the end of that floor, and warns you first if any of them has work marked on it.

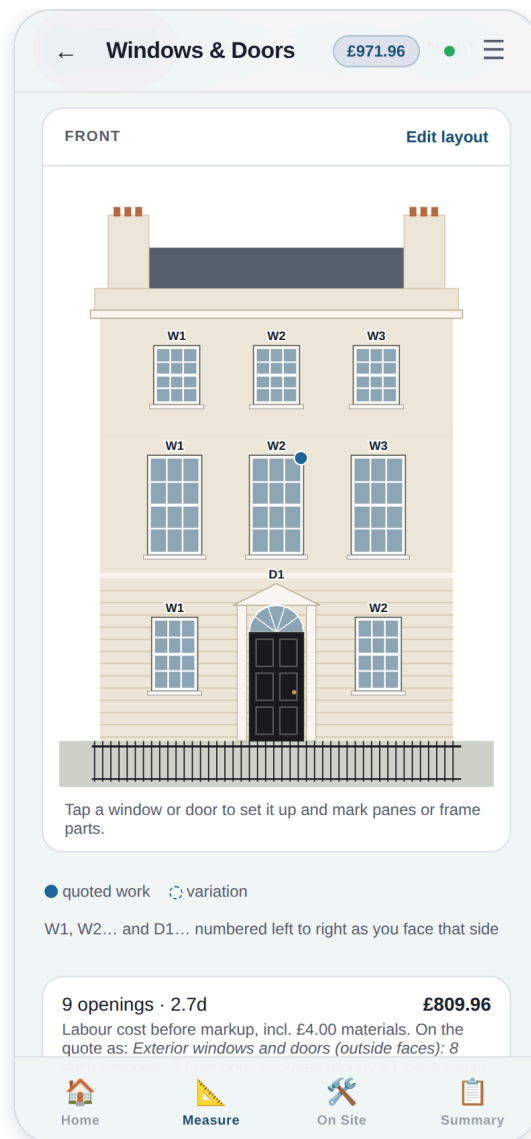

4. Tap a window or door to open its detail. Its label reads like *Front, first floor, W2*; add a **nickname** ("landing", "above porch") if that's how you'd say it on site.

- **Type** — casement, sash or fixed; or for doors panelled, flush, half glazed, fully glazed, stable or French (double).
- **Pane rows and columns** — on a sash window, the **top sash rows** and **bottom sash rows** are set separately, with the columns shared, so a 3-over-6 is 1 row over 2 rows of 3 columns. The line under them spells it out (*3 over 6 · 9 panes*). For doors these are the panel or glass grid.
- **Size** — each button shows the area it covers (Small is under 0.5m², Medium 0.5 to 1m², Large 1 to 2m², X-Large over 2m²).
- **Time** — under Size, the minutes this one takes for 2 coats before prep, as Rates works it out (*from Rates: 90 min*). For the one door or window that takes longer or less than its size and type say — a front door with mouldings, a tiny fanlight — type your own figure. The box outlines in blue and the line says *set by hand · Rates say 90 min*; coats, prep and access still apply on top, the same as for a Rates figure. Clear the box to go back to Rates. Set from Measure; on site it's shown, not changed.
- **Prep** — only levels at or above the job's default are offered. An opening can go up, never down.

- **Access** — how you reach it. **Auto** (the default) works it out from where the opening sits: the lower ground and ground floor are **Ground**, the first floor is **First floor**, and the second floor up and every dormer are **Ladder/tower**. The Auto button names what it picked, e.g. *Auto (First floor)*. Set it by hand when the house says otherwise — **Ground** when the scaffold is already up, **Ladder/tower** for a ground-floor window over a basement well. An opening set by hand shows a small dark dot at the bottom corner on the house drawing. Access is set at quoting; on site the sheet just says what was priced.
- **Marking work** (with Individual detail on) — tap panes, or tap frame parts (head, stiles, rails, cill; for doors the panels, frame and threshold). A tick shows what's selected. You select one kind at a time: tapping a frame part while panes are selected starts a fresh selection. **Select all panes** and **Clear selection** do what they say. Then tap the work — **Reputty** or **Replace glass** for panes; **Filler**, **Resin repair** or **Splice timber** for parts, plus **Ironmongery off & on** and **Ease** on doors, and **Re-cord**, **Replace beads** and **Ease & overhaul** on a sash window's parts — or **Remove all work**, which takes everything off the selected parts. The selection clears after each one. On a sash, each mark is for that part: re-cording the left stile is the cords on that side, so mark both stiles for a full re-cord.

Windows & Doors

£711.63

SIZE

Small
under 0.5m²

Medium
0.5 to 1m²

Large
1 to 2m²

X-Large
over 2m²

PREP

Light

Standard

Heavy

Restoration

ACCESS

Auto (First floor)

Ground

First floor

Ladder/tower

Select all panes

Clear selection

2 panes selected — added to the quote

Reputty

Replace glass

Remove work

WORK ON THIS WINDOW

£168.00 quoted before markup

Paint, outside face · light prep · 2 coats · first floor access

quote

Reputty x3 panes, resin repair (cill)

quote

Taking off one piece of work. Tap the part (or pane) and, under the work buttons, **On the selected part** lists everything already marked on it — *Filler · cill*, *Resin repair · cill (L)* — each with its own **Remove**. Tap Remove on the one you want gone and the rest stays; the part stays selected, so you can take off another straight away. Select several parts and the list covers all of them. On site, the quote's own work shows *locked* instead of Remove, the same as Remove all work; work found on site can always be taken off.

← Exterior £192.86

Select all panes Clear selection

1 part selected — added to the quote

Filler Resin repair Splice timber Re-cord

Replace beads Ease & overhaul

Remove all work

ON THE SELECTED PART
remove one piece of work, leave the rest

Filler · cill	Remove
Resin repair · cill (L)	Remove

REPAIR SIZE
priced on its estimated size

Resin repair (cill, L)

S M L XL

Large: rail end, cill corner

Repairs on this part
e.g. one at each end — the base is charged once

Resin repair (head, S)


S M L XL

Small: nail hole to thumb-sized


Repairs on this part
e.g. one at each end — the base is charged once

Resin repairs have a size. A nail-hole fill and a rebuilt sill nose aren't the same job, so each resin repair gets a size under **Repair size** on the window's sheet: **S** (nail hole to thumb-sized), **M** (up to palm-sized), **L** (a rail end or a cill corner) or **XL** (a sill nose or a rail rebuilt). A new repair starts at the size you last picked on the job, or Medium. The list under the diagram says it, *Resin repair (cill, L)*. The price is a fixed part for any size (setting up, consolidating, the wait for it to cure, coming back to it) plus the size's own time and resin, from **Rates → Windows & Doors**. Repairs marked before sizes existed are Medium, which is exactly what they cost before, so no quote moves. Until the quote is accepted you can change a size up or down freely; it's just quoting.

Two repairs on the same part, such as a small patch at each end of a cill: mark the cill with **Resin repair** once, pick the size, then set **Repairs on this part** to **2**. The label reads *Resin repair (cill ×2, S)*. The base (setting up, the cure wait, coming back) is charged **once for the part**, and the size's time and resin once for each repair. Tapping Resin repair on the cill again doesn't add a second one; it reminds you to use the count. If the two patches are different sizes, pick the size that covers the bigger one, or split the difference. The count can be changed until the quote is accepted.

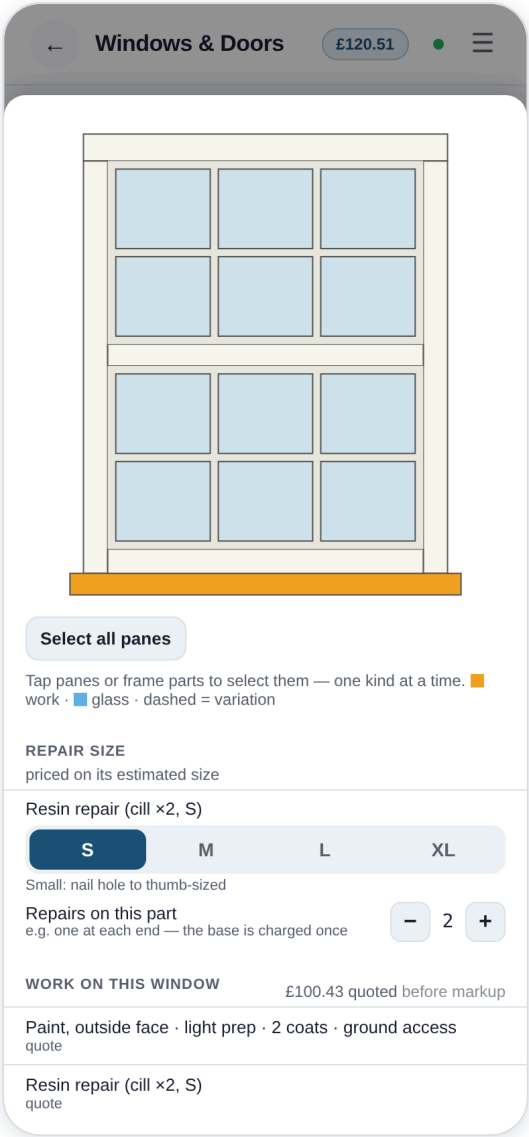


Orange is work, blue is glass being replaced. Work marked here is **quoted** work and shows solid; work added on site shows dashed. Changing the type or the pane grid clears that opening's marks, so it asks first if there are any. The list under the diagram says, in words, everything on this opening. The first line is the painting itself, with what it was priced on: *Paint, outside face · light prep · 2 coats · first floor access* (with *(set by hand)* when you chose the access).

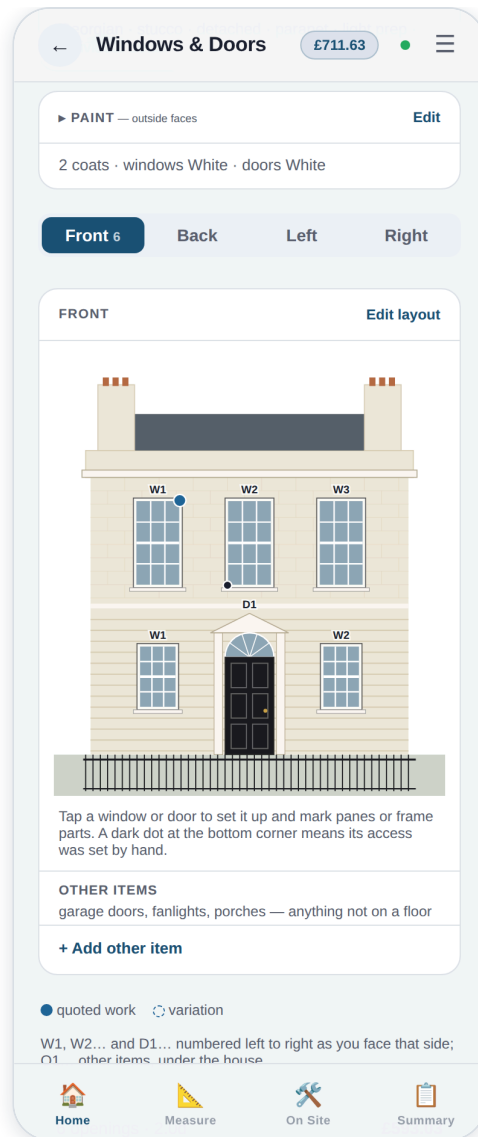

Coats and access change the price. Painting minutes are set for 2 coats, so **1 coat** in the Paint card halves them (a maintenance coat) and **3 coats** adds half again. Access adds the same uplift as the Exterior form: first floor +10% and ladder/tower +25% to start (**Rates → Exterior Rates → Access**). Both apply to the painting only. Marked work like reputty, glass, filler, resin and splice is a one-off job and stays the same price whatever the coats or the height. A medium 6-over-6 sash at Light prep is 110 min on the ground floor at 2 coats, 121 min on the first floor, and 206 min on the second floor at 3 coats.

Until you set a window's panes here, the house drawing shows it with the period's glazing (change Georgian 6-over-6 to 8-over-8 in Details and the drawing follows). Once you've set its type, rows or columns, the drawing shows the panes you set. The price always uses the panes set here.

Bays. Each floor in the layout also has a **B** count for bay windows. It's shown straight away on a Victorian house; on a Georgian or Modern house, tap **+ Bays** first. A bay is counted once, on the floor where it starts. On a Victorian house, a bay on the ground floor starts as a **two-storey** bay running up through the first floor, and the windows above are laid out around it.

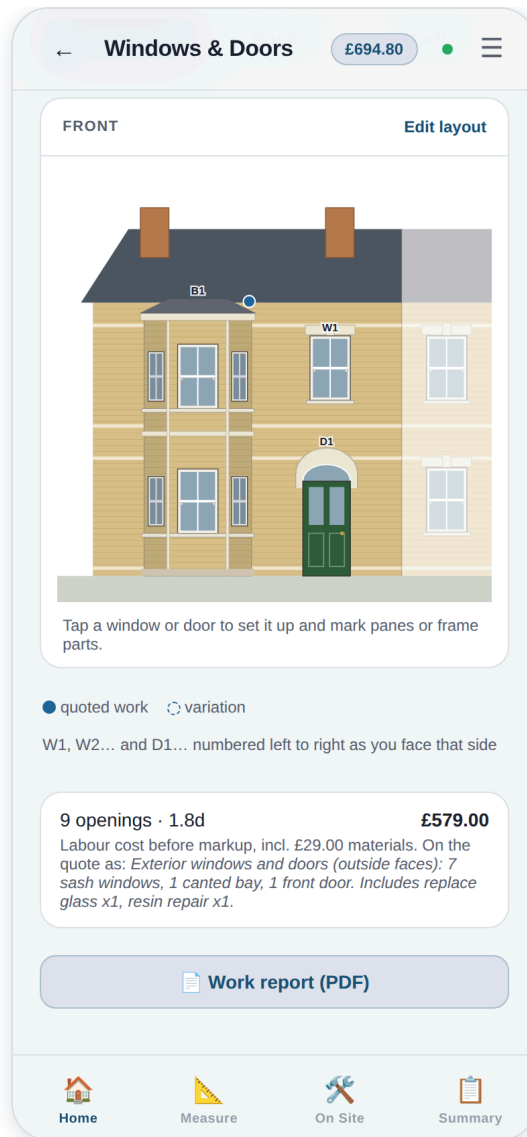

Tap a bay on the drawing to open the **bay view**. Set its **shape** (**canted**, with angled sides, or **square**), its **storeys** (one or two — two needs a floor above), and its prep. The strip shows its left, front and right windows, storey by storey. Tap any of them to open that window's normal detail view (< **B1, the whole bay** takes you back). Each window has its own type, size, panes and prep, and is labelled like *Front, ground floor, B1 front*. The bay's own timber — the **cornice**, **fascia**, left and right **mullions** and the **cill** — can be tapped and marked like a window's frame parts. A badge on a window in the strip means it has work marked on it.

Windows & Doors

£694.80

SHAPE

Canted

Square

STOREYS

a two-storey bay runs up through the first floor

One

Two

PREP

the bay's own timber — each window has its own

Light

Standard

Heavy

Restoration

canted bay, in plan

1 part selected — added to the quote

Filler

Resin repair

Splice timber


Clear selection

Remove work

WORK ON THIS BAY

A bay's price is its own **bay base minutes** (Rates, by shape and storeys, covering the cornice, fascia and mullions) plus each of its windows priced as a window. Each window takes the access for its own floor. The bay's own timber goes by its top storey, so a two-storey bay from the ground takes the first-floor uplift. The bay view has its own **Access** control for that timber. Making a two-storey bay single-storey removes the upper windows, asking first if any have work on them.

Not in this job. A door you painted last time, or a window someone else is replacing, still belongs on the drawing — the house doesn't look right without it. Open it and set **In this job** to **Not in this job**. It stays on the drawing (faded in the app, with a grey - badge where the work badge would be; drawn normally on the client's copy of the report), but it's left out of everything else: no price, no paint, not counted in the openings, not named on the quote's line, not on the work-to-do list, and it can't have work marked on it. You can still set its type and panes so it's drawn right. Any work already marked on it is cleared, and it asks first. Set it back to **In the job** to price it again. Leaving a **bay** out leaves its windows out too.

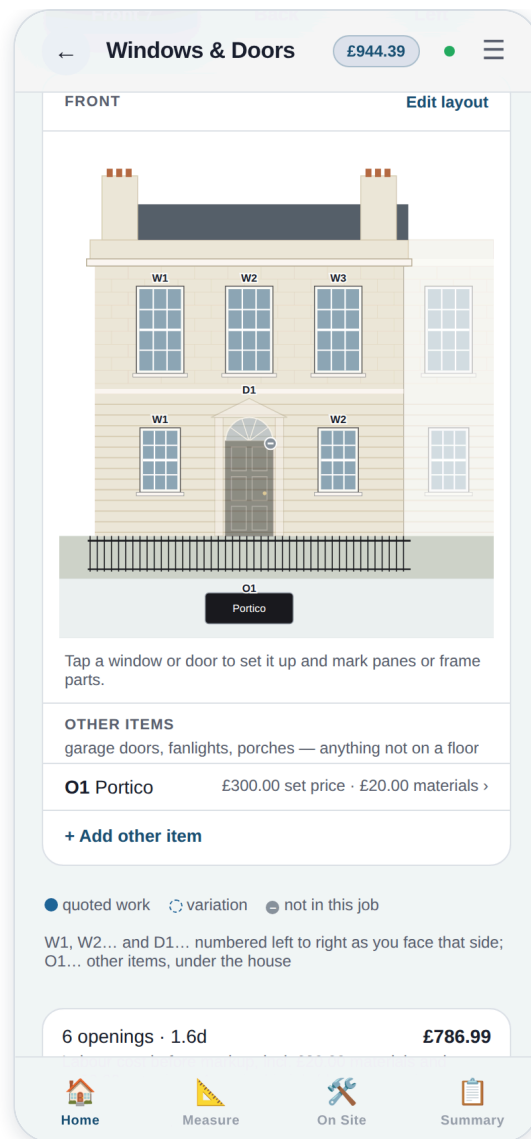

If it turns out on site that it does need doing after all, open it on **On Site** and tap **Add to this job — found on site** (see [Windows and doors on site](#)).

Other items. Garage doors, fanlights, porches, porticos and lean-tos don't sit on a floor. Under each side's drawing, + **Add other item** asks what it is, then opens it. Call it a **garage door** and it starts from the figures the Exterior form used for one: your Settings' exterior garage door minutes (150 to start) and paint area (6 m²). Choose how it's **Priced**:

- **By time** — how long it takes to do, before prep, as you'll actually do it (it isn't scaled by coats or access). Pick **Minutes**, **Hours** or **Days** and type the figure: *1.5 days* for a portico. A day is your **hours per day** from Settings, and the time goes into the job's days like any other labour.
- **Set price** — a £ figure for the labour, e.g. **£300**. It goes into the Windows & Doors total as it is and takes your markup like everything else. Prep and access don't change it (so there's no prep to pick), and it adds no days to the job.

Either way, add any **materials £** it needs beyond paint, and a **paint area** in m² (0 if you're not buying paint for it). **Painted in** sets whether it uses the doors' colour or the windows' colour. The list under the house shows each one's figure (*O1 Portico · 1.5 days, or £300 set price*), and the card under the sides shows how much of the total is set prices.

Windows & Doors £944.39

Front, O1 (Portico) Done

rename

PRICED

By time Set price

Price £
the labour, before markup — prep and access
don't change it 300

Materials £
anything it needs beyond paint 20

Paint area m²
timber to buy paint for; 0 = none 3

PAINTED IN

Doors colour Windows colour

Portico

Tap panes or frame parts to select them — one kind at a time. ■
work ■ glass - dashed = variation

WORK ON THIS ITEM £320.00 quoted before markup

Paint · £300.00 set price
quote

Remove this item


This is the place for a porch or portico rather than a separate Exterior item, so it sits with the rest of the joinery and on the same quote line.

Drawing a porch over the door. An other item is drawn as a tile under the house unless you say otherwise. Under **Drawn as** on its sheet, pick a porch style instead and it's drawn over a ground-floor door on that side:

- **Flat canopy** — a flat hood on two brackets.
- **Arched hood** — a shell hood on carved brackets.
- **Portico** — columns carrying a flat entablature, with a fanlight.
- **Portico, pediment** — columns and a pediment on top.
- **Gabled timber** — timber posts and rails under a small gabled roof.
- **Enclosed porch** — a lean-to porch built out in front, in the house's wall finish, with a glazed light either side.

Each button shows a small picture of the style in your house's colours. If the side has more than one ground-floor door, **Over** picks which (D1, D2...). The door's own doorcase (the one set in the House card's Details) gives way to the porch, and the drawing labels it **O1 D1** over the top. Tap the porch's roof to open the porch, or the door to open the door. The list under the house says *O1 Portico over D1*.

It's drawing only: the porch is still priced from its own time or set price, and it can still have its face and frame marked. If you add an item called "portico", "porch", "canopy" or "hood" on a side with a ground-floor door, it starts as a porch in a matching style; anything else starts as a tile. A side with no ground-floor door (or a door that already has a porch) shows it as a tile.

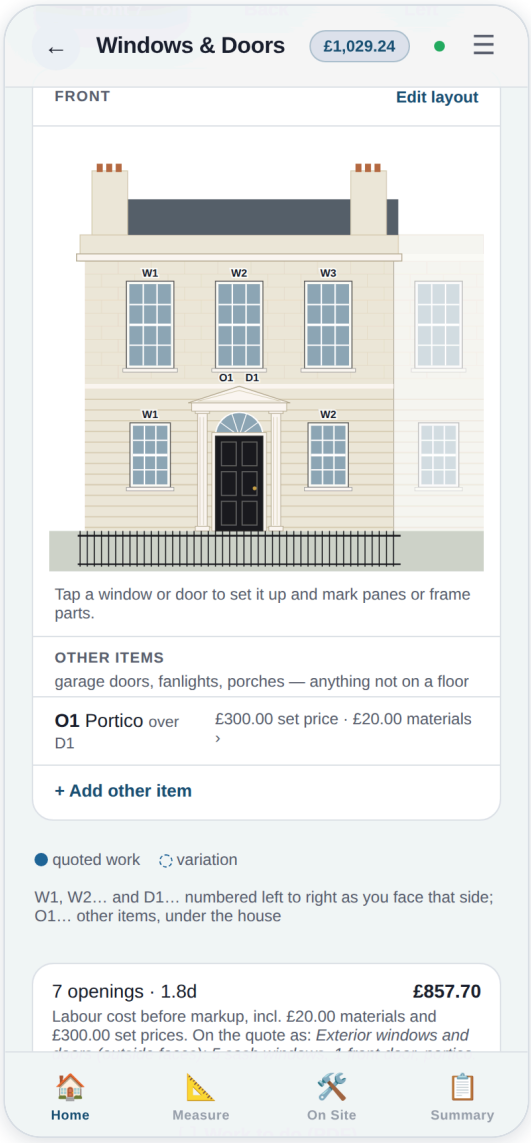

Windows & Doors

£1,029.24

FRONT

Materials £

anything it needs beyond paint

20

Paint area m²

timber to buy paint for; 0 = none

3

DRAWN AS

a tile under the house, or a porch over a door

Tile

Flat canopy

Arched hood

Portico

Portico, pediment

Gabled timber

Enclosed porch

PAINTED IN

Doors colour

Windows colour

Portico

Tap panes or frame parts to select them — one kind at a time. ■

work · ■ glass · dashed = variation

WORK ON THIS ITEM

£320.00 quoted before markup

It's drawn as a tile under the house, numbered **01, 02...** and labelled *Front, 01 (Garage door)*. You can mark its **face** and **frame** like a door's parts (filler, resin, splice, ironmongery, ease). Changing a side's layout never touches its other items; **Remove this item** at the bottom of its sheet does. On the quote it's named in the fixture's line: *...1 front door, garage door*.

←

Windows & Doors

£1,455.51

•

☰

Tap a window or door to set it up and mark panes or frame parts.

OTHER ITEMS
garage doors, fanlights, porches — anything not on a floor

O1 Garage door	150 min · £20.00 materials >
-----------------------	------------------------------

+ Add other item

☒ quoted work
 ☐ variation

W1, W2... and D1... numbered left to right as you face that side

13 openings · 4.0d

£1,212.93

Labour cost before markup, incl. £26.00 materials. On the quote as: *Exterior windows and doors (outside faces): 10 sash windows, 1 front door, 1 back door, garage door. Includes re-cord x1, ease x1.*

Home

Measure

On Site

Summary

←

Windows & Doors

£802.59

•

☰

Front, 01 (Garage door)

Done

rename

Minutes

to paint it, before prep

150

Materials £

anything it needs beyond paint

20

Paint area m²

timber to buy paint for; 0 = none

6

PAINTED IN

Doors colour

Windows colour

PREP

Light

Standard

Heavy

Restoration

Garage door

Tap panes or frame parts to select them — one kind at a time. ■ work · ■ glass · dashed = variation

WORK ON THIS ITEM

£159.29 quoted before markup

Paint · light prep

quote

Ease (face)

quote

The roofline: fascia and soffit, bargeboards. Under each side's drawing, the **Roofline** card adds the woodwork along the roof: + **Fascia & soffit** (priced together, the usual way) and + **Bargeboards** (up a gable). For the odd job where they're priced apart, turn on **Price fascia and soffit apart** at the bottom of the card: the card then offers + **Fascia** and + **Soffit**, and any fascia & soffit already measured becomes a fascia and a soffit of the same length, with the work marked on it on both. Turning it off puts them back together as one run. The switch covers the whole job, and is set once the job is accepted. It asks for the length along that side in metres. On its sheet you can change the **length**, and add **extra metres** for the odd bit that isn't along the side — a bay roof, a porch fascia — which is priced but not drawn.

It's drawn on the house: the fascia along the eaves, the bargeboards up the verges of a gable. Each is in three sections, **left, middle and right** as you face the side (on bargeboards the middle is the apex). Tap it on the drawing or in the card, then tap a section and mark **Filler**, **Resin repair** (with its size, as on a window) or **Splice timber**, quoted or on site, exactly as for a window's parts. Marked sections show in orange on the drawing.

←

Windows & Doors

£2,849.95

•

☰

Tap a window or door to set it up and mark panes or frame parts.

ROOFLINE
fascia and soffit, bargeboards — one length for the side, tap to mark work

Fascia & soffit ● 11m + 1.5m extra >

+ Bargeboards

OTHER ITEMS
garage doors, fanlights, porches — anything not on a floor

+ Add other item

● quoted work ◌ variation

W1, W2... and D1... numbered left to right as you face that side;
O1... other items, under the house

Home

Measure

On Site

Summary

←

Windows & Doors

£2,849.95

•

☰

along the front — drawn in three sections

Extra metres

the odd bit (a bay roof, a porch fascia) — priced, not drawn

1.5

16 min a metre for 2 coats, before prep (Rates) · 12.5m in all

PREP

Light

Standard

Heavy

Restoration

ACCESS

the rate a metre already allows for ladders; set Ladder/tower for a tower

Auto (in the rate)

Ground

First floor

Ladder/tower

Left

Middle

Right

fascia

soffit

Clear selection

1 part selected — added to the quote

Filler

Resin repair

Splice timber

Remove work

REPAIR SIZE

priced on its estimated size

Resin repair (left section, M)

S

M

L

XL

Medium: up to palm-sized

Repairs on this part

e.g. one at each end — the base is charged once

−

1

+

NH Estimator — User Manual

56 / 161

← Exterior £2,917.41

Tap a window or door (or the roofline, gutters, downpipes) to set it up and mark panes or frame parts.

WALLS
render or masonry on this side — the windows and doors come off

+ Measure the walls on this side

ROOFLINE
fascia and soffit, bargeboards — one length for the side, tap to mark work

Fascia ● 11m + 1.5m extra >

Soffit ● 11m + 1.5m extra >

+ Bargeboards

Price fascia and soffit apart this job, every side ☒

EXTRAS
gutters, downpipes, railings, sills, fences, other walls — only what's painted on this house

∨ + Add an extra...

OTHER ITEMS
garage doors, fanlights, porches — anything not on a floor

+ Add other item

● quoted work ○ variation

W1, W2... and D1... numbered left to right as you face that side;
O1... other items, under the house


Home Measure On Site Summary

It's priced by the metre from **Rates → Windows & Doors → Roofline, per metre**: fascia and soffit start at **16 minutes a metre** for 2 coats (the Exterior form's fascia figure), with prep and coats on top, like a window. The rate already allows for ladders, so **Access** says *Auto (in the rate)*; set **Ladder/tower** by hand for a house that needs a tower. It's painted in the **windows' colour** to begin with, in the same paint rows; set **Roofline colour** on the **Paint** card (or the *Roofline* row on the Colours tab) to give the fascia, soffit and bargeboards a colour of their own — they keep the windows' paint, in that colour, on a *Roofline* row of their own, and the invoice names it: *Colour: White (frames and doors), Black (fascia and soffit)*. **In this job / Not in this job** works as for a window: a run that isn't being painted stays on the drawing, unpriced. On the quote and invoice the line becomes *Exterior woodwork*, with the metres: *...14 windows, 3 doors and 12.5m of fascia and soffit*. The work report lists each run with its sections.

Walls. Each side has a **Walls** card: tap **+ Measure the walls on this side** and give the **width** and the **height to the eaves** in metres. On its sheet, add the **gable** (its height above the eaves) if that side has one, pick the **finish** — **smooth render / masonry** or **textured render (pebbledash)** — and whether it's **rolled / brushed** or **sprayed**. Once the walls are measured you can tap the wall itself on the drawing to open them.

The area is worked out for you, semi-accurately: width × height (plus the gable's triangle), **less every window and door on that side** at a typical size for each (*Rates → Windows & Doors → Walls*: a Medium window takes 1.2 m² off, a standard door 1.9 m², French doors twice that). The sheet shows the sum: *71.5m² of wall – 13.5m² for 8 windows and doors = 58m²*. **Cutting in** round each of those windows and doors is priced on top — 10 minutes a coat round a window, 12 round a door to start — whether or not the window or door itself is being painted. So for a **render-only job**, set the windows and doors to **Not in this job**: they stay on the drawing, still come off the wall and still take their cutting in, but aren't priced themselves.

The wall is priced at **10 minutes a m²** for 2 coats on smooth (the Exterior form's masonry rate) or **14** on textured, with prep and coats on top and access in the rate. Spraying changes the paint (the Exterior form's sprayed coverages), not the time. Cracks and holes can be marked with **Filler** on the wall's left, middle or right third, which shows tinted on the drawing. The paint goes on the **Masonry / Render** rows, in the **Walls colour** on the Paint card (which also covers other walls and stonework). The lower ground floor and dormers aren't part of a side's wall.

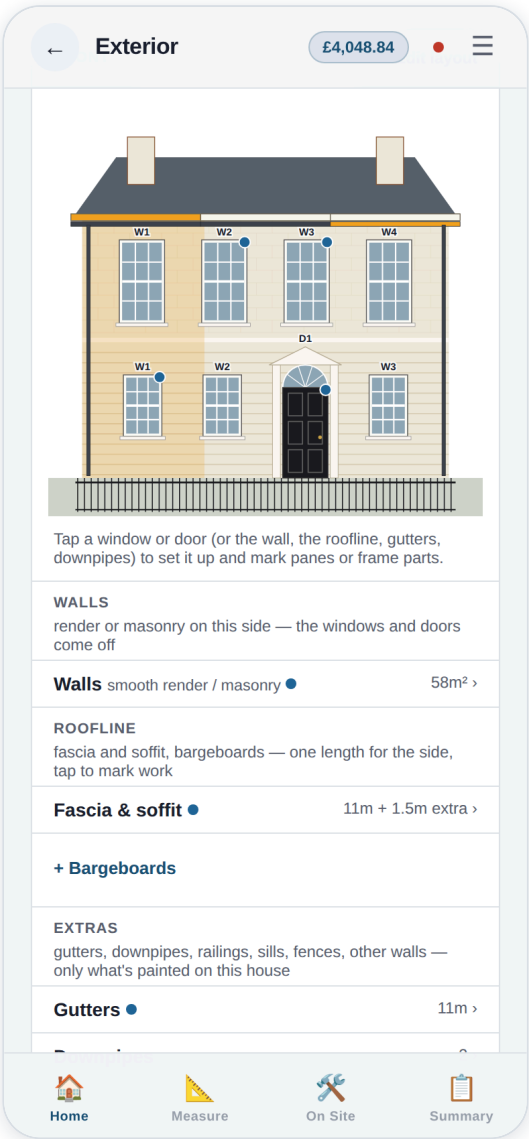

← Exterior £4,048.84

Width, metres
along the front 11

Height to the eaves, metres
from the ground 6.5

Gable, metres
its height above the eaves, if this side has one —
0 for none 0

FINISH

Smooth render / masonry Textured render (pebbledash)

Rolled / brushed Sprayed

71.5m² of wall – 13.5m² for 8 windows and doors = 58m² · cutting in round 7 windows and 1 door. 10 min a m² for 2 coats, 10 / 12 min a coat cutting in round each window / door (Rates). Sprayed changes the paint, not the time.

PREP

Light Standard Heavy Restoration

ACCESS
the rate already allows for ladders; set Ladder/tower for a tower

Auto (in the rate) Ground First floor Ladder/tower

Smooth render / masonry

Left Middle Right

Tan the left middle or right section to mark where the work is.


With walls in it, the screen is titled **Exterior**, and on **Measure → +** it's **Exterior — windows, doors, walls, roofline**. The old **Exterior item** form is only offered on a job that already has exterior items priced that way, so nothing quoted before changes.

How it goes on the quote and invoices. The totals card at the bottom of the Exterior screen has **On the quote and invoices as**, with three choices, and lists the lines it makes with their prices:

- **Woodwork & walls** (the default): the windows, doors, roofline and wooden extras on one line (*Exterior woodwork: ...*), and the walls, other walls and stonework on another (*Exterior walls: ...*).
- **One line**: all of it together, as before.
- **Full breakdown**: a line for each element — windows, doors, other items, each roofline run, each extra, the walls, and making good — for a client who wants to see what each part costs.

Pick it before you send the quote. It goes on the Xero quote, the client's copy and the accepted quote, and **once the quote is accepted it's fixed** — the invoices bill the lines the client agreed to. Work added on site goes on the line it belongs to: filler on the wall goes on the walls


line, new glass on the woodwork (or the windows' line in a breakdown). On an interim invoice each line is billed separately, with anything added on site on the first. The work report's sentence (*Full breakdown of work per opening in attached report*) is on the first line only.

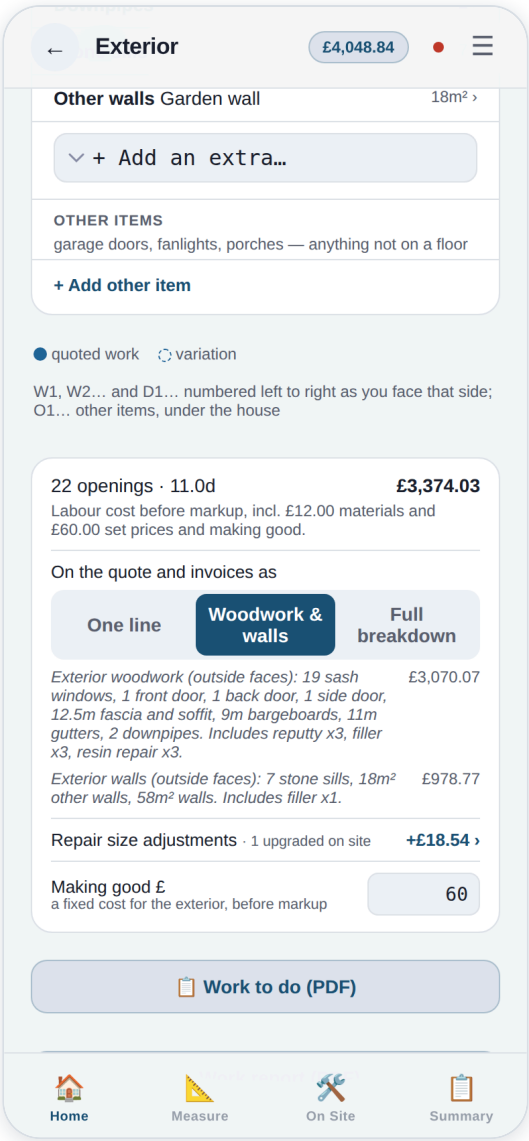

Extras. Under the roofline, each side has an **Extras** card for the things painted on some houses and not others. Pick one from **+ Add an extra...** and it asks how much — metres, m² or how many — then opens it:


Extra	Measured in	Painted with
Gutters, railings, fences	metres	the windows' paint
Cladding	m²	the windows' paint
Downpipes, window boards, porch roof, gates, meter box	how many	the windows' paint
Stone sills, lintels	how many	masonry paint
Other walls (a garden wall, an outbuilding, a garage block)	m²	masonry paint

Other walls asks for a name first, so the quote and report say which (*Back, other walls (Garden wall)*). Each side takes one of each extra. **Gutters** and **downpipes** are drawn on the house — the gutter under the eaves, the downpipes down the corners — and can be tapped there; the rest are in the list. Extras in metres or m² are marked **left, middle or right**, like the fascia; counted ones are marked as a whole (*filler (downpipe)*). Each is priced at its own figure in **Rates → Windows & Doors → Extras, per unit** — minutes for 2 coats before prep, and the paint area — with prep and coats on top and access in the rate, like the roofline. Walls and stonework go into the **Masonry / Render** paint rows (in the job's first colour for now), everything else with the windows.

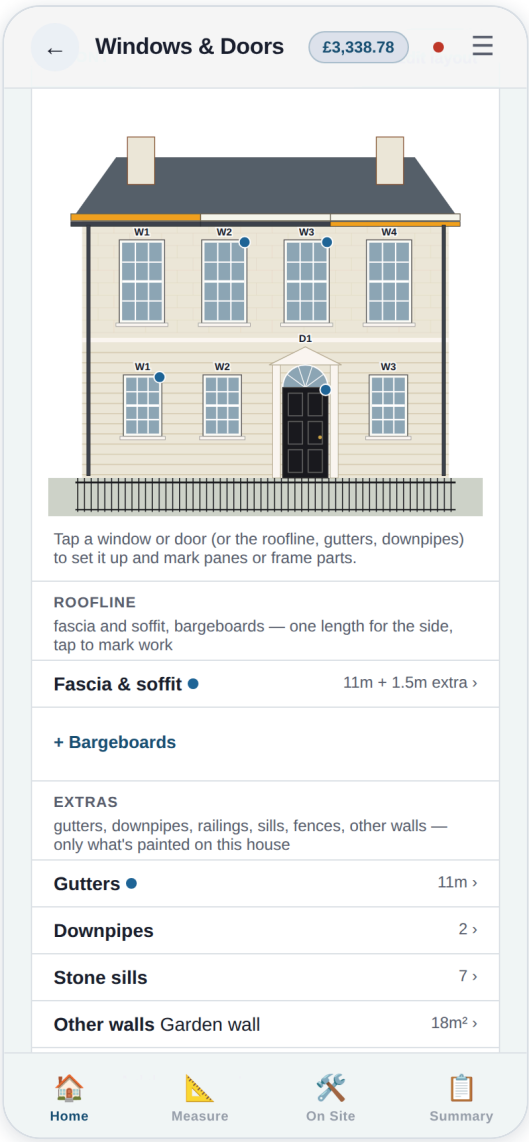

Tudor framing. For the black-and-white timbers on a mock Tudor house (or a real one), pick **Tudor framing (set price)** from **+ Add an extra....** It asks for one price for that side — your labour and the stain, before markup — and nothing is worked out from minutes or paint: the price is the price. It's drawn on the house, over the **Upper floor** to begin with; on its sheet you can change the price and pick **Where it is:** *Upper floor, Whole side* or *Gable only* (on a side with a gable, the upper floor and whole side take the gable too). Prep, coats and access don't apply, so they aren't offered. You can still mark work on its **left, middle or right** — filler, a resin repair — and that's priced on top as usual. *Not in this job* works as for anything else, and

brought in on site its price is billed as work found on site. On the quote and invoice it's named in the woodwork line (...14 windows, 3 doors and Tudor framing), or on a line of its own with **Full breakdown**; the work report says *Prepared and stained, upper floor*. Each side takes one.

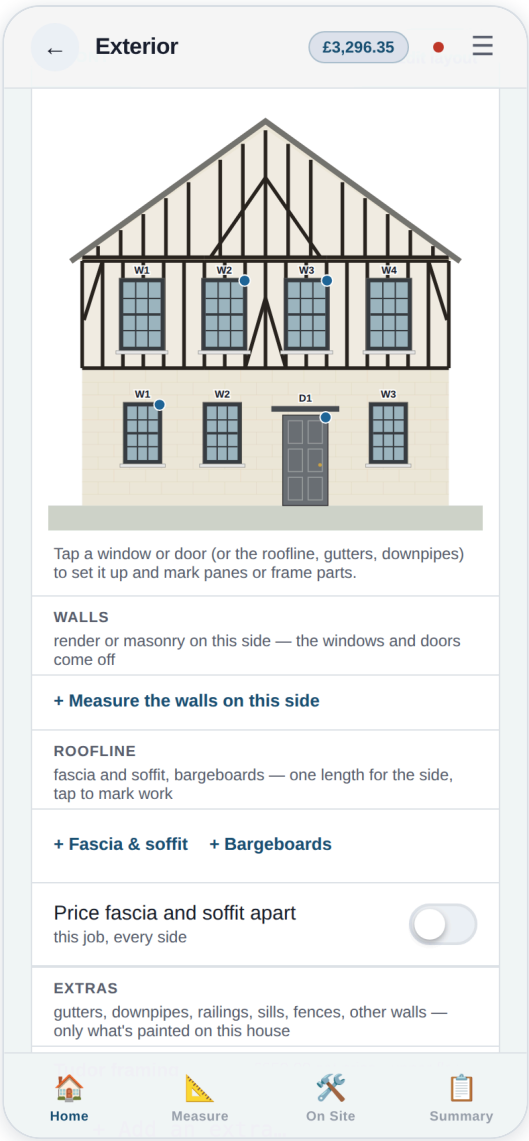

←

Exterior

£3,296.35

•

☰

Front, Tudor framing

Done

IN THIS JOB

switch off for one that's already done or not being painted

In the job

Not in this job

Set price, £

for this side — labour and stain, before markup

650

Where it is

drawn on the house; the price is the price

Upper floor

Whole side

Gable only

No paint is worked out for it — the stain is in the price. Work marked on it (filler, resin) is priced on top, as for anything else.

Tudor framing · upper floor

Left

Middle

Right

Tap the left, middle or right section to mark where the work is. ■

work · ■ glass · dashed = variation

WORK ON THIS ITEM

£650.00 quoted before markup

Stain · £650.00 set price · upper floor

quote

Remove this extra

Making good. The totals card at the bottom of the screen has a **Making good £** box: a fixed cost for the exterior, before markup, exactly as the Exterior form's own box.

← Windows & Doors £3,338.78

Stone sills 7 >

Other walls Garden wall 18m² >

▽ + Add an extra...

OTHER ITEMS
garage doors, fanlights, porches — anything not on a floor

+ Add other item

☒ quoted work ☐ variation

W1, W2... and D1... numbered left to right as you face that side;
O1... other items, under the house

22 openings · 9.0d **£2,782.32**
Labour cost before markup, incl. £12.00 materials and £60.00 set prices and making good. On the quote as:
Exterior painting (outside faces): 19 sash windows, 1 front door, 1 back door, 1 side door, 12.5m fascia and soffit, 9m bargeboards, 11m gutters, 2 downpipes, 7 stone sills, 18m² other walls. Includes reputty x3, filler x3, resin repair x3.

Repair size adjustments · 1 upgraded on site **+£18.54** >

Making good £
a fixed cost for the exterior, before markup 60

📄 Work to do (PDF)

📄 Work report (PDF)

Home Measure On Site Summary

Once there are extras or a roofline on the job, the quote and invoice line is headed *Exterior woodwork*, or *Exterior painting* when walls or stonework are in it, and lists each in its own unit: *...11m of gutters, 2 downpipes and 18m² of other walls.*

Paint. The **Paint** card under the house settings sets the **coats** (2 to start), and a **product** and **colour** for the windows and for the doors — the satin on the sashes and the gloss on the black front door. The product pickers work like a room's: search the ranges, pick a colour band where the range has more than one, or leave it on *Use default (Settings)* for the exterior woodwork topcoat. The colours are the app's ordinary colour fields — type-ahead from the colour library, one-tap picks from colours already on the job — and they show on the Colours tab as *Exterior Windows* and *Exterior Doors*, beside every other area. Primer always follows the exterior primer in Settings.

← Windows & Doors £1,185.34

PAINT — outside faces

Coats 1 2 3

Windows product
topcoat — defaults to the exterior woodwork topcoat in Settings Johnstones Aqu

Colour band ▼ Select colour

Windows colour
White
Also on 1 other area · renaming here changes only this one

Doors product
topcoat — defaults to the exterior woodwork topcoat in Settings Dulux Trade We

Colour band ▼ (no band)

Doors colour
White
Also on 1 other area · renaming here changes only this one

Painted on the timber only: each window's size less its glass, from Rates > Windows & Doors > Paint areas. Litres use the exterior woodwork coverage, and join the exterior woodwork tins on Summary wherever the product and colour match.

Home Measure On Site Summary

The litres are for the **timber only** — a window is mostly glass. Each window starts from its own size (the middle of its size button's range: a Medium window is 0.75 m²) and takes the share of that which is timber: 35% for a casement, 40% for a sash, 25% for a fixed light, plus 2% for each extra pane's glazing bars, up to 60%. So a Medium 6-over-6 sash is 0.45 m² of paint, and a Large one 0.9 m². A door is its leaf less any glass, plus the frame. A bay adds 1.2 m² of its own timber per storey, painted with the windows. That's times the coats, at the exterior woodwork coverage, plus primer. Every figure is under **Rates → Windows & Doors → Paint areas**.

Rates	
Restoration	1.75
PAINT AREAS for litres only — the timber on the outside face, not the whole opening	
Small window m² of the whole opening (under 0.5m²)	0.35
Medium window m² of the whole opening (0.5 to 1m²)	0.75
Large window m² of the whole opening (1 to 2m²)	1.5
X-Large window m² of the whole opening (over 2m²)	2.5
Casement timber share of the opening, 0–1 — the rest is glass	0.35
Sash timber share of the opening, 0–1 — the rest is glass	0.4
Fixed timber share of the opening, 0–1 — the rest is glass	0.25
Per extra pane added to the timber share for each glazing bar's worth	0.02
Timber share cap however many panes	0.6
Standard door leaf	1.75
 Home  Measure  On Site  Summary	

The paint goes on Summary in the same **Exterior Woodwork** and **Exterior Primer** rows as any exterior item, using the exterior woodwork product from Settings, so windows and a fascia in the same colour are one lot of tins. It's also on the job spec sheet as its own rows. On a job whose materials list was already made, tap **Recalculate** on Summary to bring it in.

On the quote the whole fixture is **one line**, worded from what's in it — *Exterior windows and doors (outside faces): 5 sash windows, 1 front door. Includes reputty x3, resin repair x1.* (or, with the newer pieces, *...10 sash windows, 3 dormer windows, 1 canted bay, 1 lower ground door, 1 front door.*) — through Summary, the client's quote and Xero. On the final invoice it becomes one line worded for the client, with everything added on site included (see [Windows and doors on the invoice](#)). The minutes behind it (see [Rates](#)) go into the job's time like any other labour.

The work report — what was done where, with the drawings — is covered under [On Site](#).

Site notes

Tap the  **button** (bottom left of Measure) any time to jot job notes — access arrangements, things agreed on the doorstep, snags you spotted. Notes save automatically and stay with the job.

J. Smith Decor

2 rooms · 1
ext · kitchen
· fitted unit
· 1 custom

£4,589.61 quote

Costs below are your labour cost, before markup — see Summary for the customer-facing quote.

INTERIOR

Clear



Living Room

5.2×4.1×2.4m · 2.1d

£634.02

< >



Master Bedroom

4×3.4×2.4m · 1.5d

£451.25

< >

EXTERIOR

Clear



Front elevation

2.2d

£667.14

>

KITCHEN



Kitchen

4.4d

£1,324.40

>

FITTED UNITS

SITE NOTES

Done

Key under the pot by the side gate.
Client happy for spraying in the kitchen.
Crack above bay window needs filling — allowed for in prep.

NH Estimator — User Manual

67 / 161

4. Kitchen cabinet respray

On **Measure**, tap **+** → **Kitchen** to open the dedicated cabinet-spray calculator — one kitchen per job, saved automatically. Once it has anything in it, the kitchen appears as its own priced line in the Measure list and the quote.

The screenshot shows the 'Kitchen' calculator interface. At the top, there's a back arrow, the title 'Kitchen', a quote value of '£1,589.28', a green status dot, and a menu icon. Below this are several sections: 'COATS' with a note '— applies to every item below' and a 'Coat count' selector set to '2'; 'FACES' with a note '— applies to every counted item below' and a toggle for 'Outside faces only' (currently off); 'PREP' with a note '— applies to every counted item below' and a toggle for 'Strip original coating' (currently off). Below these are item count sections: 'DOORS' (10), 'DRAWER FRONTS' (5), 'END PANELS' (2), and 'FILLERS' (empty). At the bottom is a 'LINEAR ITEMS' section with a note '— priced per metre, not per piece'. The bottom navigation bar has icons for Home, Measure (active), On Site, and Summary.

- **Coat count** (1–4) applies to every item below.
- Tap open **Doors**, **Drawer Fronts**, **End Panels** and **Fillers** and enter how many of each size (Small / Medium / Large / X-Large). Each size has its own base price and per-coat price — tune them in Rates → Kitchen Rates. Each card shows its piece count on the header once collapsed, so you can shut them all and tally the kitchen at a glance.
- **Linear items** — cornices and plinths are priced per metre.
- **Carcass spraying** — toggle on to add a percentage uplift for spraying the cabinet interiors/carcasses.
- **Colour & Product** — pick the paint for the quote and materials list.

Two cards sit above the item counts and apply across everything below them:

The screenshot shows the 'Kitchen' configuration screen in the NH Estimator app. At the top, there's a back arrow, the title 'Kitchen', a quote value of '£938.28', a green status dot, and a menu icon. The main content area is divided into several sections:

- COATS**: A section header with a sub-note '— applies to every item below'. It contains a 'Coat count' slider set to 2, with options 1, 2, 3, and 4.
- FACES**: A section header with a sub-note '— applies to every counted item below'. It contains a toggle for 'Outside faces only' (currently turned on) and a descriptive text: 'Only the front of each piece is sprayed — halves doors, drawer fronts, end panels & fillers. Carcass spraying, cornices/plinths and stripping are unaffected'.
- PREP**: A section header with a sub-note '— applies to every counted item below'. It contains a toggle for 'Strip original coating' (currently turned off) and a descriptive text: 'Melamine/existing coating removal before spraying — adds prep time per item, based on the counts below'.
- DOORS**: A count of 10 with a right arrow.
- DRAWER FRONTS**: A count of 5 with a right arrow.
- END PANELS**: A count of 2 with a right arrow.
- FILLERS**: A right arrow.
- LINEAR ITEMS**: A section header with a sub-note '— priced per metre, not per piece'.

At the bottom, there's a navigation bar with four icons and labels: 'Home' (house icon), 'Measure' (ruler icon), 'On Site' (wrench icon), and 'Summary' (clipboard icon).

- **Outside faces only** — for jobs where only the fronts are being sprayed. Turn it on and doors, drawer fronts, end panels and fillers are all priced at **half** — the per-piece prices in Rates are whole-piece, both-faces figures, so half is one face. Carcass spraying, cornices/plinths and stripping deliberately stay at full price (the carcasses are the same surface either way; trim has one face to begin with), and the client's quote line reads "outside faces only" so the scope limit is on their copy too. Off by default, so nothing you've already quoted changes.
- **Strip original coating** — for spraying over melamine. Adds stripping time to every piece counted, at your day rate, worked out from the counts already entered — the line beneath the toggle shows the sum it priced so you can check it before it lands in the total. Off by default and the minutes-per-size are editable under Rates → Kitchen Rates.

5. Fitted units

+ → **Fitted Unit** on Measure — for bespoke built-ins: a bookcase or media unit with open shelving above and cabinet doors below. You can add several to one job, each auto-named "Fitted Unit N" (rename it — "Left alcove", "Media wall unit" — so multiple units read apart on the quote, materials and client view).

← **Fitted Unit** £357.43 quote

UNIT — open shelving & cabinet doors, priced per shelf/bay/door

Name
shown on the quote breakdown, materials & client view — e.g. "Left alcove" Alcove 5

Bays
vertical sections 3

Height per bay
m — one shared height for every bay (fitted units are near-always a single consistent height — say if a per-bay height is ever needed). With depth & the bay widths below, drives the paint litres only 2.1

Depth
m — internal carcass depth, front to back, shared by every bay. Litres then use the real painted area per bay (back + both sides + top & bottom) and per shelf (top & underside), instead of the old flat guesses 0.35

Bay 1 width
m 0.6

Bay 2 width
m 1.2

Bay 3 width
m 0.6

Shelves
total across all bays, fixed area

Home Measure On Site Summary

Unlike the kitchen calculator's flat £ pricing, a fitted unit is priced in **minutes**, like rooms and doors, so it stacks properly into the day-rate maths:

- **Bays, Height per bay, Depth** — one shared height and depth for the whole unit (fitted units are near-always a consistent height); a width input appears per bay, so uneven layouts (a wide TV recess between narrower shelf bays) are no problem.
- **Shelves** — total across all bays, priced as a fixed spray time each (top, underside and front edge in one unit).
- **Cabinet doors** — priced at the interior door rate, **one face** by default (a built-in is normally painted from the front only). **Door size** scales this for cupboard-size ($\frac{1}{2}$) or wardrobe-size ($1\frac{1}{2} \times$) doors, and **Both sides** prices the whole leaf — doubling that unit's

door labour and litres — for units sprayed inside and out. Shelves and bay carcasses are unaffected by either.

- **Prep Level** — Bare/Primed (full prime + 2 coats) or Existing painted (light key-sand + topcoat, no primer bought).
- **Sprayed finish** — off by default; adds the Rates spraying uplift to the litres.
- **Complexity/Masking** — None / +10% / +20%, for recessed lighting, tight bays or electrics to mask off. Stacks on labour time before markup, same shape as the Commercial toggle.
- **Colour & Product** — defaults to your Settings woodwork topcoat.

The **Breakdown** card shows the priced result before markup, same as a room's Preview.

6. Custom line items

+ → **Custom line** on Measure — for one-off items that don't fit any pricing model: "Install panelling — £450", or "Extra sheet of ply — £40 × 2".

The screenshot shows the 'Add Custom Line' screen in the NH Estimator app. At the top, there is a back arrow and the title 'Add Custom Line', with a 'Save' button in the top right corner. The form is divided into two main sections: 'CUSTOM LINE' and 'MARKUP'. The 'CUSTOM LINE' section has a subtitle '— manual description & price, no calculation behind it'. It contains three input fields: 'Description' with a placeholder 'e.g. Install panelling to hallway' and a text input 'Install pane'; 'Unit price' with a subtitle '£ ex VAT, entered directly' and a numeric input '450'; and 'Quantity' with a subtitle 'default 1' and a numeric input '1'. Below these fields, the 'Line total (ex markup)' is displayed as '£450.00'. The 'MARKUP' section has a subtitle 'MARKUP' and an 'Apply markup' toggle switch, which is currently turned on. Below the toggle, there is explanatory text: 'On = joins the quote's commercial/markup calculation like any other line. Off = the price above goes on the quote exactly as entered (margin already baked in)'. At the bottom of the screen, there is a navigation bar with four icons: 'Home' (house icon), 'Measure' (ruler icon), 'On Site' (wrench icon), and 'Summary' (clipboard icon).

Type a **Description**, a **Unit price** (ex VAT) and an optional **Quantity** (default 1). The **Apply markup** toggle decides how it behaves on the quote: on (the default) joins the commercial/markup calculation like any other line; off, the price goes onto the quote *exactly* as entered — for ad-hoc prices that already have your margin baked in. Custom lines sit in their own section on Measure with a MANUAL tag so they never read as a calculation, are fully editable and swipe-deletable, and flow through to the Summary breakdown, the client-facing Quote view, the Xero quote and the final invoice. No sundries % is added to them either way.


7. Colours

You never have to decide a colour to finish a measure. Every painted surface starts out named after where it is — "Lounge Feature Wall", "Bedroom 1 Main Walls" — so a colour you haven't discussed yet still reads as something you recognise weeks later, instead of as "Colour 3". When the client makes their mind up, you type the real name over the top. Same box, same place, whenever it happens.

Each surface's colour is one free-text field, on the room form under **Paint & Colour** and again on this screen. Type into it and the built-in library of nearly 3,400 colours (Farrow & Ball, Little Greene, Dulux, Dulux Heritage, Paint & Paper Library, RAL Classic, Lick, COAT and Valspar) autocompletes as you go, filling in the brand and code the merchant needs. The search reads the **brand** as well as the name, so typing "lick", "coat" or "valspar" shows you what they do; for the brands whose colours are described rather than numbered it reads the description too, so "charcoal" brings up COAT's The Coal Drop and "anthracite" brings up RAL 7016. Eight matches show at a time, best first. Under each name you get the brand, plus its **No.** where the brand issues one (Farrow & Ball No. 28) or the shade in words where it doesn't (COAT · Charcoal Grey). **Valspar carries the name only** — B&Q tints to the colour's name at the counter, and Valspar's own chart codes come in four formats that don't agree with each other, so a code on the quote would be something nobody can order from. A colour that isn't in the library is fine as free text, and can be saved to the library for next time — including the same name under a second brand. Typing just a **brand** ("lick", "coat") is a way to browse what it does, so the field won't take a bare brand name as a colour — tap one of its colours from the list instead, or type a bit more.

Under the field are **quick-pick chips**: every other colour already on this job, one tap each. That's how a colour used in two places gets shared, so the job buys one tin between them rather than two. Typing the same name twice does the same thing — the second one joins the first rather than making a duplicate.

Menu (≡) → **Colours** is the job-wide view of all of it:

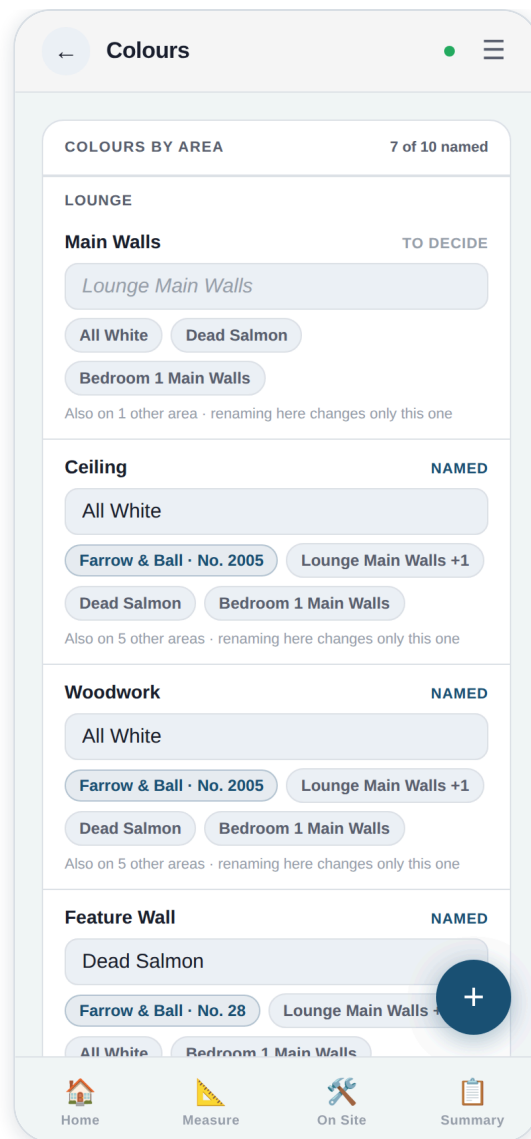

Colours by area lists every painted surface in the job, room by room, each with the same editable field and marked **Named** or **To decide** — so you can see at a glance what's still open and settle any of it from one screen. It's somewhere to look, not a step you have to complete.


Below that, **What to buy** is the ordering view, unchanged: each colour, the rooms and surfaces it covers, and **how much paint to order** — the same calculation Summary uses, so the two can never disagree. Look here, not at Summary, when you're actually buying paint.

Naming a shared colour only changes the one you're on. If six surfaces are all on the same undecided colour and you name one of them, that surface gets a colour of its own and the other five stay as they were — the field says so underneath while it's shared. To put them all on it, tap its quick-pick chip on each, or just type the name again.

8. Price Lookup & Shopping List


Two small tools off the menu, independent of any one job.

 **Price Lookup** searches every sales item in your Xero account by name or code and shows what it actually costs at the till — your **buy** price from Xero, inc VAT, with the ex-VAT figure underneath, which is the number printed on the supplier's price list. It is not your sell price: that has your markup on it, and belongs on quotes, not at the counter. An item with no buy price in Xero says **no buy price** rather than showing £0.00. It's a read-only till check, not tied to any quote:

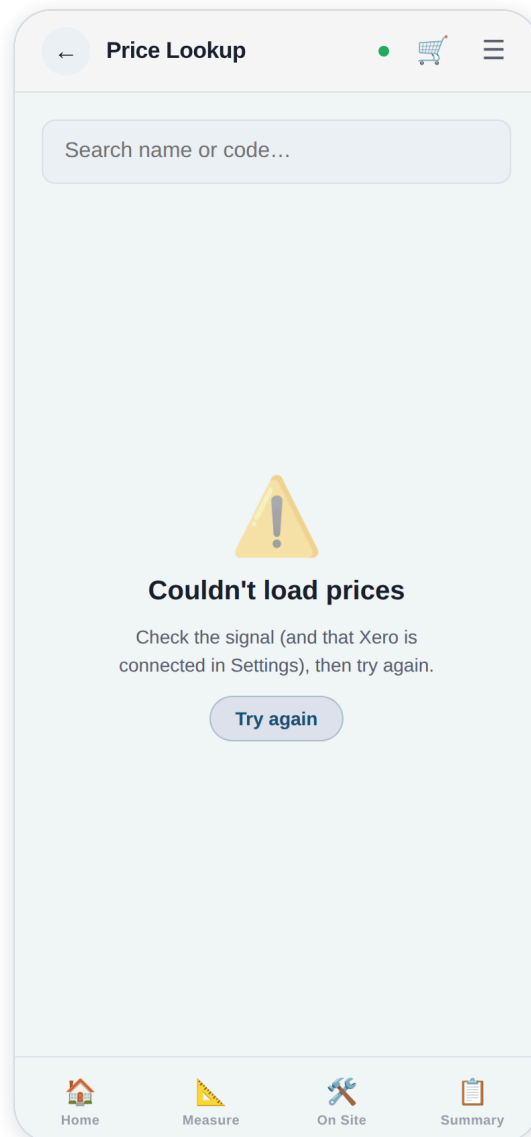

Tap the + on a result to add it straight to your Shopping List.


 **Shopping List** is a persistent, global pick-up list — not scoped to any one job, so a shop run can buy for whatever's on:

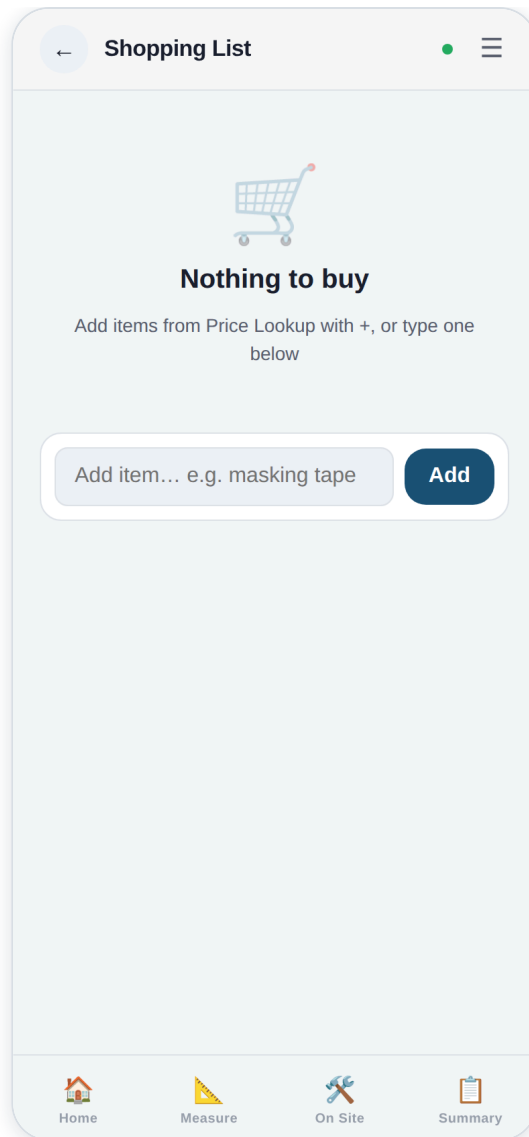

Items arrive from Price Lookup, or type one straight in ("masking tape") for anything that isn't a Xero item. They can also come off a job: tap  **Add to list** on any materials row on **On Site**, or on a materials row on **Summary** — see [Putting materials on the shopping list](#). Tick items off as you buy them and **Clear ticked** to reset for next time; items added from a job's materials carry that job's name as a tag, so the list says why something's on it.

9. The quote (Summary)

Open  **Summary** and the job becomes a priced quote:

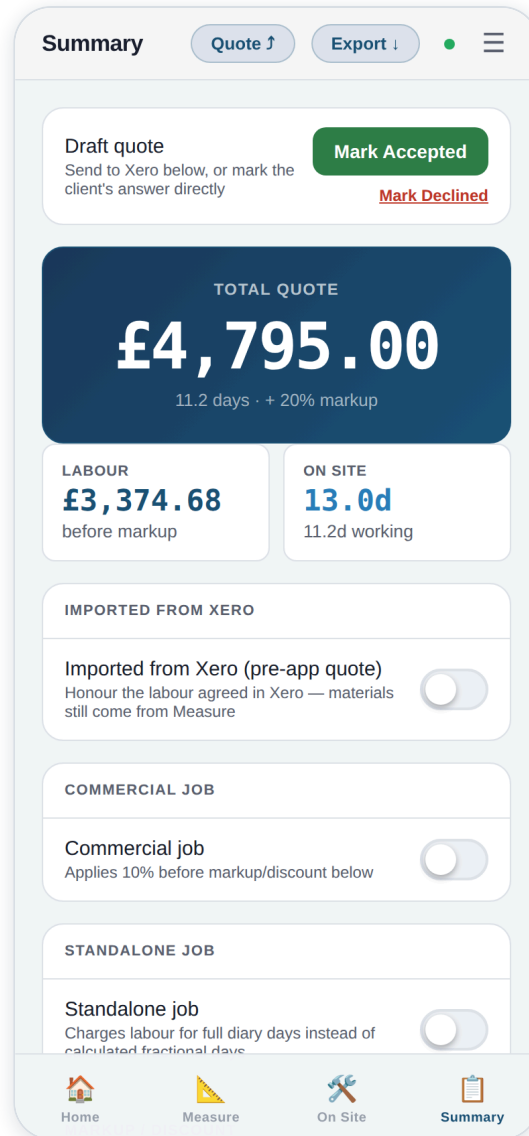

Summary Quote ↑ Export ↓

Draft quote
Send to Xero below, or mark the client's answer directly

Mark Accepted
Mark Declined

TOTAL QUOTE
£4,795.00
11.2 days · + 20% markup

LABOUR
£3,374.68
before markup

ON SITE
13.0d
11.2d working

IMPORTED FROM XERO

Imported from Xero (pre-app quote)
Honour the labour agreed in Xero — materials still come from Measure

COMMERCIAL JOB

Commercial job
Applies 10% before markup/discount below

STANDALONE JOB

Standalone job
Charges labour for full diary days instead of calculated fractional days

Home Measure On Site Summary


The hero card shows the **total quote**, days on site, and the markup applied. Below it:

- **Labour** (before markup) and **On Site days** at a glance.
- **Imported from Xero (pre-app quote)** — a toggle for jobs originally agreed directly in Xero before this app existed. Turn it on to honour that agreed labour figure as-is instead of the app's own room calculation; materials still come from Measure as normal. It only applies to a handful of jobs, so it isn't shown on every one: it appears automatically on any job already using it and on any job brought in by **Import an accepted quote from Xero**. On an ordinary job you'll see a single line, "**Labour agreed in a pre-app Xero quote?**", in its place — tap that and the toggle appears. Leave it off for anything measured and priced in the app.
- **Commercial job** — a toggle that adds a percentage uplift (default 10%) before markup, for commercial rather than domestic work.

- **Standalone job** — for a job booked on its own, where 1.6 calculated days still blocks out 2 diary days: this toggle charges labour at whole diary days × your day rate (rounding up to a full or half day, per the setting in Rates). It never discounts — if the calculated labour already beats the rounded figure, nothing changes. Both figures stay visible on the quote maths, and the top-up flows through markup, deposit, Xero and the final invoice like any other labour. A job can be commercial, standalone, both or neither.
- **Markup / Discount** — this quote can override your default markup; enter a negative number for a discount.

Scroll further for the full breakdown — every room, exterior item, kitchen, fitted unit and custom line priced, labour subtotal, sundries, markup — followed by the **Materials** list: each paint totalled in litres and converted into tins to buy.

Materials list **one line per product and tin size**, the way On Site has always shown them, with the surfaces that line's tins are for underneath it: *"Lounge Main Walls · 2 · Bedroom 1 Main Walls · 1"*. The same paint in two rooms is one line of three tins, not two lines you can't tell apart. Once every colour on a line has a real name, the name replaces the generic colour band inside the product itself — *"Tikkurila Optiva 5 - Colours 3ltr"* becomes *"Tikkurila Optiva 5 - Farrow & Ball No. 28 Dead Salmon 3ltr"* — on Summary, on the client's quote and in Xero, exactly as it already reads on an invoice. Until then the line keeps the generic wording and the surfaces underneath say what it's for. Editing a quantity on one of these rows takes the change off the **largest colour first**, and never leaves a colour holding no paint at all — a wall missing off the shopping list costs you a second trip, a spare tin doesn't. When the colour you wanted cut isn't the one it chose, **tap the surfaces line** under the product (it reads ► ... · *set each*) to open a **box per colour** and set them yourself; the row also opens itself straight after you type a total, so you can always see which colours it landed on. Type a total lower than the number of colours on the row and it holds at one each and says so, rather than deciding for you which wall goes unpainted — put **0** in a colour's own box to go below that. Deleting a row deletes that product, every colour of it.

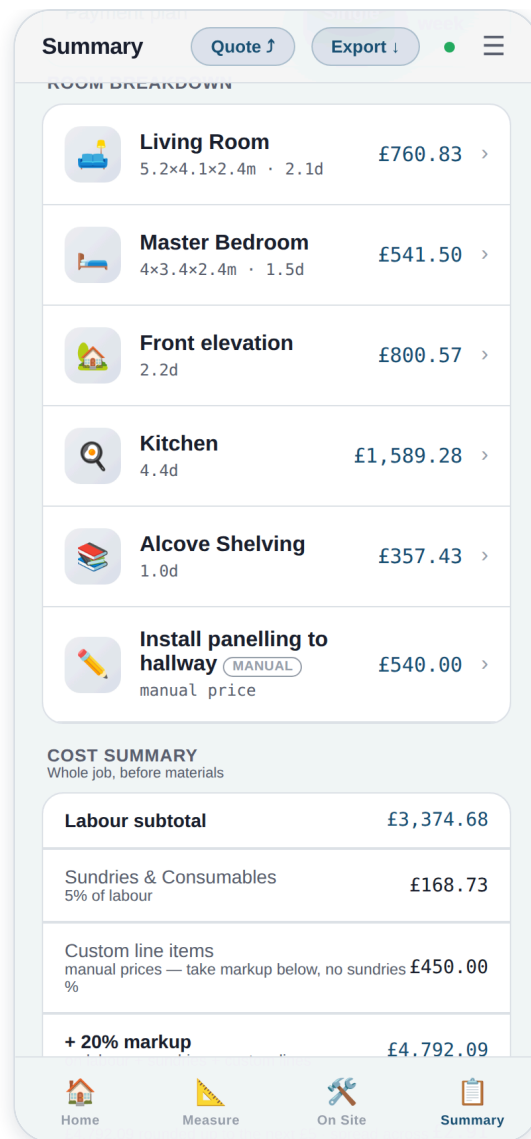

Materials & Undo

Materials are quoted as an estimate and — once the job runs — invoiced as used, so the list on Summary and On Site is the same list throughout a job's life. **Add Material** searches your Xero items (or free-text) for anything the calculation missed — an exterior plastic door, a kitchen, anything you've deleted the calculated line for and are entering by hand. Manually-added lines carry a **Chargeable** switch which is **on by default**, so what you add is on the quote, in the Materials subtotal and in the deposit like any other material. Turn it **off** to keep a line as tracking-only: it stays on your shopping list but is left out of the total, and the card then says how much is sitting there — *"Tracking only — not on the quote"* under the subtotal — so nothing is ever quietly missing off a price. A row you've already added shows **Chargeable** or **Tracking only** as a tag; tap the tag to switch it. **Recalculate** re-pulls the calculated lines from the rooms without throwing away your own additions: anything you added yourself is kept and tagged **"added by you"**, a quantity you've typed over is kept and tagged **"edited"** (with a **reset to N** link if you want the calculation's figure back), and if recalculating would drop something you edited by hand, you're asked first, by name.

Because the materials are an estimate, any quote with chargeable materials carries a note, asterisked against the balance: *"Material costs are estimated and may vary based on final colour and product selection. Any adjustments will be reflected in your final invoice. Significant changes in cost will always be discussed and agreed with you in advance."* It prints under the payment card on the client's quote and its PDF, under the balance on Summary, and at the end of the payment terms on the Xero quote. A labour-only quote doesn't get it.


Primer and topcoat in the same paint. If the woodwork primer in Settings (or a room's own primer pick) is the same product as the topcoat — a self-priming paint used for both — the app buys it once: one extra topcoat coat instead of a separate primer allocation of the same tins. The same goes for exterior woodwork and the windows and doors. The room form's self-priming rows say *primer is the same paint* when that's what decided it.

Almost anything you do to the materials list — recalculating, deleting a line, changing a quantity, adding a line — can be undone. Look for an **UNDO** button on the confirmation message right after the change, ↩ **Undo** at the top of the Materials list, or ↩ **Undo** in the ≡ menu if you missed the moment. It remembers the last 10 changes on the current job; switching job or closing the app starts it fresh.

Once a quote is accepted, its figures freeze

Everything in this app is calculated from your current Rates and Settings — right up until a client says yes. The moment a quote is **Accepted**, the app takes one snapshot of every figure — every room's price, the materials, the totals — and from then on the client-facing views read that frozen record, not a fresh recalculation. So nudging a coverage rate or a day rate next month can't silently move the price on a job someone already agreed to.

Because of that, an accepted job's Summary shows **one set of money**: the agreed one. The total at the top, then the **Accepted quote — Revision N** card underneath it with every line the client agreed, the materials, the deposit and balance **as agreed**, and the two things you can do to it — **Amend** and **History**.

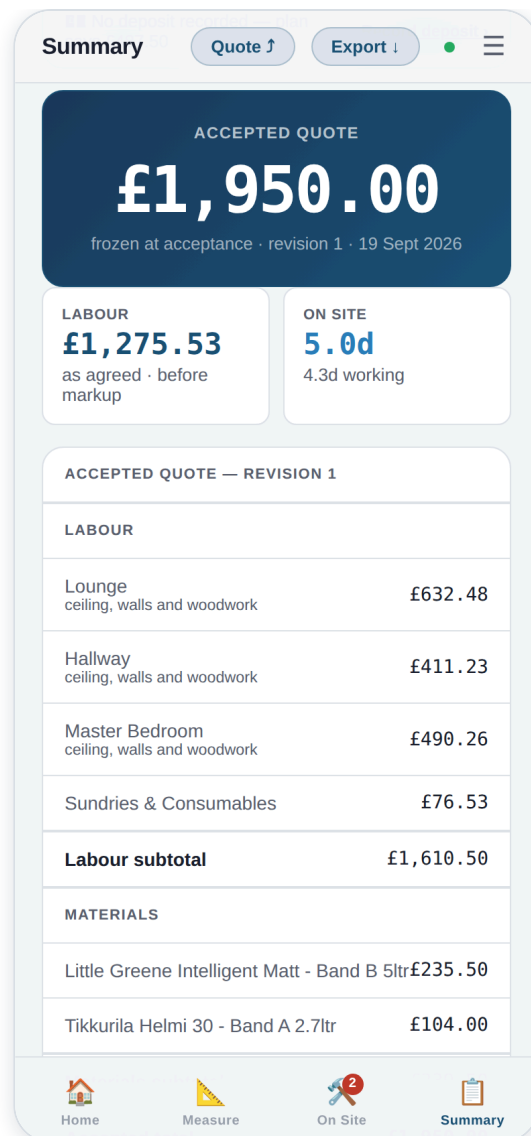

Below that card is the working side of the job: the **Room Breakdown** (where a room's days and per-surface detail live), the **Materials** shopping list, and the colours. Those are today's maths on the same job — you buy paint at today's prices — and a line above them says so.

What's no longer there, and why. Summary used to print today's price of the job beside the agreed one — *"Same job priced today: £X"* — with a rule across the screen marking where the agreed figures stopped, and the pricing controls greyed out with a strip explaining why. All of that has gone. Showing the live figure was how you *detected* a quote silently re-pricing itself, back before the snapshot existed to stop it happening; now that the agreed figures physically can't move, a second total on the same screen was just something to mistake for the first. Today's price is still worth seeing at the one moment it matters — when you're about to re-price the job — and that's where it now lives.

Amending an accepted quote

If the job genuinely needs to change after acceptance, **Amend → revision N+1** on the accepted-quote card opens a sheet showing what the change would mean *before* you commit to it:

Summary

Quote ↑

Export ↓

Tikkurila Helmi 30 - Band A 2.7ltr	£104.00
Materials subtotal	£339.50
Accepted total	£1,950.00
PAYMENT, AS AGREED	
Deposit due on acceptance	£487.50
Revision 2 priced now	£2,170.00 (+£220.00)

WHERE THE £220.00 DIFFERENCE IS

Agreed revision 1	£1,950.00
Same job priced today	£2,170.00 (+£220.00)

AGREED – TODAY

Labour	£1,607.17 → £1,826.64
Materials	£339.50 – unchanged
Rounding & upcharge	£3.33 → £3.86

WHICH LINES MOVED

Master Bedroom +£58.85	£490.26 → £549.11
Hallway +£49.36	£411.23 → £460.59
Sundries & Consumables +£10.45	£76.53 → £86.98

Changed since acceptance: Day Rate 300

At the top: the revision you agreed, and the same job priced now, with the difference between them. Under it, **Where the £X difference is** — labour agreed → today, materials agreed → today, the £5 rounding on its own line, and then **which lines moved**, room by room, biggest mover first.

Underneath that it says whether the Rates page had anything to do with it. Only the settings that actually price a job are checked (the rates, the coverage table, the kitchen rates, the product choices), so exporting a backup or changing a payment plan never reads as a rate change. It also checks **the app's own version**: the rates are only half of what prices a job, and an update that changes how a room is costed will move the figure with nothing on the job touched. Where the build has changed since you accepted, it names both versions — so an unexplained few pounds has an explanation instead of looking like the app inventing money.

The **Commercial job**, **Standalone job** and **Markup / Discount** controls are in this sheet too, because this is the one place they still do anything on an accepted job: they price the revision you're about to write, and the two figures at the top move as you change them. (On a job still being quoted they're where they always were, on Summary.)

Last, a box to say **what changed**, which goes on the revision and is what History shows you later. Nothing is written until you tap **Amend**. The old revision stays on record; nothing is overwritten. Once there's more than one, **History (N revisions)** lists every revision with its date, its total and what each amendment added or took off.

If the amend would absorb extras you'd already flagged as variations, the sheet says so before you commit — see [extra work in a room you already measured](#).

Client-facing quote view

Quote on the [Documents](#) tab opens a branded, read-only one-page quote at customer-facing prices — room by room, colour schedule, payment terms and total, with your logo and business colours. It opens inside the app; tap **Save PDF** and it builds a real PDF file (as many pages as it needs) and hands it to your phone's share sheet — save it, email it straight to the client, or send it to a printer. It works with no signal, so you can produce a quote PDF standing in a house with no bars. It's regenerated live every time you open it, so it never shows stale figures, and doesn't touch Xero at all.

Mostly it's one line per room. The exception is [wallpaper stripping](#), which gets a line of its own — *"Wallpaper Stripping — Back Bedroom"* with the paper type underneath — so the client can see what the labour is for. It's carved out of that room's line rather than added to it, so the total doesn't move, and the same split reaches the Xero quote and the final invoice. Everything else the room needs doing to it (mist coat, prep level, making good) stays inside the room's own price as it always has.

Recording a deposit

Once the job is **Accepted**, the status card carries the deposit line — unless you've turned off **Deposit required** (its own toggle, default on, for jobs that don't want one: a client who always pays, work squeezed in around a bigger job).

Summary [Quote ↑](#) [Export ↓](#) ● ☰

✓ **Accepted**
8/27/2026 · tracked in Materials > [Mark Completed](#)
[Move to Draft](#)

Starts Mon, 7 Sept · 5 days → Fri, 11 Sept
estimate now ~13 days, scheduled 5 [Reschedule](#) [Unschedule](#)

Received **1198.75** **08/27/2026** 📅

Note (option)
Plan says £1,198.75 — record what was **actually paid**, not what should have been.
[Save deposit](#) [Cancel](#)

Agreed figures — revision 1
frozen at acceptance · 27 Aug 2026. Rate changes since then do not move these numbers.
[Amend → revision 2](#)

ACCEPTED QUOTE — REVISION 1

LABOUR	
Living Room	£761.38
Master Bedroom	£541.89
Front elevation exterior	£801.15

Home Measure On Site **Summary**

1. **Record deposit** > — the amount is pre-filled from the quote's deposit figure; correct it to what was really paid, set the date the money arrived (matching your bank feed), add a note if you like, **Save deposit**.
2. **Sync to Xero** — creates it in Xero as Receive Money → Received as Prepayment, against the bank account chosen in Settings. **Don't also enter it in Xero yourself** — doing both double-counts the money against your bank feed.
3. **Apply it to the invoice in Xero** when you raise the invoice, exactly as before — the app can't do this step, since Xero won't let a payment be applied to a still-draft invoice.

The line then shows where things stand — *not in Xero yet*, *in Xero · unallocated*, or *in Xero · allocated* ✓ — read back from Xero, which stays the boss: void or delete the deposit there and the app notices and stops saying it's synced. A failed sync loses nothing — the deposit stays recorded, the line turns red with the reason, and **Try again** is safe. Fixing a mistake (a typo, a refund) is done in Xero, not here — the app never edits or deletes a deposit that's already landed.

The quote description

Under the breakdown sits the **Quote description** — the wording that rides the **first line item** on the Xero quote, and describes that line. It's written for you from the job: the app picks the wording template that fits the work (Painting, Wallpapering, Kitchen Cabinet Spraying and so on — all editable in **Settings → Quote & Invoice Text**), fills in your products and coats, and puts it in future tense for a quote and past tense for the final invoice.

A job with **both rooms and exterior items** gets the **Interior & Exterior** template, which has an INSIDE half and an OUTSIDE half — so a client reads the promise about their furniture and flooring *and* the one about their windows, doors and landscaping, instead of only the indoor one.

It says what you actually measured. Quote only the walls and it won't promise ceilings and woodwork. Measure a feature wall, panelling, radiators, window sills or a mist coat on new plaster and each one gets named — with its own product if you gave it one:

Ceilings finished in Tikkurila Anti Reflex 2, walls in Tikkurila Optiva 5, the feature wall in Farrow & Ball Estate Emulsion, and all woodwork including skirtings, window sills and radiators in Tikkurila Helmi 30, each applied in 2 coats. Existing wallpaper will be stripped from the walls prior to decoration. Newly plastered walls will be mist coated prior to finishing.

The two prep sentences at the end appear only where you ticked them, and in the order the work happens — [strip](#) first, then the mist coat.

A papered feature wall isn't listed as painted — it moves to the wallpapering line instead, which names what's being papered.

A job with no painting at all still gets described. Strip a room out and paint nothing, and the description is the stripping — not an empty paragraph under a heading about painting.

The number of lengths fills itself in too. The wallpapering paragraph's `[X]` is now `{lengths}` — the strips being hung across the job. See [Wallpaper](#). With no paper measured it goes back to `[X]` for you to fill in, exactly as before.

If you've edited your templates, two placeholders are new and your copy won't have them — `settings.textTemplates` takes a copy of the whole set the first time you edit any of it, and never re-reads the built-in ones.

- **{stripped}** — the wallpaper-stripping sentence. It rides `{surfaces}` in every template that has one, so those pick it up with no work from you. The **Wallpapering** template is the exception (no `{surfaces}`, because nothing is painted), so it carries `{stripped}` on its own line under PROTECTION & PREPARATION. **Don't put {stripped} in a template that already has {surfaces}** — the quote would say it twice.
- **{lengths}** — the number of lengths, in **Wallpapering** and **Painting & Papering**: replace the `[X]` in *"[X] lengths of [paper name/supplier]"* with `{lengths}`.

Add whichever you want by hand, or use **Reset all** to take the new defaults (which loses your other edits). Leave them out and nothing breaks — you just keep typing those bits yourself, as you do now.

It never states a paint the job doesn't use. It's a whole-job sentence, so woodwork measured in one room puts woodwork in the wording for the job — and where the rooms use *different* paints on the same surface, every one of them is named rather than whichever room came first:

Ceilings finished in Tikkurila Anti Reflex 2, walls in Tikkurila Optiva 5 and Dulux Diamond Matt, and all woodwork including skirtings in Tikkurila Helmi 30, each applied in 2 coats.

Only rooms that actually paint a surface get a say — an old product left on a room with no wall coats doesn't count as a second paint — and a surface no room paints at all keeps your Settings default. Coats work differently, because there's nothing to list: where the surfaces disagree, no coat figure is stated rather than a wrong one. Type the detail into the box yourself whenever you'd rather spell out which room gets which.

It describes one line, and every other line says what *it* is having. Each Xero line carries its own price, so the block opens *"Painting of Lounge:"* and describes the Lounge — not a list of every room in the job on a line priced for one of them. The protection and completion paragraphs are true of every room, so they appear once and the later lines just point back at them. Here are the Xero line descriptions the app writes, one after the other:

Painting of Lounge:

[protection · the Lounge's scope · completion]

Kitchen - same as above

Bedroom 1 - same as above

Bathroom

Ceilings finished in Tikkurila Anti Reflex 2 and walls in Tikkurila Optiva 5, each applied in 2 coats.

Preparation and completion as above.

W.C.

Walls in Tikkurila Optiva 5, applied in 2 coats.

Preparation and completion as above.

The first line isn't labelled twice. The block already opens by naming the room it sits on, so the room name is no longer put above it as well — that line used to read *"Lounge"*, then *"Painting of Lounge:"* one line below it. The label is still added wherever the block *doesn't* name the line: your own edited wording that never mentions the room, an exterior template with a fixed heading, or a line the block has moved onto because you dropped the room it was written for.

"Same as above" now means exactly that — same as the first line. A room matching it collapses, so identical bedrooms stay tidy and the detail appears only where a room genuinely differs. Your own client quote view gets the short version under each room name: *"ceiling, walls and woodwork"*, *"walls"*.

The box is editable: type in it and your version sticks from then on (↺ **Reset to template** goes back). **Editing it also turns the per-room lines off** — once the wording is yours, the app stops adding sentences underneath it that you didn't write and can't edit; every other line goes back to "same as above". Sending stamps the exact wording onto the quote, so a document you've already sent never changes underneath you. Sending doesn't count as editing, though — **Update quote in Xero** keeps each room's own lines exactly as the first send wrote them.

Exterior items get the same treatment, from what you measured on them — render (textured or not), fascias and soffits, windows, sash windows, doors, garage doors, a porch — with repairs and restoration noted where you've logged any. Each exterior line compares against the other *exterior* lines, so it only carries text where it genuinely differs from them.

Fitted units describe themselves too — *"Fitted units including 3 bays, 9 shelves and 4 doors painted both sides in Tikkurila Helmi 30, applied in 2 coats. Bare surfaces will be primed first."* — with the product coming from the unit's own picker (or your Settings woodwork topcoat) and the priming note following each unit's **Bare / Already painted** setting. The **kitchen** fills in its coat count; its product and colour aren't tracked in the app, so those stay as [product] and [colour/finish] markers for you to type over, along with the fitted units' [spray/brush] and the wallpaper templates' [paper name/supplier] .

On the Xero quote, the kitchen and fitted-unit *lines* still read "same as above" under the block — only rooms and exterior items get a per-line scope sentence.

If you've edited your templates in Settings, your saved copies keep whatever wording you gave them. To pick this up, put {surfaces} where the scope sentence should go (and {papered} where a wallpapering line names what's being papered) — or use **Reset to defaults** to take the supplied templates back.

Sending to Xero

Expand the **client panel** at the top of Summary:

1. **Client name** — start typing and existing Xero contacts autocomplete; picking one fills phone, email and address into blank fields only (anything you've already typed wins). **Sync to Xero** pushes the app's details the other way.
2. **Street address** autocompletes as you type; picking a suggestion fills street, town and postcode.
3. Add a **Reference** if you use them.
4. Tap **Send to Xero**. The quote is created in Xero, ready to send to the client from there, and the job's status becomes **Quoted**.

If you edit the job afterwards, the button becomes "**Update quote Q-*nnn* in Xero**" so re-sending updates the *same* quote — with a "Send as a NEW quote instead" option when you genuinely want a second version. Answers given in Xero flow back into the app when you next open it; an answer given in the app always wins.


When the client answers

- **Mark Accepted** — the job moves to Accepted (syncd to Xero), its figures freeze (see above), and scheduling and On Site tracking unlock.
- **Mark Declined** — the job files itself away under Declined.


Quotes that sit unanswered longer than your "chase quotes after" setting (default 14 days) pop up on Home so nothing slips.

10. Jobs

Menu (≡) → **Jobs**. The app holds any number of jobs; the one you're working on is marked **CURRENT**, and everything on Measure, Kitchen, Summary and On Site belongs to it. Tap another job to switch. Rates and Settings are global — they apply to every job.

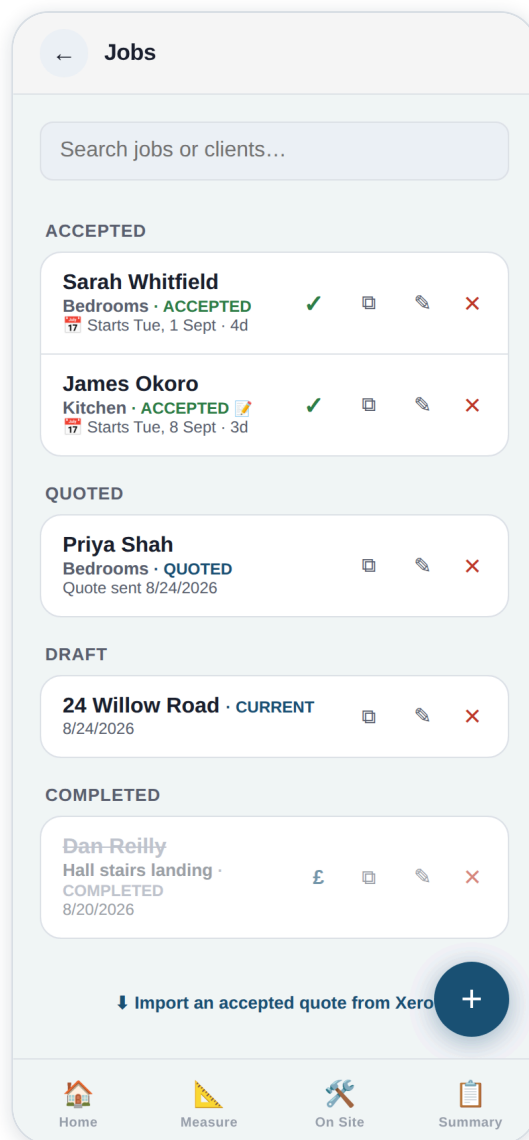


- **The client's name is the top line** of each row, with the job name and its status underneath — job names repeat ("Bedrooms" three times over), people don't. A job with no client saved shows its name on top instead; the client comes from the **Client** details on Summary's Xero panel.
- **Search** (top of the screen) filters every group as you type: client name, job name, calendar title, or a Xero quote/invoice number off a piece of paper. Several words all have to match, but not in the same field — "priya bedrooms" finds it. A count and a **Clear** link sit under the box, and the search resets each time you open the screen.

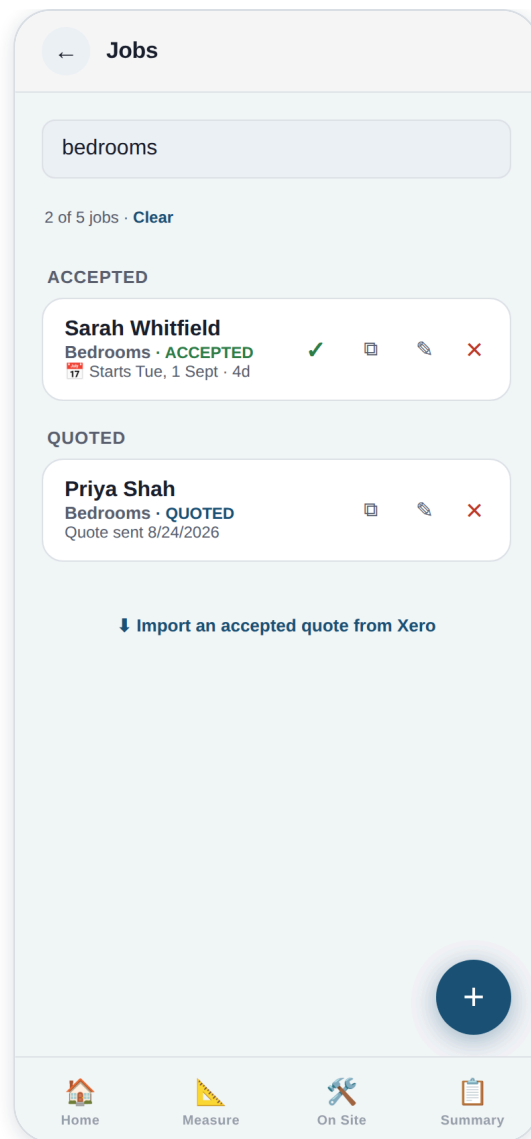

- Jobs group by status: **Draft → Quoted → Accepted / Declined → Completed → Invoiced.**
- **Recently invoiced** sits just above the Invoiced group: up to three jobs invoiced in the last 60 days, each with what was invoiced, whether it came in on, under or over its quoted days, and the markup banked on materials. Tap one to open its Summary and the full **Job Profitability** card. It's hidden while you're searching.
- **+** starts a new job. **✎** renames one. **📄** duplicates a job as a quick template (notes aren't copied). Each job is fully separate — its own rooms, kitchen, colours and materials.
- **Import an accepted quote from Xero** — took the job on before the app existed? Import the Xero quote and it becomes a job here, with the agreed price as the record (adjustable via the **Agreed figures** card, or the **Imported from Xero** toggle on Summary — see [The quote](#)). If a listed quote actually belongs to a job already in the app, use **"Already a job in the app? Link it >"** instead of importing a duplicate.

11. Schedule


Menu (☰) → **Schedule** — or tap **Schedule** > on an accepted job's Summary, which offers the next free slot automatically.

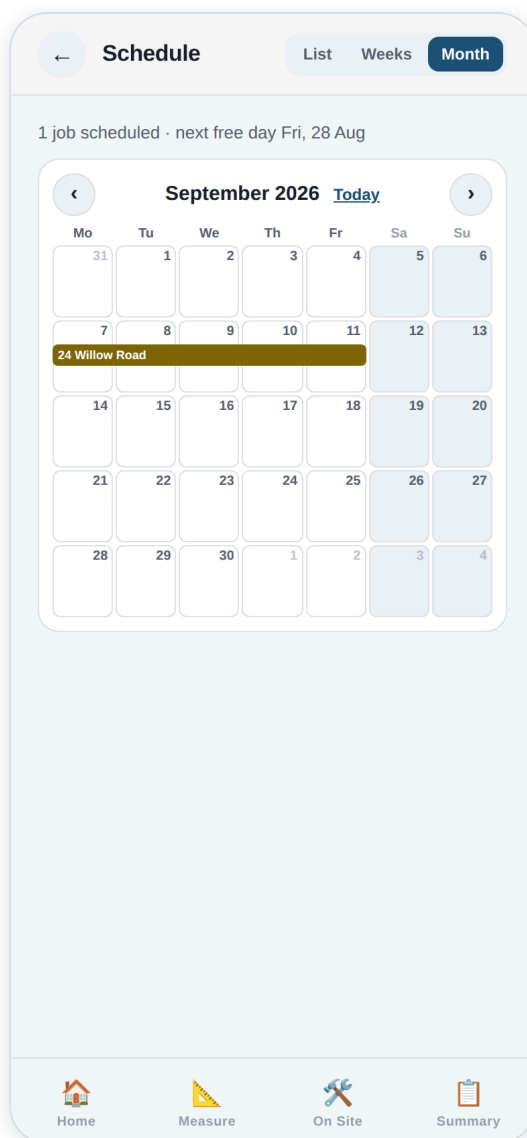

- Switch between **List**, **Weeks** and **Month** views. Jobs appear as coloured bars across their booked days; UK bank holidays are marked, and weekends are greyed out unless you've turned on **Work Saturdays** in Rates → Scheduling.
- **Tap a job's bar** → Open job, **Move start date** (then tap the new day), or **Unschedule**.
- **Tap an empty day** → start a job there, or **block days** for holidays and time off.
- The header tells you your **next free day** at all times.
- **What a job is called on the calendar:** entries read **client — job name — calendar title**, skipping anything the others already say. So a Kitchen job for Lauren Lowe reads "Lauren Lowe — Kitchen" whether or not you typed a calendar title, and an older job still named "Lauren Lowe - Kitchen" doesn't say her name twice. The client comes from the job's **Client** details (Xero panel on Summary) — if a job has no client saved, the entry is just the job name.

Blocking days off

Holidays, a day at the dentist, a week's decorating on your own house — tap the day and the sheet opens with the day's own actions first:

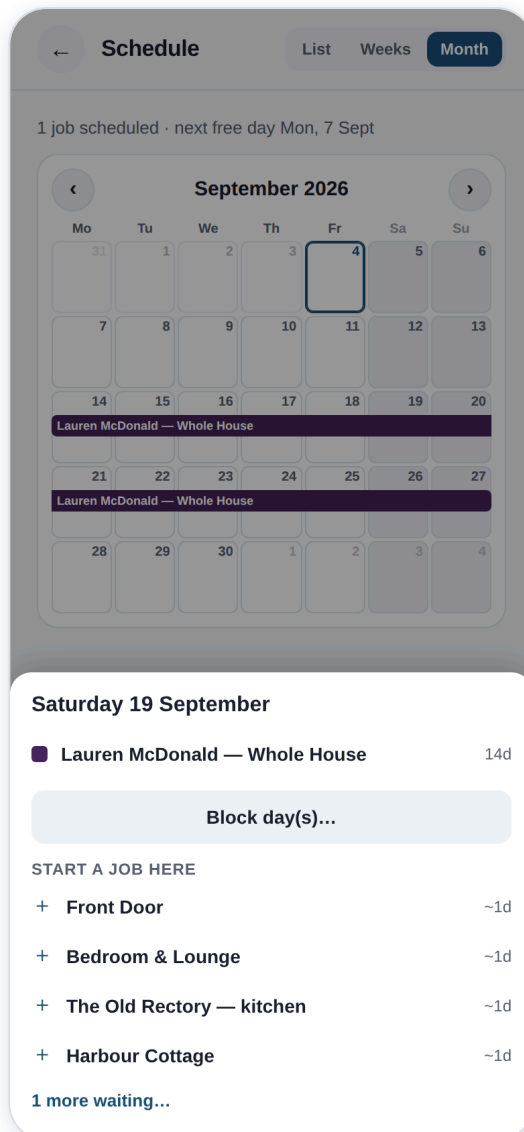

- **Block day(s)...** is offered on **every day from today onwards** — including Saturdays, Sundays and bank holidays. Your usual week may have those off, but a job set to *+ Saturdays* or *Every day* works them, and a block is the one thing that override never beats. The picture above is exactly that: a Saturday in the middle of a whole-house job.
- It takes a range: the day you tapped → an end date (the same day, for a single day off), plus an optional label such as *Holiday*. The day you tapped is always blocked. Days merely swept up in between are blocked only if you'd have been working them anyway — a weekend in the middle of a fortnight off is already off, so it isn't cluttered with a chip, unless a job was booked across it.
- Blocked days draw as a dashed grey bar across the calendar, are never offered as a start date, and booked jobs stretch **around** them. Your phone calendar feed agrees, so a blocked fortnight is a gap there too.
- Tap a blocked day for **Unblock this day**, or **Unblock all N days** to clear the whole run in one go.

- **Start a job here** lists the accepted jobs still waiting for a date, four at a time — tap **N more waiting...** for the rest. Blocking stays at the top of the sheet however many are waiting.

A one-off day out of the ordinary, without changing anything globally: tap the day itself → **start a job here** (or move a job there), and the confirm tells you what switches on — a Saturday turns on "Saturdays for this job only", a Sunday or bank holiday turns on "Every day for this job only". From an accepted job's own **Schedule** > form, the same idea is the **Days worked** picker (Usual / + Saturdays / Every day), which switches itself if you pick such a start date. Automatic slot suggestions still only ever offer your usual working days, and your own blocked days always win.

See jobs in your phone calendar: Rates → Scheduling → turn on **Calendar feed**, then tap the link to copy it and subscribe in your calendar app. Booked jobs then appear alongside everything else in your life.

12. On Site — running the job

Once a job is accepted, the 🚧 **On Site** tab is your day-to-day companion:

The screenshot shows the 'On Site' mobile app interface for a job titled '24 Willow Road'. At the top, there's a header with 'On Site' and an 'Invoice >' button. Below the header, a status bar shows 'Accepted' with a green checkmark, a calendar icon, and 'Mon, 7 Sept · 5d', along with a 'Mark Completed' button. A table displays financial data: 'Estimated' (£0.00), 'Actual (so far)' (£0.00), and 'Variance' (£0.00), with a note 'Everything ticked off'. The 'TIME ON SITE' section shows 'No days logged yet · estimated ~13 on site' and a '+ Log today (full day)' button, with a link to 'Log a different day'. The 'MATERIALS' section states 'No materials yet. Recalculate the snapshot on Summary, or add what you bought below.' The 'ADD MATERIAL THE ESTIMATE MISSED' section has input fields for 'Product' (with a search button), 'Description' (with an example 'e.g. Extra r'), and 'Colour' (with a dropdown menu set to 'No colour'). At the bottom is a navigation bar with icons for 'Home', 'Measure', 'On Site' (active), and 'Summary'.

- **Estimated vs Actual** — the card at the top tracks what the materials are really costing against what you quoted, with the variance.
- **Time on Site** — tap **+ Log today (full day)** at the end of each day (or *Log a different day* to back-fill). This builds the true labour record for the job.
- **Materials** — the quote's materials list becomes a shopping list. Tick items off as you buy them, and correct quantities/prices to what you actually paid — see [Materials & Undo](#) for how edits and Recalculate interact, and Undo if something goes wrong. Any row here can also go on your **Shopping List**, or the whole list can go to your merchant with ✉ **Send to supplier** — see below.
- **Add material the estimate missed** — extra sundries or a forgotten tin: search the product, set the price, done.

- **Variations** — the client asks for "just one more room" mid-job? Add the room (or exterior item, fitted unit) on Measure and flick its **Variation** toggle, in the **Room Details** card at the top of the form, with the room's name (it only appears once the quote has been accepted, and on a new room added after that it starts **on** — turn it off if the room is a correction to the original quote rather than extra work):


The screenshot shows the 'Add Room' form. At the top, there's a header with a back arrow, the title 'Add Room', and a 'Save' button. Below this is a section titled 'ROOM DETAILS'. It contains a 'Room Name' field with the text 'Utility Room'. Below that is a 'Staircase / HSL' section with a toggle switch that is currently off. Below that is a 'Variation' section with a toggle switch that is currently on. The 'Variation' section has a description: 'Extra scope on top of the accepted quote — listed under On Site > Variations. Turn off if this is a correction to the original quote'. Below the 'ROOM DETAILS' section is a section titled 'DIMENSIONS'. It contains a 'Room shape' section with three options: 'Standard' (selected), 'Perimeter', and 'Segments'. Below this are three input fields: 'Length' (0), 'Width' (0), and 'Ceiling height' (2.4). At the bottom of the 'DIMENSIONS' section is a 'Sloped ceiling' section with a toggle switch. The bottom of the screen shows a navigation bar with four icons: 'Home', 'Measure', 'On Site', and 'Summary'.

It's priced with the same engine but kept separate from the accepted quote, and appears in its own Variations card here. Each variation carries a status — tap ✓ **Approved by client** to record their yes (with an optional note; the date is stamped automatically), or mark one Declined to drop it from the totals and the final invoice while keeping the record. Anything still Pending gets called out before the final invoice will let it through. For extra work added *inside* a room you already measured, see [below](#).

- **Spec sheet** — what's being done in every area, what colour each thing is going, and how far through it is. Tick Prep and Painted off as you go. See below.
- **Snags** — the punch list for the job, above everything else once there's something on it. See below.
- **Invoice** > (top right) shows the materials list formatted for invoicing, with a **Copy** button.

Putting materials on the shopping list

This is the screen you have open standing in the room, so it's the one that answers *"do I still need to buy this?"* — and every materials row carries a  **Add to list** chip, the quoted tins as well as the sundries you added yourself. Tap it and the product goes on your **Shopping List** with its price and this job's name, and the chip changes to ✓ **On list**:

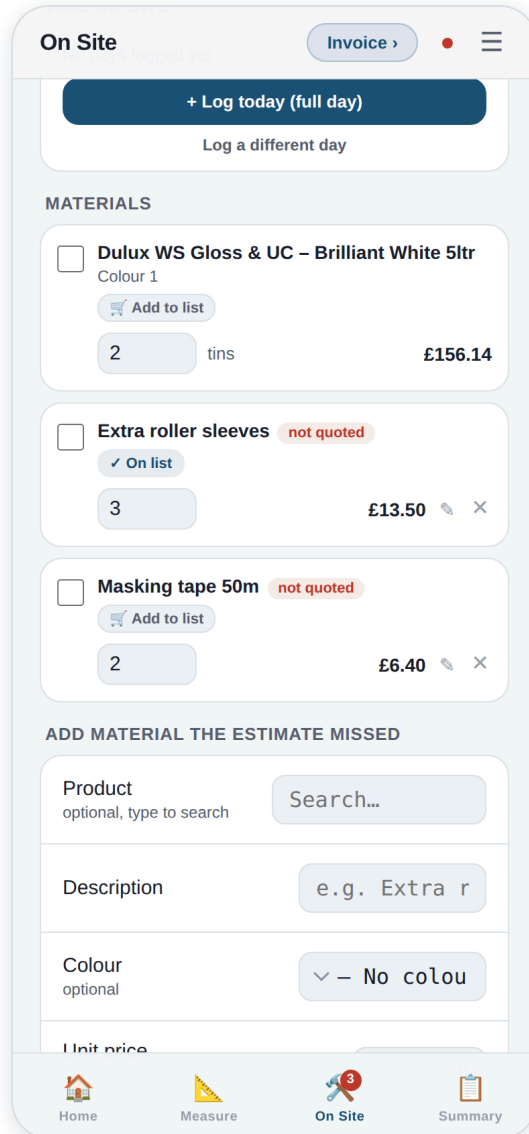

The screenshot shows the 'On Site' app interface. At the top, there's a header with 'On Site' and an 'Invoice' button. Below this is a button '+ Log today (full day)' and a link 'Log a different day'. The main section is titled 'MATERIALS' and contains three rows of materials:

- ☐ **Dulux WS Gloss & UC – Brilliant White 5ltr**
Colour 1
 **Add to list**
2 tins £156.14
- ☐ **Extra roller sleeves** not quoted
✓ **On list**
3 £13.50  
- ☐ **Masking tape 50m** not quoted
 **Add to list**
2 £6.40  

Below the materials list is a section titled 'ADD MATERIAL THE ESTIMATE MISSED'. It contains a form with the following fields:

- Product** (optional, type to search) with a 'Search...' button.
- Description** with a placeholder 'e.g. Extra r'.
- Colour** (optional) with a dropdown menu showing 'No colour'.
- Unit price** (optional).

At the bottom of the screen is a navigation bar with four icons: Home, Measure, On Site (active), and Summary.

It's per row and never automatic — plenty of what's on a job is already in the van. Summary's materials list has the same chip on the quoted lines, and either route lands on the same list: one line per product, no duplicates however many times you tap, and both job names on it if two jobs need the same thing. Paint sold by the litre goes on **without a price**, because the figure on the row is a price per litre, not what a tin costs at the till. Ticked something off in the shop and then ran out? Tap the chip again and it goes back on the list.

Sending a materials order to your supplier

When you'd rather the merchant delivered (or had it ready to collect) than go round the shop yourself, tap  **Send to supplier** at the top of the On Site materials list. It builds an order from the job's calculated materials and opens it as a ready-written email in your phone's mail app.

This is separate from the [Shopping List](#), which is for when you're standing in the shop — and there are **no prices anywhere on it**.

- **Jobs** — the job you came from is ticked. Tick any other accepted job to put its materials on the same order: the same product and size on two jobs becomes one line with the quantities added together, exactly as On Site groups them.
- **The lines** — every line is ticked to start with. Paint reads with its **real colour in place of the colour band** (*Optiva 5 - Dead Salmon 3ltr*, not *Optiva 5 - Colours 3ltr*), the same as your invoices. A product covering two colours gets the split in brackets in the email, so the merchant knows how many to tint of each. Use **– / +** to change a quantity for this order only — the job's own materials don't change.
- **⚠ no colour set** — a line whose colour is still just a room name (nobody has picked the colour yet) is flagged, and a banner above the Send button counts them. It won't stop you sending; the email just shows the colour band for that line.
- **Extra item** — anything the calculator doesn't produce (caulk, tape, filler): type it, set a quantity, **Add**. Extras belong to this order only.
- **Already ordered** — a line you've ordered before starts **unticked** and says so: *Ordered · Brewers · 24 Sept*. Tick it again if you really do want more. If only one of the jobs on the order has had it, it starts ticked at the other job's quantity.

- **Needs more since you ordered** — add a room after ordering and the job may now need more than you sent. That line says so — *Ordered 3 · now needs 5 · Brewers · 24 Sept* — and starts **ticked at just the difference** (2), so the next order tops it up. Ordering more than the calculation (spares) never gets flagged.

Then choose the **supplier** and how it's arriving:

Send to supplier

Decorators caulk extra 3 x

Extra item... e.g. decorat 1 Add

SUPPLIER

▼ Brewers

DELIVERY

Collect To site To home

Delivery address this order only
12 Ermine Street, Huntingdon, PE29 1AA

Delivery notes optional
Leave in the porch, gate code 1234

Required by optional 10/02/2026

⚠ 1 line has no colour set — the email will show the colour band instead.

✉ Send to Brewers

Copy order text


Home Measure On Site Summary

- **Collect** — no delivery address; the email names the supplier's branch and its address from Settings.
- **To site** — fills in the job's address. With more than one job on the order, pick which job's address it goes to.
- **To home** — fills in your home delivery address from Settings (or your business address if that's blank).

It starts on **To site** for one job and **To home** for several. The address box is editable for this order only — nothing you type there changes the job or Settings. **Delivery notes** (where to leave it, a gate code) and **Required by** are optional; anything left empty is simply left off the email.

Tap  **Send to [supplier]** and your mail app opens with the email ready — subject *Order: [business name] (Acc [account number])*, the lines, your account number, the job names as the reference, the delivery details, and your name, business name and phone to sign it off. Check it and send it from there. No mail app on this device? **Copy order text** copies the email so you can paste it anywhere.

The app can't see whether you actually pressed Send in your mail app, so when you come back it asks:

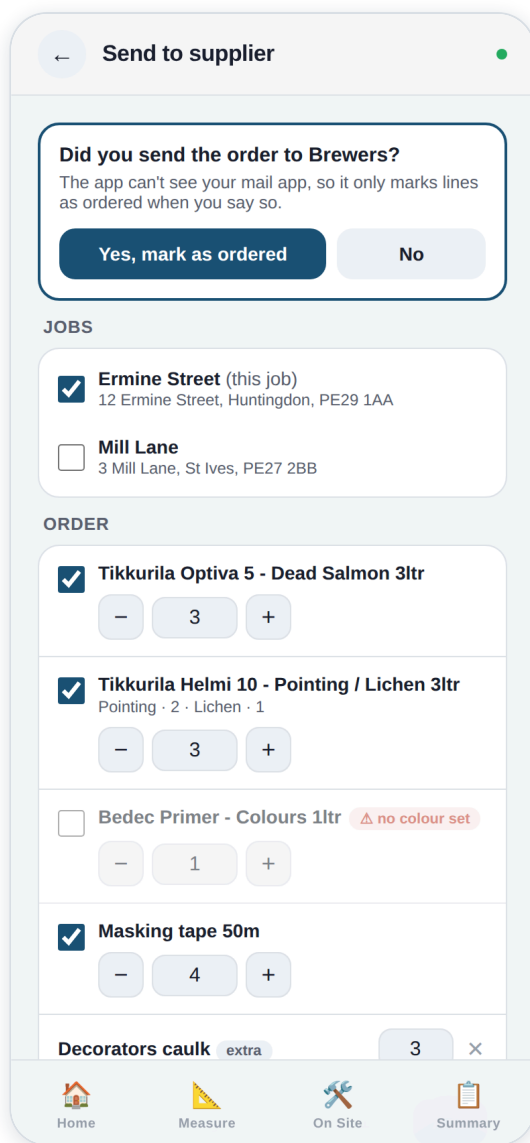

← Send to supplier

Did you send the order to Brewers?
The app can't see your mail app, so it only marks lines as ordered when you say so.

Yes, mark as ordered No

JOBS

☒ **Ermine Street** (this job)
12 Ermine Street, Huntingdon, PE29 1AA

☐ **Mill Lane**
3 Mill Lane, St Ives, PE27 2BB

ORDER

☒ **Tikkurila Optiva 5 - Dead Salmon 3ltr**
- 3 +

☒ **Tikkurila Helmi 10 - Pointing / Lichen 3ltr**
Pointing · 2 · Lichen · 1
- 3 +


☐ **Bedec Primer - Colours 1ltr** ⚠ no colour set
- 1 +

☒ **Masking tape 50m**
- 4 +

Decorators caulk extra 3 ×

Home Measure On Site Summary

Yes, mark as ordered logs the order and marks its lines as ordered on each job it covered. **No** logs nothing. After a Yes, if you left any lines unticked that still haven't been ordered, you're offered  **Add unordered to shopping list** — one tap puts them on your Shopping List with each job's name on them, or close the card to skip it:

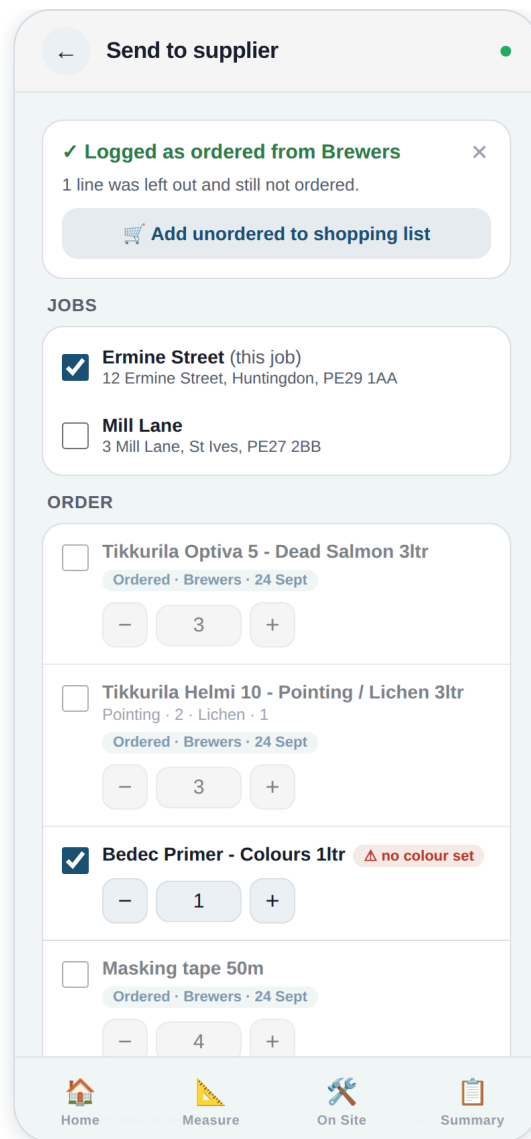

Every order a job was part of is listed under **Orders** on its On Site screen — supplier, date, how it's arriving and how many items. Tap one to read the email exactly as it went. Orders can't be edited or re-sent from there. Ordered rows on On Site also carry the *Ordered · supplier · date* label (or *Ordered 3 · now needs 5* if the job has grown since).

Tapped **Yes, mark as ordered** by mistake? Open the order under **Orders** and tap **Delete this order**. Its lines go back to not ordered — on every job the order covered — so the next order includes them again. It only removes the app's record; the email itself is still in your mail app's Sent folder.

Works without signal: the order is saved on the phone and syncs when you're back online (the order shows *waiting to sync* until it has). Another job's materials can only be added offline if that job has been opened on this phone before.

The spec sheet — what's going where, and how far through

On site the questions are small and constant: *which walls am I painting in here, what colour is the radiator going, what have I still not touched*. All of it was already in the app — just spread across the room screen, the Colours tab and the materials list, which are screens for putting numbers in, not for looking things up with a brush in your hand.

The **Spec sheet** puts the answers on one screen, and lets you tick them off. It's on the **Documents** tab, with how much is still outstanding (*prep 3/12, painted 5/20*). Tap **Open** and you get the whole job, area by area:

The screenshot shows the 'Spec sheet' app interface. At the top, it says 'Spec sheet' with a status '13 outstanding · Prep 3/13 · Painted 1/14' and a 'Done' button. Below this are three tabs: 'By room' (selected), 'By stage', and 'Fold all'. A search bar says 'Find a room, surface or colour'. The main content is a list of tasks for a room named 'LOUNGE' (5 open). The tasks are: 1. 'Panelling 2 coats' with 'Farrow & Ball No. 2005 All White' and instructions 'Fill and sand. Caulk joints. Mask adjoining surfaces.' It has a checked 'Prep' box (Fri, 18 Sept via link) and an unchecked 'Painted' box. 2. 'Woodwork 2 coats' with 'Farrow & Ball No. 2005 All White' and instructions 'Including skirtings, door frames, doors, window frames and sills'. It has unchecked 'Prep' and 'Painted' boxes. 3. 'Radiators' with 'Farrow & Ball No. 2005 All White' and instructions 'Clean and key. Mask the wall and pipework.' It has unchecked 'Prep' and 'Painted' boxes. 4. 'Walls (excl. feature wall) 2 coats' with 'Farrow & Ball No. 28 Dead Salmon' and instructions 'Mist coat'. It has unchecked 'Prep' and 'Painted' boxes. 5. 'Feature wall 2 coats' with 'Farrow & Ball No. 79 Card Room Green' and instructions 'Fill and sand. Tape switches, sockets and edges.' It has unchecked 'Prep' and 'Painted' boxes. The bottom of the screen shows the start of a 'Ceiling 2 coats' section.

Every row is one surface in one area, in the order you'd actually work a room — **ceiling**, **panelling**, **woodwork** (with what it includes, and **radiators** right under it), **walls**, and the **feature wall last**. The colour is the biggest thing on the row, because it's the thing you came to look up. Under it sits the product and the prep, and under that the two boxes.

It's built from the job, not typed twice. The rows come from your rooms, exterior items, kitchen, fitted units and custom lines every time you open it, so they can't drift from what you've actually measured. Rename a colour on the Colours tab and the sheet says the new name straight away. A surface with no coats on it simply isn't there. Nothing on this screen can be edited except the ticks — colours, coats and prep are changed where they live, so there's only ever one place to change them.

No prices anywhere on it — not on the screen, not in the PDF, not on the shared link. It's a working document, not a quote.

Ticking it off

Two boxes per row: **Prep**, then **Painted**. They're independent — tick Painted without Prep if the prep was done last week or there wasn't any, or tick Prep on its own. Each one keeps the date you ticked it.

- **Prep** strikes through the prep line. The row is still open — half done is not done.
- **Painted** clears the row: struck through, dimmed, and dropped to the bottom of its area. It stays on the list, because at the end of the job the list *is* the record of what got done. Untick anything and it goes straight back where it was.

Cleared rows sink to the bottom of their area and cleared areas sink to the bottom of the sheet, exactly like snags — so three weeks in, what's left is at the top. One thing worth knowing: that beats the working order, so a feature wall you haven't touched sits *above* a ceiling you've finished. It's last in the room's sequence, not last on the screen.

Papered surfaces and custom lines get one box, Done — there's no separate prep step to a roll of wallpaper or to a line you typed in yourself.

By room, by stage, and finding things

By stage flattens the whole house: every ceiling in the job together, then all the panelling, then the woodwork, and so on, with the room name on every row. Use it to do one thing everywhere in one pass. Kitchen, fitted units, exterior items and custom lines stay as their own blocks at the end — there's nothing to batch between a kitchen and a garage door.

Spec sheet

13 outstanding · Prep 3/13 · Painted 1/14

Done

By room

By stage

Fold all

Find a room, surface or colour

CEILINGS

2 open

Ceiling 2 coats · Landing

Farrow & Ball No. 2005 All White

Fill and sand. Mask edges and fittings.

Prep Fri, 18 Sept

Painted

Ceiling 2 coats · Master Bedroom

Farrow & Ball No. 2005 All White

Fill and sand. Mask edges and fittings.

Prep

Painted

Ceiling 2 coats · Lounge

Farrow & Ball No. 2005 All White

Fill and sand. Mask edges and fittings.

Prep Thu, 17 Sept

Painted Thu, 17 Sept

PANELLING

1 open

Panelling 2 coats · Lounge

Farrow & Ball No. 2005 All White

Fill and sand. Caulk joints. Mask adjoining surfaces.

Prep Fri, 18 Sept · via link

Painted

WOODWORK

5 open

Woodwork 2 coats · Lounge

Farrow & Ball No. 2005 All White

Including skirtings, door frames, doors, window frames and sills

Primer

Every heading folds, same as the snag list: tap it and its rows fold away, leaving the name and the count. An area you've finished with is folded to start with, so a big house opens as the rooms that still have work in them — unless *everything* is done, in which case it all opens, because you only opened it to read the record. **Fold all** does the lot and turns into **Open all**.

The find box matches the surface, the colour, the room and the product, and works in both views:

NH Estimator — User Manual

103 / 161

Spec sheet
13 outstanding · Prep 3/13 · Painted 1/14 Done

By room **By stage** **Fold all**

radiator

LOUNGE 1 open ▾

Radiators Lounge
Farrow & Ball No. 2005 All White
Clean and key. Mask the wall and pipework.
☐ Prep ☐ Painted

LANDING 1 open ▾

Radiators Landing
Farrow & Ball No. 2005 All White
Clean and key. Mask the wall and pipework.
☐ Prep ☐ Painted

Share PDF **Start a link**

Read-only apart from the ticks — colours, coats and prep are edited where they live. A shared link shows the sheet as of this phone's last sync, and anyone holding it can tick.

Type *radiator* and you get every room's radiator row with its colour. Type a colour name and you get everywhere that colour is used. Clear it and the whole sheet comes back.

The prep lines

Each row carries a prep line. Where the job records prep for that surface, that wins — **Mist coat** with its product on new plaster, **Primer** with its product where the room actually buys one, the fitted unit's prep level, the kitchen's **Strip original coating**. Everything else gets the built-in line for that surface ("*Fill and sand. Tape switches, sockets and edges.*"). The Prep box belongs to whichever line is showing.

Variations on the sheet

Extras show up with everything else, tagged. An approved one reads **Variation** ✓; one still waiting reads **Variation, awaiting approval** — shown on purpose, and tagged so it can't be read as a go-ahead. You *can* tick it; the tag is the warning. A declined variation isn't on the sheet at all.

Extra work added inside a room you already measured is different, because the app knows the room has grown but not *which* surface grew — so there's nothing to tag, and putting "Variation" on all five of that room's rows would say something untrue about four of them. The room's heading says it instead: *Landing — includes extra work, awaiting approval*, or ✓ once it's approved, or **includes extra work the client declined**. That last one is the one to read: the work is still typed into the room, so it's still on the sheet with a box beside it, and this is the only thing on the screen telling you not to paint it. (See [Extra work in a room you already measured](#).) The heading carries it in **By room**, and on the kitchen, unit and exterior blocks in By stage — a By stage section covering ceilings across the whole house belongs to no one room, so it doesn't claim to.


Sharing it: PDF

Share PDF at the foot of the sheet builds a one-file copy and hands it to your phone's share sheet (on a computer it downloads). It's named for the job and the day you exported it — *NH-Spec-12-Ermine-Street-2026-09-19.pdf* — and stamped **Correct as of** the date and time, because a spec sheet moves.

It prints **the view you're looking at, in the order you're looking at it**, so you can check the file against the screen: your business band at the top, the job and the address, then how many are outstanding and how many done, then each area with two boxes per row — empty for what's left, filled and dated for what's done. It builds from what's on your phone, so a row you ticked in a cellar with no bars is already ticked in the file. The client's name, phone and email are not on it.

Sharing it: a live link anyone can tick

Share link creates a private web page for this job and hands you the URL. Whoever you send it to opens it on their phone — no login, no app — and sees the same sheet, with the same By room / By stage toggle, the same find box and the same two boxes per row. **They can tick things off**, and their ticks show up on your phone within about half a minute. Yours show up on their page the same way.

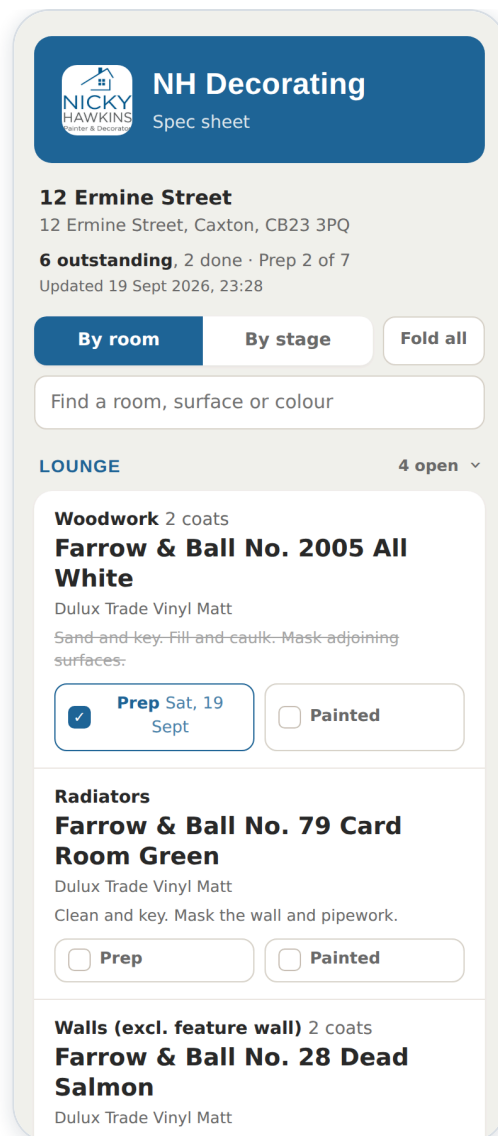

- **It's a different link from the client approval one.** That page has Approve and Decline buttons on it; this one doesn't, and handing a helper the wrong link would hand them those buttons. Either can be stopped without touching the other.
- **The rows are as of your phone's last sync.** The page says **Updated** and when. Edit a room, change a colour, and the page catches up within a couple of seconds if you've got signal — and when you haven't, it keeps showing the last version and its timestamp says how old that is.
- **The ticks are live either way.** They're not part of what gets published, so a tick never waits for a sync and never triggers one.
- **You can see which ticks came from the link.** Any step ticked from the page is marked *via link* on your phone, and you can untick anything.
- **Anyone with the link can tick.** That's the point of it, and it's worth knowing: forward it on and whoever holds it can tick rows. There are no prices and no client contact details on it, so what's exposed is progress. **Stop sharing** kills the link for everyone — and **leaves every tick where it is**, because the work happened whether or not anybody's still allowed to look at the page.

Radiator colours

Radiators normally go out in the woodwork colour, and that's what the sheet shows. When a room wants something else, the room screen has a **Radiators** row under the colours on the **Paint & Colour** card — **Same as woodwork** is on by default, and switching it off gives you the ordinary colour field:

The screenshot shows the 'Edit Room' screen with the following sections:

- Lounge Radiators**: Also on 7 other areas · renaming here changes only this one
- Woodwork**: leave blank to decide later. Options: All White, Farrow & Ball · No. 2005, Dead Salmon, Card Room Green, Landing Main Walls, Lounge Radiators. Also on 7 other areas · renaming here changes only this one
- Radiators**: they follow the woodwork unless you say otherwise. Option: Same as woodwork
- Colour**: leave blank to decide later. Options: Lounge Radiators, All White, Dead Salmon, Card Room Green, Landing Main ...
- WALL PAINT**: Product defaults to Settings. Option: Use default (S)
- CEILING PAINT**: Product defaults to Settings. Option: Use default (S)
- WOODWORK TOPCOAT**: Product defaults to Settings. Option: Use default (S)

The bottom navigation bar includes: Home, Measure, On Site, and Summary.

The row appears **once the room has radiators measured** — put the figure in **Extras > Radiators** and it's there; a room with no radiators doesn't carry a radiator colour to decide.


The field works exactly like every other colour field: type and your library offers matches with brand and number, the colours already on this job are one tap each underneath, and leaving it blank means *not decided yet* — which is a different thing from *same as the woodwork*, so the chip and the blank field don't mean the same. Set one and it shows on the spec sheet, on the Colours tab as an area in its own right, and on the client's colour schedule (*Woodwork/Radiators: Wimborne White* where they match, on their own line where they don't). **It never changes what you buy** — radiators are priced as labour and use no paint of their own, so a colour that's only on a radiator never turns up as a tin on the list.

The spec sheet and signal

Same as everything else on On Site: tick things off in a house with no bars and every tick queues on the phone and goes up when you're back in signal. The sheet opens offline, the PDF generates offline with your queued ticks in it, and a tick that hasn't synced yet is never overwritten by what the server still thinks.

Snags — the punch list


The last few days of a job are a list of small things: a scuff by the switch, a handle to refit, a staircase that wants one more coat. That list goes here, and On Site puts it above everything else while anything on it is still open.

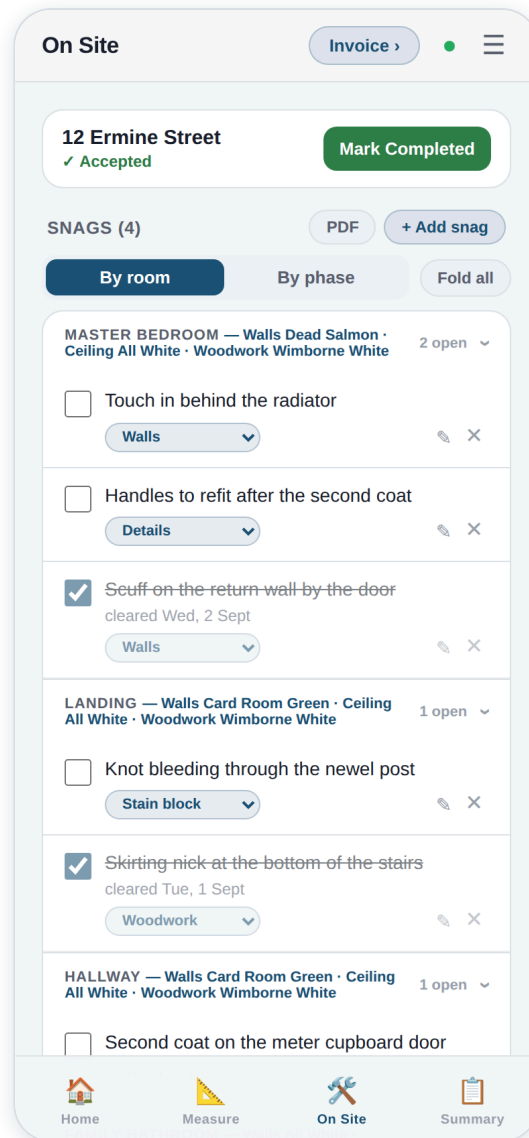

- **The section only shows up when there's something to show.** No snags yet, and there's just a quiet + **Start a snag list** at the bottom of the screen. Tick the last one off and it drops back down there too, collapsed to **All n cleared** ✓ — tap it to reopen the record.
- **Grouped by room**, with that room's colours next to its name, read straight from the Colours tab — each surface named where they differ (*Walls Dead Salmon · Ceiling All White*), or just the colour where the whole room is one. So you don't have to leave the

screen to find out what to open. Rooms the quote never priced — the airing cupboard, the garage step — can have snags too, and you can give those a colour by hand (see below).

- **Ticking one off doesn't remove it — it drops to the bottom.** The row goes struck through with the date you cleared it and stays on the list, which is the point: at the end of the job the list *is* the evidence of what got done. But it moves below everything still open in that room, so three weeks in, with thirty things ticked off, the handful you've still got to do are the ones at the top rather than scattered through them. A room where everything's cleared drops below the rooms that still have work in them, and the same rule applies in the **By phase** view. Untick anything you tick by mistake and it goes straight back up where it was.
- **Phase** on each row (the little dropdown) is the pass it belongs to — Prep, Stain block, Woodwork, Walls, Ceiling, Details, Final access. Set it and the room re-sorts itself into working order, with anything that blocks the space once it's done (floor cleans, stair recoats) last. Snags with no phase yet sit at the top of their room so they're not forgotten.
- **By room / By phase.** The toggle flattens the whole house into phase order instead — every stain-block job in the building together, so you get the stain block out once. Room order is what it opens on.
- **Every group folds.** Tap a room heading (or a phase heading in the other view) and its snags fold away, leaving the heading, its colours and its count — *2 open*, or *all done ✓*. Tap it again to open it back up. A room you've finished with is folded to start with, so a forty-snag house opens as the rooms that still have work in them. Once you've tapped a heading yourself your choice sticks for the rest of the visit — the app won't fold a room back up under you when you tick its last snag off. **Fold all** (beside the toggle) folds the lot in one go and turns into **Open all**. Folding rooms doesn't touch the **By phase** view, or the other way round, and none of it is remembered between visits.
- **PDF** (next to + **Add snag**) saves the list as it stands right now — see below.

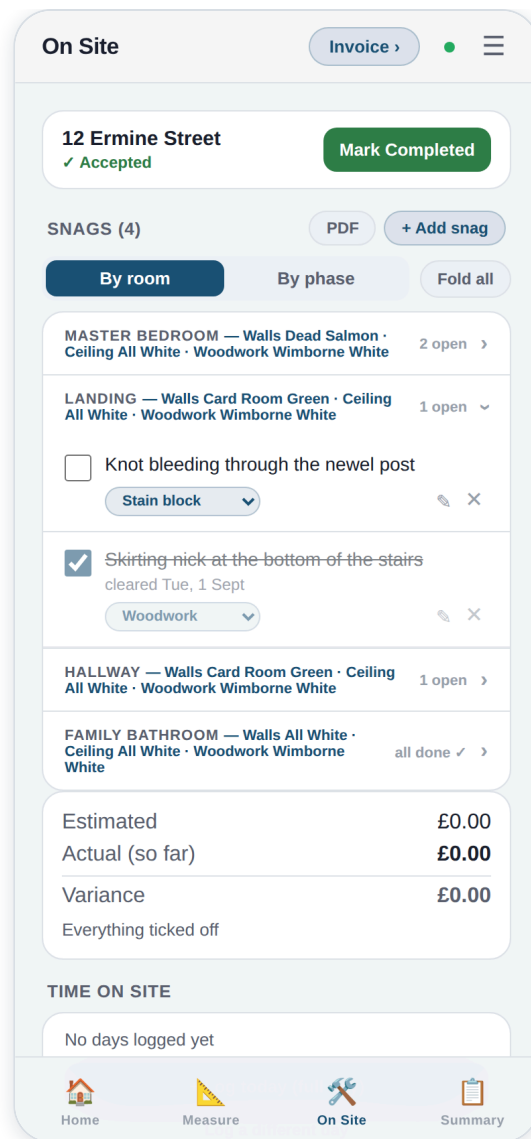

The snag list as a PDF

Snag list → Open on the [Documents](#) tab builds a one-file copy of the list and hands it to your phone's share sheet, so it can go straight to the client, to whoever's working with you, or into an email as a record. On a computer it downloads instead. It's named for the job and the day you exported it (*NH-Snags-12-Ermine-Street-2026-09-04.pdf*), because a snag list moves — two exports a week apart *should* be two different files.

What's in it: your business name and logo at the top, the job, the client and the address, then **how many are outstanding and how many are cleared**, then the list room by room in the same order the screen is showing it — colours beside each room name, the phase against each snag, an empty box for anything still to do and a filled one, struck through and dated, for anything cleared.

It builds from what's on your phone, not from what's reached the server, so a snag you ticked in a cellar with no bars is already ticked in the file. It works with no signal at all. Once everything's cleared, that copy is the completed punch list, which is the one worth sending on.

Adding snags

+ **Add snag** opens a sheet with two ways in.

One snag — pick the room (or **Custom...** and type a name), type the snag, set the phase if you know it. The sheet stays open on the same room afterwards, because snags come in runs.

Paste a list — for the list the client emails you, or the notes off your own phone. Paste it as it came: a line on its own is a room, and lines starting **-**, ***** or **1.** are the snags under it. **- []** and **- [x]** checkboxes are fine — **both come in as still to do**, because on someone else's list a tick means "I've flagged this", not "you've fixed it".

On Site Invoice > 12 Ermine Street

REVIEW SNAGS Back

5 snags in 2 rooms. Fix anything the paste got wrong before it is added — a sentence read as a room heading becomes an item with ↑ **item**.

ROOM X

Master Bedroom

Walls Dead Salmon · Ceiling All White · Woodwork Wimborne White

Touch in behind the radiator

Walls X

Scuff on the return wall by the door

Walls X

Handles to refit after the second coat

Details X

ROOM ↑ **item** X

Landing

Walls Card Room Green · Ceiling All White · Woodwork Wimborne White

Recoat the handrail

Woodwork X


Stair treads — final coat, then keep off

Back Add 5 snags


Nothing is written until you've looked at it. The review sheet shows exactly what it made of the paste, and everything on it is editable: room names, the snags themselves, and the phase on each one (pasted snags start with none — the app never guesses a phase from the wording, because it would guess wrong). If a stray sentence got read as a room heading, ↑ **item** folds it back into the room above; X drops a line. Then **Add n snags**.

Colours on rooms you never measured

On a job that came in from Xero there are no measured rooms at all, so there's nothing for the snag headings to read a colour from. Any room heading with no measured room behind it gets a + **colour** tap instead:

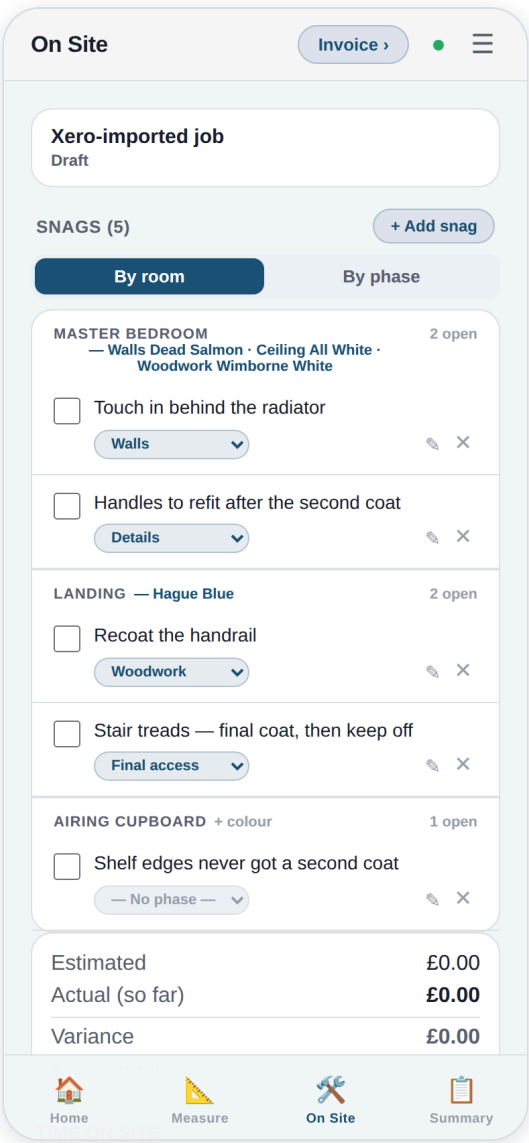

Tap it and you get the same colour field as everywhere else in the app: start typing and your colour library offers matches with their brand and number, so "dead sal" finds Farrow & Ball No. 28 Dead Salmon and fills the rest in for you.

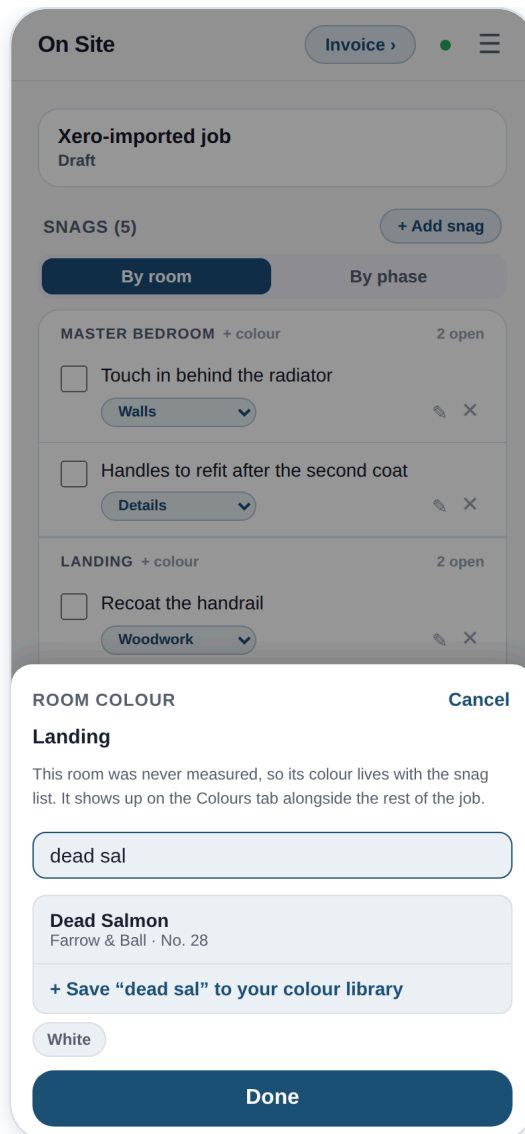

Under the field, the colours already on this job are one tap each. A name the library has never heard of is fine too — type it and it's yours; the dropdown also offers to **save it to your colour library** with a brand and code, so it's there for the next job. **Clear colour** puts a room back to undecided without losing the colour itself.

Rooms that aren't one colour. Most rooms aren't — the walls one thing, the ceiling another, the woodwork a third. Switch the sheet to **By surface** and you get a field each for walls, ceiling, woodwork, feature wall and panelling:

On Site Invoice

Xero-imported job
Draft

SNAGS (5) + Add snag

ROOM COLOUR Cancel

Master Bedroom

This room was never measured, so its colour lives with the snag list. It shows up on the Colours tab alongside the rest of the job.

Whole room By surface

WALLS

Dead Salmon

Farrow & Ball · No. 28 White All White

Wimborne White

CEILING

All White

Farrow & Ball · No. 2005 White Dead Salmon

Wimborne White

WOODWORK

Wimborne White

Farrow & Ball · No. 239 White Dead Salmon

All White

Clear colour Done

The heading then names each one — *Master Bedroom — Walls Dead Salmon · Ceiling All White · Woodwork Wimborne White* — and each surface shows up on the Colours tab in its own right, exactly as a measured room's would. **Whole room** and **By surface** are either/or: setting one clears the other, so a room only ever has one answer. Measured rooms already worked this way; this just brings the ones you never measured into line.

Once a room has a colour it shows on the heading (**Landing — Dead Salmon**) and joins the **Colours** tab alongside everything else, marked *from the snag list* so you can tell it apart from a room you measured. Rooms still waiting on one are listed there too, under **Snag rooms — no colour yet**, so you can work through them from either screen.

A room you *did* measure works the other way round, unchanged: its colour comes from the Colours tab and the snag heading just shows it. There's only ever one place a given room's colour is set.


Snags and signal

Snags sync exactly like the rest of On Site — tick things off in a house with no bars and every change queues on the phone and goes up when you're back in signal, same as your materials and your logged days. The sync dot in the corner counts them with everything else.

Extra work in a room you already measured

The bullet above covers the client asking for *another room*. This covers the commoner one: **"while you're here, can you do the radiators in these two?"** — extra work inside rooms you measured and quoted months ago.

Just add it where it belongs. Open the room on **Measure**, put the radiators in, and save it as you normally would. The app does the noticing:

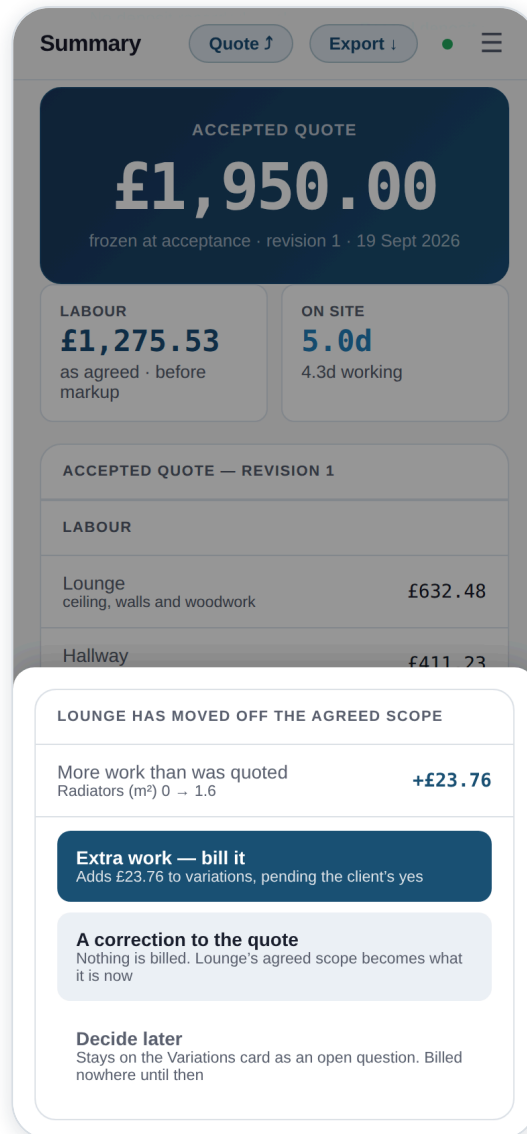

It knows because, at the moment the quote was accepted, it froze a copy of **what every room was measured as** — not just what the job was worth. So when you save a room that's grown past that, it can price exactly the difference, name the field that changed, and ask the only question it can't answer for you:

- **Extra work — bill it.** The difference becomes a variation line, *Lounge — extra work*, priced through the same engine as everything else and sitting on the Variations card with the rest. Pending until the client says yes, exactly like any other variation.
- **A correction to the quote.** Nothing is billed — you mismeasured, or forgot a wall, and the room's agreed scope becomes what it is now. Recorded with a date so it's a decision, not a gap.

- **Decide later.** It stays on the Variations card as an open question, billed nowhere until you answer it.

On Site Invoice >

Quantity 1

Add Material

VARIATIONS

VARIATIONS — EXTRAS ON THE ACCEPTED QUOTE

Lounge — extra work
extra work added since the quote — priced from the change £22.63
Pending ✓ Approved by client ✗ Declined

Sundries
same % as the main quote £1.13

Variations subtotal
job total incl. variations shows on Summary £23.76

Send for approval

Creates a private link showing the original quote total, these extras and an Approve/Decline on each. No login for them, nothing to Xero.

Send variation quote to Xero

A separate small quote of just the pending lines — show or email it from Xero for the client's yes. The accepted quote is never touched.

+ Add variation (hours or agreed £)

+ Start a snag list

Home Measure On Site Summary

Whichever you pick, **the agreed quote does not move**. The room still bills at what was agreed; the extra bills separately, or not at all. Three things worth knowing:

- **Small changes don't interrupt you.** Under £5 and it goes straight onto the Variations card as an open question rather than throwing a sheet at you on site — but it's never silently swallowed, because that's the money this exists to stop losing.
- **A rate change is never mistaken for extra work.** The difference is worked out by pricing the old scope and the new scope *at the same rates*, so putting your day rate up next month doesn't make every room on every accepted job look like it grew.
- **The kitchen and fitted units ask when you leave the screen** rather than on save, because those forms save as you type.
- **Less work than quoted?** It'll tell you, but a reduction is a credit, not a variation — so the only real answer is **A correction**, and a genuine credit is agreed by amending the quote.

On Measure, a room carrying an extra is chipped + **EXTRA**; one with a change nobody's ruled on yet is chipped **SCOPE ?**.


If the frozen scope ever goes missing. That copy of what a room was measured as is saved with the room, and the room is saved separately from the job itself — so in rare cases (a save lost in a dead spot, a job opened on a second device before it had synced, a restore) a room can come back without it. Without the copy there is nothing to compare against, so the app can't work out what the extra was worth. It says so rather than going quiet: the room is chipped **EXTRA ?** in red on Measure, and the Variations card carries a red row at the top naming it, with the figure the client approved for it if they'd already said yes. **Put this right** gives you two answers — put the agreed figure back as a priced line (prefilled with what they approved), or write it off, which re-agrees the room as it now stands and bills nothing. It deliberately doesn't put the money back on its own: with the frozen copy gone, the room's own line on the final invoice still has that extra work inside it, so adding a variation line automatically would bill the same work twice.

If you edit that room again afterwards — a fourth radiator, say — the extra re-prices itself. If the client had already approved it, the card says so: *"Changed since sign-off — £22.63 agreed, £29.47 now."* It doesn't quietly throw away their answer; it tells you the figure moved so you can go back to them or leave it.

Jobs accepted before this existed get their frozen scope the first time you open them, taken from the job as it stands that day — so anything already typed in is treated as agreed, and it's changes from then on that get tracked.

Let the client approve extras themselves

Under the Variations card, **Send for approval** creates a private web page for this job and puts the link on your clipboard — text it, WhatsApp it, or email it to the client.

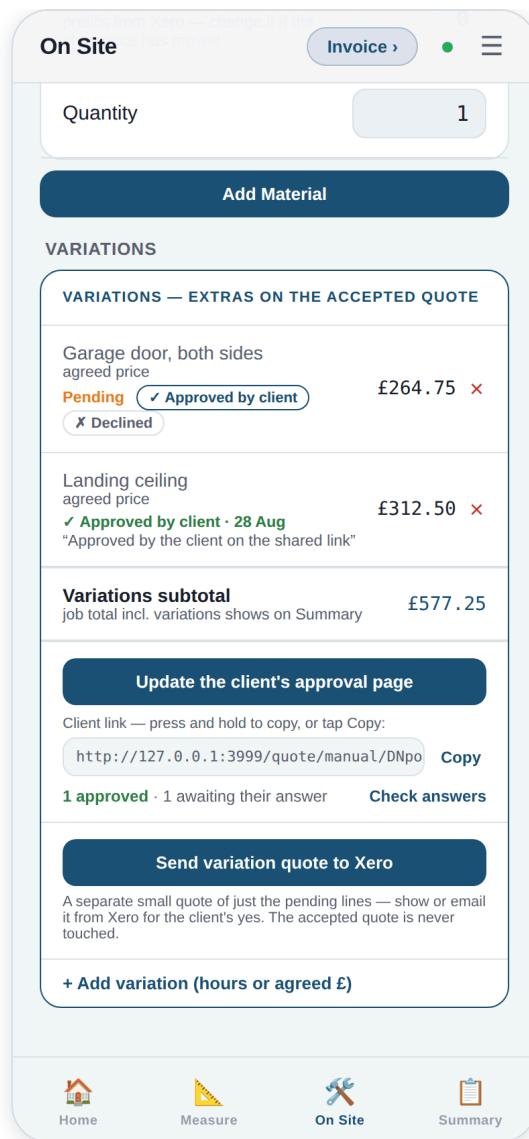

They open it on their phone. No login, no app to install:

NH Estimator
Painting & Decorating

Quote for Mrs Fielding
14 Ermine Street

ORIGINAL QUOTE

As agreed **£4,250.00**

The price already agreed for the original scope of work. Unchanged.

EXTRAS SINCE THEN

Landing ceiling **£312.50**
✓ **Approved** · 28 Aug 2026

Garage door, both sides **£264.75**
Awaiting your answer · sent 28 Aug 2026

Approve **Decline**

Tap Approve or Decline on each item above.
Nothing extra is charged unless you approve it.

TOTAL SO FAR **£4,562.50**
Original quote + 1 approved extra

Approved extras are added to your final invoice.
Any questions, just reply to the message this link came in.

The page shows **the original quote as a single total** (never the itemised breakdown — they've already had that document), then every extra since, with **Approve** and **Decline** buttons on the ones still waiting. The total at the bottom is the original quote plus the extras they've said yes to — pending ones aren't in it, so the figure is never a bill for work they haven't agreed to.

A few things worth knowing:

- **Their answer comes back to you.** Tap **Check answers** on the card, or just reopen the job — the app pulls their taps in and sets the line's status for you, with a note saying it came from the link. If *you* already recorded an answer by hand, yours stands: the person who was there wins.
- **Nothing goes to Xero.** This is entirely separate from **Send variation quote to Xero** below it. Approved extras still reach Xero the usual way — as lines on the final invoice.
- **Prices are frozen once they answer.** Re-measure a room after the client approved that extra and the page keeps the figure they agreed to. Tapping **Send for approval** again updates the same page — it never creates a second link — and refreshes the prices only on the extras still awaiting an answer.

- **Withdrawing an extra.** Remove or unflag a variation and it disappears from their page next time you send — unless they'd already answered it, in which case it stays as the record.
- **The link is the password.** Anyone with it can see this job's totals and answer its extras, so treat it like the quote itself. It's specific to one job and doesn't expire.
- **What the client can reach.** The link only opens that one job's page. But it's the same web address the app runs on, so if someone trims the link back to the domain they land on the app's front door — which is why setting the app password matters (see [Getting started](#)): with it set they get a sign-in screen and nothing else, and it costs you one login per phone, not one per opening. A custom domain makes the link read as your business rather than as a hosting provider, but it doesn't change what's behind the front door — the password does.

Windows and doors on site

Old windows are where the surprises are. On a job with [Windows and doors](#) set up, On Site has a  **Windows & doors** card near the top. It opens the same drawings and the same detail view, with two differences:

- **Anything you add here is work found on site.** New marks, and prep changed on an opening, are work on top of the quote. They show dashed on the diagram and as a dashed badge on the elevation. **They aren't variations, and there's nothing to send for approval.** It's agreed at the start of the job that what needs doing gets done (you can't find a rotten stile and then leave it), so the work is recorded as you mark it and billed as it's done.
- **Prep can go down as well as up.** If a window turns out better than expected once you've scraped it, tap a lower prep level. Below what was quoted, it's a **credit**: money off that window. Tapping the quoted level again undoes the change. You can change it as often as you like: what's billed is where it ends up against the quote, so raising a window to Heavy and then bringing it back to the quoted level costs the client nothing and isn't mentioned anywhere. The sheet says where it stands, e.g. *raised on site from Standard (the quote) — found work*.
- **Bays, dormers and lower ground windows work the same way** — open a bay and tap one of its windows to mark it, or mark the bay's own parts.
- **The quote's own work is locked.** It's shown, solid, so you can see what was already allowed for, but you can't take it off here — and type, size and pane layout are as quoted. The quote is the floor: nothing done on site ever takes money off it, apart from prep lowered below the quoted level.
- **A window or door that was left out of the job** can be brought in. Its sheet says *Not in this job* with an **Add to this job — found on site** button. Tapping it adds the whole opening, its prep and painting, as found work (*added to the job, light prep and paint*), shown with a dashed badge. You can then mark work on it like any other, set its prep freely, and **Take it back out** undoes it (clearing any work you marked on it).

←

Exterior · On Site

•

☰

PREP

raised on site from Light (the quote) — found work

Light

Standard

Heavy

Restoration

Access: First floor · as quoted

Select all panes

Tap panes or frame parts to select them — one kind at a time. ■

work · ■ glass · dashed = found on site · the quote's marks are locked here

REPAIR SIZE

once it's cut out: up a size if it's bigger, never below what was agreed — the quote terms cover it, no approval needed

Resin repair (cill, M) (found on site)

S

M

L

XL

Medium: up to palm-sized

Repairs on this part

−

1

+

one at each end — the base is charred once

Tick off as done. On site, each window's sheet ends with a **Tick off as done** list: the painting first (*Paint · outside face*), then every piece of work on it, quoted or found on site, one line each (*Reputty · top pane 3*). An opening with nothing but painting still gets the list, with just its painting on it. Tap a line as you finish it, or **tick all** (the painting included). Tap again to untick. Ticks don't change the price. They decide what the work report shows, because the report lists only what was done. The On Site card counts how many are ticked off.

A resin repair turns out bigger once it's cut out. Open the window and tap the bigger size under **Repair size**. That's all: there's nothing to send, because the quote terms already say repairs are priced on their estimated size and may go up once exposed. A badge shows the change ($M \rightarrow L$); tap the agreed size again to undo it. Sizes **below** what the client agreed are greyed out. A repair that turns out smaller stays at its quoted price.

- The size a **quoted** repair was priced at is locked when the job is **accepted**. A repair **found on site** isn't locked at all: nobody agreed a size for it, so set it to whatever it turns out to be and it's billed at that size, as part of that window's found work.
- The extra on a quoted repair is a **repair size adjustment**, kept apart from everything else. The accepted quote doesn't change. It shows as **Repair size adjustments +£X** under the Windows & Doors total on Summary, on the On Site card and at the top of the On Site windows screen. The list is **Repair size adjustments** on the Documents tab: *Front, ground floor, W1: resin repair (cill) $M \rightarrow L$, +£18.54*. The figure includes sundries and markup, as the invoice bills it.
- It's billed on the invoice as part of the **one Windows and doors line** (see [Windows and doors on the invoice](#)), not a line of its own. An interim invoice raised after the upgrade includes it; otherwise it's on the final invoice.

- The **client's page** shows it as its own line, *Repair size adjustments (per quote terms)*, with no Approve button, so the total they see matches what they'll be invoiced. It updates each time you send or update that page.
- The **work report** shows the size each repair ended up at: *resin repair (cill, large)*.
- **Amending** the accepted quote takes each repair's current size into the new revision, so the upgrade becomes part of the quote.
- **Another patch found on a part that already has a quoted repair** (a second soft spot on the cill): select the cill and tap **Resin repair**. It's found work, a repair of its own with its own size. It's charged its size only, because the cill's base is already in the quote. An upgrade to a repair counted $\times 2$ is charged twice, once for each repair.

←
Windows & Doors · On Site

Select all panes

Tap panes or frame parts to select them — one kind at a time. ■ work · ■ glass · dashed = variation · the quote's marks are locked here

REPAIR SIZE
once it's cut out: up a size if it's bigger, never below what was agreed — the quote terms cover it, no approval needed

Resin repair (cill, L)
M → L

S M L XL

Large: rail end, cill corner · agreed at medium

Resin repair (bottom rail, S)

S M L XL

Small: nail hole to thumb-sized · agreed at small

WORK ON THIS WINDOW +£14.71 size adjustment before markup


Paint, outside face · light prep · 2 coats · ground access
quote

Resin repair (cill, L; bottom rail, S)
quote


TICK OFF AS DONE 0 of 2 done · tick all

☐ Resin repair · bottom rail (S)

☐ Resin repair · cill (L)

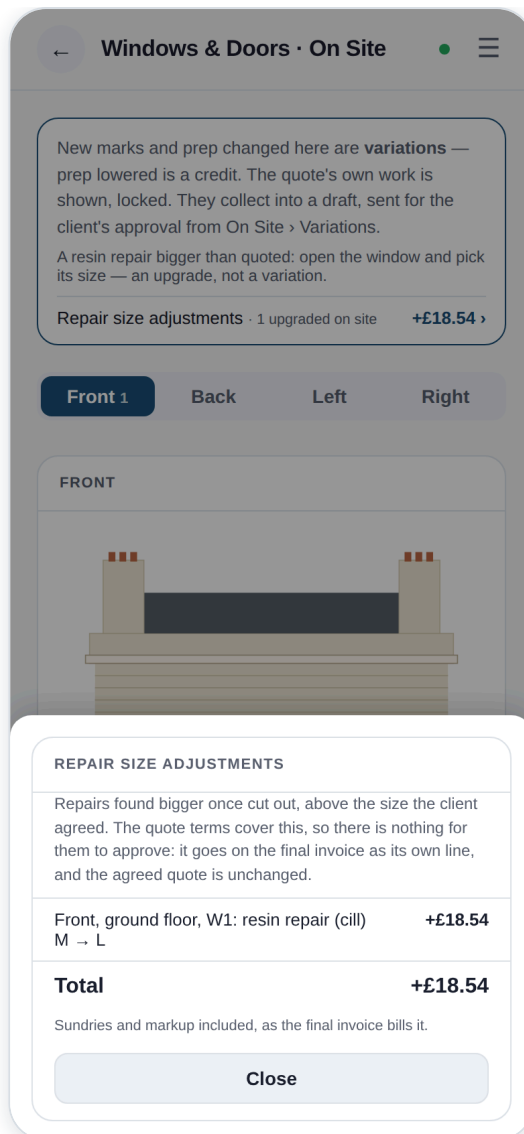

Found on site, window by window. Everything found on a window is added up for that window, whenever you marked it: *Back, first floor, W1 — reputty x5 panes, replace glass x2 panes, resin repair (cill)*. The top of the On Site windows screen shows how many windows have found work and what it comes to. On the **Variations card** it's one block, **Windows and doors — found on site** (*agreed at the outset: done as needed, no approval*), with its total and a row under it for each window, its work and its figure. There's no Approve or Decline on them. Tap the block to open the windows. A window whose prep was lowered below the quote, with nothing else found on it, is a credit and shows as **−£**.

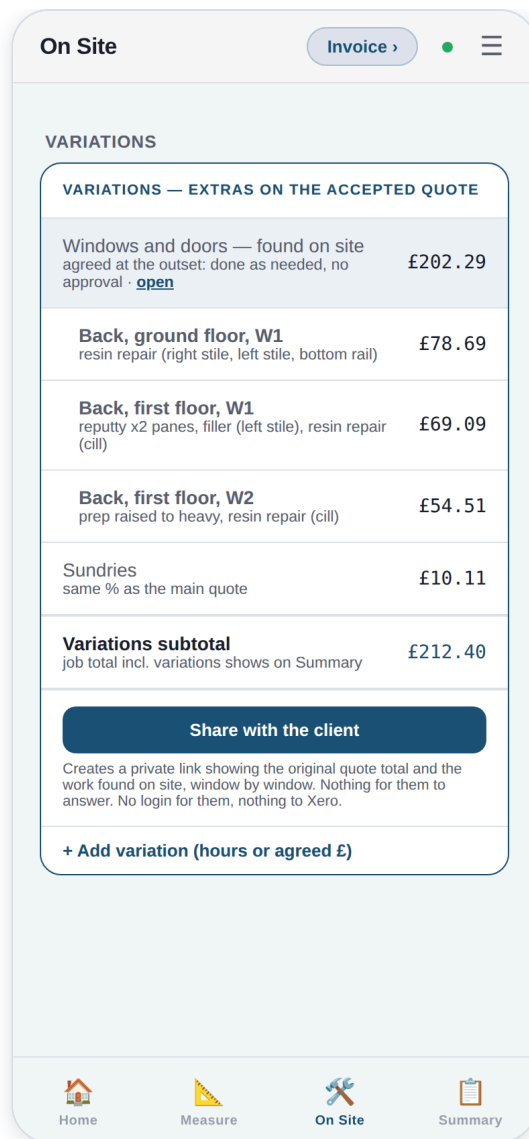

- **On the client's page** each window is its own line, with *Found on site, done as needed as agreed — added to your final invoice* under it (or *taken off your final invoice* for a credit), and no Approve or Decline. It counts in their running total straight away. When there's nothing else on the card, the button reads **Share with the client** rather than *Send for approval*.
- **On an interim invoice** each window's found work is offered for billing, in full unless you set a %. A credit isn't billed part way; the final invoice squares it.
- **On the final invoice** it's part of the one Windows and doors line (see [Windows and doors on the invoice](#)).
- **It isn't sent on a Xero variation quote**, because there's nothing for the client to agree to.

Jobs from before v3.3.0. Window and door work marked on site used to collect into draft variations, each sent for approval, so one window could be spread across several of them, and a prep change undone later showed as a charge on one and a credit on another. Opening such a job folds them in: every one of them that wasn't declined becomes found work (approved, if it was still waiting), and the job is shown window by window as above, so a raise and its undoing cancel out. Anything an interim invoice already billed on the old variations is carried onto the

windows they were for, so it isn't billed twice. A variation the client declined stays declined, and its work isn't billed. Next time you tap **Update the client's page**, the old variation lines on their page are replaced by the window lines.

Work that went missing before v2.88.1. Before v2.88.1 the on-site window work was only kept on the phone, so reloading the app could lose its record. The marks on the windows stayed, but they were billed nowhere. When the app loads a job with any of that orphaned work, it puts it back as found work, with a message saying it did.


Price per window

Price per window, on the [Documents tab](#), lists what each opening is worth, side by side. Each one shows:

- **Painting:** its prep and painting at the quoted prep level, with its access and coats.
- **Repairs:** any work marked on it at the quote stage.
- **Found:** the work found on it on site, once there is any. A window whose prep went below the quote shows a credit here.

The roofline, walls and extras get a row each too, and **Making good** has its own line. The quoted figures include your markup, so **As quoted** is the exterior's figure on the quote. On site there's also **Found on site** and **Now**, the two together. Found work is shown as it's billed, with its sundries share. Repair size adjustments aren't in it; they're on their own line.

It's **for you, not the client**. Use it to tell a client what a window was quoted at next to what the rot adds, to price leaving one out, or to check your figures. It isn't on the quote, the invoice or the client's page, which all bill the exterior as one line, so nobody is invited to pick windows off a list.

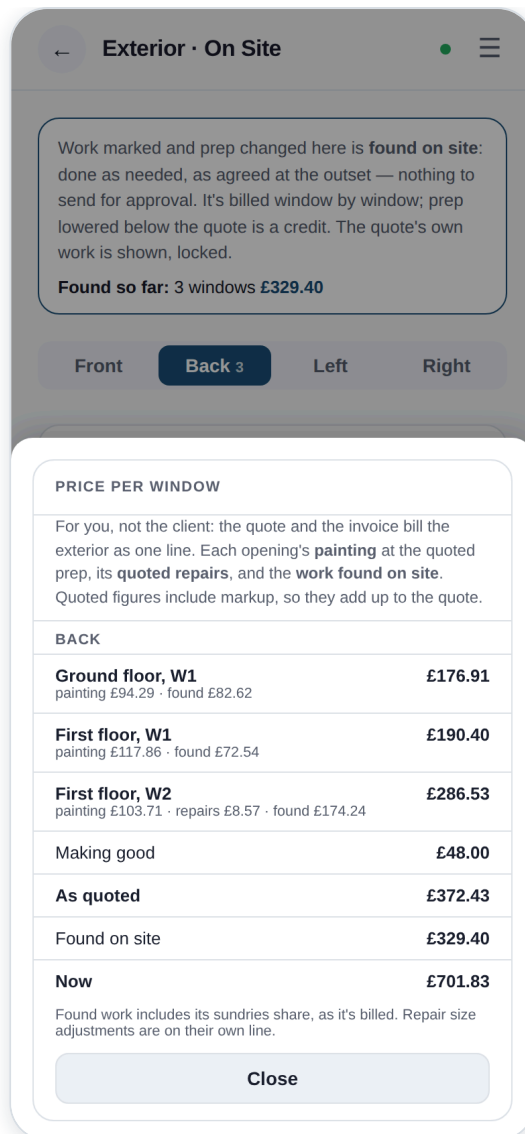


Estimates: pricing work before it's agreed

When a client asks *"how much will the front windows cost?"*, price it with an **estimate** before doing anything. On On Site, the Windows & Doors screen has an **Estimate** card under the found-on-site panel (once the quote is accepted).

- Tap **Start estimating**. The card turns orange, and any work you mark now is **estimated**, not found work. It's priced the same way, but it's billed nowhere: it isn't on the Variations card, the client's page, the invoices, the work report or the work-to-do list, and there's nothing to tick off. Each window's sheet tags it *estimate — not agreed yet*.
- **Carpenter days**. For work beyond what you'd do yourself, a window's sheet shows a **Carpenter** row while you're estimating. Tap + and – to set the days on that window, in half days (*1½ days, £375.00*). The day rate comes from the job's carpenter line, the custom line you bill the carpenter on (here *Joinery Work @ Day Rate, £250 a day*). The app picks a line with *joinery* or *carpenter* in its name. If it can't, tap **set the carpenter's line** and choose one.
- **The card lists each window**: its work and what it would cost, its carpenter days, and the window's total. Under that is the **Estimate total**, split into your repairs and the carpenter, as it would be billed (sundries and markup included). That's the figure to give

the client. **Price per window** shows each window's estimate too, with an *If it goes ahead* total.

- **Prep changes** and **adding a window to the job** aren't estimated: switch estimating off to do those, as found work.
- Tap **Done estimating** when you've finished. Leaving the screen also stops it, so a mark you make tomorrow can't become an estimate by accident.

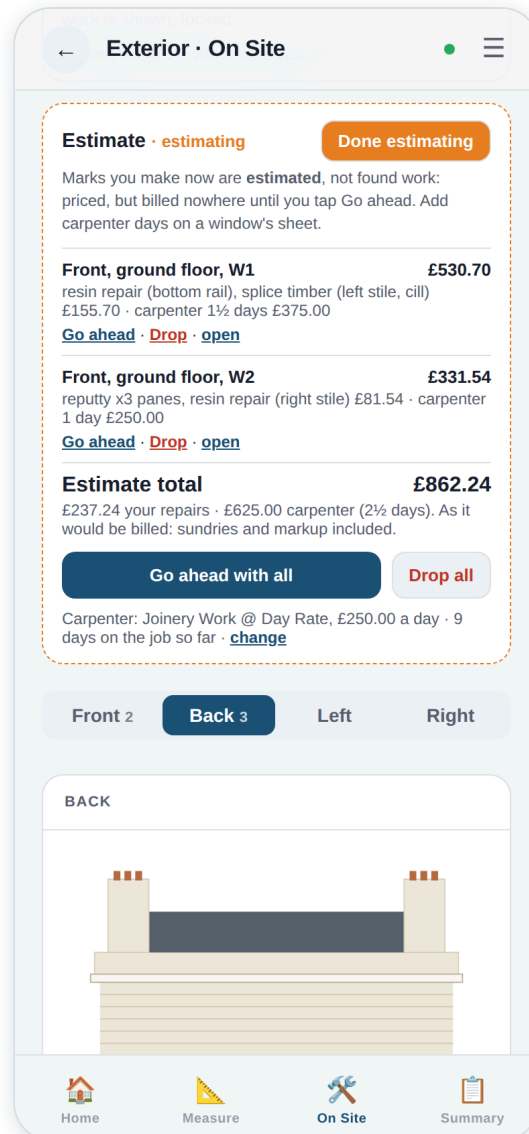

When the client answers, on each window (or for all of them at once):

- **Go ahead**: the window's estimated work becomes found on site, billed as it's done like any other. Its carpenter days are added to the carpenter's line (9 days becomes 10½), so they're billed with the rest of the carpenter's time.
- **Drop**: the window's estimated work is taken off, and its carpenter days with it.

Once nothing is left in it, the estimate disappears. The On Site card shows an estimate that's still waiting (*Estimate: £862.24 on 2 windows, not agreed yet*).

The carpenter's days

All the carpenter's days live on **one line**, the carpenter's custom line (*Joinery Work @ Day Rate*), at its flat day rate. That covers the days planned in the quote and every extra day since. Add extra days to that line (on Measure, or with **Go ahead** on an estimate) and it grows: 8, 9, 10½...

- **The final invoice bills every day on the line.** Once a quote is accepted, the invoice bills the quoted work at the accepted quote's figures, so the joinery line goes on at the days the quote had (8 × £250). Any days added since go on a line of their own beneath it,

Joinery Work @ Day Rate: additional days, 1 × £250.00, at the same flat rate. An interim invoice that billed the 8 days is deducted as usual.

- **Where the days went.** On site, each window's sheet has **Carpenter days here**. Tap + for each day (or half day) the carpenter spent on that window. It's a record, **not a charge**: the money is on the line, and placing the days doesn't change it. The app won't let you place more days than the line has, and it tells you how many are still to place. **Go ahead** on an estimate places that window's carpenter days for you.
- Placed days are used in four places:
 - **The final invoice:** they're listed under the joinery line (*Where the days went: Back, ground floor, W1 2 days; Back, first floor, W1 3 days; other work 1 day.*).
 - **Where we are:** each window shows its days beside its work.
 - **Price per window:** each window shows its days too.
 - **The forecast:** it uses where the days really went for the windows still to open, instead of spreading the line's days evenly.


Don't move the carpenter's days onto the windows as work, and don't delete the line. Window work found on site has your sundries and markup added, so the same days would cost the client more. Planned days would also read as an overrun.

Forecast: the windows not opened up yet

Under the Estimate card, the **Forecast** card answers "*and what about the rest?*" It uses what you've found on the windows you've opened up to forecast the ones you haven't, as a range.

- **Opened up** means a window has work found on it, prep changed on site, or something ticked off. The card counts them (*3 of 15 windows and doors opened up · 5 in the estimate · 7 still to open*). On site, each window's sheet has an **Opened up** setting: leave it on **Automatic**, or set it by hand. Set **Opened up** for one you've inspected and found sound; that counts as a window where nothing was found, which keeps the forecast honest. Set **Not yet** for one ticked off before you really looked.
- **How it works out the figure:** for each window opened up, what was found on it against its painting price (*on average 106% on top of a window's painting, from 75% on the cleaner ones to 152% on the worst*). That's applied to each window still to open, so a big sash is forecast bigger than a small dormer. **Likely** uses the average; the range runs from the cleaner windows (the lower quarter) to near the worst (the top tenth).
- **Dormers and sides apart.** Once 3 or more windows on the same side and level (the dormers, say) are opened up, the windows still to open there are forecast from those alone, not from the whole house.
- **The carpenter, roughly.** The days on the carpenter's line so far, per window opened up, times the windows still to open (from half that to half as much again). The days weren't booked per window, so the card says it's a rough guide.
- **Likely still to come** adds the two together. **Forecast, window by window** on the Documents tab lists what was found on each opened window, and the likely figure and range for each one still to open.
- Windows in the **estimate** aren't forecast: they have their own figure. With fewer than 3 opened up, the card says the range will firm up as you open more.

It's a guide for you to give the client, not a price, and it doesn't go on anything they see.

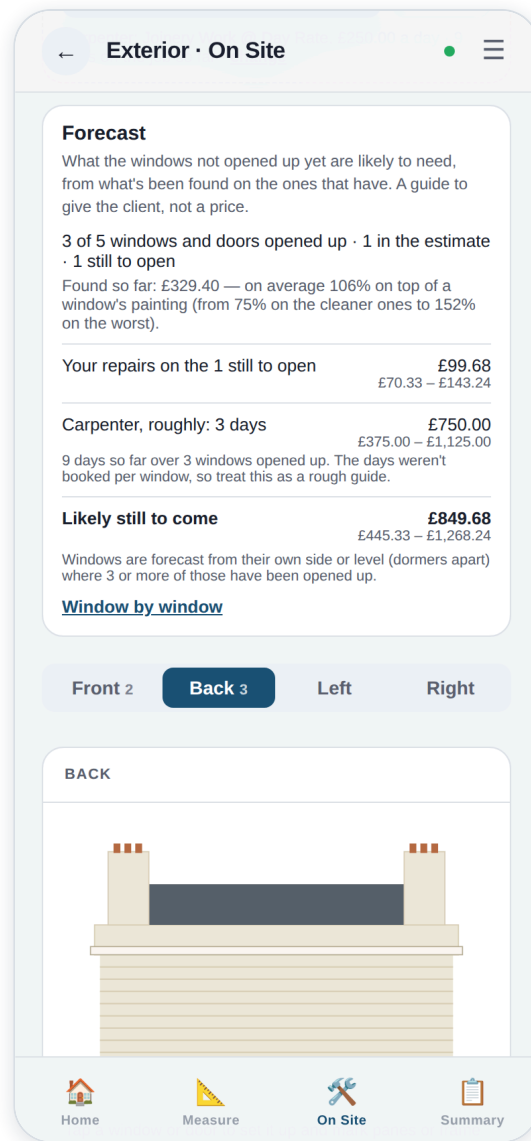

Where we are: telling the client

When a job is running over, **Where we are** on the [Documents](#) tab puts it all in front of the client. It's written for someone who isn't in the trade: the answer first, then the windows drawn so they can see what's been done where, then a key to the words. The tab shows the likely total under it.

At a glance, at the top, in whole pounds:

- **The figure given at the start**, if you gave one (in grey, for comparison; it's never added in).
- **The work as planned**: the accepted quote, with its split into your painting and repairs and the carpenter's planned days.
- **Found on site since**: the repairs found on the windows, and any carpenter days beyond the plan.
- **Done so far**.
- **Needed now, if you go ahead**: the estimate.

- Window by window.** Each side of the house that has any work is drawn as its elevation, every window numbered (W1, W2... left to right as you face it), the way the work report draws it. A window with work done is outlined in **blue**; one with work needed now in **dashed orange**. Under each drawing, a line per window: what was found and done, with its carpenter days and what it cost, in black; and, labelled *Needed now:*, the estimate for it, in orange. The carpenter's days are shown once, against the window they went on, and the page says they're part of the carpenter's figure, not charged again. Days not tied to a window are noted at the end.

The figure given before starting. If you gave the client a ballpark before starting (*about £5,000*), tap **add one** under Where we are on the Documents tab and type it.

Nicky Hawkins
Where we are: windows and doors
14 Brunswick Square
2 October 2026

Old windows hide their condition until the paint comes off, so the work has grown as each one has been opened up. Here is where things stand, with the windows drawn side by side further down so you can see what has been done where.

AT A GLANCE	
The figure given at the start	£5,000
The work as planned painting and repairs £2,500, carpenter 8 days £2,000	£4,500
Found on site since repairs on 4 windows £234, carpenter 1 day more £250	£484
Done so far	£4,984
Needed now, if you go ahead 3 windows, marked in orange below	£480
Allowance for the windows not opened up yet likely: it could be £39 to £4,803	£2,238
Likely total between £5,503 and £10,267	£7,701
Invoiced so far	£3,270
Likely still to come	£4,431

WINDOW BY WINDOW


Each side of the house as you face it, windows numbered left to right. Outlined in blue: work done. Dashed orange: work needed now. Carpenter days are shown against each window; they are part of the carpenter's figure above, not charged again.

FRONT



Ground floor, W1	
Needed now: resin repair (meeting rail), splice timber (left stile); carpenter 1 day	£335

THE PARTS OF A WINDOW, AND THE WORK

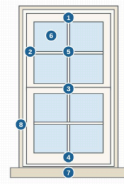

1 Top rail	the top of a sash
2 Stile	the upright side of a sash, left or right
3 Meeting rail	where the top and bottom sashes meet
4 Bottom rail	the bottom of a sash
5 Glazing bar	the thin bars between the panes
6 Pane	one piece of glass
7 Cill	the ledge at the bottom, outside
8 Frame	the box the sashes slide in
Reputty	old putty round the glass hacked out and replaced
Replace glass	a cracked or broken pane replaced
Filler	small cracks and dents filled before painting
Resin repair	soft, rotten wood cut out and rebuilt in resin, then shaped
Splice timber	a rotten length cut out and new wood joined in
Carpenter	joinery beyond a painter's repairs, at a day rate
Preparation, before painting:	
Light	washed down, lightly sanded, bare spots primed
Standard	loose and flaking paint scraped off, sanded, primed where bare
Heavy	most of the old paint scraped or burnt off, sanded back and primed
Restoration	taken back to bare wood all over, then primed

Work found on site is done as it is needed, as agreed at the outset, and charged as done. Anything needed now is an estimate: we will go ahead with it once you are happy to. The allowance is a guide, not a price.

Work to do

Work to do is on the [Documents tab](#) as soon as the job has any windows or doors. It's the list of what's still to be done, built on the phone with no signal needed. Tap it to read it: it opens on its own page, the same way the work report does. To send, save or print it, tap **Share** next to it, which hands the PDF to your phone's share sheet (on a computer it downloads).

- **At the top, *In all*:** how many openings there are to paint, and the marked work counted up (*Reputty x14 panes, Replace glass x3 panes, Resin repair x5 repairs*).
- **Then each side**, with its drawing, and **every opening on it**, each with a box to tick on paper for each job: the painting first (*Paint: light prep, 2 coats, first floor access*), then one line per kind of repair (*Reputty x2 panes, Replace glass x1 pane, Resin repair (cill)*). An access you set by hand is always named (*ground access (set by hand)*), so the team knows the scaffold should be up.
- **Openings with repairs get their drawing** with the panes and parts marked. Openings that are only being painted get just their lines, to keep it short.
- **Work found on site is on it**, under its own heading.
- **Prep changed on site is in the painting line**, at the level it ended up at (*Paint: heavy prep (agreed on site), ...*). If prep was raised and later brought back down, the list just shows where it finished: the steps in between aren't jobs to do.
- **Work already ticked off as done is left off**, painting included, so printing it again mid-job gives what's left. Once an opening's painting and repairs are all ticked off, it's off the list altogether, and *In all* counts only the openings still to paint.

Like the work report, it has **no prices on it**. From Measure it's the schedule of work behind a quote, to send with it or to talk a client through what they're paying for; on site it's the list to hand the team.

The work report

The **work report** is what goes to the client with the final invoice: every window and door on the house, and the work done to each, with the drawings. **There are no prices anywhere on it. Windows and doors work report → Open** on the [Documents](#) tab opens it, exactly as Xero will get it, so you can check it before invoicing. The app builds it on the server from what's saved, so it needs a signal; it waits for any changes still saving from your phone first. (The same work, as a web page, is on the client's approval page under their extras.)

Nicky Hawkins
Painter & Decorator

Windows and doors: work report

INVOICE
COMPLETED
REPORT DATE

INV-0421
20 September 2026
30 September 2026

PREPARED FOR
Jane Client
14 Brunswick Square, Hove, BN3 1EH

19
windows

3
doors

4
openings with work found on site

Outside faces only. Openings are numbered left to right as you face each side of the house, as on the drawings. Each opening lists the work done to it. Work marked **FOUND ON SITE** was not in the quote: it was found once the work was under way, and agreed with you or covered by the quote terms. This is why the invoice total can be above the quoted figure.

work done glass replaced

FRONT 8 openings

Front, ground floor, W1
Sash window
• Filler (bottom rail)
• Prepared (light) and painted, 2 coats in Farrow & Ball No. 28 Dead Salmon.

Front, ground floor, W2 Prepared (light) and painted, 2 coats in Farrow & Ball No. 28 Dead Salmon.

Front, ground floor, W3 Prepared (light) and painted, 2 coats in Farrow & Ball No. 28 Dead Salmon.

Nicky Hawkins - Windows and doors work report - INV-0421 Page 1 of 4

- **The header** has your logo and business name, the client's name and address, the date the job was completed, and the invoice number once there is one.
- **The summary** counts the windows and the doors, and how many openings had **work found on site**.
- **Each side** has its elevation, with every opening numbered (W1, W2... D1...) and the ones with work beyond the painting picked out.
- **Each opening with work** gets its own drawing with the worked panes and parts coloured in, its label (*Back, first floor, W3*), and a list of what was done: prep, repairs with their size, glass replaced, and the painting (*Prepared (light) and painted, 2 coats in Dead Salmon*).
- **Anything that wasn't in the quote** is tagged **FOUND ON SITE**, with an orange bar down the side of that opening, so the client can see why the invoice is above the quote. That's work found on site (work marked on site, prep changed on site, an opening added

to the job) and resin repairs found bigger than quoted. Prep raised and then brought back to the quoted level isn't flagged: nothing changed.

- **Openings that only had their painting done** get one compact line each, with a small drawing, to keep the report short.



Only work **ticked off as done** is listed. Work on a variation the client declined (before v3.3.0) isn't on it. Openings left out of the job aren't on it or counted.

Work to do, the list for the team, is different: it's still built on the phone and works with no signal (see [Work to do](#)).

Windows and doors on the invoice

The invoice has one line for all the windows and doors work. Not a line per window, not a line for repair sizes: one line, for the quoted price **plus everything added on site** (work found on site, repair size upgrades, prep changes, openings added to the job), each at the figure the client was shown. A credit (prep lowered below the quote) comes off it too, so if the credits outweigh the extras the line is below the quoted figure. Its wording is generated from the job, so there's nothing to type:

Exterior windows and doors: preparation and painting of outside faces, 19 windows and 3 doors. Full breakdown of work per opening in attached report. Colours: Farrow & Ball No. 28 Dead Salmon (frames), Farrow & Ball No. 57 Off-Black (doors).

A count of zero is left out (...*outside faces, 14 windows.*), and the colours are only named once you've named them on the Paint card. Under the line, the builder shows what makes it up: the quoted figure, what was added on site, and how many windows had work found. Everything else on the invoice (rooms, kitchen, materials, custom lines, sundries) is exactly as before.

Final Invoice

LABOUR — AS QUOTED

Exterior windows and doors: preparation and painting of outside faces, 19 windows and 3 doors. Full breakdown of work per opening in attached report. Colours: Farrow & Ball No. 28 Dead Salmon (frames), Farrow & Ball No. 57 Off-Black (doors). £2,519.18 as quoted · + £233.64 added on site (2 approved variations, repair sizes £18.54)

£2,752.82

×

Sundries & Consumables

% of labour, as quoted

£125.82

×

VARIATIONS

No variations on this job.

MATERIALS — AS USED

⚠ No materials were ticked as bought — this invoice bills labour only. If that's wrong, log actuals on the On Site screen first.

ALREADY RECEIVED — APPLY IN XERO

Reference only — not deducted from the invoice. The draft goes out at the full amount; apply these payments against it in Xero as usual.

Deposit received

prefilled from the plan — correct to what was really paid

661.25

Instalments received

none planned

0

Invoice total

£2,878.64

Home

Measure

On Site

Summary

The report goes on the invoice. Below the totals, **Attach the windows & doors work report** is ticked whenever the job has windows and doors; **Check the report** opens it first. When you create the invoice, the app attaches the report to it in Xero as **Work-Report-INV-0421.pdf** (with the invoice's own number), set to show on the online invoice, so the client can open it from the invoice Xero emails them. Untick it to leave it off; the line then doesn't mention a report. If some quoted or approved work isn't ticked off yet, a red warning says so, because the report would leave it out.

←

Final Invoice

MATERIALS — AS USED

⚠

No materials were ticked as bought — this invoice bills labour only. If that's wrong, log actuals on the On Site screen first.

ALREADY RECEIVED — APPLY IN XERO

Reference only — **not deducted from the invoice**. The draft goes out at the full amount; apply these payments against it in Xero as usual.

Deposit received

prefilled from the plan — correct to what was really paid

661.25

Instalments received

none planned

0

Invoice total

£2,878.64

Payments to apply in Xero

– £661.25

Balance the client will owe

£2,217.39

✓

Attach the windows & doors work report

Every opening and the work done to it, with the drawings and what was found on site — no prices. Added to the Xero invoice as a PDF the client can open from it. [Check the report](#)

⚠

1 piece of windows & doors work isn't ticked off as done, so the report leaves it out. Tick them on On Site > Windows & doors first.

Create draft invoice in Xero

Created as a DRAFT — review in Xero before sending.


Home

Measure


On Site

Summary

If the report doesn't attach, the invoice is still created; the message says the report wasn't attached and why. The Documents tab then shows, under the work report, **Try attaching the report again** with the reason underneath. Trying again is safe: if Xero already has the report on that invoice, it isn't added a second time. Once it's on, the screen says **✓ Attached to invoice INV-... as Work-Report-INV-....pdf**. Xero doesn't let an app remove an attachment, so a report that's already attached isn't replaced; if you need to change it after that, open it from the Windows & Doors screen and swap it in Xero by hand.

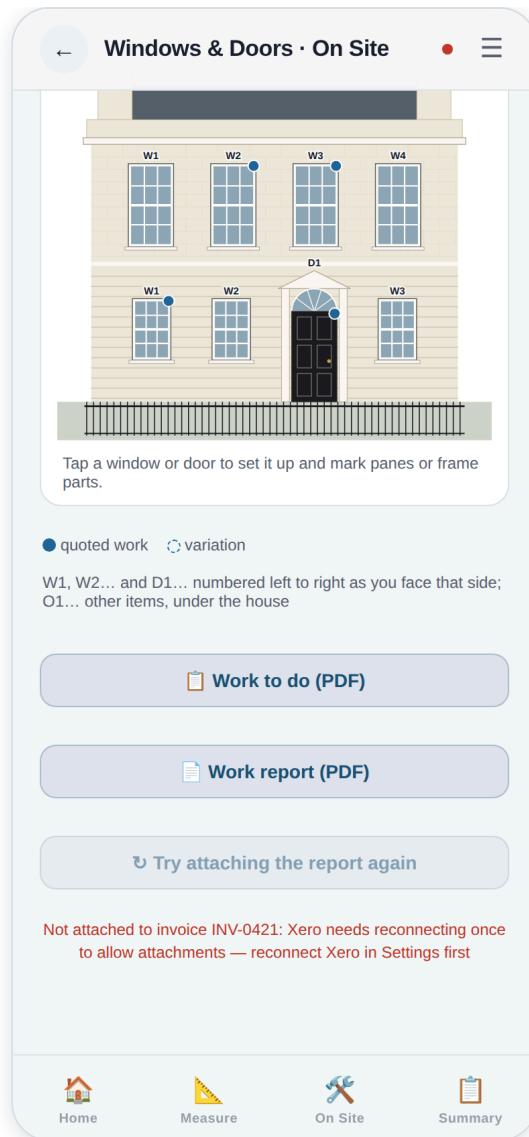

Xero needs one reconnect for this. Attaching files needs a permission that older Xero connections weren't given. Until you reconnect, **Settings → Xero Integration** shows **Reconnect Xero to attach work reports** with a **Reconnect Xero** button. Quotes and invoices keep working either way; only the attachment waits. (If Xero ever refuses this app the permission, the note says so instead, and the report has to be added in Xero by hand.)

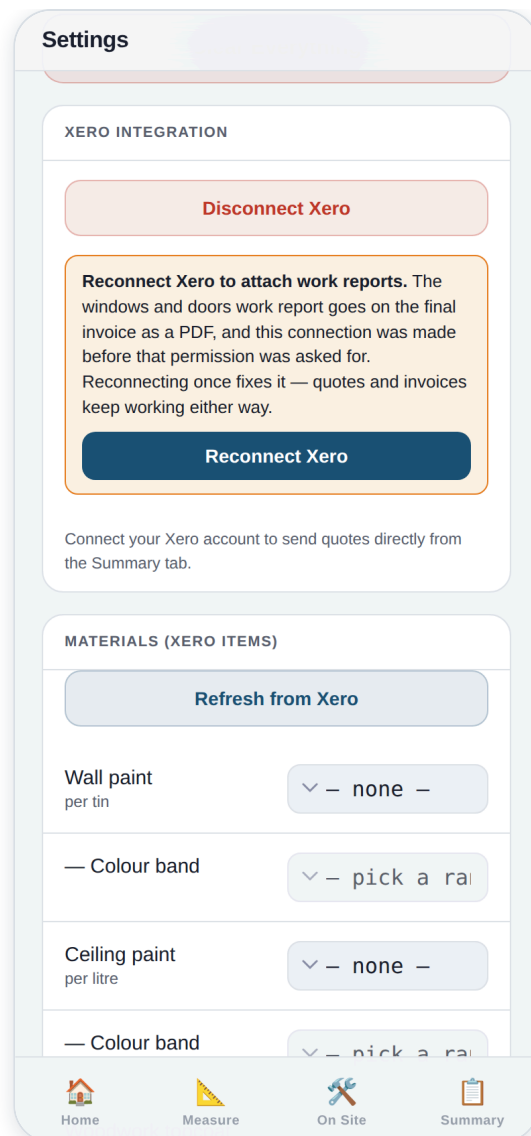


Interim invoices carry the same single line: the fixture's share for that invoice plus anything added on site so far, which is billed on that interim in full. It says which stage it is, (*stage 2 of 3*), when you picked a stage from the quote's payment plan, or how far through it is, (*40% complete*). The report is attached to the **final** invoice only, and the interim's line says so.

WINDOWS AND DOORS: WHAT WAS DONE

Outside faces only. Openings are numbered left to right as you face each side of the house.

 work  glass replaced  agreed as a variation

FRONT

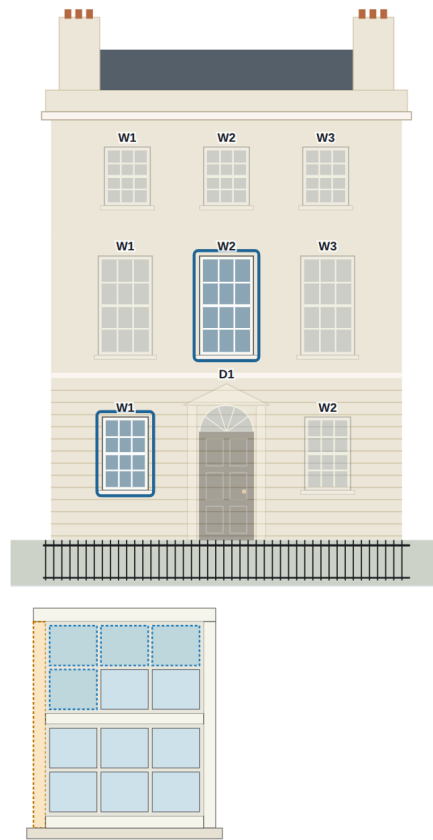

When the work's done, tap **Mark Completed** — the job moves on, and Home reminds you it needs invoicing until you do.

13. The final invoice

On a **Completed** job, On Site shows **Build final invoice**. The builder assembles the whole money story in one list:

- labour **as quoted** (the frozen accepted figure, not the hours it took),
- plus **approved variations** (including the ones the client approved on their own link),
- with **all the windows and doors work as one line**, the quote plus everything added on site, and the work report attached (see [Windows and doors on the invoice](#)),
- plus the **actual materials** used (from your ticked-off list),
- minus any **deposit already recorded and synced to Xero**.

The invoice's lines are worded the same way the quote's are (see §9): the invoice version of your template block rides the **first work line**, and the work lines after it read "*Bedroom - same as above*" or carry their own scope where they differ. **Lines that aren't measured work are left to speak for themselves** — *Sundries & Consumables*, a custom line you typed a price into, and the diary-day/price rounding line. They're a percentage or a price of their own, not painting, so they never get the block and never read "same as above".

Review the lines, adjust anything, then send — the app writes **one draft invoice into Xero** and marks the job **Invoiced**. You approve and send the invoice from Xero as usual, so nothing goes to the client without your say-so. Applying the recorded deposit to this invoice, once it exists in Xero, is still done in Xero.

Billing part way through: interim invoices

On a long job you don't have to wait until the end to invoice. While a job is **Accepted**, the Summary status card has an **Invoices** line with **Interim invoice** >. Each interim bills the rooms (or parts of rooms) finished so far, plus the materials you've bought. The final invoice then bills only what's left.

Interim Invoice

LABOUR

Set every line to
quoted £3,800.00 · 0% invoiced
so far · lines already further on
keep their %

Match quote stage
sets every line to the
cumulative % through the
stage

Lounge
quoted £1,500.00 100 % **Done**

Hall, stairs & landing
quoted £1,800.00 50 % **Done**

Front bedroom
quoted £500.00 0 % **Done**

Each line is **cumulative** — how far through that room or
item is in total. Sundries are billed on the final invoice.

MATERIALS BOUGHT — NOT YET INVOICED

☒ Tikkurila Optiva 5 Matt 10L — Hague
Blue **£193.00**
2 × £96.50

☒ Johnstone's Trade Aqua Satin 2.5L —
White **£114.60**
3 × £38.20

APPROVED VARIATIONS

Variation: Paint garage
door 50 % **Done**
quoted £180.00

Home Measure On Site Summary

- **Labour is billed room by room.** Every line from the accepted quote (each room, exterior item, fitted unit or custom line) has its own % box and a **Done** button.
 - Tap **Done** when a room is finished, and the whole of its quoted price goes on this invoice.
 - Type a % when it's part-done, e.g. **50** when half the room is painted.
 - The % is **cumulative**: how far through that room is **in total**. If the Hall went on the last invoice at 50% and you now tap Done, this invoice bills the other 50% and reads *"Hall — complete (previously invoiced 50%)"*.
 - A room already invoiced in full shows ✓ **invoiced in full**. A % can't go down or above 100.
 - **Set every line to** sets all rooms to the same % in one go, handy for "40% of everything". **Match quote stage** does the same using a stage from the quote's payment plan (deposit, weekly instalments, balance). Neither pulls down a room you've already set higher.
 - When every room is at the same %, the invoice shows **one labour line**, *"Labour: 40% of quoted works (previously invoiced 0%)"*, rather than a row per room. The app still tracks each room behind the scenes, so on a later invoice you can switch to marking rooms Done and it carries on from 40% correctly.

- **Sundries & Consumables** aren't on interims. They're billed in full on the final invoice.
- **Materials are itemised.** Every product you've ticked as **bought** on the On Site list and haven't invoiced yet is listed, with its quantity and price. These are the same lines and prices the final invoice uses. They're all ticked to start with; untick anything you'd rather hold back until later. If you bought 2 tins, invoiced them, then bought a third, the next interim offers just the one. A product with no price is shown in red and can't be billed until you set its price on the On Site screen.
- **Approved variations** work the same way as rooms: a % box and **Done** for each one, so you can bill half an extra now and the rest later.
- **Windows and doors** are one line, the fixture's % plus everything added on site so far (those start at 100%). See [Windows and doors on the invoice](#).
- **A line that's left the quote.** If an earlier interim billed a line that's since gone (say the old exterior windows item, replaced by the Windows & Doors drawing and deleted), a **Billed before, no longer on the quote** card appears at the top, showing what was billed on it and on which invoice. Pick the line that replaced it under **Counts towards**. That amount is then taken off the new line, and the new line shows as that far through. For example, £812.48 billed on the old windows item counts as about 35% of a £2,351.53 Windows & Doors line, so **Done** bills the other £1,539.05. Until you choose, it shows  **Not taken off anything on this invoice yet**. The final invoice always squares up, because it deducts each interim in full.

← Interim Invoice

APPROVED VARIATIONS

Variation: Paint garage door

quoted £180.00

50 %

Done

PREVIEW

Lounge — complete	£1,500.00
Hall, stairs & landing — 50% complete	£900.00
Variation: Paint garage door — 50% complete	£90.00

MATERIALS

Tikkurila Optiva 5 Matt 10L — Hague Blue	£193.00
2 × £96.50	
Johnstone's Trade Aqua Satin 2.5L — White	£114.60
3 × £38.20	

Subtotal	£2,797.60
Less deposit	– £1,250.00
Amount due	£1,547.60

Previously billed	£0.00
This invoice	£2,797.60
Remaining to bill	£2,382.40

of £5,180.00 — the quote plus approved variations

The deposit is **not** a line on the Xero invoice — it is already in Xero as a prepayment. Allocate it to this invoice there, as you do on the final one.

Issue interim invoice

Fill this in anywhere — it saves as you go. Issuing needs a connection: it goes to Xero as a DRAFT, to review and send from there.

Home

Measure

On Site

Summary

- **Deposit to take off.** While some of the deposit hasn't been set against an invoice yet, a **Deposit** box appears. It starts at all of what's left, up to the invoice total. Lower it to keep a float for materials on the next invoice. For example, take £600 of a £1,250 deposit now, and the other £650 is offered on the next invoice. Whatever's still unused comes off the final invoice. If the deposit covers the whole invoice, that's allowed; there's just nothing for the client to pay on it.

← Interim Invoice

APPROVED VARIATIONS

Variation: Paint garage door

quoted £180.00

0 % Done

DEPOSIT

Deposit to take off

£1,250.00 received · £1,250.00 left.
Take less to keep a float for the next invoice.

600

PREVIEW

Lounge — complete

£1,500.00

MATERIALS

Tikkurila Optiva 5 Matt 10L — Hague Blue

2 × £96.50

£193.00

Johnstone's Trade Aqua Satin 2.5L — White

3 × £38.20

£114.60

Subtotal

£1,807.60

Less deposit

– £600.00

Amount due

£1,207.60

Previously billed

£0.00

This invoice

£1,807.60

Remaining to bill

£3,372.40

of £5,180.00 — the quote plus approved variations

The deposit is **not** a line on the Xero invoice — it's already in Xero as a prepayment. Allocate **£600.00** of it to this invoice there. £650.00 stays unallocated for the next invoice.

Issue interim invoice

Fill this in anywhere — it saves as you go. Leaving needs a

Home

Measure

On Site


Summary

The **Preview** shows the invoice line by line (each room that bills something, e.g. "*Lounge — complete*" or "*Hall, stairs & landing — 50% complete*", then variations, then a **MATERIALS** heading with each product, just as the final invoice lays them out), then **Less deposit** and the **Amount due**.

The total is always a clean £5, like the quote. If the lines come to £2,797.60, the invoice is £2,795.00. Only the labour of rooms that are **part-done** on this invoice is trimmed. A room you've marked **Done** bills its exact price, pennies and all, and materials stay at their real prices. It's always rounded **down**, so an interim never asks for more than the work done. If every room on the invoice is being completed, nothing is trimmed and the total is exact. The few pounds or pennies trimmed aren't lost: the next invoice that bills that room picks them up, and whatever's left at the end goes on the final invoice, which is exact to the penny. The preview tells you how much was held over.

Underneath, it tells you exactly how much of the deposit prepayment to allocate to this invoice in Xero, and how much stays unallocated. Below that are the running totals: already billed, this invoice, and what's left to bill against the quote plus approved variations. The app warns you before issuing an invoice that would take billing past the quote.

You can fill the builder in with no signal; it saves as you go. **Issue interim invoice** needs a connection. It records the invoice, then creates it in Xero as a **draft** with its own number, the same contact and the same accounts as the final invoice. The deposit is **not** a line on the Xero invoice, because it's already in Xero as a prepayment. Allocate the prepayment to the first interim in Xero, as you would for the final invoice.

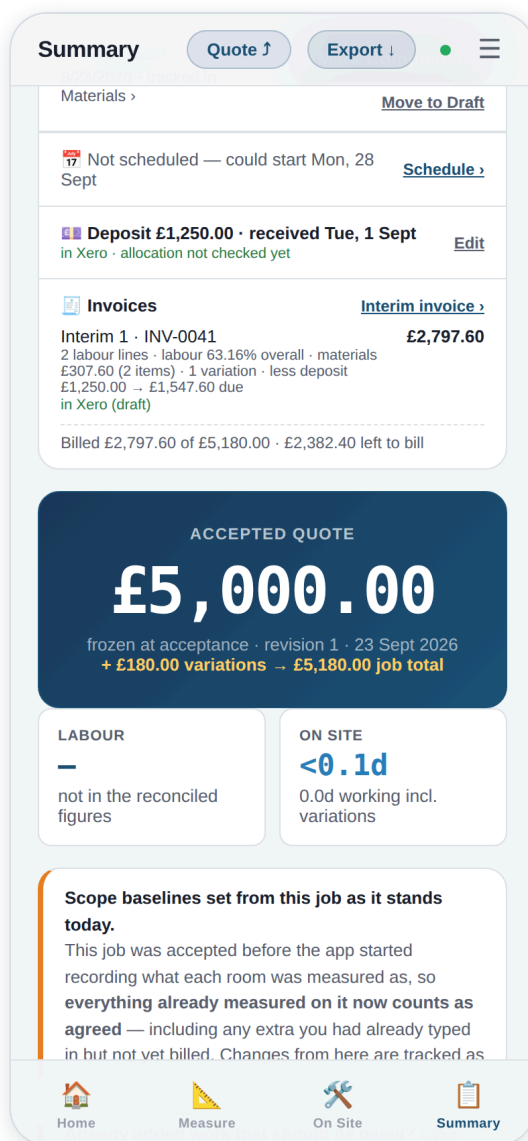

Each invoice then appears on the status card with its Xero state, which the app reads back from Xero whenever you open Summary:

- *in Xero (draft)*: not on the client's page yet.
- *approved in Xero · awaiting payment*: now on the client's page.
- *paid* ✓.
- *voided in Xero*.

If the send to Xero failed, you'll see the reason in red, and **Try again** is safe: it can never create the invoice twice. **Discard** removes the most recent interim if it never reached Xero.

Correcting an interim that's already in Xero: tap **Void & reissue** on the most recent interim.

- If it's still a draft in Xero, it's deleted. If it's been approved, it's marked **VOID**, so it stays in Xero as a record and drops off the client's page.
- The builder then opens with that invoice's figures already filled in (each room's %, the extras, the deposit share), so you only change what was wrong and issue it again. The corrected invoice gets a new number.
- If a payment or the deposit has been allocated to the invoice in Xero, the app won't void it. Remove the payment or allocation in Xero first, then try again. The app never unwinds money.
- It only works on the **most recent** interim, and not once the final invoice exists, because later invoices refer back to it.

If you void an invoice directly in Xero instead, open Summary and tap **Discard** on it. That has the same effect, without the pre-filled builder.

The client sees what's been invoiced. Once an interim (or the final invoice) is **approved in Xero**, it appears on the client's link under **Invoices so far**, with its number, date, amount, and whether it's paid. There's also a running *"Invoiced so far"* against the job total. Drafts are never shown, so nothing reaches the client's page before you've checked and sent it.



NH Estimator
 Painting & Decorating

Quote for Laura Holmes
 Holmes — whole house

ORIGINAL QUOTE
 As agreed **£5,000.00**
 The price already agreed for the original scope of work. Unchanged.

EXTRAS SINCE THEN
 Nothing extra has been added to this job.

TOTAL SO FAR **£5,000.00**
 Original quote, no extras approved yet

INVOICES SO FAR
Interim invoice INV- 0042 **£1,807.60**
 23 Sept 2026 · Awaiting payment

Invoiced so far **£1,807.60 of £5,000.00**

Approved extras are added to your final invoice.
 Any questions, just reply to the message this link came in.

The final invoice with interims. When the job is completed, the final invoice is built as before, with two differences:

- **Materials already invoiced are left off.** The final lists only what no interim has billed. A product that was part-billed shows just the remainder, with a note of how many were already invoiced. Materials are never billed twice and never need a deduction line.
- **Labour and variations are billed in full, then each interim's share comes off.** Every quote line, the sundries and every approved variation appear as usual. Then comes one "**Less: interim invoice INV-...**" line per interim, for the labour and variations it billed. An interim that only billed materials has no deduction line. What's left to pay is the rooms that weren't invoiced, the unbilled parts of the rest, and the sundries.

If you've since returned a tin that an interim already billed, the final invoice flags it so you can credit the difference in Xero. The deposit box now shows only the part of the deposit that hasn't already been set against an interim. The final invoice can't be created until every interim is in Xero.

Once a job is Invoiced, Summary shows a read-only **Job Profitability** card telling three separate stories: **Billing** (quoted vs invoiced, with a note if they differ), **Schedule** (days quoted vs days actually logged), and **Materials** (quoted materials vs the real trade cost of what was used, with your markup on materials banked as its own figure). On a job billed in stages, the **Billing** section shows the quoted total (including approved variations), what has been invoiced to date across the interim and final invoices, what's left to bill, and each invoice listed underneath. It's reference only — nothing here feeds back into pricing.

14. Rates

Menu (≡) → **Rates** — every number the calculator uses, grouped by what it prices. A change here applies to every future calculation, and reprices any open (un-accepted) draft immediately — accepted quotes are unaffected, since **their figures are already frozen**.

Rates

The figures behind every calculated price. Business settings — day rate, markup, Xero, backup — live on [Settings >](#)

PAINT COVERAGE

How many m² a litre covers — the standard rates, the per-product overrides that beat them, and the assumed areas behind exterior litres.

COVERAGE RATES

Wall Emulsion

m² per litre — rolled

13

Spraying uplift

% extra litres when a surface's Spray toggle is on (walls off, ceiling & woodwork on by default; fitted unit has its own) — applied on top of the standard or per-product rate, one global figure rather than a sprayed rate per product

30

Ceiling Emulsion

m² per litre — un-sprayed base; rooms' Spray ceiling toggle (on by default) adds the uplift below on top

17

Gloss / Satinwood

m² per litre — un-sprayed base; rooms' Spray woodwork toggle (on by default) adds the uplift below on top

9

Mist Coat

m² per litre — thinned product

15

Panelling

m² per litre per coat — draft default, check against your usual product

8

Home

Measure

On Site

Summary

Section	Card	What's in it
Paint Coverage	Coverage Rates	Standard m ² /litre per surface, the spraying uplift %, and per-product rates that beat the standard figure for a specific paint range
Paint Coverage	Exterior Paint Coverage & Areas	Assumed areas and coverages behind exterior litres
Labour Times	Time Rates	Minutes per m ² (or per item) for every surface, doors/frames, sills, mist, panelling, staircase parts
Labour Times	Wallpaper Stripping	Minutes per m ² to strip paper off, one figure per difficulty — lining, standard/vinyl, textured/woodchip, multiple layers. These ship at 0 and are yours to fill in — see Walk the room
Labour Times	Exterior Rates	Minutes per coat for masonry, fascias, windows, doors, garage, sash extras, access uplifts
Item & Job-Type	Doors & Frames	Paintable areas per face, fire-door surcharge, ironmongery prices
Item & Job-Type	Wallpaper Rates	Per-roll rates, ceiling/staircase multipliers, minimum price, wide vinyl & mural rates
Item & Job-Type	Kitchen Rates	The full price matrix per item type × size, linear rates, carcass %, strip-original-coating minutes
Item & Job-Type	Fitted Unit / Shelving	Shelf and bay spray times, fallback areas behind fitted-unit litres
Item & Job-Type	Windows & Doors	Window base minutes per size tier, minutes per pane, sash/casement/fixed adjustment, door base minutes per type and size, bay base minutes per shape and storeys, prep multipliers, each marked-work action's minutes and material £, and the paint areas (each size's m ² , the timber share per type, door leaf and frame, bay timber per storey)
Scheduling	Scheduling	Daily overhead, schedule buffer, Work Saturdays, bank-holiday region, calendar feed

Windows & Doors prices each opening as *(base minutes for its size and type + panes × minutes per pane) × coats × access × its prep multiplier*, plus the minutes of any work marked on it — all at your day rate, like every other timed task. The prep multipliers start at Light ×1.10, Standard ×1.25, Heavy ×1.40 and Restoration ×1.75; the material £ (glass is £25 a pane to start) is per pane or part marked, before markup. The sash actions start at Re-cord 40 min and £6, Replace beads 20 min and £4, and Ease & overhaul 45 min and £3, each per part; a door's Ease starts at 30 min. Other items aren't on Rates: each has its own minutes and £. Every figure is a starting guess to calibrate.

The window, pane, door and bay minutes are **for 2 coats**, and scale with the job's coats setting (1 coat is half, 3 coats one and a half), as the card's note says. Access isn't a figure of this card: it uses the **Access — 1st floor** and **Access — 2nd floor** + percentages on the

Exterior Rates card, so a first-floor window costs the same uplift in both places. Marked work takes neither.

Rates

minutes are (base minutes × per-pane) × amp
minutes of any work marked on it — converted at

your day rate like every other timed task. Materials are per element marked, before markup. Starting defaults — calibrate against real jobs.

WINDOW BASE MINUTES

by size tier — the tier button shows the area guide

Small under 0.5m ²	30
Medium 0.5 to 1m ²	40
Large 1 to 2m ²	55
X-Large over 2m ²	75

Minutes per pane

covers cutting in the glazing bars

	4
--	---

TYPE ADJUSTMENT

× on the window base — sash has more parts to paint

Casement	1
Sash	1.3
Fixed	0.8

DOOR BASE MINUTES

standard / oversized

 Home
 Measure
 On Site
 Summary

Bay base minutes are a bay's own cornice, fascia and mullions, by shape and storeys — canted 90 minutes for one storey and 160 for two, square 70 and 125 to start. They're on top of the bay's windows, which are priced as windows, and the bay's prep multiplies them. A dormer's fascia and cheeks have no minutes of their own; work marked on them uses the frame actions' minutes.

Rates

French (double)

150

200

BAY BASE MINUTES

a bay's own cornice, fascia and mullions — one storey / two — on top of its windows, which price as windows

Canted bay

90

160

Square bay

70

125

PREP MULTIPLIERS

× on the painted opening — an opening can go up from the job's default, never down

Light

1.1

Standard

1.25

Heavy

1.4

Restoration

1.75

PAINT AREAS

for litres only — the timber on the outside face, not the whole opening

Small window

m² of the whole opening (under 0.5m²)

0.35

Medium window

m² of the whole opening (0.5 to 1m²)

0.75

Home

Measure

On Site

Summary

Resin repair is priced by size. **Resin repair base** is the part every repair takes whatever its size (15 minutes to start: setting up, consolidating, the cure wait and coming back). Each size then adds its own minutes and £ of resin: Small 5 min / £2, Medium 10 / £4, Large 25 / £8, X-Large 45 / £15. Medium (15 + 10 = 25 minutes, £4) is exactly what the single resin figure was before, and if you'd changed that figure, Medium takes your figure. These are starting points: adjust them to match your own jobs.

Rates

m² per leaf

Bay timber

m² per storey — cornice, fascia, mullions, cill

1.2

ACTIONS

minutes and material £ per pane or part marked

Reputty

pane action

20

min £

0

Replace glass

pane action

30

min £

25

Filler

frame action

10

min £

0

Resin repair base

once per repair, any size — setup, cure wait, return visit

15

min

Resin repair · Small

nail hole to thumb-sized

5

min £

2

Resin repair · Medium

up to palm-sized

10

min £

4

Resin repair · Large

rail end, cill corner

25

min £

8

Resin repair · X-Large

sill nose or rail rebuild

45

min £

15

Splice timber

60

min £

0

Home

Measure

On Site

Summary

Calibrate as you go: after a few jobs, compare the logged time and actual materials on On Site with what was estimated, and nudge the time and coverage rates here. The estimates get sharper with every job.

15. Settings

Menu (≡) → **Settings**. Everything that isn't a calculation rate lives here: your business identity, pricing defaults, Xero, and backup.

Settings

BUSINESS

Business name

shown in the app header, on the login screen and in the calendar feed

e.g. J.

Logo

optional — shown instead of the name in the header

Upload...

PRICING

Day Rate

£ per day

300

Hours Per Day

7

Markup

%

20

Commercial job adjustment

% — default when a quote's Commercial job toggle is on, applied before markup/discount

10

Standalone job rounding

when a quote's Standalone job toggle is on, diary days round up to this

Full day

Sundries & Consumables

% of labour, before markup

5

Spray sundries bump

Home

Measure

On Site

Summary

Section	What's in it
Business	Your business name and logo — shown in the app header, on the sign-in screen, at the top of every quote you send and its PDF, and in the calendar feed. Also your name, business phone, business address and home delivery address, used on supplier orders
Suppliers	The merchants you order materials from — name, email, and optionally your account number, branch name and branch address (the branch is used when you Collect). Add, edit (✎) or delete (✕); deleting one doesn't remove orders already sent to them
Pricing	Day rate, hours per day, markup %, sundries %, spray sundries bump, deposit %, commercial job adjustment, standalone-job rounding (full or half days), and how many days before an unanswered quote gets flagged
Deposits (Xero)	The bank account a recorded deposit lands in, and the account code it posts to
Xero Integration	Connect / disconnect
Materials (Xero Items)	Refresh your product list from Xero and set the default product for each role
Quote & Invoice Text	The per-job-type wording templates for quotes and final invoices
Calibration	What your finished jobs say about two of your settings — see below
Appearance	Light / Dark / Auto theme (this device only)
Backup	Export and import everything — see below

Settings

BUSINESS

Business name

shown in the app header, on the login screen, on your quotes and their PDFs, and in the calendar feed

Nicky Hæ

Logo

optional — shown instead of the name in the header

Upload...

Your name

signs off supplier orders

Nicky Hawkins

Business phone

under your name on supplier orders

07700 900123

Business address

1 Yard Road, Huntingdon

Home delivery address

for supplier orders sent to Deliver to home — blank uses the business address

Same as business address

SUPPLIERS

Brewers

orders@brewers.example · Acc NH4471 · Cambridge

Johnstones Decorating Centre

Home

Measure

On Site


Summary

Calibration — let finished jobs correct your settings

Some of the figures behind your prices started life as sensible guesses. This card compares them against what actually happened on your last few finished jobs.

NH Estimator — User Manual

156 / 161

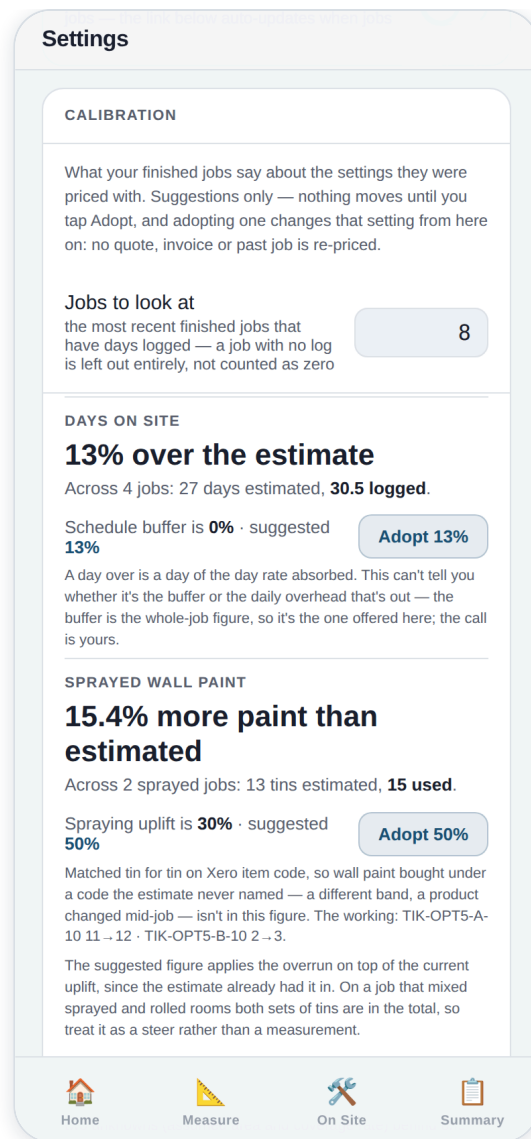

Days on site adds up the days you logged on *On Site* → *Time on site* and compares them with the days those jobs were quoted for. If you're consistently running over, the percentage is the **Schedule buffer** you should probably be padding quotes with.

Sprayed wall paint does the same for tins: on jobs where at least one room had **Spray walls** on, it compares the wall paint the estimate asked for against what you logged as used, and turns the difference into a **Spraying uplift** figure.

Three things worth knowing:

- **Jobs with nothing logged are left out completely** — not counted as zero. A job you never logged days for says nothing about how long jobs take, so it isn't allowed to. The card tells you when it has left jobs out, and why.
- **Nothing changes until you tap Adopt.** Adopting sets that one setting for quotes from now on. No quote, invoice or finished job is re-priced — accepted quotes are frozen anyway.
- **Change "Jobs to look at"** to widen or narrow the sample. Eight is a reasonable default; drop it to 3 if you've recently changed how you work.

If a suggestion says *"not enough data yet"*, it's telling you what's missing — usually that no sprayed job in the sample has its materials logged. It'll appear on its own once the data does.

The sundries % and the exterior assumed areas aren't offered here, and that's deliberate: nothing in the app tracks what you actually spend on sundries, and an exterior paint overrun could be the assumed area or the coverage rate — there's no way to tell which. Those stay your judgement call.

16. Backups

Settings → **Backup**:

- **Export everything** downloads a single JSON file containing every job, room, setting and colour — and your suppliers and supplier order history. Do this regularly — Home will nag you when the last backup is getting old.
- **Import backup** restores from a file, adding to what's already there — imported jobs get fresh identities, so it can never overwrite existing data. Restoring settings is a separate opt-in on the import preview, since it's the one thing an import *can* overwrite. Suppliers come back too (one you already have is left as it is), and each imported job brings its supplier orders with it, so its lines still read *Ordered* and the next order won't repeat them. The shopping list isn't in the backup — it's a pick-up list, not a record. Backup files up to 64MB are accepted, which is far more than a full job history comes to; if anything is ever wrong with a file, the app now tells you what in plain English rather than showing a syntax error.

17. Tips & troubleshooting

The dot in the top bar is your sync status: green = everything saved to the server, amber = saving now, red = offline. If you lose signal mid-measure, keep working — changes are kept on your phone ("Offline — N changes queued on this phone") and pushed up when the connection returns; the menu's sync line confirms with "All changes synced ✓".

Opening the app with no signal. The app keeps a copy of itself on the phone, so it opens in a dead spot exactly as it does anywhere else — everything you've measured is on the phone, not fetched from the server. It has to have been opened *once* somewhere with signal first, to save that copy; if it hasn't, you'll get a short page saying so rather than the browser's "no internet" screen.

If you've had launches that hung on a blank screen in a dead spot, that's fixed as of v2.61.0. The cause was a phone showing a bar of signal with nothing actually getting through — not the same as being cleanly offline, and the app used to sit waiting on it. It now gives the network a few seconds and then opens from the phone's own copy. The same deadline applies to saving: a change made where the signal is dead is queued on the phone within seconds instead of hanging, so the dot goes red and tells you what's waiting rather than sitting on amber.

Starting a job with no signal. You can now do this too — pull up outside a house with no bars, add the job, and measure straight into it. The job is created on the phone and appears on the server when you're next in signal, along with everything you put in it. (Before v2.61.0 nothing happened when you tapped it.)

Switching jobs with no signal. A job is kept on the phone once you've opened it in signal, so you can switch between the jobs you've been working on with no bars at all and each one comes back with its own rooms, colours and materials. The last dozen jobs you've opened are kept; older ones drop off and reload the next time you open them in signal.

If you try to switch to a job this phone hasn't got a copy of, it now tells you so and stays where it is — rather than opening the job looking empty. That matters: before v2.62.0 it opened with every room gone, and anything you then measured would have replaced that job's real rooms on the server when the signal came back. If you see that message, the job is fine — the phone just hasn't downloaded it yet.

A price looks wrong? Work backwards: room Preview → Summary breakdown → Rates. The calculation is always *areas × time rates × day rate*, plus *areas ÷ coverage = litres → tins*, plus sundries and markup. One of those numbers will be the culprit — usually a coverage or time rate that doesn't match how you actually work. If the job is already **Accepted**, remember its figures are frozen — a rate change won't move it; you'd need **Amend → revision N+1** on Summary.

Xero button not working? Tokens occasionally expire for good if the app hasn't talked to Xero in a long while. Settings → Disconnect Xero → Connect Xero puts it right in under a minute.

Sent a quote, then client wants changes? Just edit the rooms and hit **Update quote Q-nnn in Xero** on Summary — same quote number, new figures.

Materials you added by hand not in the total? Check the row's tag on Summary's materials list. A line tagged **Tracking only** is deliberately left off the quote — tap the tag to make it **Chargeable** and it joins the subtotal, the Xero quote and the deposit straight away. The card also prints *"Tracking only — not on the quote"* with a figure whenever anything on the list isn't being billed, so you can see at a glance whether money is sitting outside the price. (Lines added before September 2026 may have been saved as tracking-only by default — one tap each puts them on.)

Extra work mid-job? Always add it as a **Variation** rather than editing the accepted rooms — the original quote stays honest, and the extra shows separately on the final invoice where the client expects to see it.

Recording a deposit but the option's greyed out? A linked Xero contact is required before you can sync to Xero — the app will point you at Sync to Xero on the client details. You can still record the deposit locally in the meantime.

The build number at the bottom of the ☰ menu is how you check a new version has actually reached your phone after a deploy.

Manual for NH Estimator v3.9.1. Screenshots taken from the app with example data.

*Keeping this manual up to date: edit this file, then run `npm run build:manual` to regenerate the PDF edition (*NH-Estimator-User-Manual.pdf*) and commit both together. The cover picks up the app version and date automatically.*