



BOX BASE



BOX BASE COMPONENTS



01



U - SUPPORT



INCREASED THICKNESS
(LOAD BEARING)

02

BOX BASE

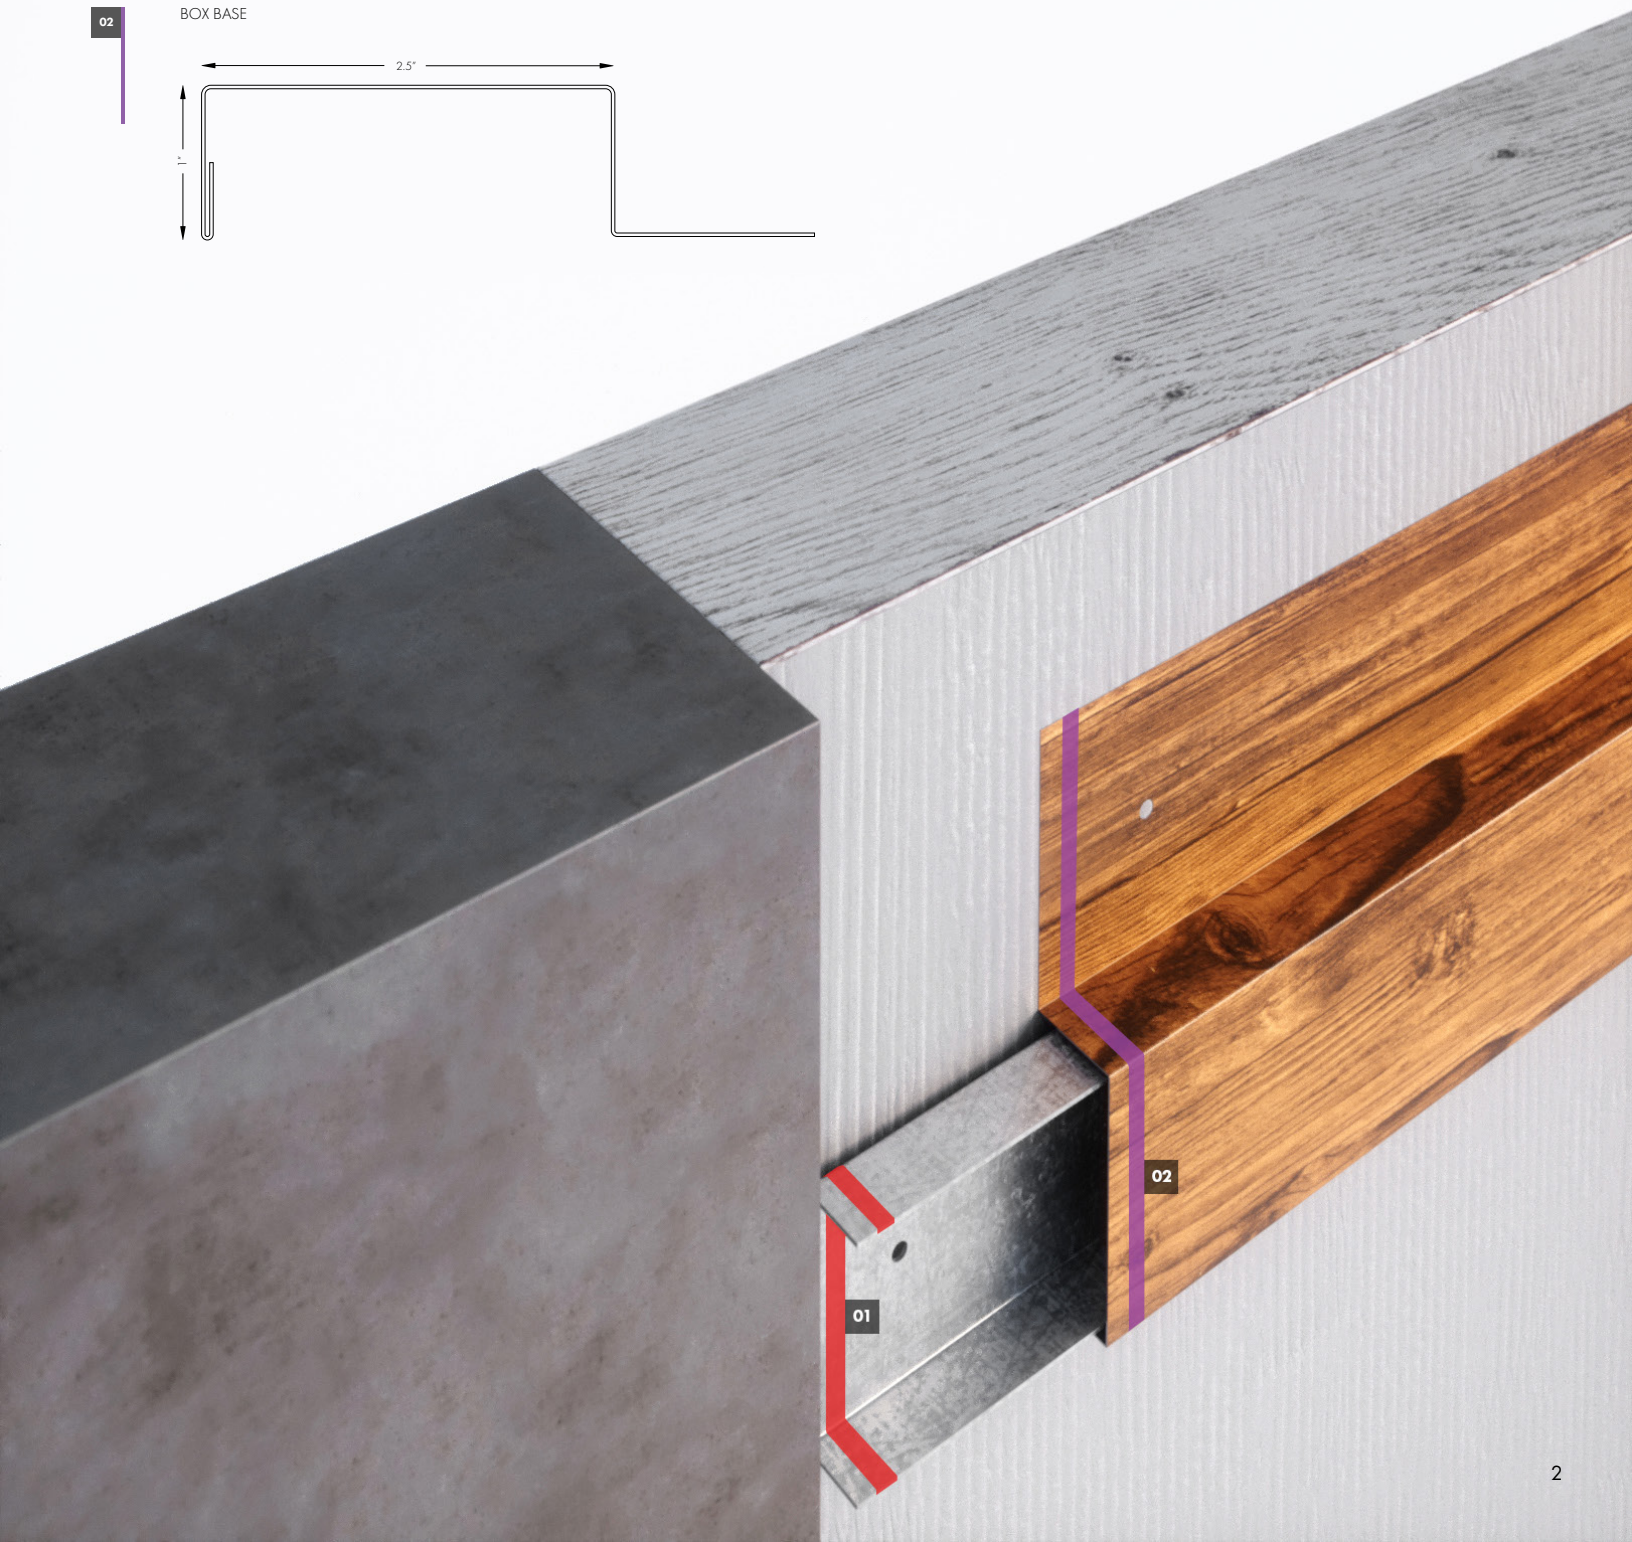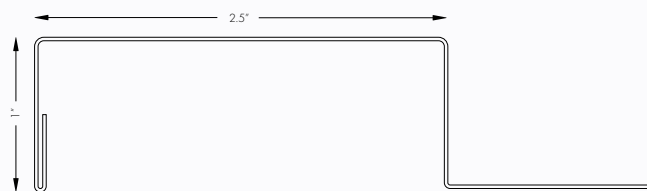



- The Box Base and U-Support are key components of the Random Plank design. The Random Plank needs a solid foundation to ensure there is no distortion or sliding of the panel. The U-Support is made from heavier gauge steel. Screw holes should be pre-drilled and aligned with substrate studs.

01

*If you are not using the U-Support & Box Base, an appropriate bottom support must be provided instead.



- To install the Box Base, start by measuring the U-Support to fit the length of your wall. It can be cut to measure following one of the outlined methods at the beginning of this guide, and can also be set side-by-side to extend a longer wall. Before installing the U-Support, pre-drill your screw holes (no farther than 16" apart) as this is very thick steel. Attach the U-Support $\frac{1}{4}$ " from the ground or bottom level. Screw in place using appropriate fasteners for wood or steel.

02

*Always follow local building codes for installation of rainscreen.



- The next step is to measure & cut your Box Base to fit over your U-Support. Ensure that the top of the bend in the Box Base is seated on the top of the U-Support.

03

- Fasten the Box Base over the U-Support using the appropriate fasteners for wood or steel. Fasten the Box Base to the substrate studs.

04



- When installing the Random Planks and the associated trims, place them in front of the back edge and overtop of the Box Base. Here we have a J-Trim installed over the Box Base.

05



- A Starter Strip is installed over the J-Trim and Box Base.

06



- After sliding in the Random Plank, use a Joiner-Strip. Slide the Joiner-Strip behind the Random Plank, pull back and screw in place. Never pull back too tightly; panels need to be able to expand and contract.

07

- Complete the installation of your Random Plank section over the Box Base.

08