



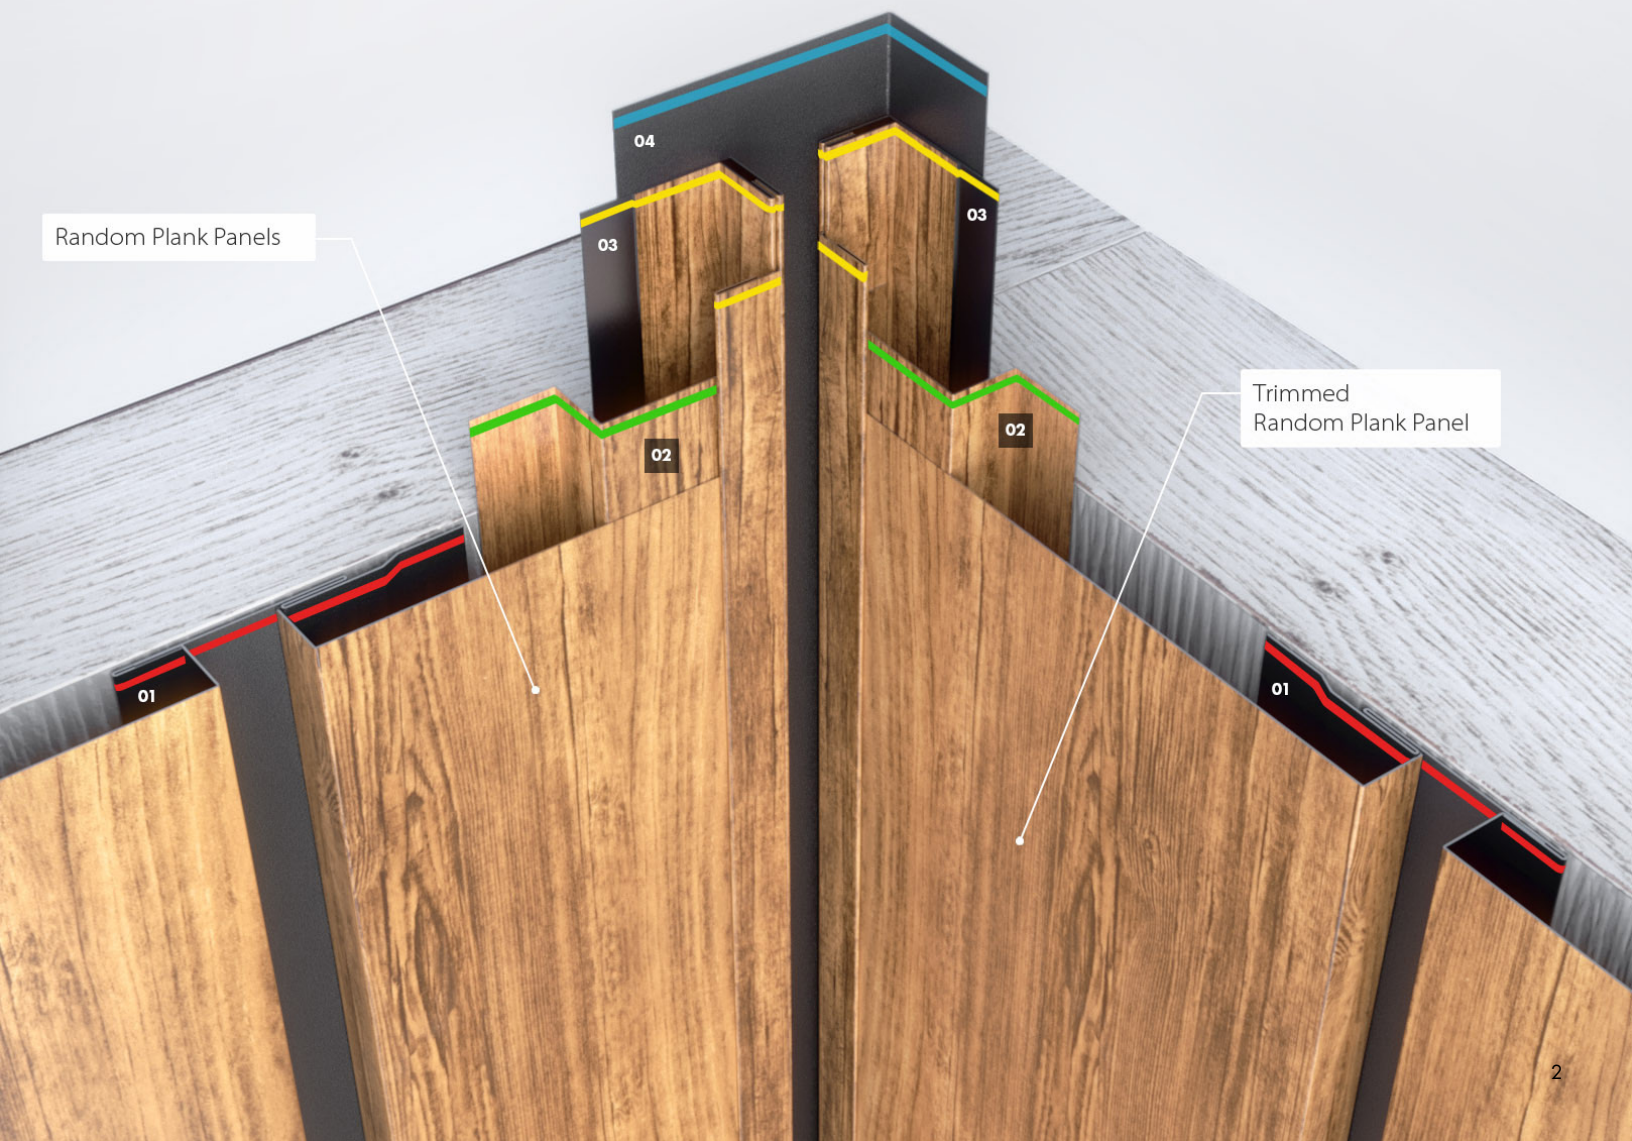

INSIDE END END



INSIDE END END
COMPONENTS

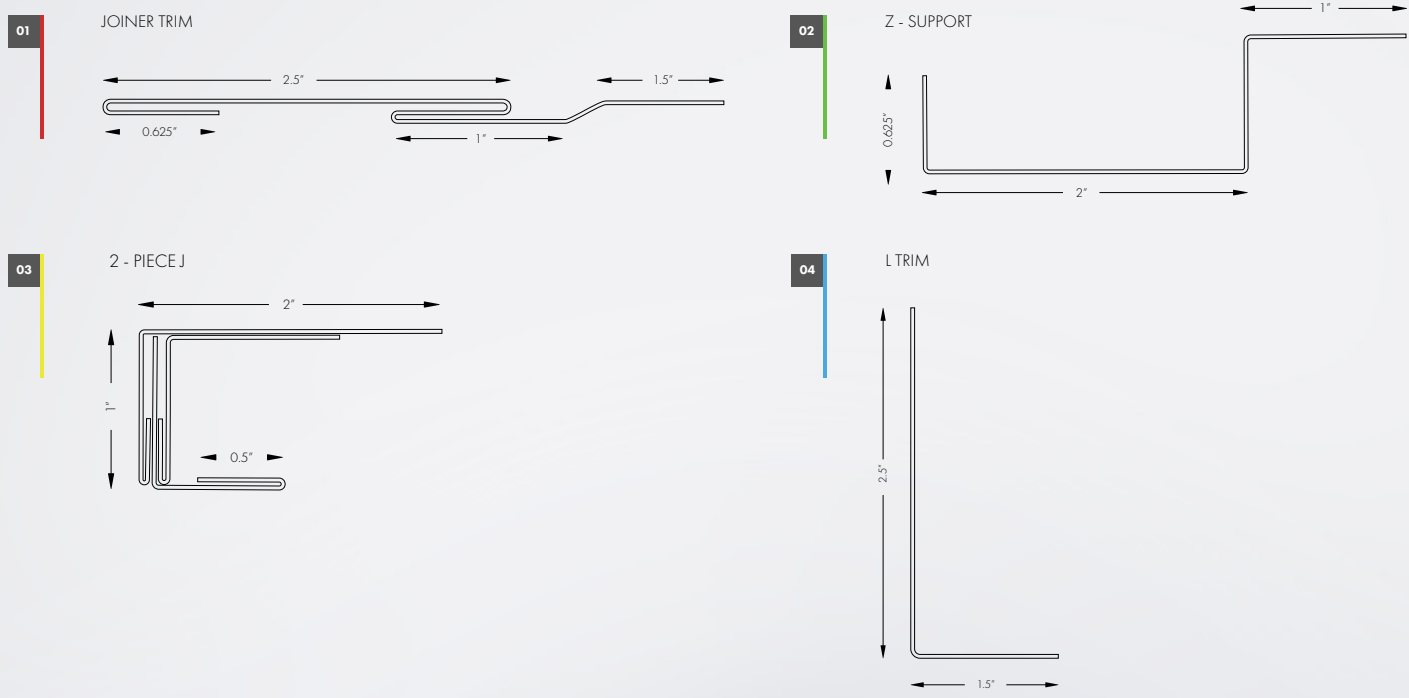



- This corner detail is referred to as an Inside End End corner, or more plainly, a corner where your Random Plank project ends from both directions. To start your Inside End End corner, measure & cut an Inside L-Trim to fit the height of your wall. The L-Trim is reversible, so place the longer side on the wall where you want your 1" reveal to show. You do not have to attach the trim yet as you will be placing another trim section overtop of the L-Trim.

01



- Next, measure & cut your Two-Piece J-Channel to the same height as the L-Trim in the previous step. You can cut the J using one of the methods in the cut guide shown at the beginning of this guide. Once the Two-Piece J is cut, place over the Inside L-Trim, and slide the J insert out of the bottom J receiver.

02



- Push firmly on the bottom J Receiver and the L-Trim to ensure that they are snugly in place in the corner. Fasten both trims to the substrate with the appropriate wood or metal screws. Ensure you screw through both layers of the bottom J and the L-Trim. The maximum distance you should have between screws is 16".

03


- The next step is to measure, cut, and attach the Z-Support. This trim is used as supplementary support for the Random Plank, as you will need to trim the Random Plank edge to ensure that it sits tightly in the corner. Push the Z-Support firmly against the bottom J receiver and fasten to the wall.

04



- You will need to measure the distance between the previous Joiner Trim and the inside edge of the Bottom J Receiver. This is the width that your trimmed Random Plank needs to be.

05

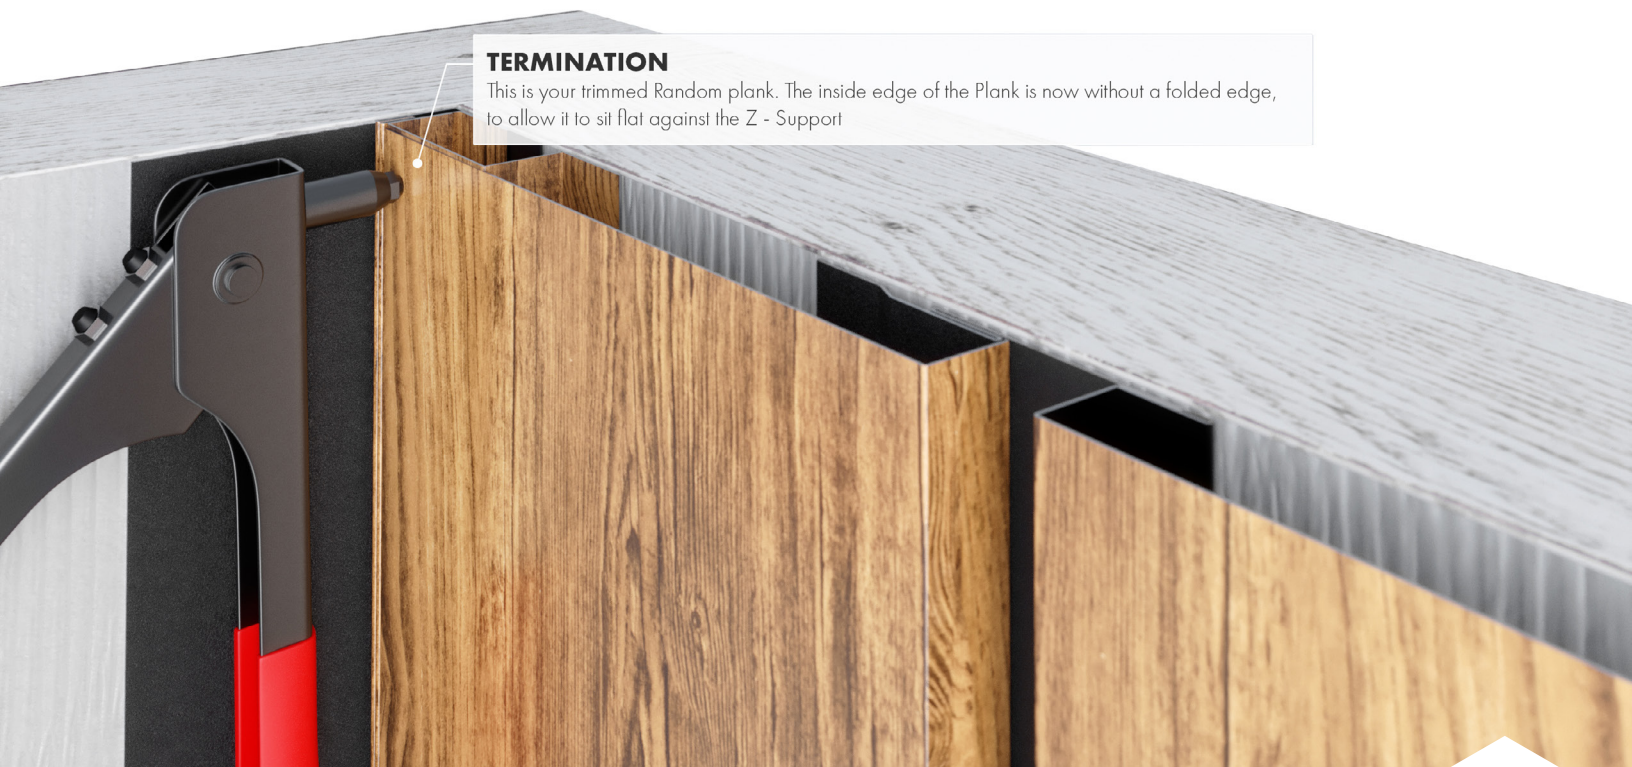

- The trimmed Random Plank then slides into the hem on the end of the last Joiner Trim and sits flat overtop of the Z-Support. The Random Plank is then fastened using stainless steel rivets.

06



- Once the trimmed Random Plank is in place and secured, you can reinstall the Two-Piece J insert. With a mallet or non-marring object, gently tap the Two-Piece J insert into place, ensuring not to scratch or damage the J.

07**MEASURE 1"**

Measure 1" from the completed corner and complete the process going in the other direction

- To complete the other side of the Inside End End corner, repeat these steps starting from the other direction. Leave a 1" inch gap, then measure, place, and fasten your Two-Piece J. Next, install the Z-Support and fasten. Then install your trimmed Random Plank, fasten to the Z-Support, and tap the J insert into the bottom J Receiver.

08