




TERMINATE





- You will need to measure the distance between the previous Joiner Trim and the inside edge of the Bottom J Receiver. This is the width that your trimmed Random Plank needs to be.

05

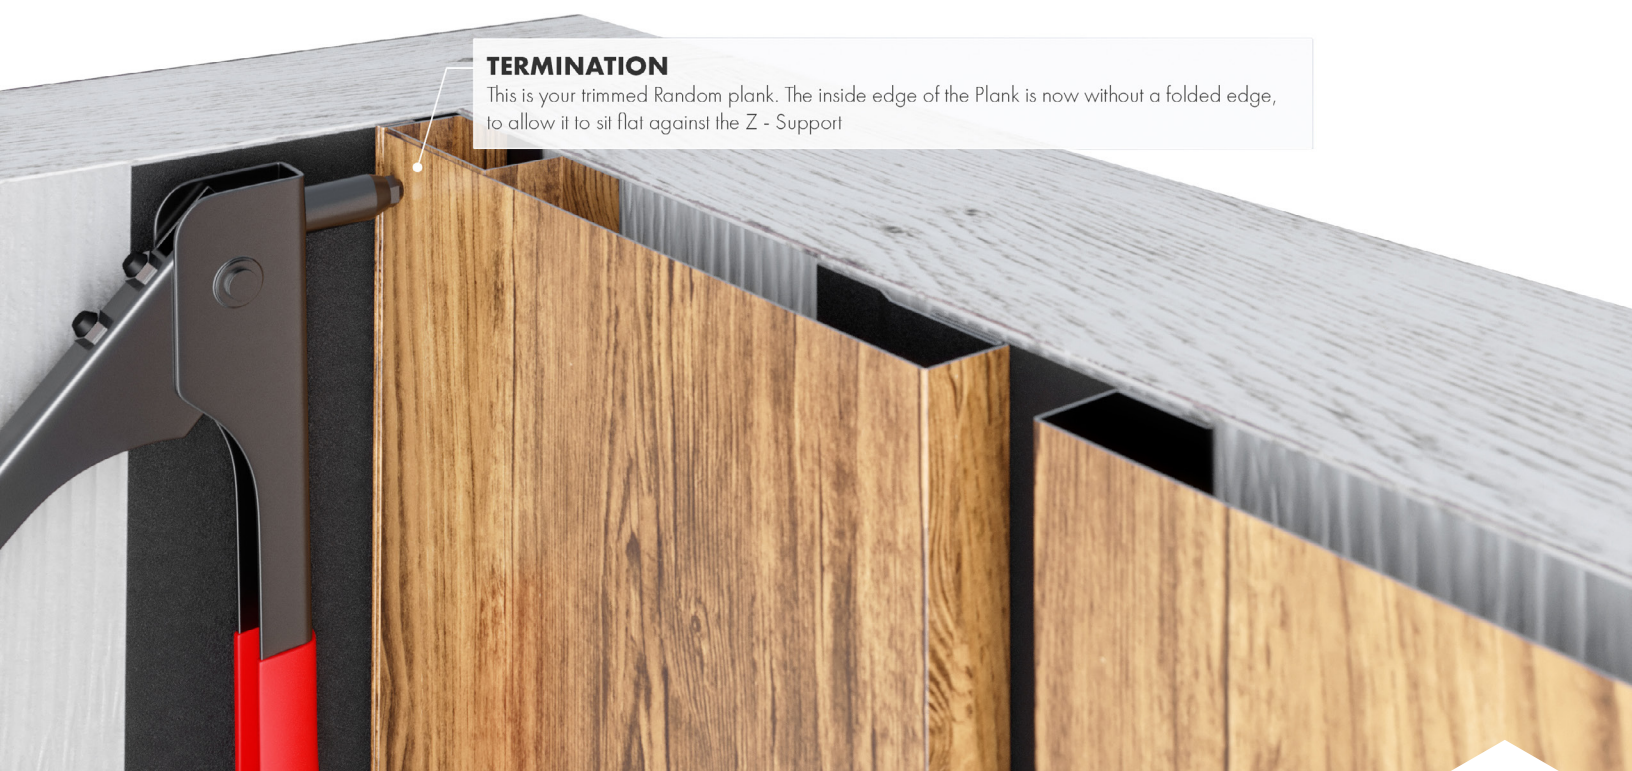

- The trimmed Random Plank then slides into the hem on the end of the last Joiner Trim and sits flat overtop of the Z-Support. The Random Plank is then fastened using stainless steel rivets.

06



- Once the trimmed Random Plank is in place and secured, you can reinstall the Two-Piece J insert. With a mallet or non-marring object, gently tap the Two-Piece J insert into place, ensuring not to scratch or damage the J.

07