



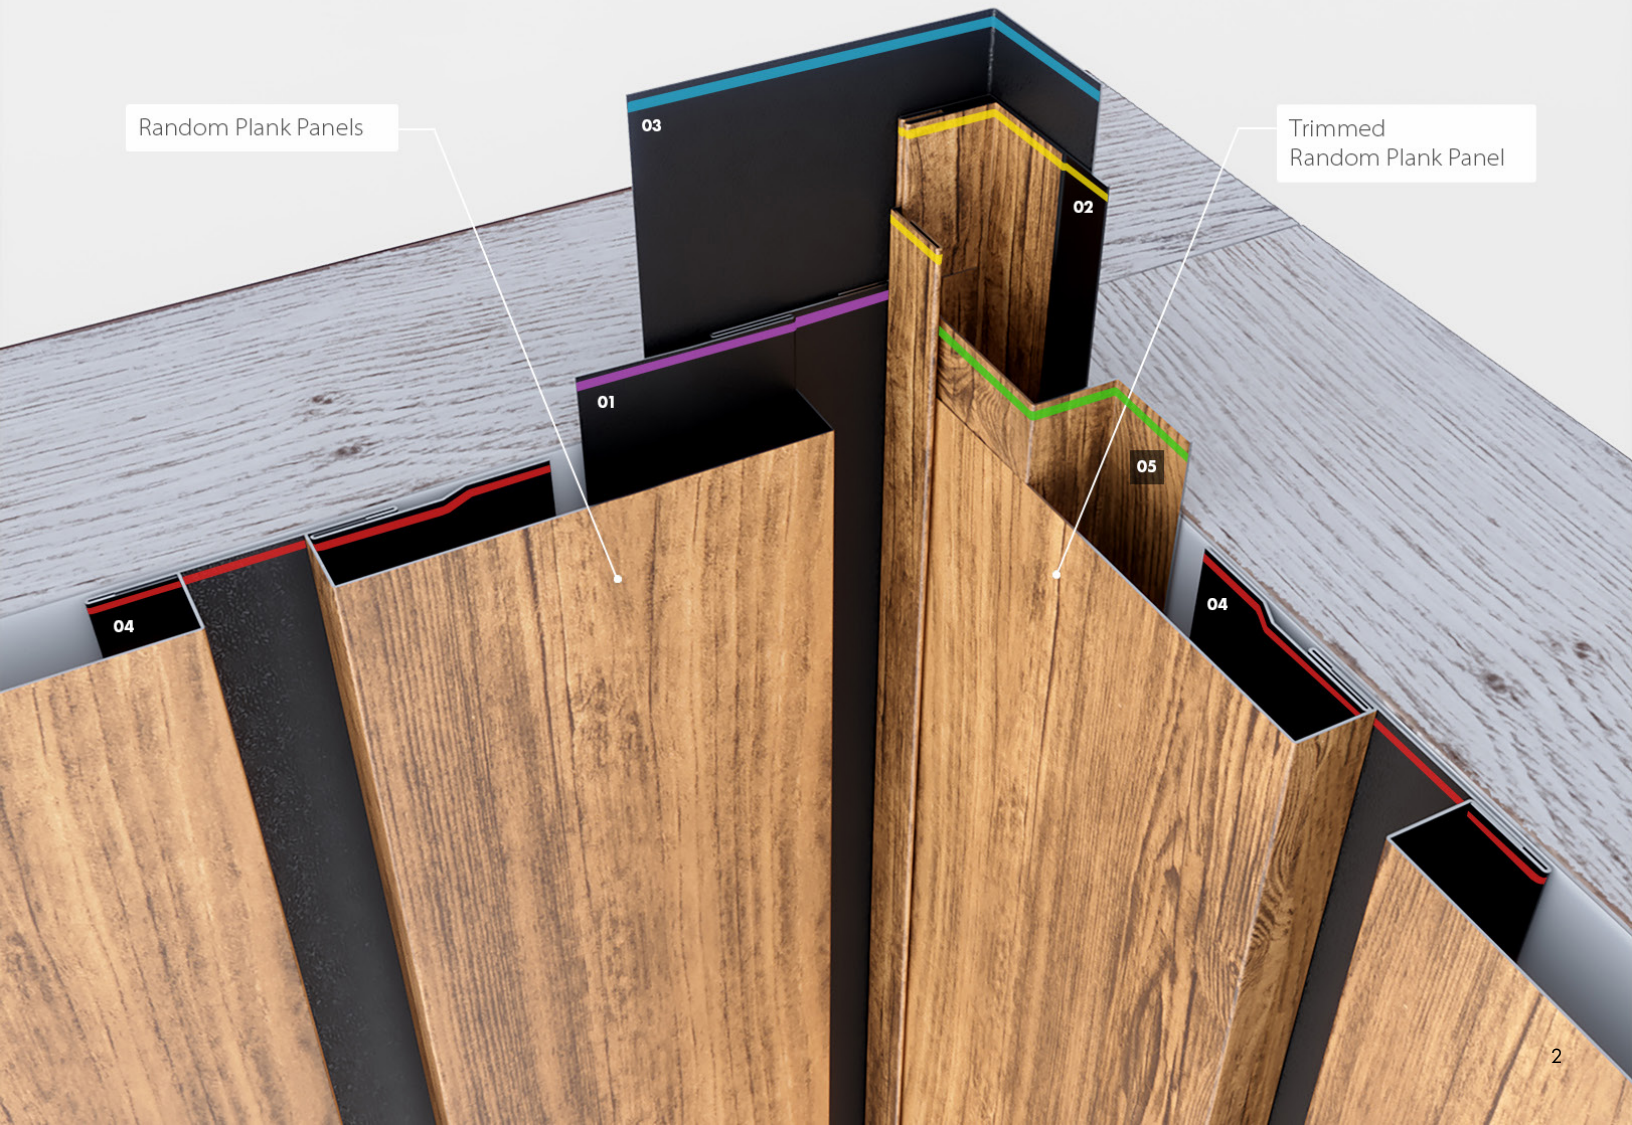

INSIDE END START



**INSIDE END START**  
COMPONENTS

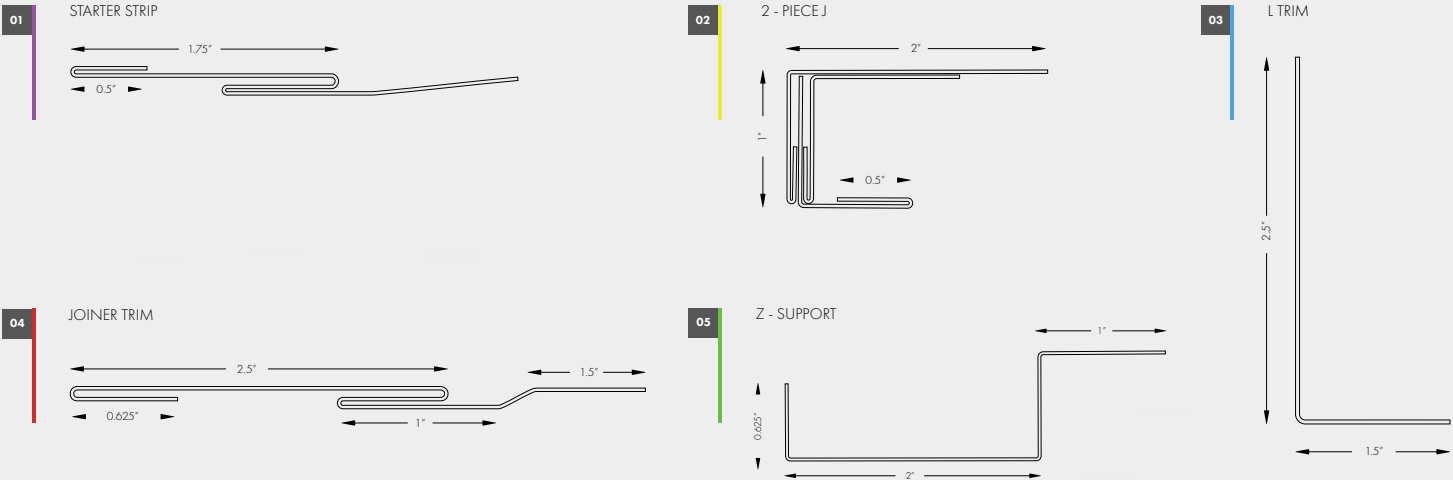



- This corner detail is referred to as an Inside End Start corner, or more plainly, a corner where your Random Plank ends and you need to start again in another direction. To begin your End Start corner, measure & cut an Inside L-Trim to fit. The L-Trim is reversible, so place the longer side on the wall where you want your 1" reveal to show. You do not have to attach the L-Trim yet as you will be placing another trim section overtop of the L-Trim.

01



- Next, measure the length that your Two-Piece J-Channel needs to be from end to end to fit in the corner. You can cut the J using one of the methods shown at the beginning of this guide. Once the Two-Piece J is cut, slide the Top J Insert out of the Bottom J receiver and place it in front of the Inside L-Trim.

02



- Push firmly on the Bottom J Receiver and the L-Trim to make sure they are snugly in place in the corner. Next, fasten both trims to the substrate with the appropriate wood or metal screws. Ensure you screw through both layers of the Bottom J Receiver and the L-Trim.

**03**

- The next step is to measure, cut, and attach the Z-Support. This trim is used as supplementary support for the Random Plank, as you will need to trim the Random Plank edge to ensure it cleanly ends in the corner. Push the Z-Support firmly against the Bottom J Receiver and fasten to the substrate.

**04**



- You will need to measure the distance between the outside Joiner Trim and the inside edge of the Bottom J Receiver. This is the distance your trimmed Random Plank will need to cover.

**05**

- The trimmed Random Plank then slides into the hem on the end of the last Joiner Trim and sits flat on the Z-Support. The Random Plank is then fastened using Stainless Steel Rivets.

**06**



- Once the trimmed Random Plank is in place and secured, install the Top J Insert. With a mallet or non-marring object, gently tap into place, ensuring not to scratch or damage the J.

07

**STARTER STRIP**

Set Starter Strip in place snugly against the Two-Piece J.  
This will give you a 1" reveal of the Joiner colour.



- This image shows the already measured & cut Starter Strip sliding into place. Ensure your Starter Strip is aligned with the top of your Two-Piece J-Channel. Once aligned, the Starter Strip can be fastened to the substrate through the angled flange using the appropriate wood or metal screws.

08



- Once your Starter Strip is installed, slide your first Random Plank into place. In this case, you will pull or push the Random Plank snug against the inside of your Starter Strip.

**09**

\*When installing Random Plank, always be cautious not to pull the Random Plank panels too tight. Doing this could cause distortion of the panel.



- Next, slide the Joiner Trim underneath the Random Plank and pull back until it catches the hem on the inside of the Random Plank. Gently pull the joiner until it is sitting flush along the length of the Random Plank. Then fasten the Joiner Trim between the hems with appropriate screws. Ensure not to screw through the hem that the next Random Plank needs to slide into.

**10**



- To complete the rest of the installation, continue with the process of installing the Joiner Trims and Random Planks. Continue until you reach your final trim, corner, window, etc.

11