



INSIDE START START




INSIDE START START
COMPONENTS





01

IS CORNER TRIM

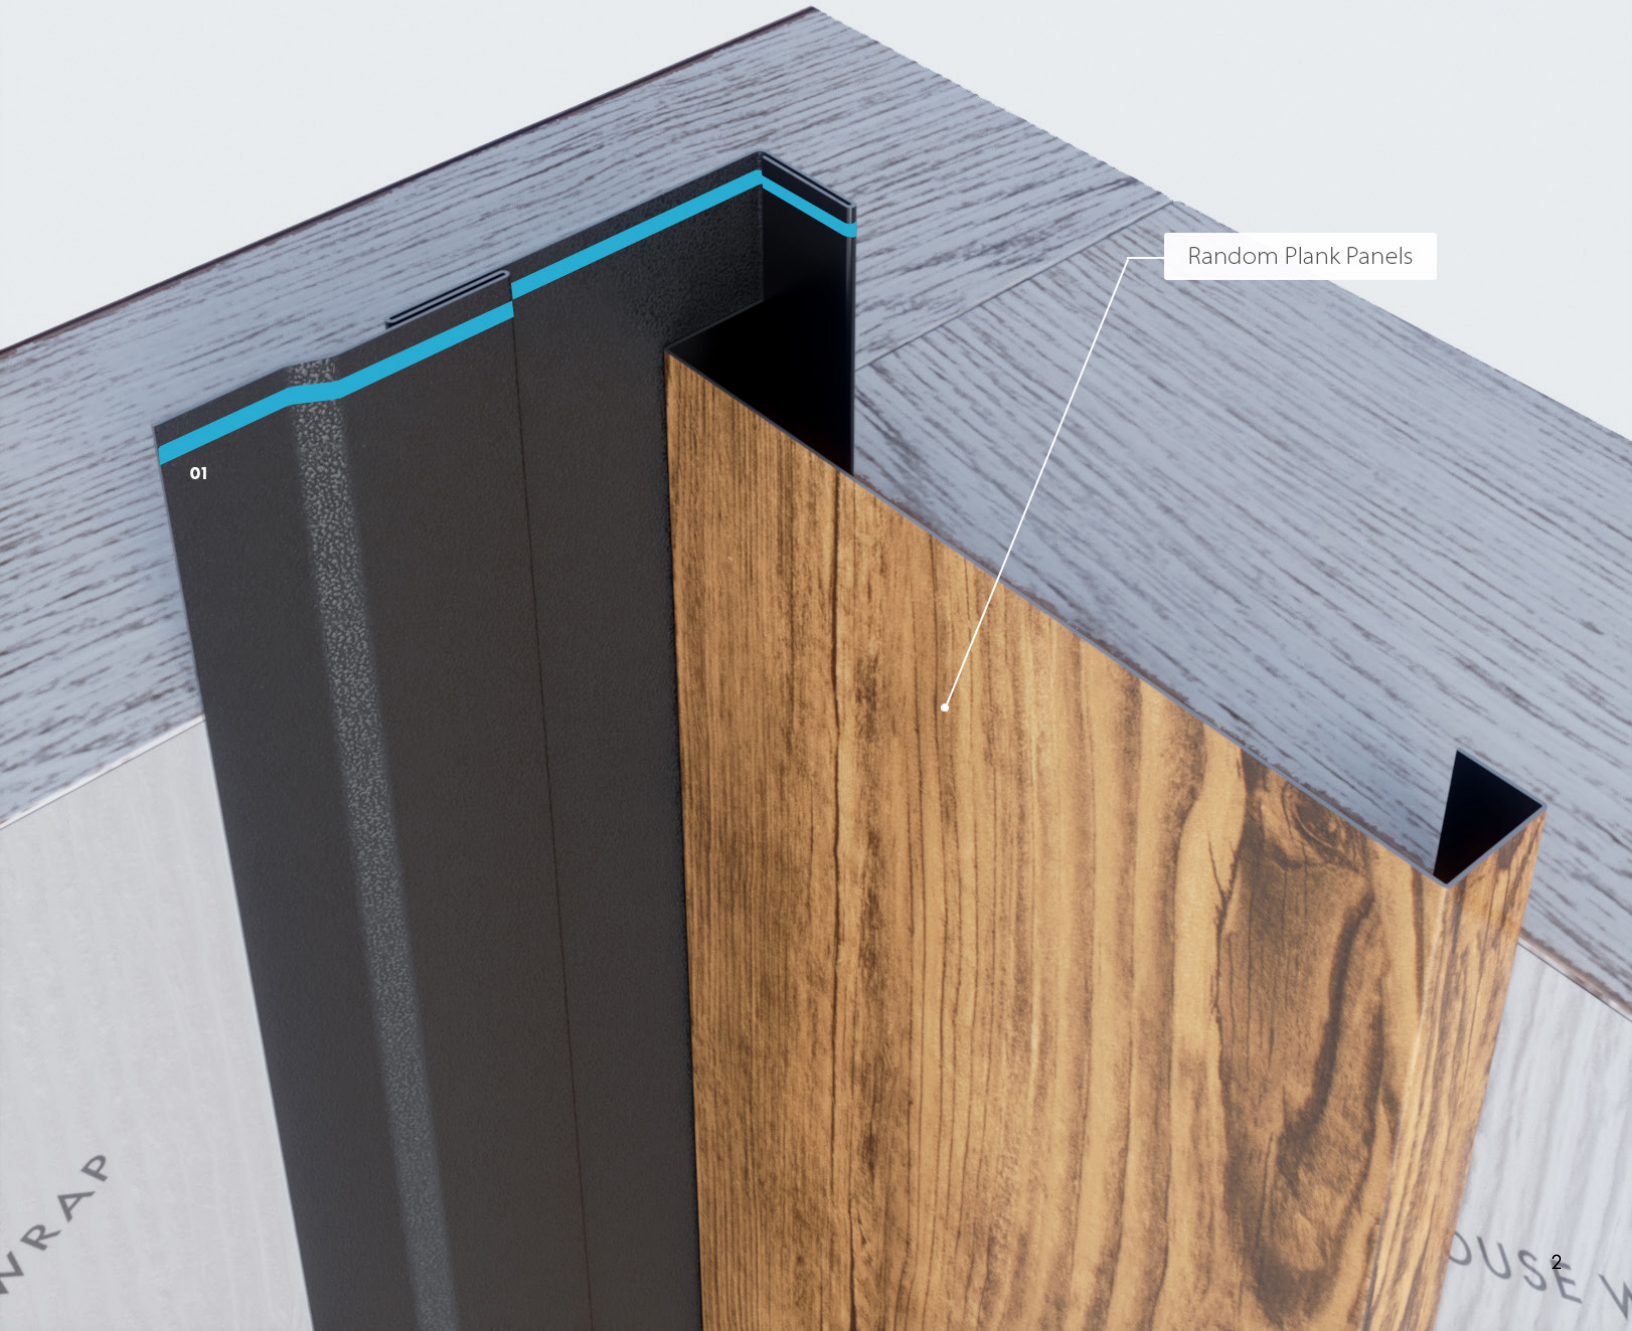

WRAP

HOUSE W

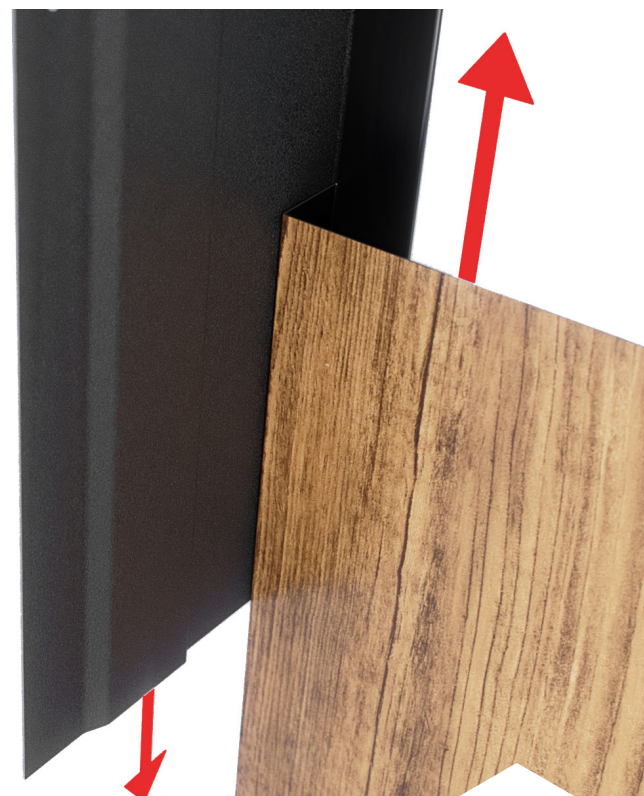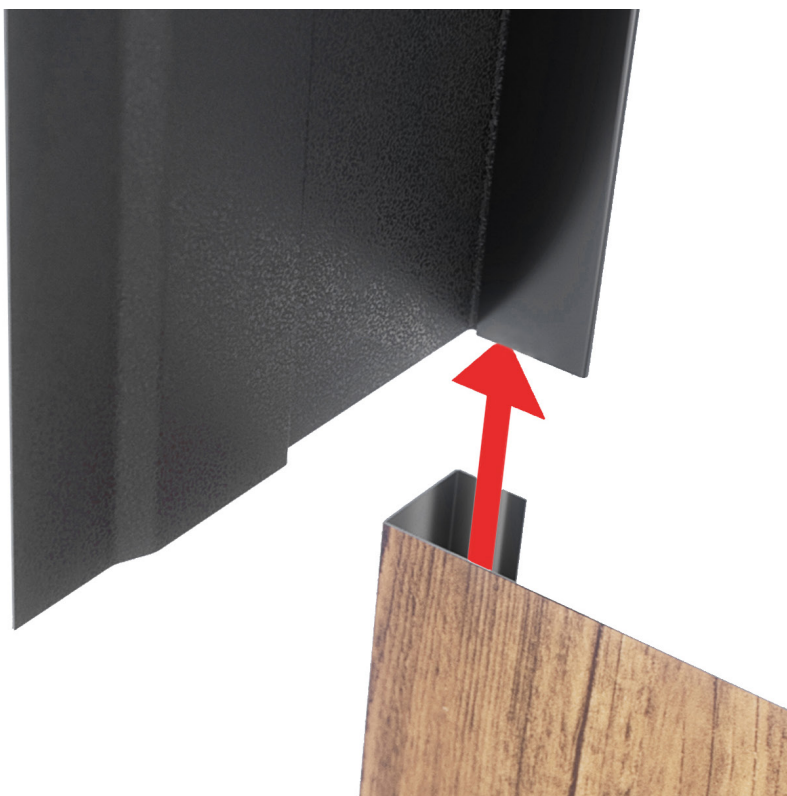


- This corner detail is referred to as an Inside Start Start corner, or more plainly, a corner where your Random Plank starts in two directions at a 90-degree angle. To begin your Inside Start Start corner, measure & cut an Inside Corner Starter Strip and a Random Plank to the height of your wall. The Corner Starter Strip is reversible, so place the longer side on the wall where you want your 1" reveal to show. You will need to slide the Random Plank into the Inside Corner Starter Strip before placing it in the corner.


01

- Push firmly on the Inside Corner Starter Strip and the Random Plank to make sure they are snugly in place in the corner. Next, fasten the Inside Corner Starter Strip to the substrate with the appropriate wood or metal screws. Ensure you screw through the slanted flange and not through the hem where the Random Plank needs to slide into.

02

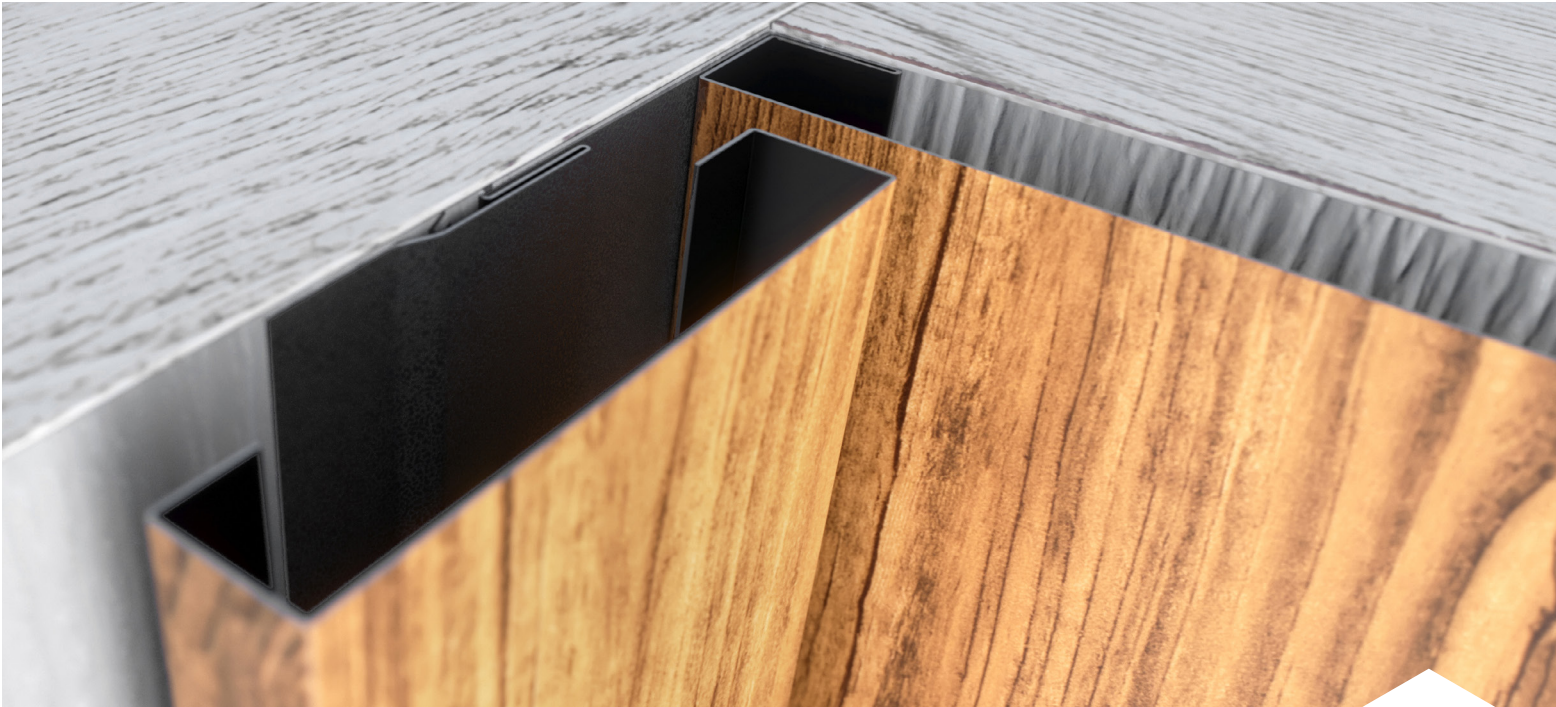


- Once your Starter Strip is installed, slide your first Random Plank into place. In this case, you will pull or push the Random Plank snug against the inside of your Starter Strip.

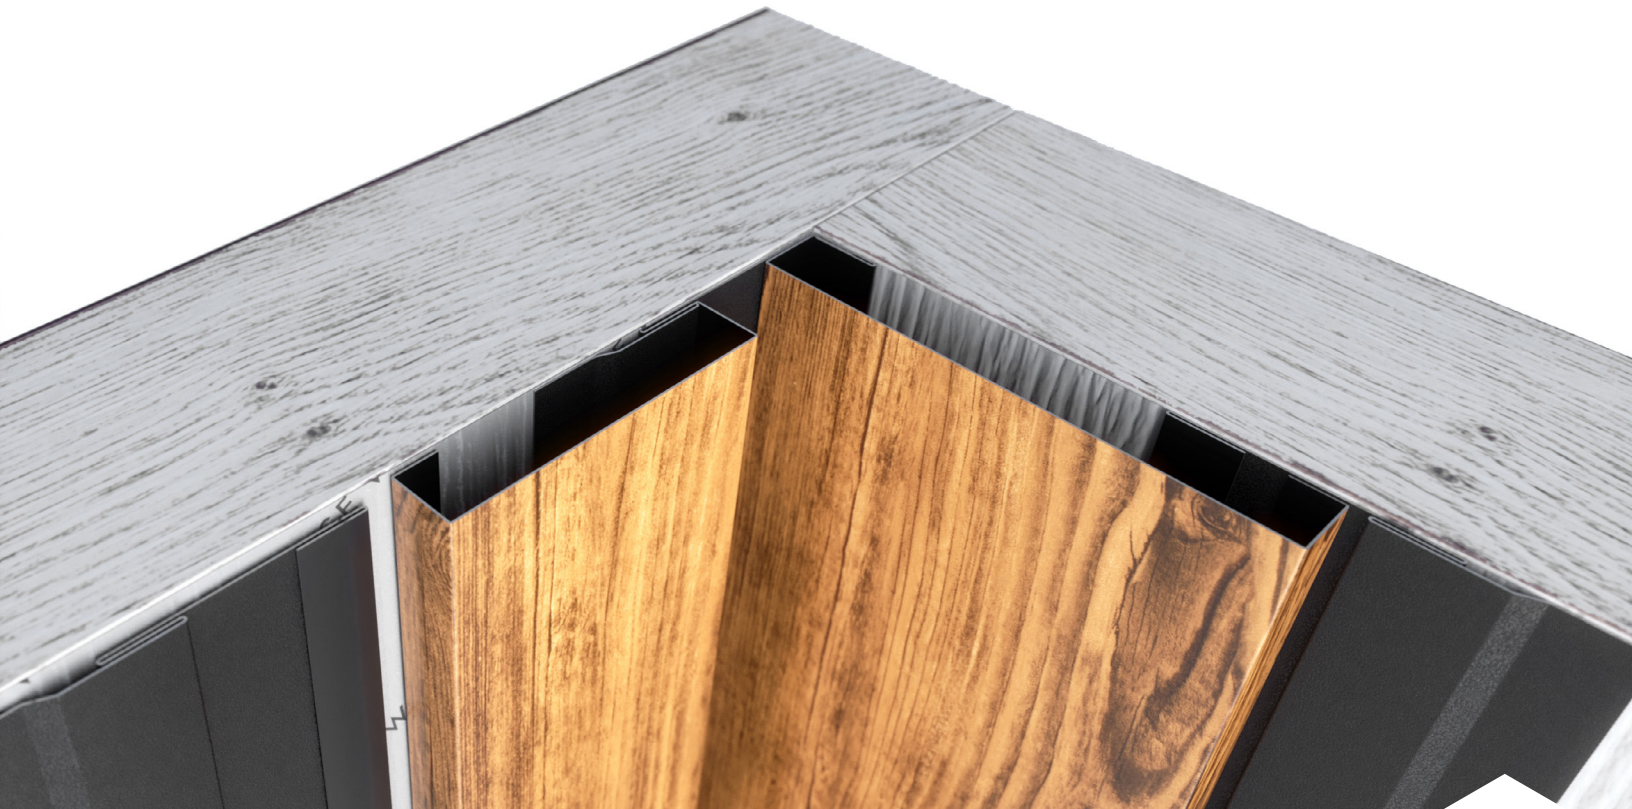03

- Next, slide the Joiner Trims under the Random Planks and pull back until they catch the hems on the inside of the Random Plank.

04

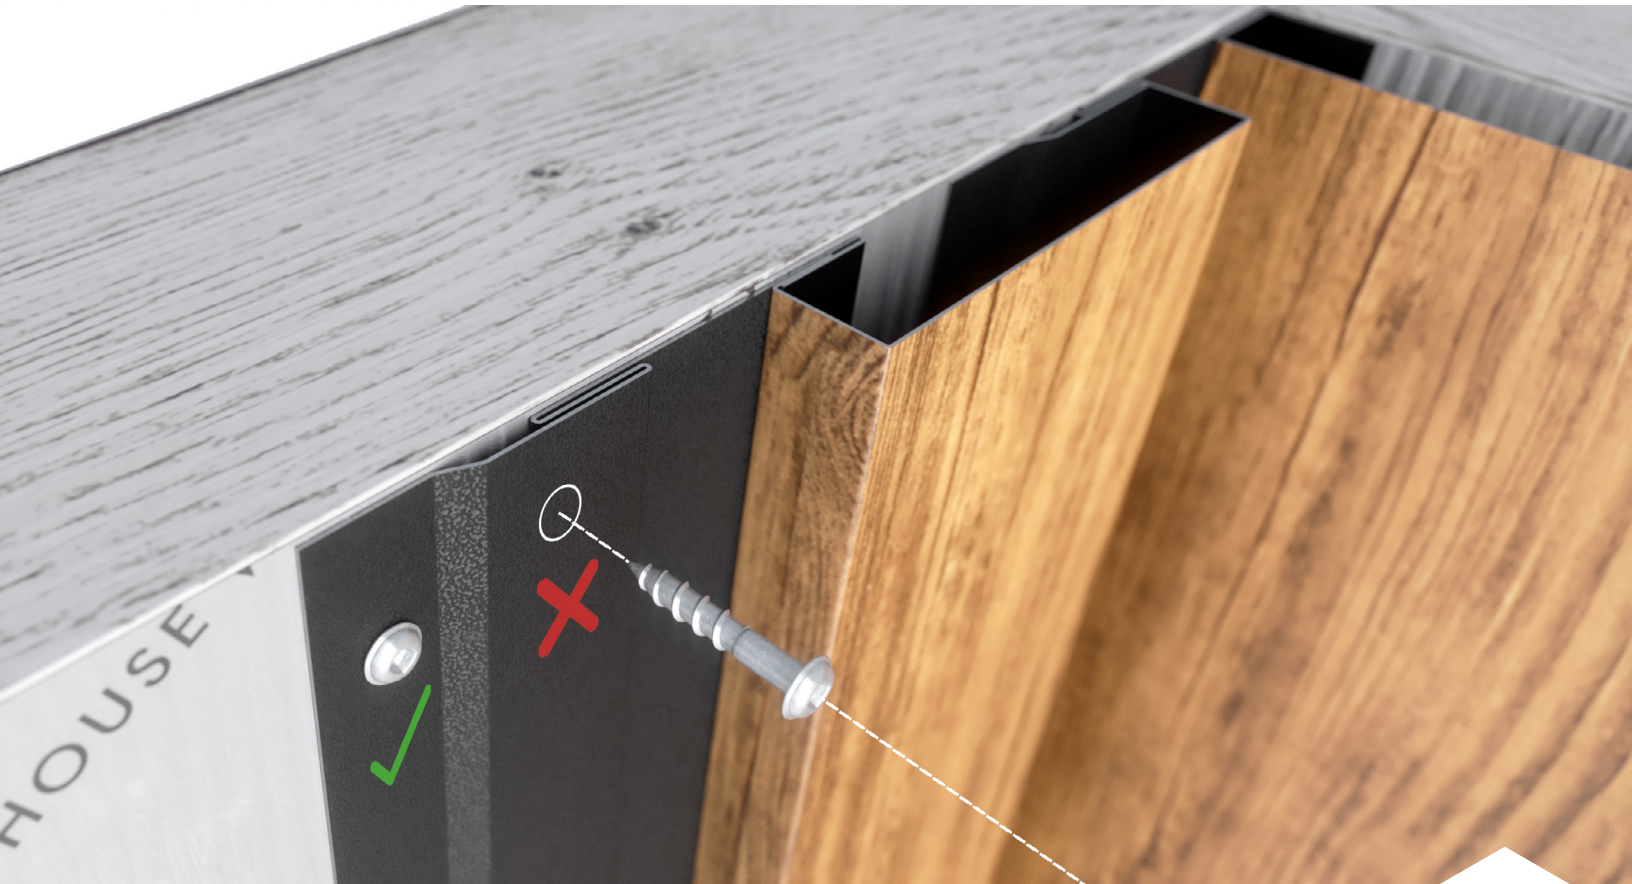

- Gently pull the Joiner Trim until it is sitting flush with the edge of the Random Plank. Then, fasten the Joiner Trim between the hems with the appropriate screws. Be cautious not to screw through the hem that the next Random Plank needs to slide into.

05

- To complete the rest of the installation, continue with the process of installing the Joiner Trims and Random Planks. Continue until you reach your final trim, corner, window, etc.

06