


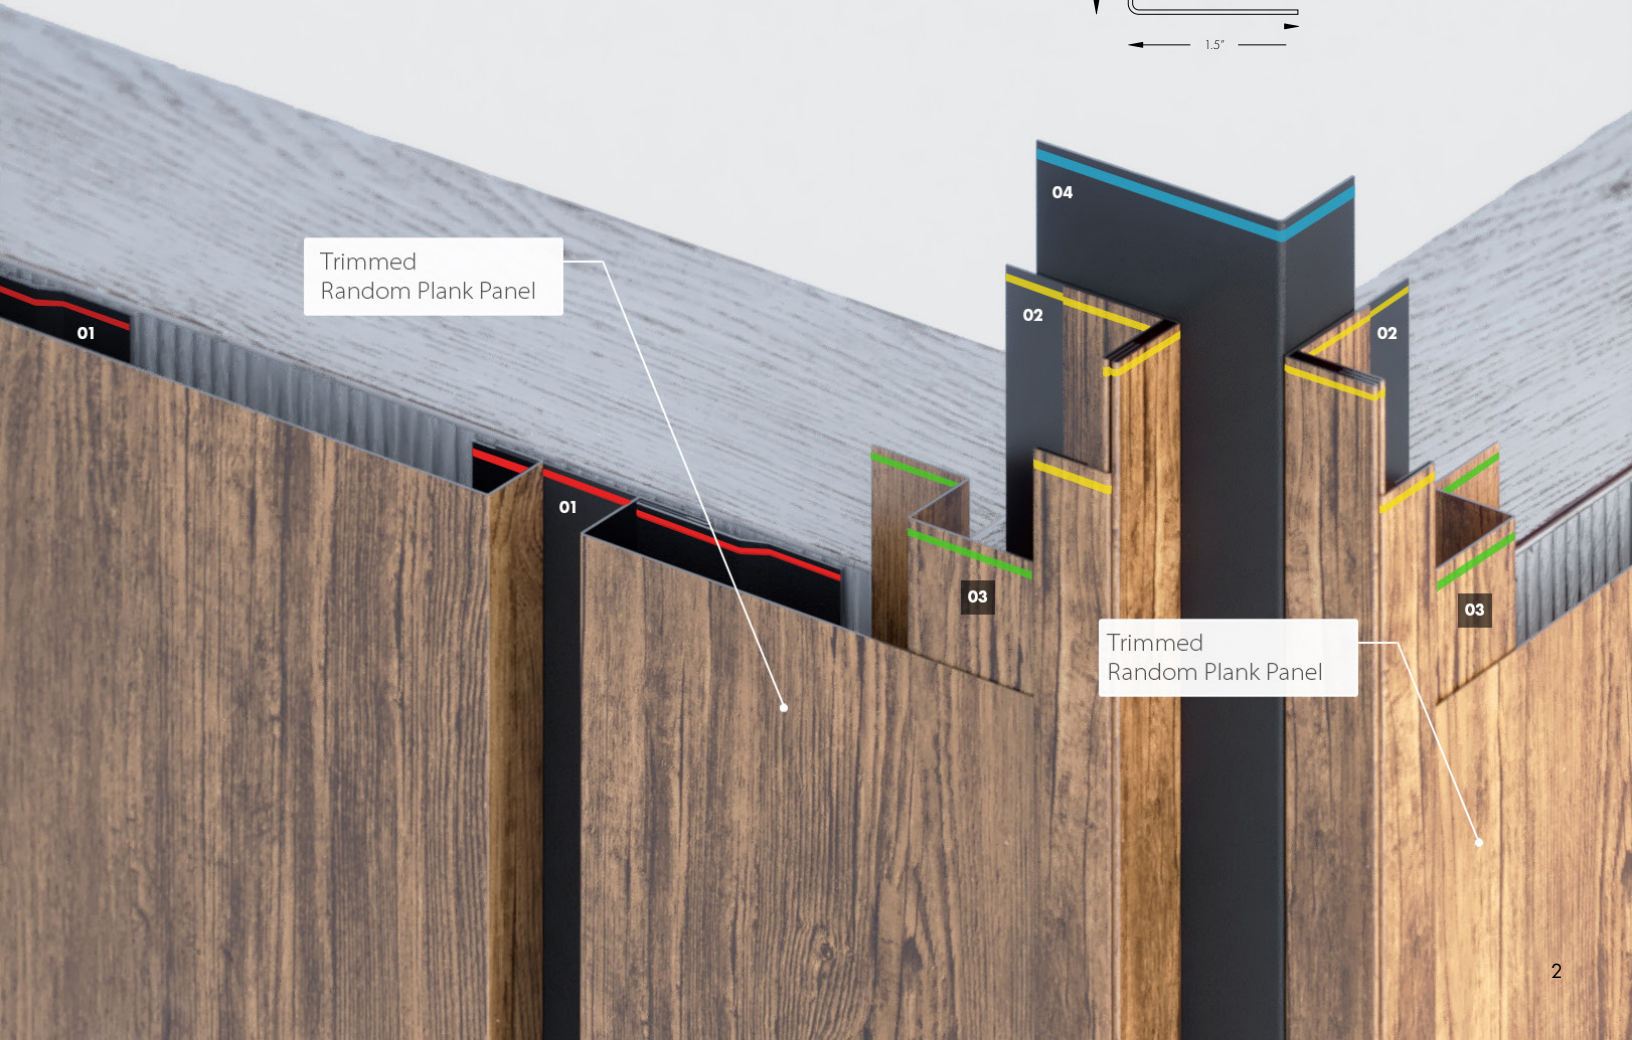
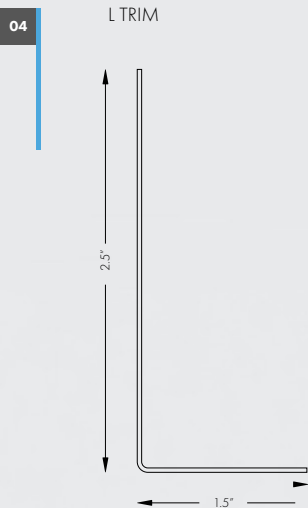


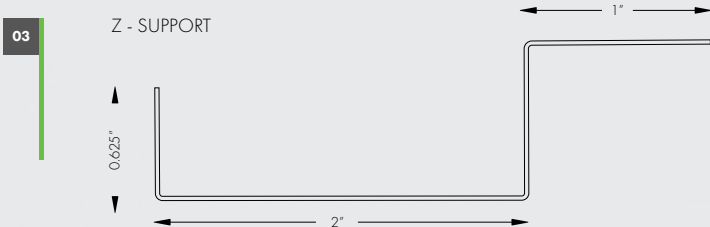

OUTSIDE END END

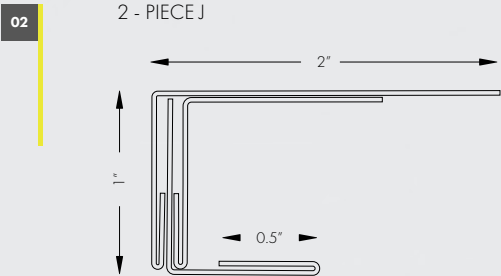

OUTSIDE END END
COMPONENTS

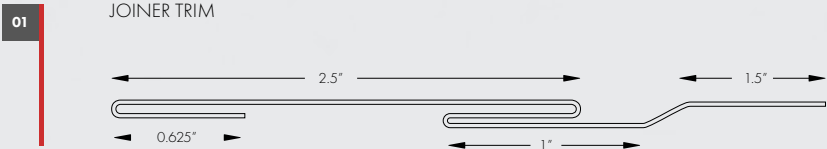



01

- This corner detail is referred to as an Outside End End corner, or more plainly, a corner where your Random Plank ends from both directions. To begin your End End corner, measure and cut an Outside L-Trim to the height of your wall. The L-Trim is reversible, so place the longer side on the wall where you want your 1" reveal to show. You do not have to attach the trim yet as you will be placing another trim section overtop of the L-Trim.



02

- Next, measure & cut your Two-Piece J-Channel to the same height as the L-Trim. You can cut the J-Channel using one of the methods in the cut guide shown at the beginning of this guide. Once the Two-Piece J is cut, slide the Top J Insert out of the Bottom J Receiver and place Bottom J in front of the L-Trim. Push firmly on the Bottom J Receiver and the L-Trim to make sure they are snugly in place on the corner. Next, fasten both trims to the substrate with the appropriate wood or metal screws. Ensure you screw through both layers of the Bottom J Receiver and the L-Trim.



- The next step is to measure, cut, and attach the Z-Support. This trim is used as a supplementary support for the Random Plank as you will need to trim the Random Plank edge to ensure it cleanly ends in the corner. Push the Z-Support firmly against the Bottom J Receiver and fasten to the wall.

03

- Next, measure the distance between the exposed Joiner Trim and the inside edge of the Bottom J Receiver. This is the distance your trimmed Random Plank will cover.

04

**TERMINATE**

This is your trimmed Random Plank
The inside edge of the Random Plank is now without a folded edge
to allow it to sit flat against the Z-Support

- Using one of the outlined cutting methods at the beginning of this guide, trim your Random Plank to the width that you measured in the previous step. The trimmed Random Plank then slides into the hem on the end of the last Joiner Trim and sits flat against the Z-Support. The Random Plank is then fastened using stainless steel rivets.

05

- Once the trimmed Random Plank is in place and secured, you can install the Top J Insert. With a mallet or nonmarring object gently tap into place, ensuring not to scratch or damage the J.

06



- To complete the other side of the corner, measure and leave a 1" gap from the corner, then push the Bottom J Receiver in firmly and fasten to the substrate with the appropriate wood or metal screws. Ensure you screw through both layers of the Bottom J Receiver and the L-Trim.

07

- Measure, cut, and attach the Z-Support. Push the Z-Support firmly against the Bottom J Receiver and fasten to the wall.

08



- Next, measure the distance between the exposed Joiner Trim and the inside edge of the Bottom J Receiver. This is the distance your trimmed Random Plank will cover. Using any one of the outlined methods in the cutting guide at the beginning of this guide, trim your Random Plank to the correct width.

09


- The trimmed Random Plank then slides into the hem on the end of the last Joiner Trim and sits flat on the Z-Support. The Random Plank is then fastened using stainless steel rivets.

10



- Once the trimmed Random Plank is in place and secured, reinstall the Top J Insert. With a mallet or non-marring object gently tap into place, ensuring not to scratch or damage the J.

11

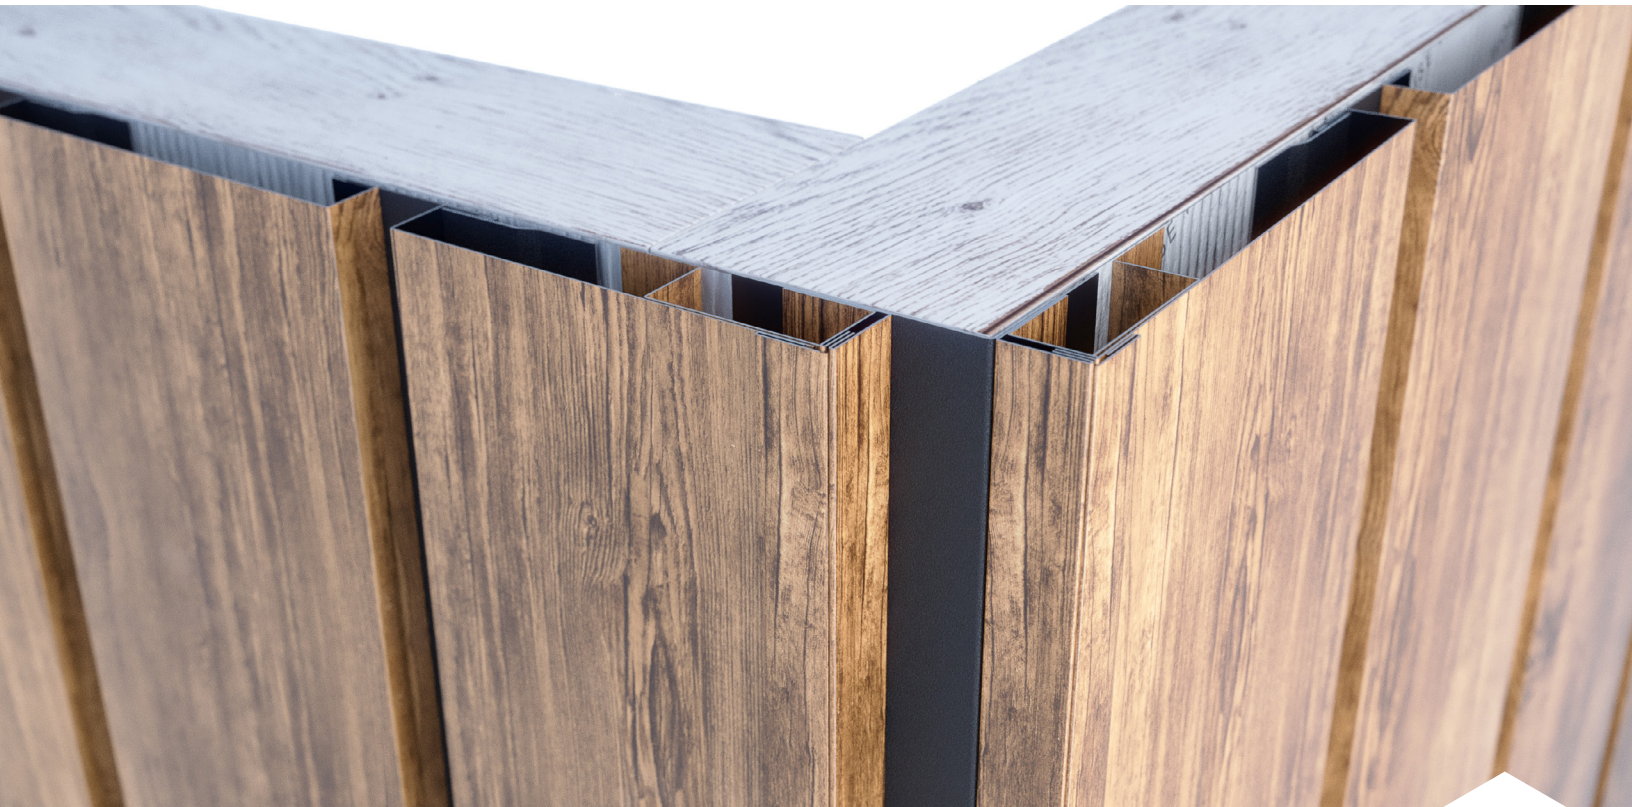

- Your Outside End End Corner is now complete & will appear virtually seamless with a 1" reveal when complete.

12