



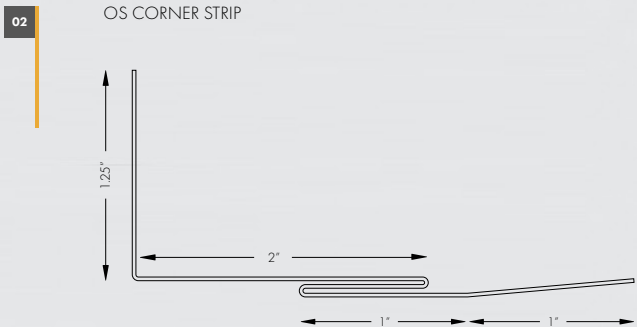

OUTSIDE START END

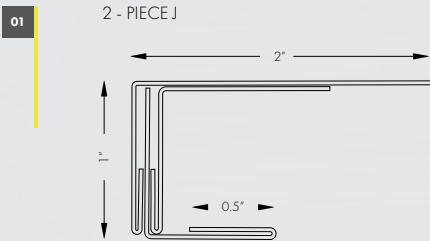

OUTSIDE START END
COMPONENTS





- This corner detail is referred to as an Outside Corner End Start, or more plainly, a corner where your Random Plank ends and starts in two different directions on a 90-degree angle. To begin your Outside Corner End Start Corner, measure & cut one Outside Corner Starter Strip to length for your project. The OS Corner Starter Strip is reversible, so place the longer side on the wall where you want your 1" reveal to show. Attach to substrate with the appropriate wood or metal screws.

01



- Next, measure the distance your Two-Piece J-Channel needs to be from end to end to fit the height of the wall. You can cut the J using one of the methods in the cut guide shown at the beginning of this guide. Once the Two-Piece J is cut, slide the Top J Insert out of the Bottom J Receiver and place in front of the Outside L-Trim. Next, fasten both trims to the substrate with the appropriate wood or metal screws. Ensure you screw through both layers of the Bottom J Receiver and the L-Trim.

02



- The next step is to measure, cut, and attach the Z-Support. This trim is used as a supplementary support for the Random Plank as you will need to trim the Random Plank edge to ensure it cleanly ends in the corner. Push the Z-Support firmly against the Bottom J Receiver and fasten to the substrate with the appropriate wood or metal screws.

03



- Measure the distance between the exposed Joiner Trim hem and the inside edge of the Bottom J Receiver. This is the distance your trimmed Random Plank will cover.

04

TERMINATION

This is your trimmed Random plank. The inside edge of the Plank is now without a folded edge, to allow it to sit flat against the Z - Support



- Using one of the outlined cutting methods at the beginning of this guide, trim your Random Plank to the width that you measured in the previous step. The trimmed Random Plank then slides into the hem on the end of the last Joiner Trim and sits flat against the Z-Support. The Random Plank is then fastened using stainless steel rivets.

05

- Once the trimmed Random Plank is in place and secured, you can install the Top J Insert. With a mallet or non-marring object gently tap into place, ensuring not to scratch or damage the J.

06



- After the End is installed, you can start in the other direction. To begin, slide your first Random Plank into place. In this case, you will pull or push the Random Plank snug against the inside of your Outside Corner Starter Strip.

07




- Next, slide your Joiner Trim behind your chosen Random Plank. Gently pull the Joiner so it is sitting flush along the length of the Random Plank. Only pull until Joiner is snug. You can then fasten the Joiner Trim between the hems with appropriate screws.

08


SECTION TOP VIEW

● LUX OS CNR STARTER STRIP ● LUX JOINER ● LUX RANDOM PLANK ● LUX 2PC J TRIM ● LUX Z SUPPORT

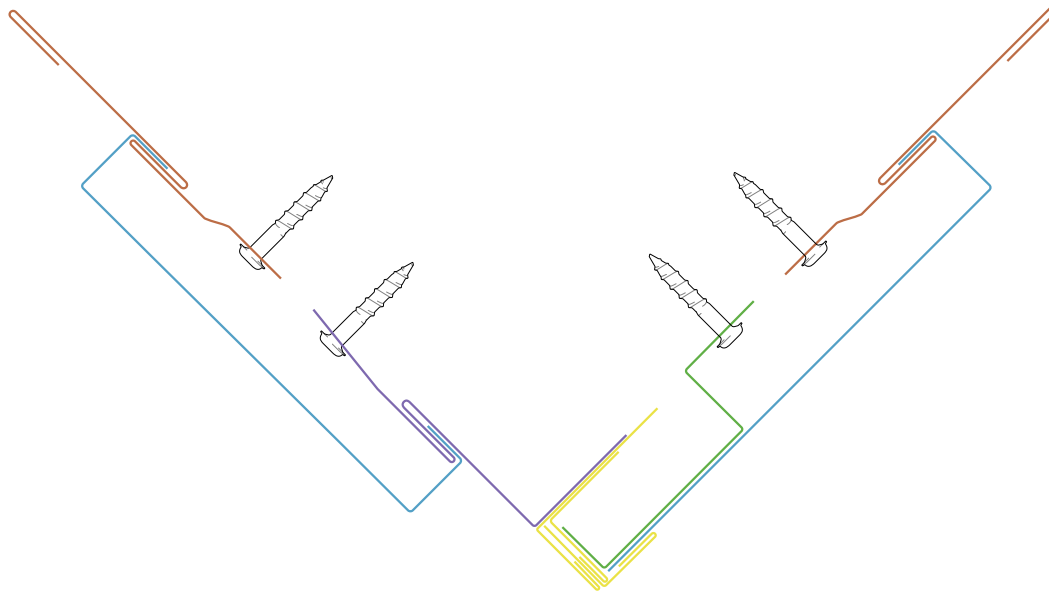

- This illustration of the top view demonstrates how the trims and Random Planks should be joined together.

09

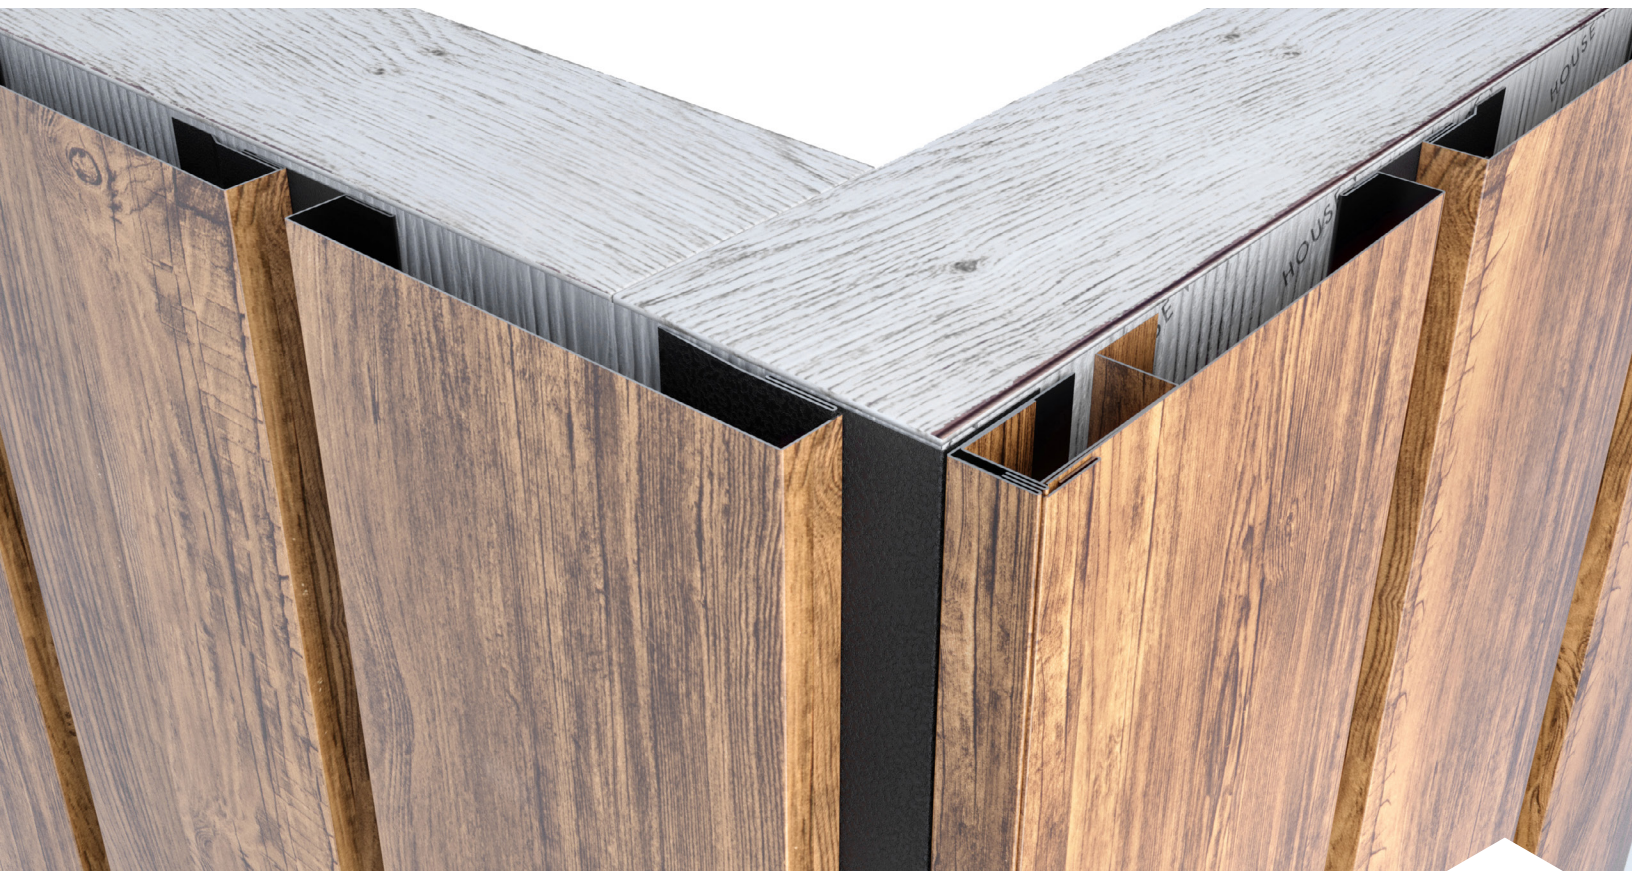

- To complete the rest of the installation, continue with the process of installing the Joiner Trims and Random Planks. Continue until you reach your final trim, corner, window, etc.

10