




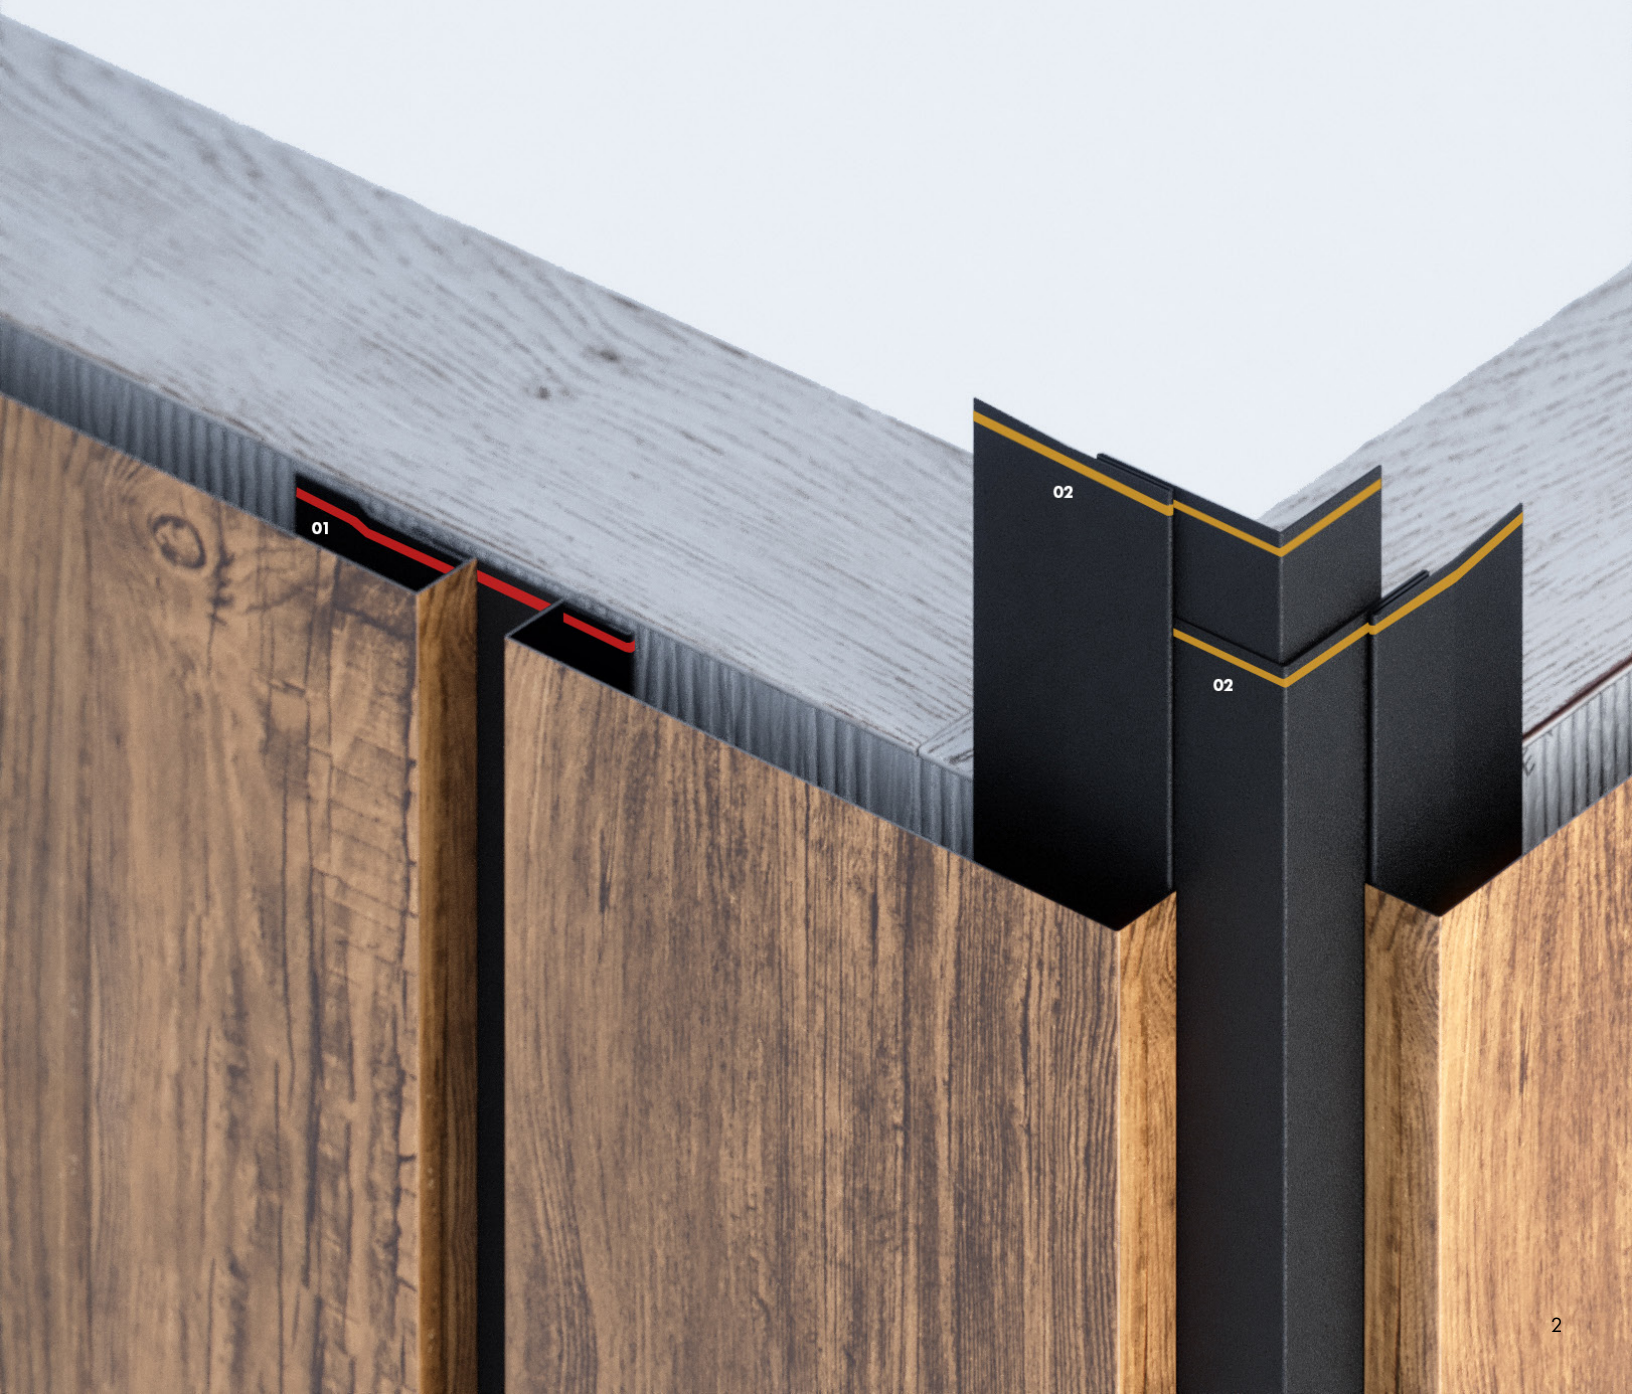

OUTSIDE START START

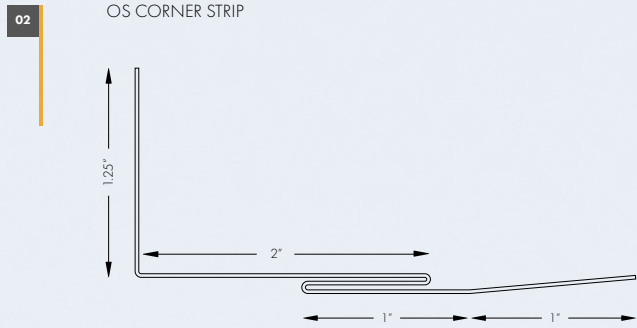

OUTSIDE START START
COMPONENTS

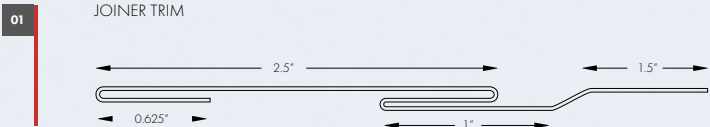



- This corner detail is referred to as an Outside Start Start Corner, or more plainly, a corner where your Random Plank starts in two directions at a 90-degree angle. To begin your OS Start Start Corner, measure & cut two Outside Corner Starter Strips to length for your project. The Corner Starter Strip is reversible, so you can cut two of the same length. Place your first Outside Corner Starter Strip firmly on the corner and attach to the substrate with the appropriate wood or metal screws

01



- Take the second trimmed OS Starter Strip and flip it around. The trims are designed to be long enough to just slip into the other trim's joiner hem. Slide the second OS Starter Strip into the first and press firmly against the corner substrate. Next, fasten the second Outside Corner Starter Strip to the substrate with the appropriate wood or metal screws.

02



- After your OS Starter Strips are installed, slide your first Random Plank into place. In this case, you will pull or push the Random Plank snug against the inside of your Starter Strips.

03



- Repeat the last step with your chosen Random Plank size going in the opposite direction.

04




- Next, slide your Joiner Trims behind your chosen Random Planks. Gently pull the joiner so it is sitting flush along the length of the Random Plank. Then fasten the Joiner Trim between the hems with the appropriate screws.

05


SECTION TOP VIEW

● LUX OS CNR STARTER STRIP ● LUX JOINER ● LUX RANDOM PLANK

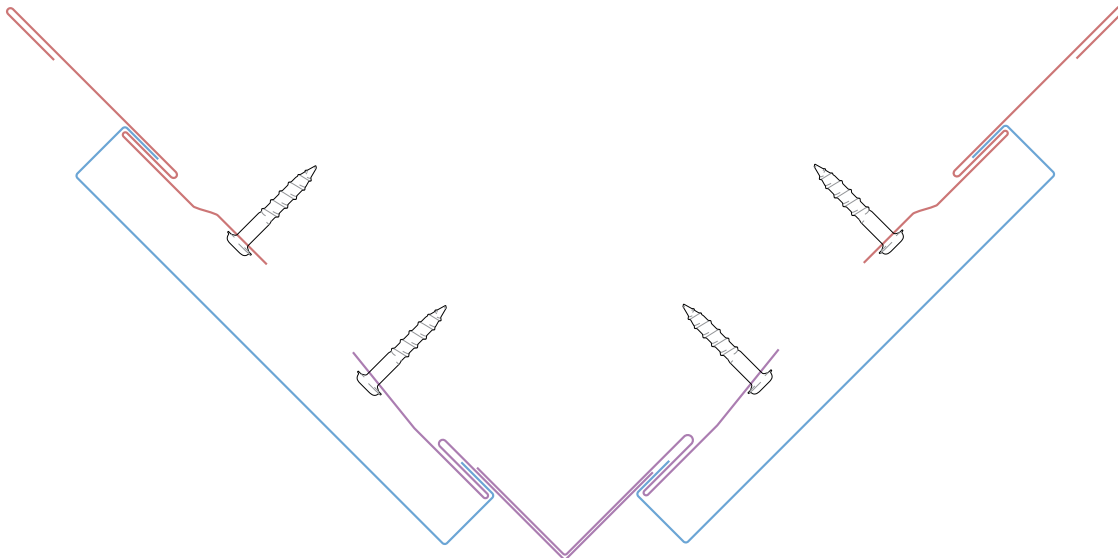

- This is a line drawing to demonstrate how these pieces all fit together from a top view.

06

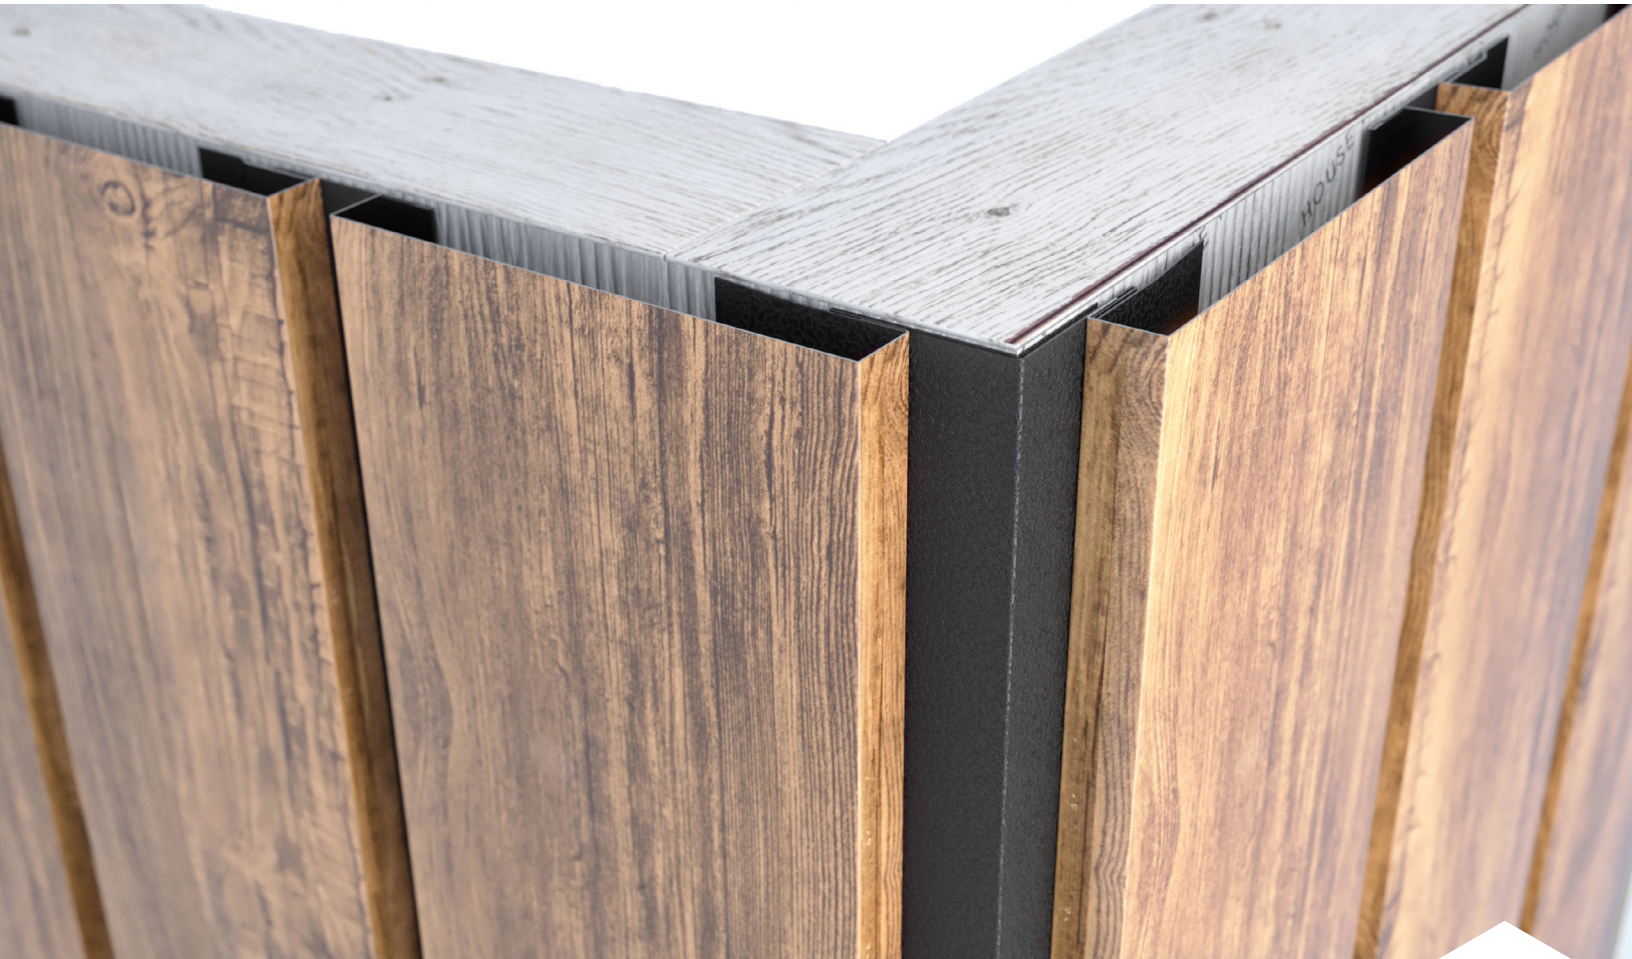

- To complete the rest of the installation, continue with the process of installing the Joiner Trims and Random Planks. Continue until you reach your final trim, corner, window, etc.

07