


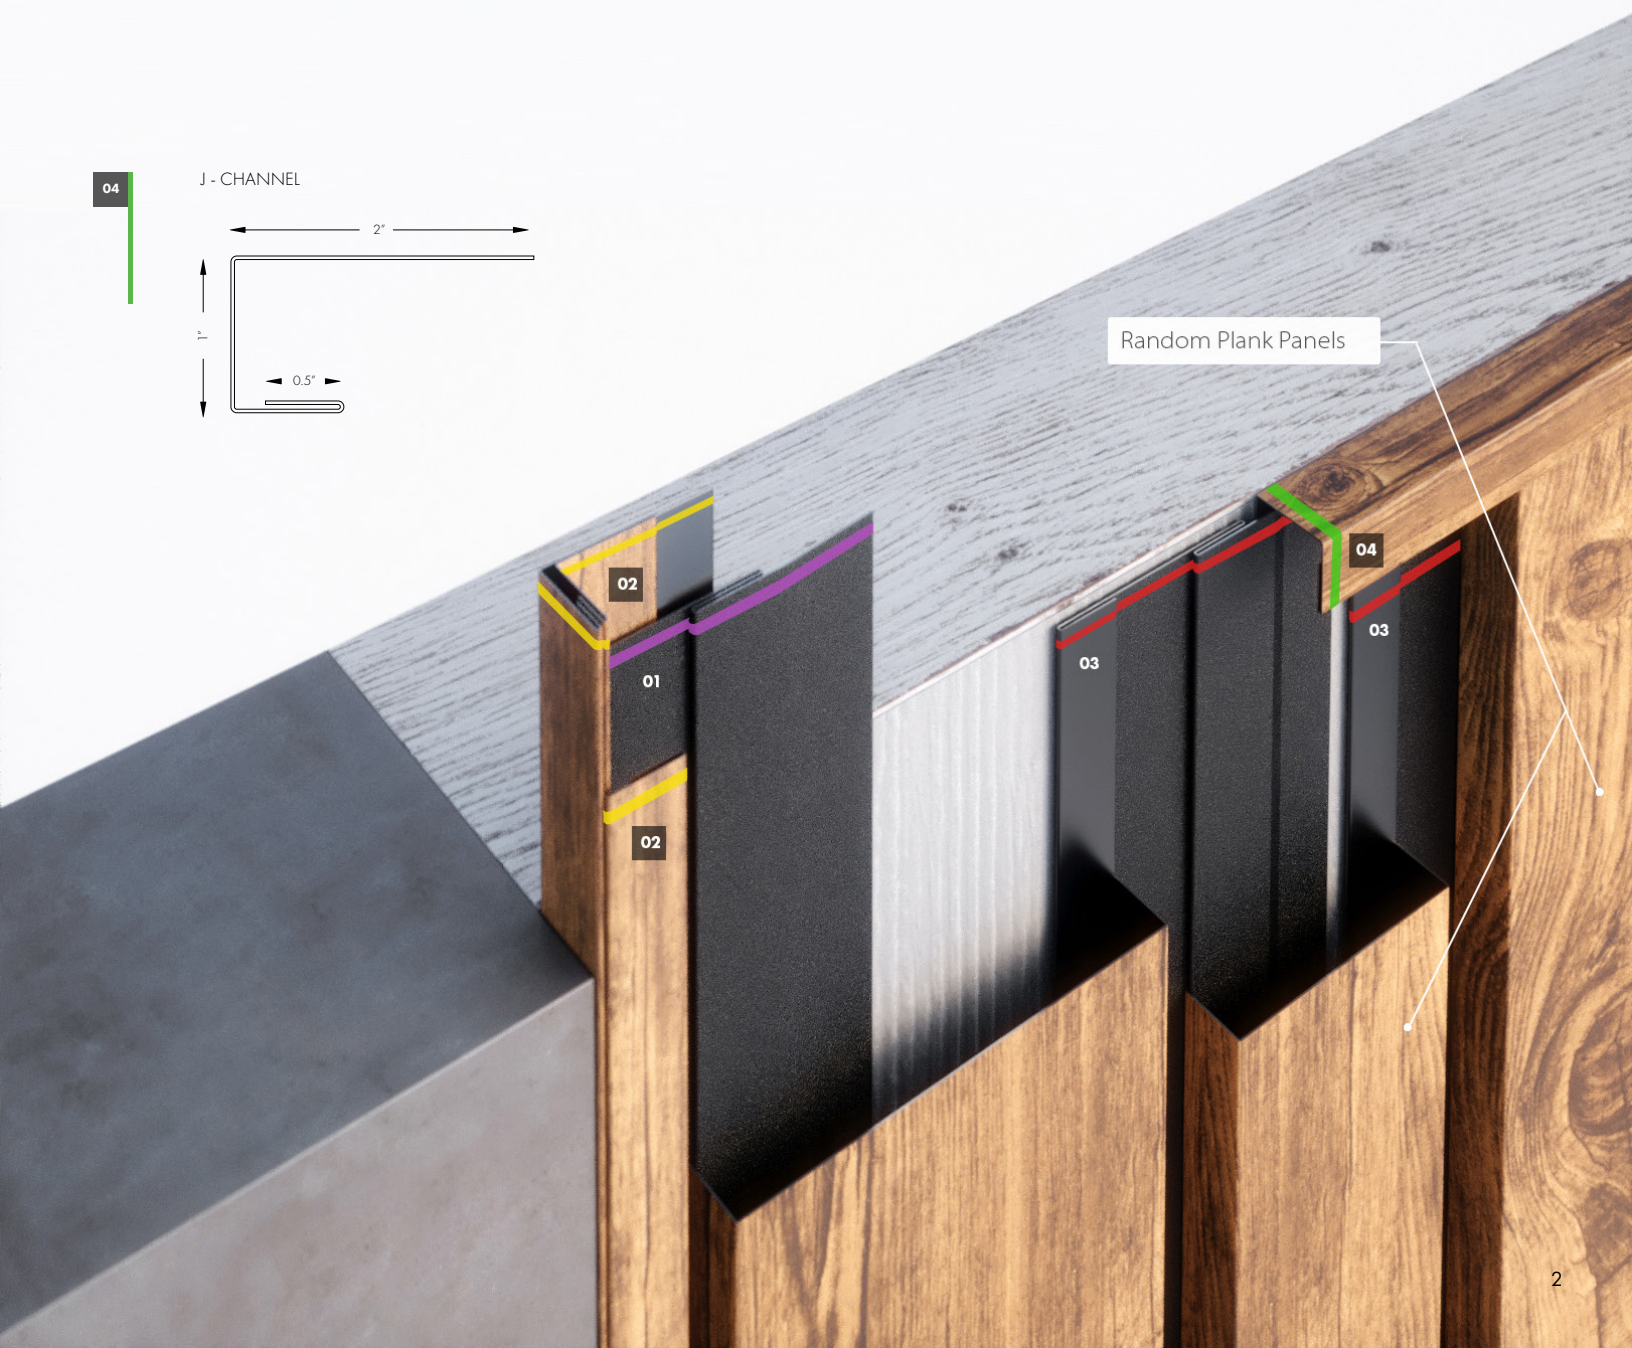
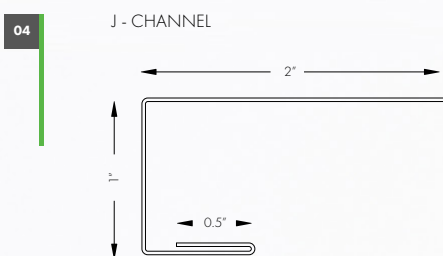


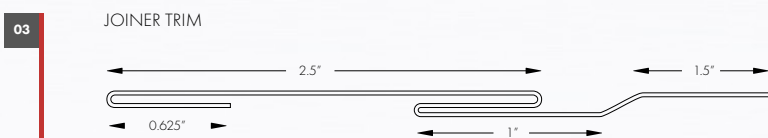


J-CHANNEL
& STARTER

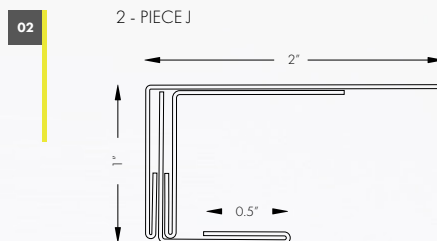

J-CHANNEL & STARTER COMPONENTS

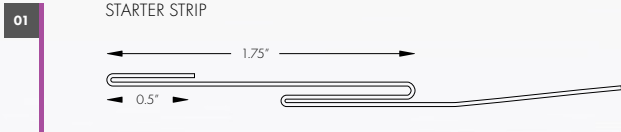

J - CHANNEL & STARTER

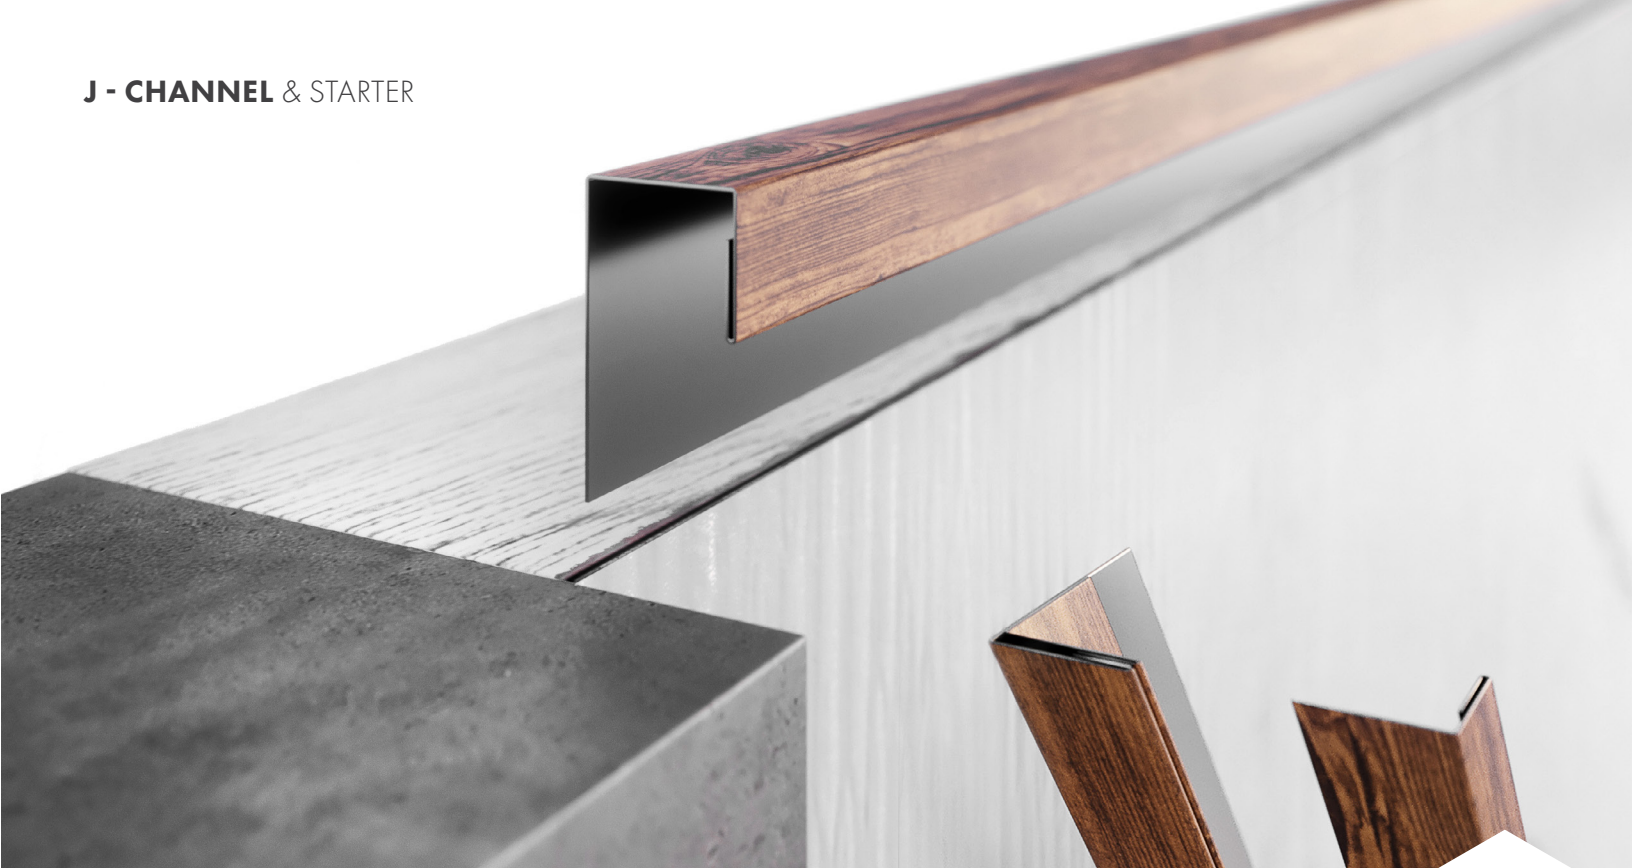

- Here we've chosen to begin our installation with a standard J-Channel at the top of our wall. We will follow that with a Starter Strip to secure our first Random Plank panel, then continue to install the Random Plank panels using Joiner Trims.


01



- Measure the length your J-Channel needs to be, from end to end. You can cut the J-Channel using one of the methods shown at the beginning of this guide. Once cut, slide the J-Channel into place and secure it with the appropriate screws for either wood or metal. The maximum distance you should ever have between screws is 16".

02

*Ensure to follow local building codes for rainscreen requirements when installing. This is just an example and not the only method for installation.

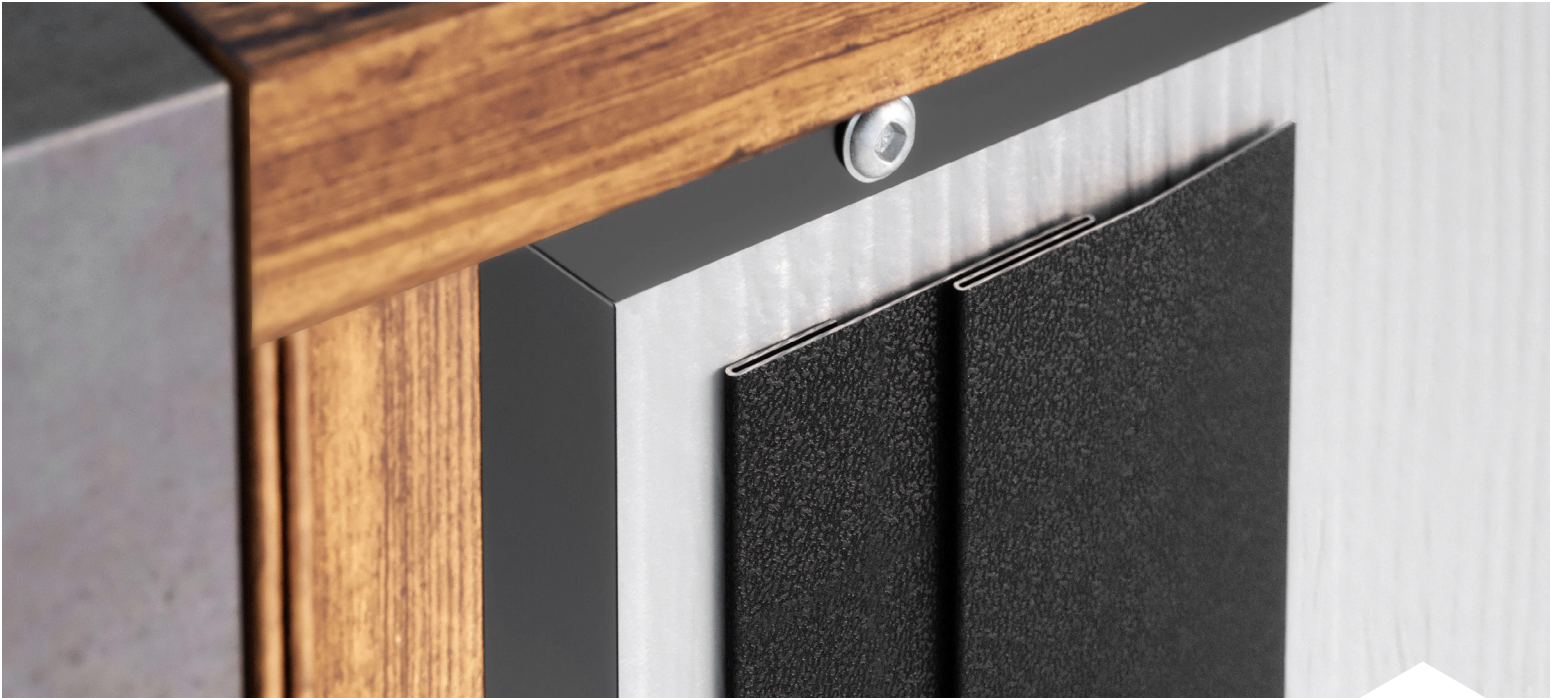**03**

- This image shows the measured & cut Starter Strip sliding into place. Ensure your Starter Strip is aligned tightly against the material your Random Plank is starting next to (for this install, we're starting next to a stucco wall), or against the wall where the Random Plank will be installed.

*An installer trick is to use the L-Trim around a corner to ensure there is a clean, square corner to place the Starter Strip against.

**04**

- The Starter Strip should be nested in your J-Channel, as shown in the illustration, so the Random Plank can be securely fixed inside the J-Channel. Once you have the Starter Strip in place, it can be fastened to the substrate with the appropriate screw on the downward slope (as illustrated above). Be sure to only screw through the downward flange as screwing through the hem may interfere with the Random Plank's placing in the Starter Strip.



- After your J-Channel and Starter Strip have been installed, you can then slide your first Random Plank into place. To do this, you will pull or push the Random Plank snug against the inside of your Starter Strip.

05

*When installing Random Plank always ensure not to pull the Random Plank panels Too tight; doing this could distort the Random Plank. The Random Plank Panels need to be snug only.



- After the Random Plank is secured in the Starter Strip and slid into your J-Channel, you can then slide the first Joiner Trim into place.

06

*Ensure a minimum $\frac{1}{8}$ " of space is left between the top of the Random Plank and the top J-Channel, to allow for expansion and contraction movement.




07

- The Joiner Trim is designed to be slid underneath the Random Plank, then pulled back until it catches the hem on the inside of the Random Plank. Gently pull the Joiner Trim so that it is sitting flush along the length of the Random Plank. You can then fasten the Joiner Trim between the hems with the appropriate screws. Ensure not to screw through the hem that the next Random Plank needs to sit in. Otherwise, it will not fit.

SECTION TOP VIEW

● LUX STARTER ● LUX JOINER ● LUX RANDOM PLANK

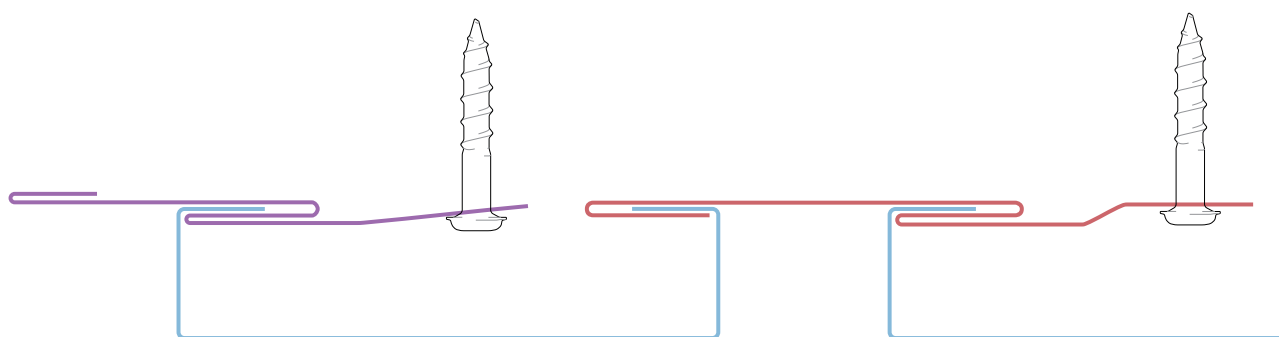

- This top view shows how all the pieces fit together and where to install your screws. You can use the Joiner Trim to pull the Random Plank snug, but do not pull too tight as this could distort the panel. You can then fasten the Joiner Trim between the hems with the appropriate screws. Ensure not to screw through the hem of the Joiner, or through the Joiner too tightly, as it will make it difficult or impossible to fit in your next Random Plank.

08




- Once the Joiner J is secured, choose your next Random Plank to install.

09

*Before placing the Random Plank, check the pattern in relation to the previous and upcoming planks. A trick to creating a more randomized pattern is to flip the panels around - there is no top or bottom to the woodgrain, so you can vary the look by switching them around. There is not a preset method of choosing which Random Plank to use next.

SECTION TOP VIEW

● LUX STARTER ● LUX JOINER ● LUX RANDOM PLANK

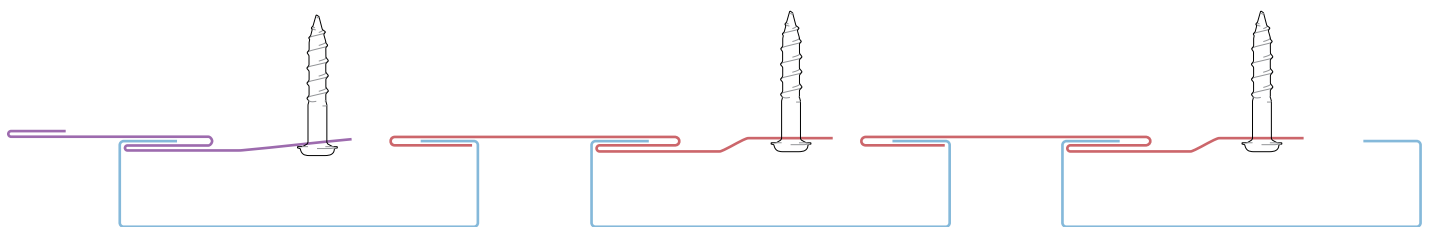

- This top view should help clarify how the panels and trims go together.

10



- Continue to deliberately choose your Random Planks and install them using the same Joiner Trim method until your wall is complete. We'll show you how to end your wall or corner in the upcoming pages.

11



- *Remember: It is important to observe the installation carefully to ensure successful randomization & pattern placement. Preplanning your Random Planks against a wall or on the ground can be helpful to envision the complete installation run.

06