

Changing Sand

Stuff

Written By: Richard Leo Lempicki




Step 1 — Removing Sand





- Place the sand bucket beneath the triangular door
- Unclip the latch but let it hang on the hook so the sand comes out controlled
- Fully unhook the door after a few seconds to let out the rest of the sand
- Unhook the sand tube (black rubber tube) from the gun and blast around the inside of the machine to get extra sand out

Step 2 — Adding sand

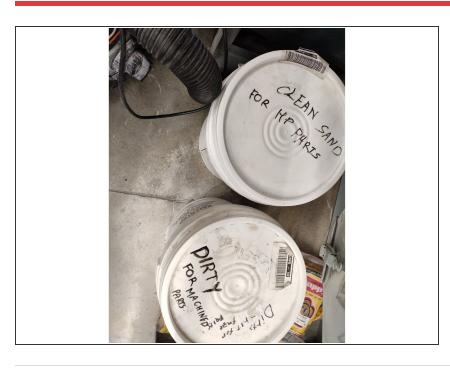

- Close the bottom door
- Open the sand that should be added and put 2-3 scoops in
- Let everything settle and it is ready for use