

dji-fcc-esp32: ESP32-S3 USB host that sends the DJI N1 'FCC patch'


MCU (ESP32-S3-MINI-1) + programming/test pads

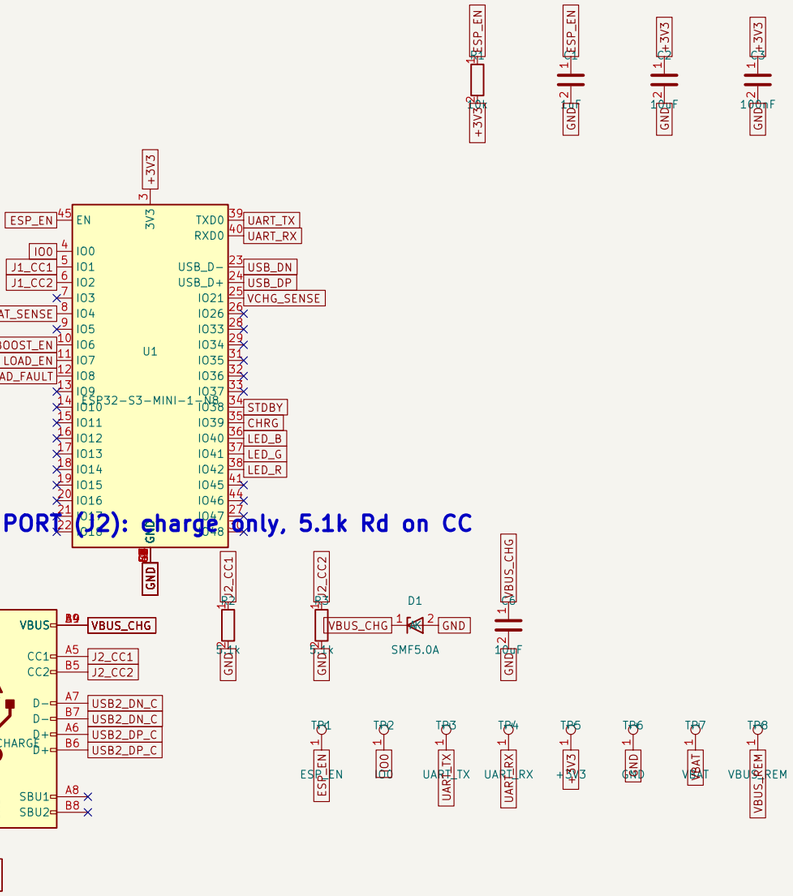


3V3 LDO

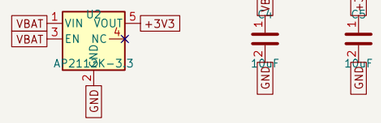

Status RGB LED + battery/charger sense

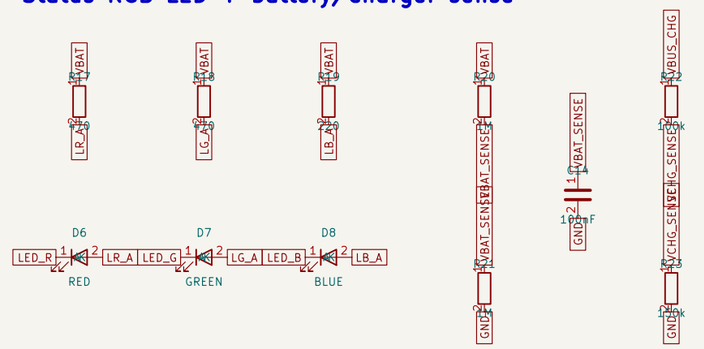


Battery J3 + DW01A/FS8205A protection

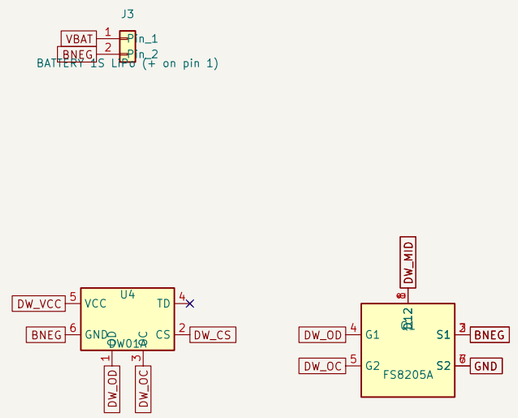


CHARGE PORT (J2): charge only, 5.1k Rd on CC


TP4056 charger (255 mA)

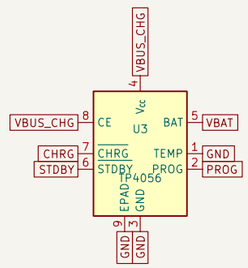

5 V boost (MT3608) + TPS2553 switch (520 mA)

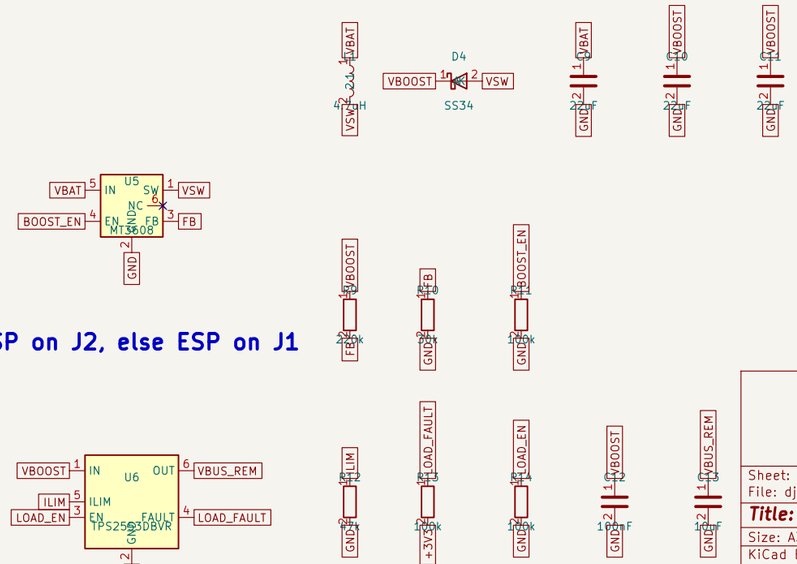

REMOTE PORT (J1): USB host, 5V from boost via current-limited switch

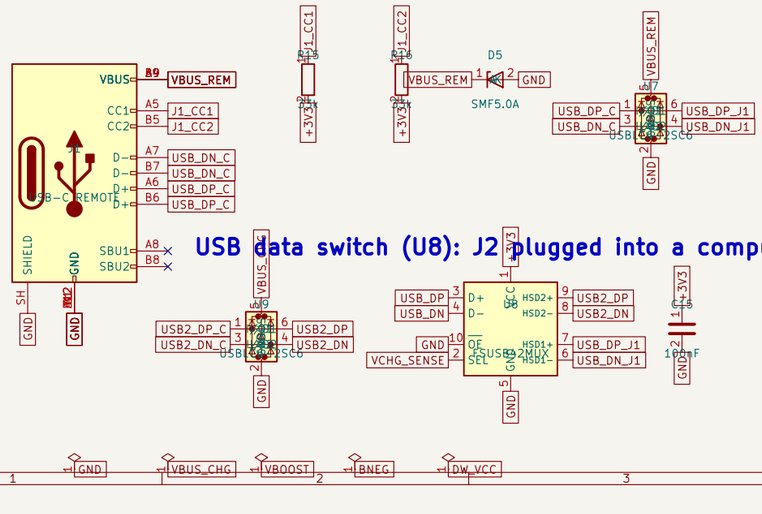

USB data switch (U8): J2 plugged into a computer -> ESP on J2, else ESP on J1

