AI calculator v15 (knockoff shell): LCD position jig (1:1)

Seen from the KEY side, display end up. Print at 100 % (Actual size). Check the 50 mm bar first. Cut along the board edge lines, cut out the grey panel window and the slot. Lay it on the key side, edges on the board's edges and its slot over the board's slot, then drop the panel into the window.

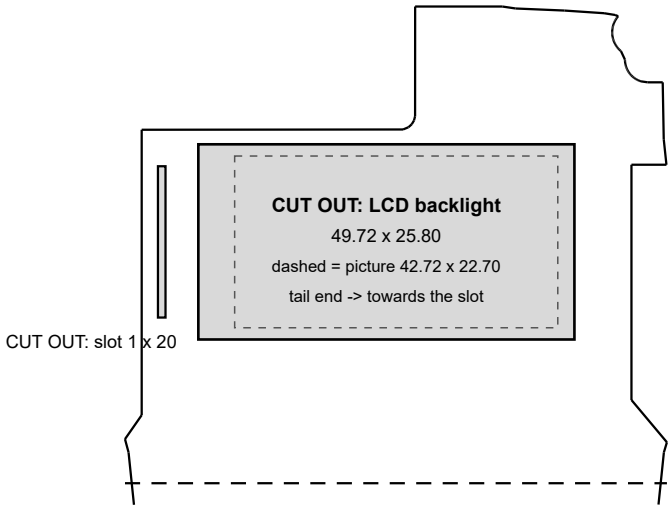

Checks without the jig: panel centred along the slot's 20 mm length (slot centre = panel centre), and its tail-end edge 4.3 mm from the slot's near edge. Then the dry fit through the window decides.

50 mm: measure this bar