

## Ex:12                      Customize Switch with Network Modules

### AIM:

To configure a Cisco switch with additional network modules (such as WLAN modules) and verify their functionality.

### ALGORITHM:

1. **Open Cisco Packet Tracer** and create a new project or open an existing one.
2. **Choose and Add a Modular Switch:**
  - Select a switch that supports network modules (e.g., Cisco 3560).
  - Drag the switch into the workspace.
3. **Power off the Switch:**
  - Right-click the switch and select **Turn Off**.
4. **Access the Switch's Physical Components:**
  - Click on the switch and go to the **Physical** tab.
  - Identify available module slots in the switch.
5. **Add a Network Module:**
  - From the **Physical** tab, drag a network module (such as a **WLAN module**) into an empty slot.
6. **Power On the Switch:**
  - Once the module is inserted, click **Turn On** to power the switch back on.
7. **Verify the Module:**
  - Go to the **CLI** (Command Line Interface) of the switch and use the following commands to verify the new module:


```
Switch# show version  
Switch# show module
```

**8. Configure the Module (Optional):**

- If it's a WLAN module, configure it (e.g., SSID, security settings) as required.
- Example command:

```
Switch# configure terminal  
Switch(config)# wlan ssid MySSID  
Switch(config-ssid)# security wpa2 psk
```

**OUTPUT:**

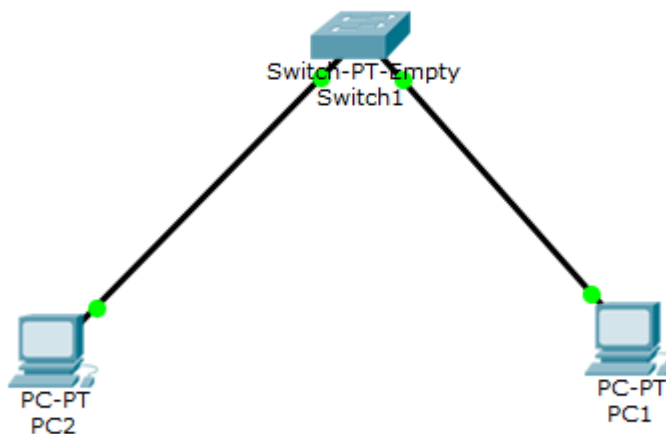

PC1

Physical Config Desktop Custom Interface

**GLOBAL**

Settings

Algorithm Settings

**INTERFACE**

FastEthernet0

**FastEthernet0**

Port Status ☒ On

Bandwidth ☐ 100 Mbps ☐ 10 Mbps ☒ Auto

Duplex ☐ Half Duplex ☒ Full Duplex ☒ Auto

MAC Address 0001.42E2.A3CB

IP Configuration

☐ DHCP

☒ Static

IP Address 192.168.1.2

Subnet Mask 255.255.255.0

IPv6 Configuration

☐ DHCP

☐ Auto Config

☒ Static

IPv6 Address /

Link Local Address: FE80::201:42FF:FEE2:A3CB

PC2

Physical Config Desktop Custom Interface

**GLOBAL**

Settings

Algorithm Settings

**INTERFACE**

FastEthernet0

**FastEthernet0**

Port Status ☒ On

Bandwidth ☐ 100 Mbps ☐ 10 Mbps ☒ Auto

Duplex ☐ Half Duplex ☒ Full Duplex ☒ Auto

MAC Address 0090.2158.A729

IP Configuration

☐ DHCP

☒ Static

IP Address 192.168.1.1

Subnet Mask 255.255.255.0

IPv6 Configuration



☐ DHCP

☐ Auto Config

☒ Static

IPv6 Address /

Link Local Address: FE80::290:21FF:FE58:A729

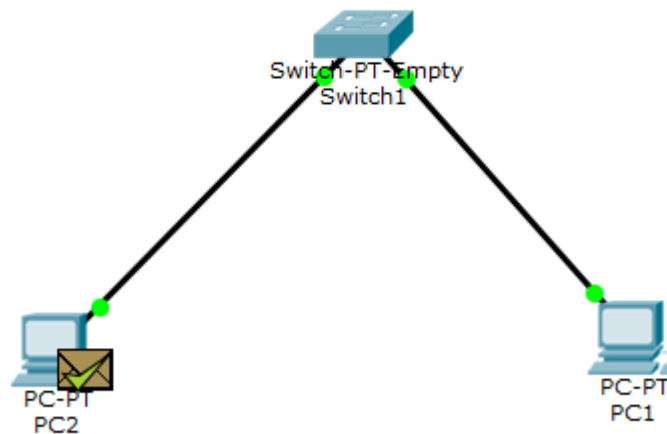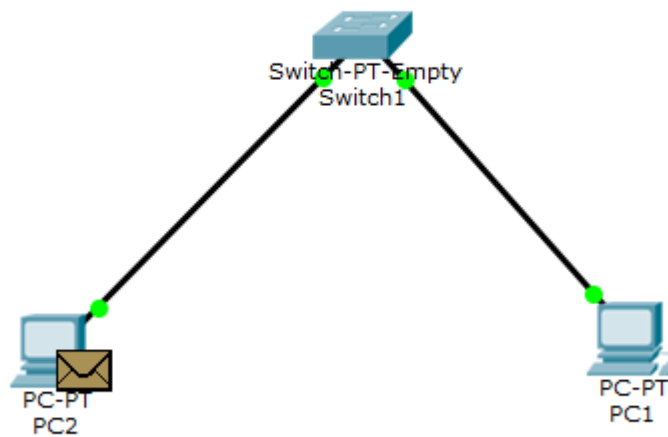

#### RESULT:

- The switch successfully integrates the new network module (e.g., WLAN module).
- The **show version** and **show module** commands confirm the addition of the network module.
- If a WLAN module is added, wireless configurations like SSIDs can be set up successfully, and the module can be used for wireless connections.