

Tank Pump Controller PCB v1.0

Build sheet · 100 × 98 mm, 2 layers · plugs into the wiring of the main guide (Figure 6) · ESP32 DevKit V1 30-pin

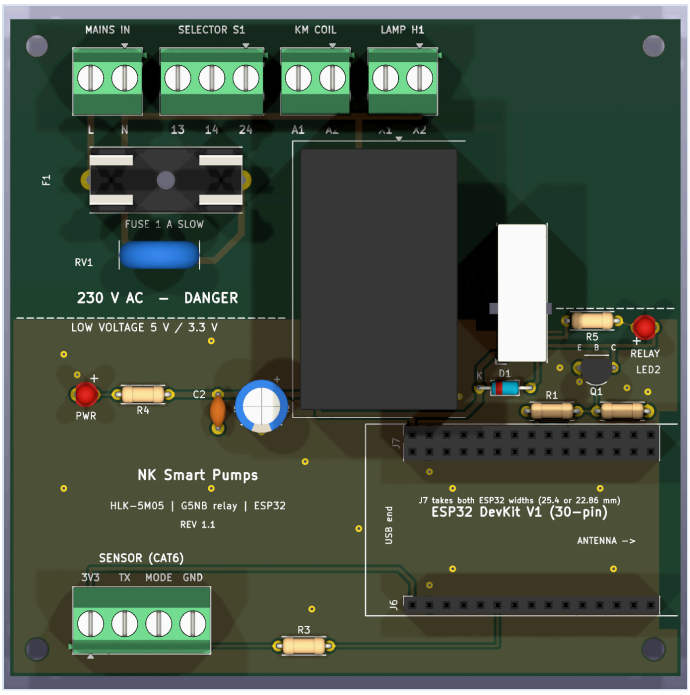

Top view. 230 V parts above the dashed line, 5 V / 3.3 V below it.

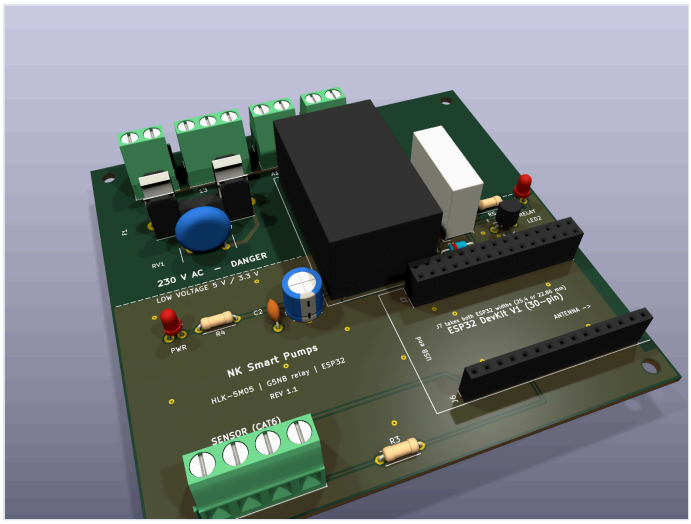

3D view with all parts fitted (ESP32 not shown).

The board carries everything that was loose wiring in the main guide: fuse F1, a surge absorber, the HLK-5M05, the relay that switches the contactor coil, the ESP32 sockets and the sensor terminal. You only connect wires to its screw terminals. **Pump current never goes through the board:** the supply cable, the contactor main contacts and the pump cable stay exactly as in the guide.

> **Isolation.** 230 V copper is kept at least 6.0 mm from all low-voltage copper on both layers (checked after the ground fill), with a milled slot under the relay between its contacts and its coil. The HLK-5M05 and the relay are the only parts that bridge the gap, and both are rated for it.


1. What connects to each board terminal

Terminal	Pin	Wire goes to	Wire / notes
230 V terminals (top edge)			
MAINS IN (J1)	L	DIN **L** terminal (the one fed from the DB MCB)	1.0 mm² brown. Replaces guide wires 4 and 5.
	N	DIN **N** terminal	1.0 mm² blue. Replaces guide wire 6.
SELECTOR S1 (J2)	13	S1 terminal **13**, plus a short link from S1 13 to S1 **23** on the switch	0.75 mm² brown. The fused live feed to both selector contacts (guide wire 13 and link J1).
	14	S1 terminal **14** (AUTO out)	0.75 mm² brown (guide wire 14)
	24	S1 terminal **24** (MAN out)	0.75 mm² brown (guide wire 16)
KM COIL (J3)	A1	Contactor coil **A1**	0.75 mm² brown (guide wire 15)
	A2	Contactor coil **A2**	0.75 mm² blue. Replaces guide wire 12 (the KM 3/L2 to A2 link).
LAMP H1 (J4)	X1	Lamp **X1**	0.75 mm² brown. Replaces link J2 on the door.
	X2	Lamp **X2**	0.75 mm² blue (guide wire 17)
Low-voltage terminal (bottom left), CAT6 from the tank			

SENSOR (J5)	3V3	Sensor red	CAT6 orange + white/orange
	TX	Sensor white	CAT6 green. Goes to GPIO16 through R3 on the board.
	MODE	Sensor yellow	CAT6 blue. Already tied to GND on the board, so no link wire is needed.
	GND	Sensor black	CAT6 brown + white/brown + white/green. White/blue stays spare.

Unchanged from the guide: wires 1–3 (DB to the DIN terminals), 7–8 (DIN L and N to KM 1/L1 and 3/L2), 9–11 (pump cable and earth). **No longer needed:** the DIN fuse F1, the relay module, the perfboard and wires 18–27; the board does all of that. Strip 8 mm, use ferrules on stranded wire, and never put two wires under one board screw.

2. Circuit on the board

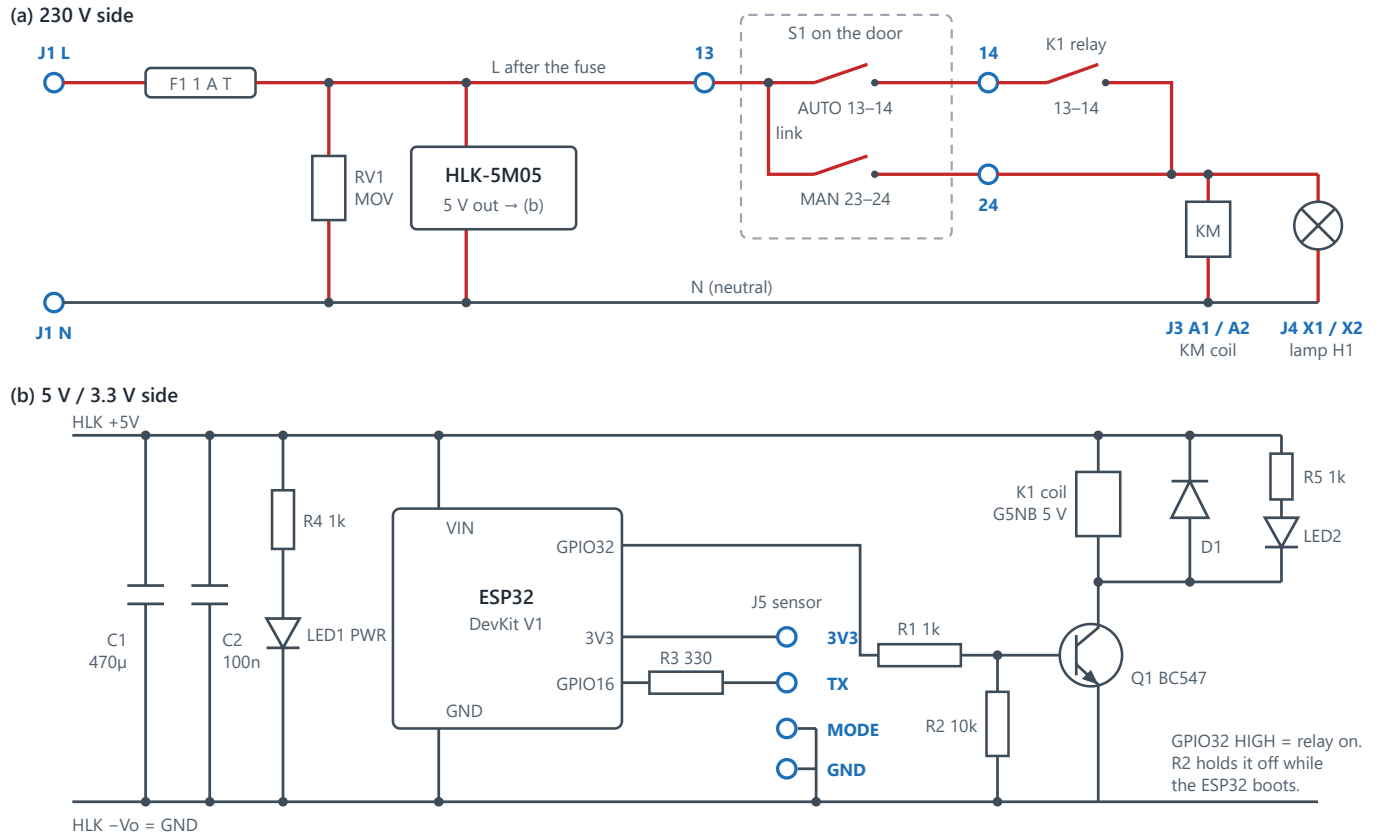

Board schematic. Red = 230 V. The relay contact K1 13–14 in (a) is closed by the coil in (b); S1 MAN feeds the contactor directly, so the pump can still run with the ESP32 removed.

3. Parts list for one board

Ref	Part	What to buy (India: Robu, ElectronicsComp, Probots, Lamington Road / SP Road shops)	Qty	₹ approx.
PS1	AC-DC module	Hi-Link **HLK-5M05** (5 V 1 A). Not the HLK-PM01; it has a different footprint.	1	230
K1	Relay	**Omron G5NB-1A-E 5VDC** (SPST-NO, 5 V coil). The footprint fits only this relay.	1	100–150
F1	Fuse holder + fuse	5×20 mm PCB fuse holder, **22.5 mm pin pitch**, with snap-on cover (e.g. BLX-A), and a **1 A slow-blow (T1A) 250 V** glass fuse plus one spare	1 + 2	40
RV1	Varistor	**10D471K** MOV (300 V AC, 12 mm disc, 7.5 mm pitch)	1	10
J1, J3, J4	Screw terminal	2-way, **5.08 mm** pitch, 300 V (KF301-2P / DG301)	3	36
J2	Screw terminal	3-way, 5.08 mm (KF301-3P)	1	15
J5	Screw terminal	4-way, 5.08 mm (KF301-4P, or two 2-way blocks slid together)	1	20
J6, J7	Female header	J6: 1×15, 2.54 mm. J7: **2×15**, 2.54 mm. J7's outer row takes an ESP32 whose pin rows are 25.4 mm apart (the common wide board), its inner row one with 22.86 mm, so either board plugs in.	2	40
Q1	Transistor	BC547 (or BC548 / 2N2222A in TO-92, check pinout C-B-E)	1	3
D1	Diode	1N4148	1	2
R1, R4, R5	Resistor	1 kΩ ¼ W	3	3
R2	Resistor	10 kΩ ¼ W	1	1
R3	Resistor	330 Ω ¼ W	1	1
LED1, LED2	LED	3 mm, red or green	2	4
C1	Capacitor	470 µF 16 V electrolytic, 8 mm diameter, 3.5 mm pitch	1	12
C2	Capacitor	100 nF ceramic, 5 mm pitch	1	2
H1–H4	Mounting	M3 × 10 mm nylon standoffs + screws, to fix the board on the box back plate	4	40
	Components for one board (HLK-5M05 included, ESP32 not)			**≈ 550–600**
PCB	Bare board	Order 5 (the minimum) from the zip file below	5	700–2,000

Against the main guide's budget, the board replaces items 4–7 (relay module, capacitors, perfboard and terminals, DIN fuse; about ₹420), and the HLK-5M05 (item 3) is now part of this list. So the whole project costs about ₹900–2,200 more than in the guide, depending on where you order the PCB, and you get four spare boards.

4. Ordering the board

Option A: assembled by the factory (all parts already soldered)

The factory buys and solders every part in section 3. You receive finished boards and only plug in the ESP32, push in the fuse and connect the wires.

1. On **jlcpcb.com**, upload `pcb\out\tank_controller_gerbers.zip` and choose the same board settings as in Option B, quantity 5.
2. Switch on **PCB Assembly**: Economic, top side, assembled quantity 2 or 5 (2 is cheaper, and the other 3 boards come bare as spares). Leave tooling holes at "Added by JLCPCB".
3. Upload `pcb\out\assembly\tank_controller_bom.csv` as the BOM and `pcb\out\assembly\tank_controller_cpl.csv` as the CPL (placement) file. All 17 lines should match a part by its LCSC number. The relay (C48746) and the 4-way terminal (C2827883) are the parts JLCPCB fitted on the October 2026 order. If one is out of stock, pick the suggested equivalent with the same package and value, and for J5 and the relay K1 accept only the same footprint.
4. In the placement preview, check the polarised parts against the silkscreen. Then paste this into the order remark, and use the same text if the factory asks you to confirm the 3D render (do not just answer "yes"):

> Through-hole polarity: please follow the board silkscreen. Q1 BC547: flat face toward the relay K1 and R5, round side toward the ESP32, legs as printed E B C. LED1, LED2: long leg (anode) in the hole marked +. C1: + lead in the hole marked +, stripe toward the ESP32. D1: black stripe at the end marked K.

5. Order. The quote shows the exact price; expect roughly $110–150 before shipping and customs for 5 boards with 2 assembled (most of it is fixed per-order fees, so assembling all 5 costs only about $20 more). Delivered to India this is about ₹12,000–18,000. Indian assemblers (Lion Circuits, PCB Power, Circuitwala) accept the same three files for a quote, with no customs.

> **Not fitted by the factory:** the 1 A slow-blow 5×20 mm fuse (push it into F1 yourself), the ESP32 and the M3 standoffs. Before the first power-up, still do the stage 0 multimeter test in section 6.

> **Boards without "REV 1.1" on the silkscreen** (the October 2026 order): the silkscreen showed only a straight line for Q1, and the factory fitted it with its flat face toward the ESP32. The RELAY LED then glows faintly and the relay does not click. Unplug everything, desolder Q1 and turn it 180° so the flat face points to R5; the middle leg stays in the middle hole.

Option B: bare board, you solder the parts

1. Upload `pcb\out\tank_controller_gerbers.zip` to a PCB maker. In India: Lion Circuits, PCB Power or Robu PCB (about ₹700–1,500 for 5 boards, 5–8 days). Abroad: JLCPCB or PCBWay (about $2 for the boards plus $15–25 shipping and customs, 10–15 days).
2. Settings: 2 layers, 100 × 98 mm (the site reads this from the zip), FR-4, 1.6 mm thick, 1 oz copper, HASL lead-free finish, any solder mask colour, quantity 5. Leave everything else at the default.
3. If the site asks about the small rectangular cut-out near the relay: it is an intentional milled slot (isolation between the relay coil and its contacts) and must be kept.

5. Soldering order (bare board only)

1. **Flat parts first:** resistors R1–R5 (R1, R4, R5 are 1 k; R2 is 10 k; R3 is 330 Ω), then D1 with its black stripe at the end marked **K**.
2. LED1, LED2: long leg into the hole marked **+**. Q1: flat face (the printed side) toward the relay and R5, round side toward the ESP32, legs into the holes marked **E B C**. C2, then C1 with its **+** lead in the hole marked **+** (stripe toward the ESP32).
3. Female headers J6 and J7. Plug the ESP32 into them while soldering, so they end up straight and at the right spacing; then take it out again.
4. Screw terminals J1–J5 with the wire openings facing the board edge, then the fuse holder, RV1, K1 and finally the HLK-5M05. Use plenty of solder on the 230 V joints and terminals.
5. Inspect the 230 V area with a magnifier: no solder bridges, no flux balls or wire strands between pads. Clean off flux with isopropyl alcohol.
6. **Firmware:** in the sketch, keep `#define CONTROLLER_PCB 1`. The relay then runs on GPIO32, active HIGH (with `0`, the sketch goes back to the relay module on GPIO23, active LOW).

6. Testing, in three stages

Stage	Do this	It is right when
0. Multimeter board unpowered, fuse fitted	Measure resistance from J1 L to J1 N; from each of J1–J4 to sensor GND; and across the fuse holder clips.	L to N: no short (high or slowly rising reading, because the HLK input capacitor charges). Any 230 V terminal to sensor GND: open (over limit). Fuse: about 0 Ω.
1. Bench, USB only no 230 V anywhere	Plug the ESP32 into the sockets, connect USB to a laptop, flash the sketch. Wire the sensor to J5 through a short CAT6 piece and point it at the floor. Switch the pump ON and OFF from the app.	Distance readings are steady in the serial monitor and the app. The RELAY LED lights and K1 clicks with each ON / OFF (most DevKit V1 boards feed USB 5 V to VIN; if yours doesn't, check this in stage 2 instead).
2. In the box, 230 V, no pump pump wires 9–11 not connected	Mount the board, connect all board terminals (section 1) and wires 1–3, 7–8. **Unplug the USB cable**, close the box, switch the MCB on. S1 on AUTO: switch ON and OFF from the app. S1 on MAN. S1 on 0.	PWR LED on, ESP32 connects. AUTO: app ON makes K1 click, KM pull in and the lamp light; app OFF releases all three. MAN: KM and lamp on whatever the app says. 0: everything off.

3. With the pump	MCB **off**. Connect pump wires 9–11. MCB on, then run the full test sequence in section 10 of the main guide.	The pump starts and stops with KM, stops at 95 %, and the fault tests in the guide pass.

> **Safety.** The top part of the board carries 230 V whenever the MCB is on, including the HLK pins, the fuse holder and the relay contact pins underneath. Only work on it with the MCB off, and never connect USB to the ESP32 while the board is powered from 230 V. Have an electrician check the box before the first full power-up.

7. Files

File (in `water-tank-controller\pcb`)	What it is
`out\tank_controller_gerbers.zip`	Upload this to the PCB maker (Gerber + drill files)
`out\assembly\tank_controller_bom.csv`, `tank_controller_cpl.csv`	For factory assembly: parts list with LCSC part numbers, and the position and rotation of every part
`tank_controller.kicad_pcb`	The board, opens in KiCad 10
`build_board.py`, `make.ps1`	Generator script; `.\make.ps1` rebuilds the board, runs the design-rule and isolation checks, and re-exports the zip and pictures
`tank_controller.kicad_dru`	The 230 V rules: 1 mm tracks, 2 mm between 230 V nets, 6 mm to low voltage, 2 mm to the board edge