
Using Potentiometer to Control a Servo

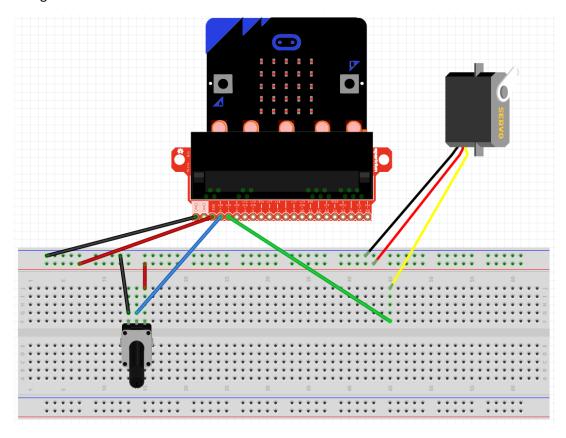

The Code

```
forever

map analog read pin P0 ▼

from low 0

from high 1023

to low 0

to high 180
```