
FOR APPLE MAGIC KEYBOARD & MAGIC TRACKPAD

Keyboard + Trackpad Tray

Assembly guide. Assembled size: 286 × 229.8 × 23.4 mm.

What you need

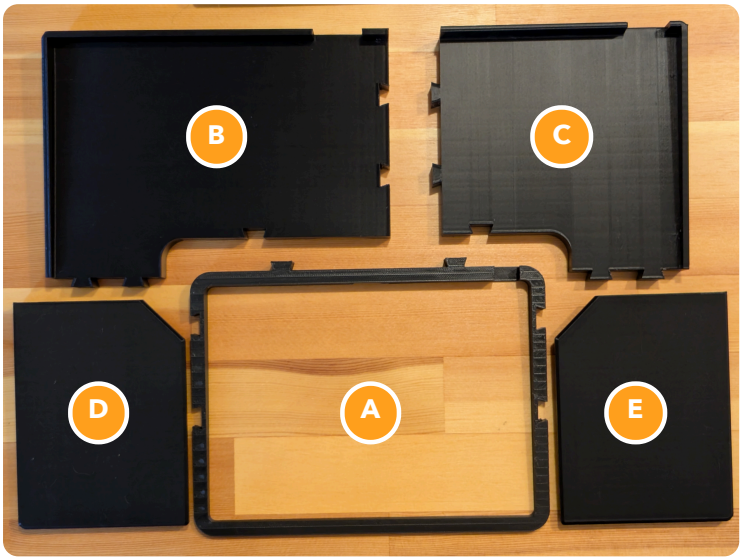

	Printed part	Qty
A	Trackpad frame	1
B	Keyboard base, left	1
C	Keyboard base, right	1
D	Wrist rest, left	1
E	Wrist rest, right	1

Also: Magic Keyboard, Magic Trackpad and the trackpad's charging cable.


No glue, screws or tools needed. All parts slide together from above.

Before you start

- Remove all support material, especially from the dovetail tongues and grooves. Leftover support stops the joints from sliding in.
- Some joints are tight. Be ready to press parts down firmly (see step 4).
- Turn on the trackpad first. Its power switch ends up under the keyboard.

Assembly


part to add parts already in place trackpad

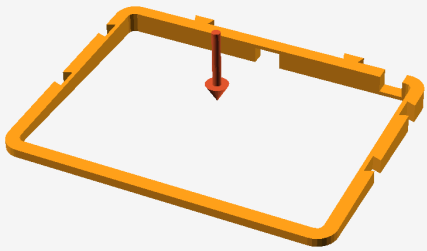

1

Place the trackpad frame


Put the trackpad frame on a flat surface. Leave the trackpad out for now; the tray goes over it at the end.

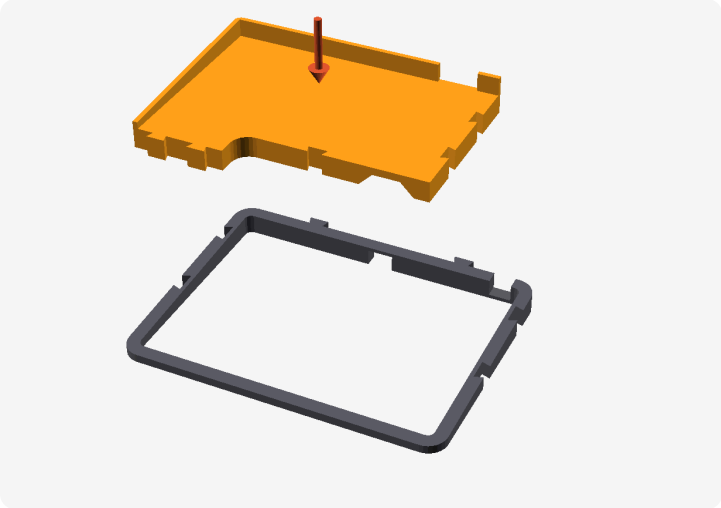

2

Add the left keyboard base


Slide the left keyboard base down onto the dovetail at the back of the frame.

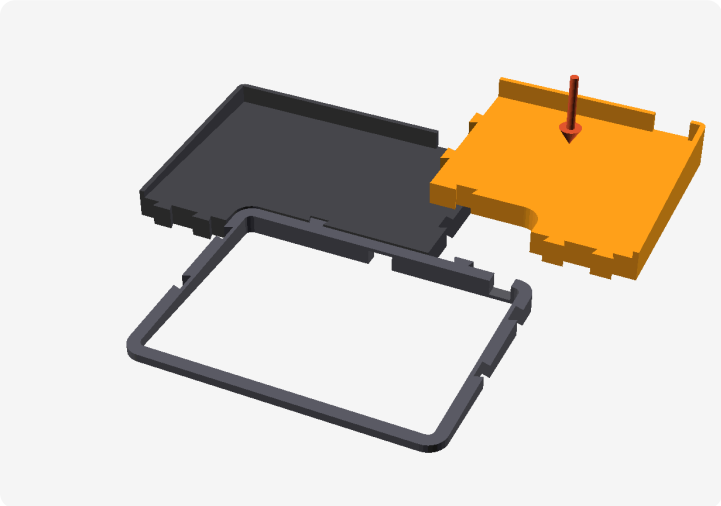

3

Add the right keyboard base


Slide the right keyboard base down. It locks into the left base and the frame at the same time, so the left base has to go in first.

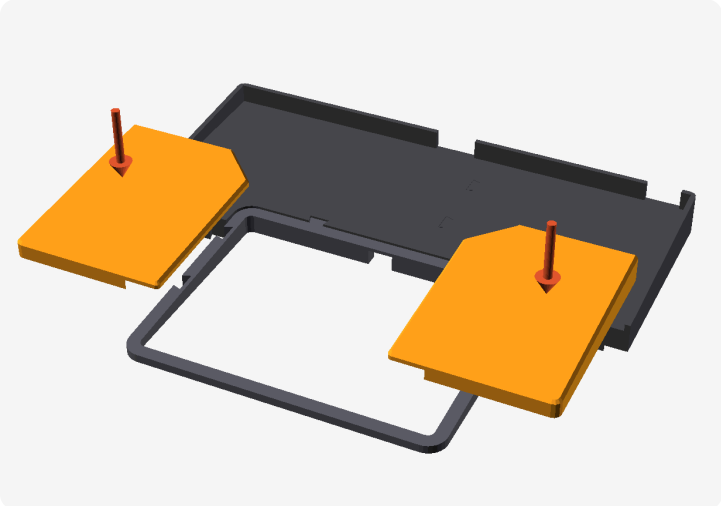

4

Add the wrist rests


Lower the left and right wrist rests onto the sides. Each one locks into the frame and a keyboard base. The joints between the keyboard bases and the wrist rests (B to D, C to E) are tight. You may need to press the wrist rests down firmly.

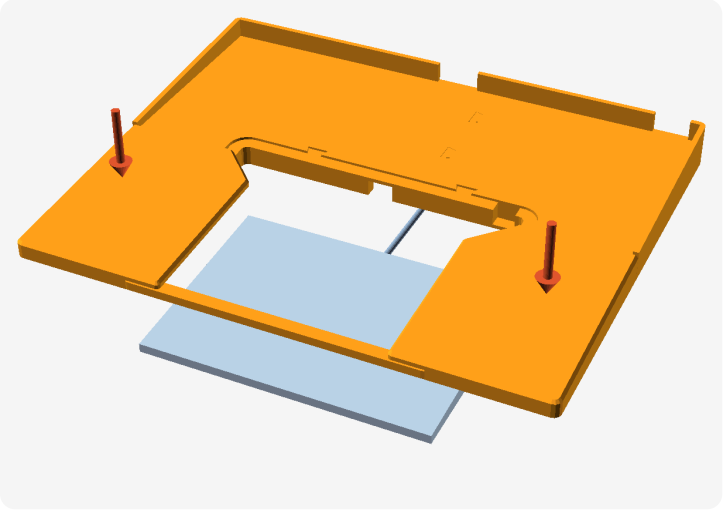

5

Set the tray over the trackpad

Plug the cable into the trackpad and lay it straight back from the port. Lower the assembled tray over the trackpad. The cable passes under the frame's rear wall and through the channel under the left keyboard base. The wrist rests cover 20 mm of each side of the trackpad.

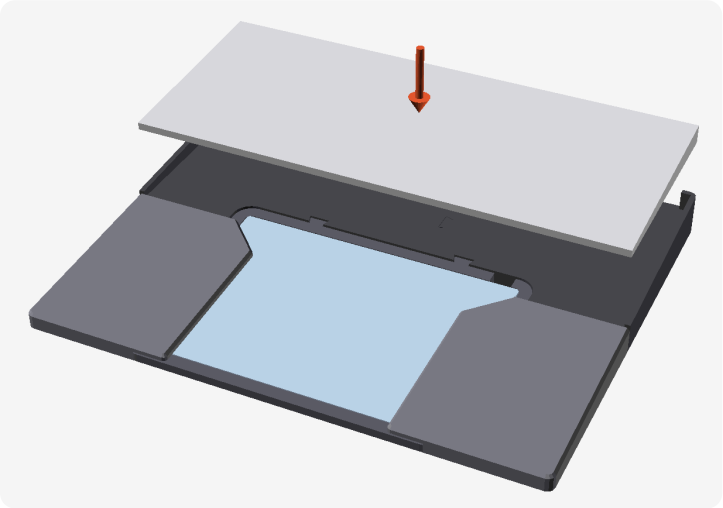

6

Place the keyboard

Set the keyboard on the base with its front edge against the wrist rests. To charge it in the tray, plug its cable in through the cutout in the rear wall.

Done



Tips

- To reach the trackpad's power switch later, slide the keyboard aside.
- To take the tray apart, lift the parts out in the reverse order.