Brummel splice instruction

This splice method is for 12 strand braided ropes made with Dyneema®




Measure the length of the splice. 50 x diameter of the rope = splice length in cm. Make a mark (A).




Measure the length of the eye and make another mark (B).






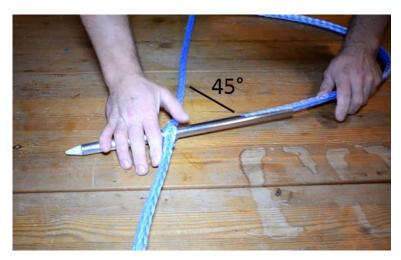

Make an opening in the centre of the rope where you earlier made a mark (B). Pull the end of the rope through.

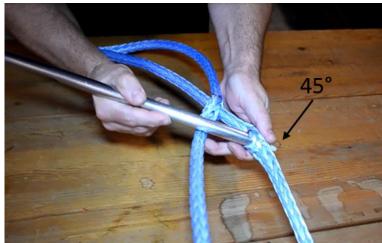

Make an opening in the centre of the rope at mark (A) and pull the entire rope through.

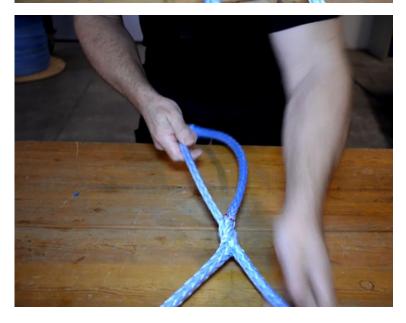


You end up like this.






Insert the short end into the rope.

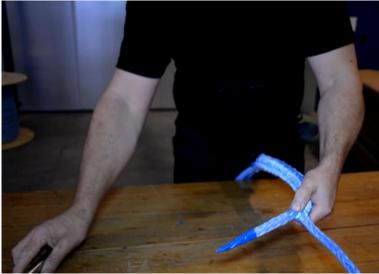


Remove the tape from the end.

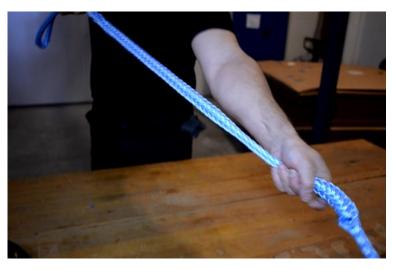

"Milk" the rope and the free end will disappear inside the rope.



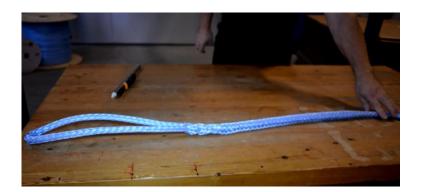

The Brummel splice is finished.

