

Quick Splice – Instruction



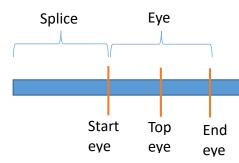

Measure the length of the splice. 50 x diameter (mm) of the rope = splice length in mm.


Next; measure the length of the eye and make a mark. (See illustration above)

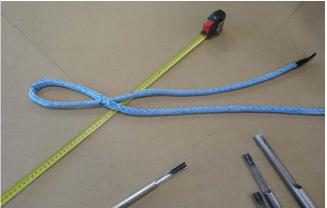

Make an 45° opening in the centre of the rope through the mark "end eye".

Pull the short end of the rope through.




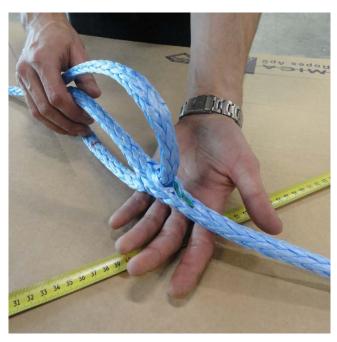

Count two strands from the first tuck.




Place a 45 $^{\circ}$ splice needle and pull the short end of the rope through.

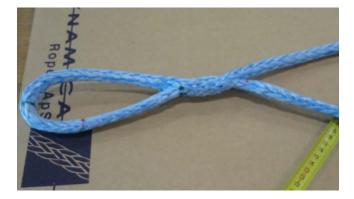


The result should be like this.




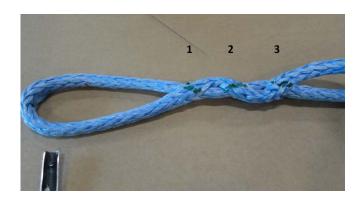

Repeat the tuck one more time. In total, the short end is pulled through the rope 3 times.

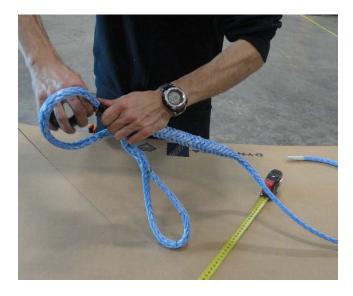


Count two strands and hide the short end of the rope like a core.

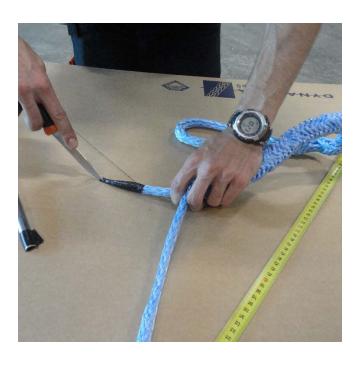

Remove the tape, milk the rope and the end will disappear inside the rope.



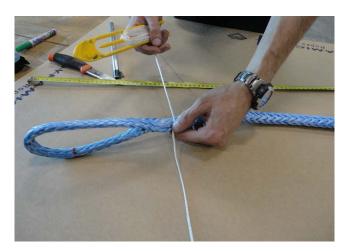

Make a seizing between the first and second tuck.



The final result.

