
Base mold

DIY CNC epoxy-granite mill · October 2026

How to make the base mold. Drilling templates: `templates/base-templates.pdf`. The sheet layout for the boards is `docs/src/boards/sheet-1.svg`; `docs/src/make_pdfs.py` also makes `molds-complete.pdf`, all the molds in one (not kept in the repo).

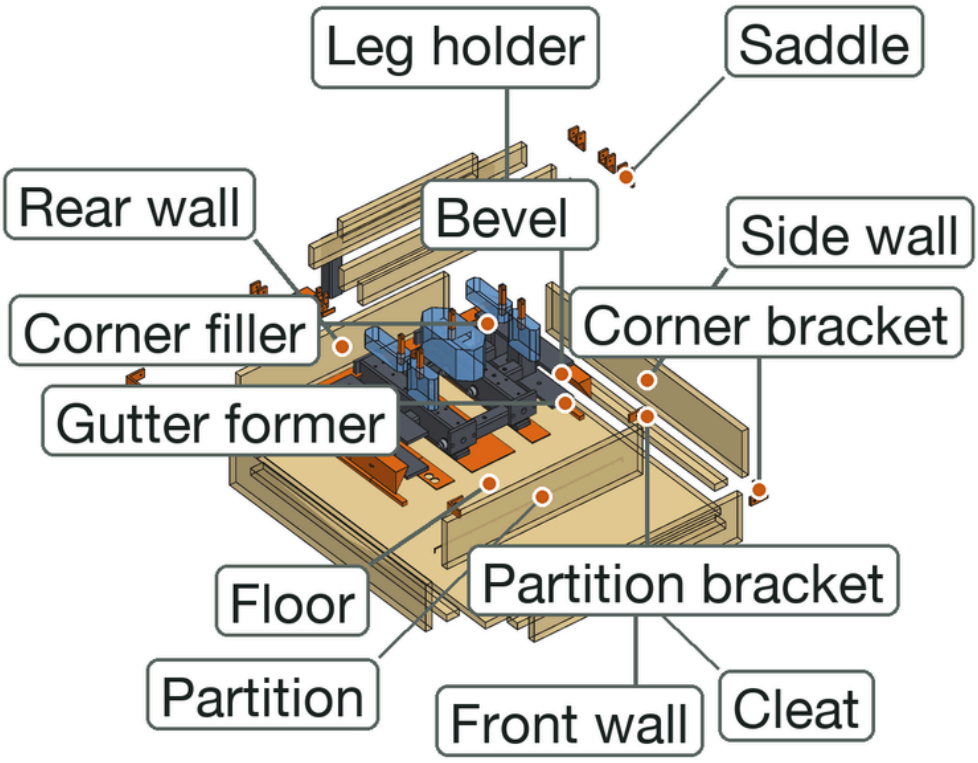


In short: melamine boards bolt together with printed brackets. Every printed piece bolts or pins to its board from outside. The walls stand 25 mm above the pour line, so no bolt goes through a face the mix touches. Nothing is glued, and it all comes apart for the next casting.


Order of work: print → cut the boards → mark them with the templates and drill → cut the foam → wax → assemble → pour → take apart.

1. How it works


- **Walls** stand on the floor against bolted-down **cleats**; **corner brackets** square the tops. All the bolts go through the top 25 mm, above the pour line.

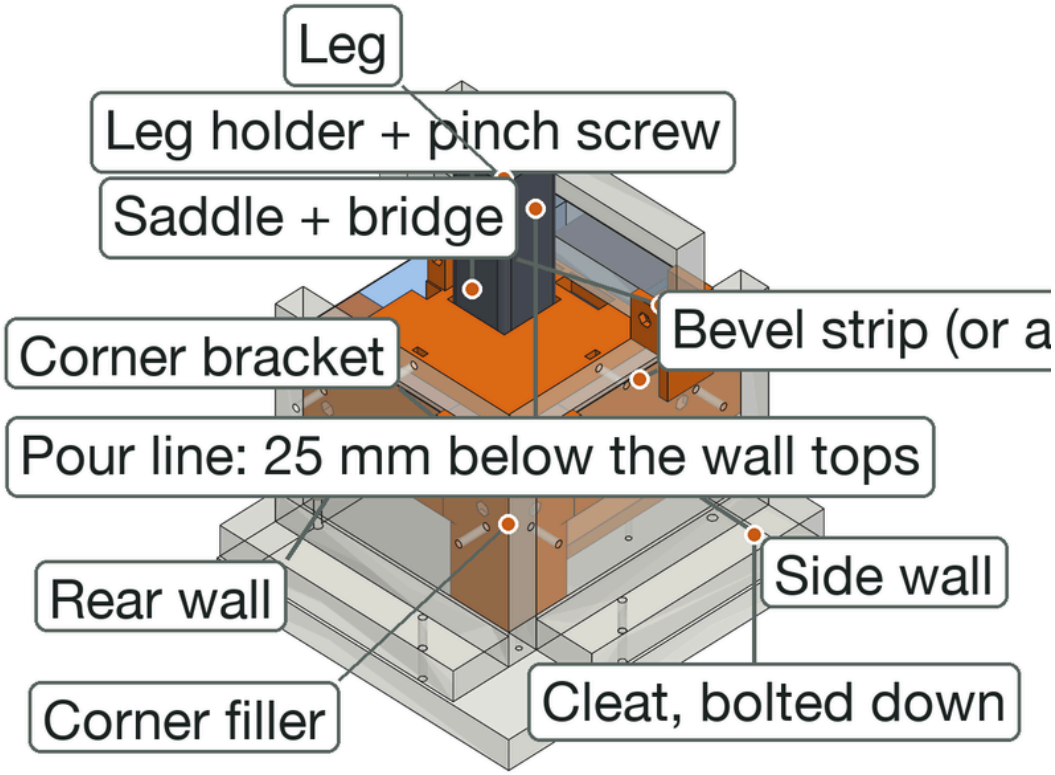


- **Printed pieces** have a nut built in: it goes into a pocket on the board side and slides under the hole; an M4 bolt comes through the board from outside.

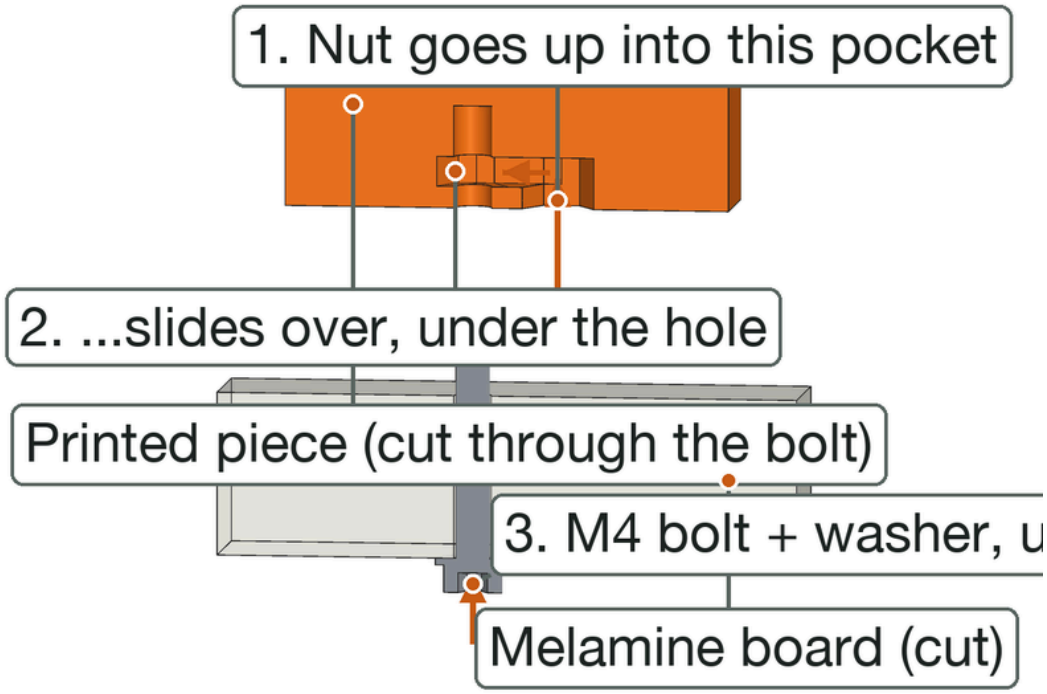


- **Thin pieces** (gasket-groove beads) have 3 mm pins that push into 1/8 in holes.

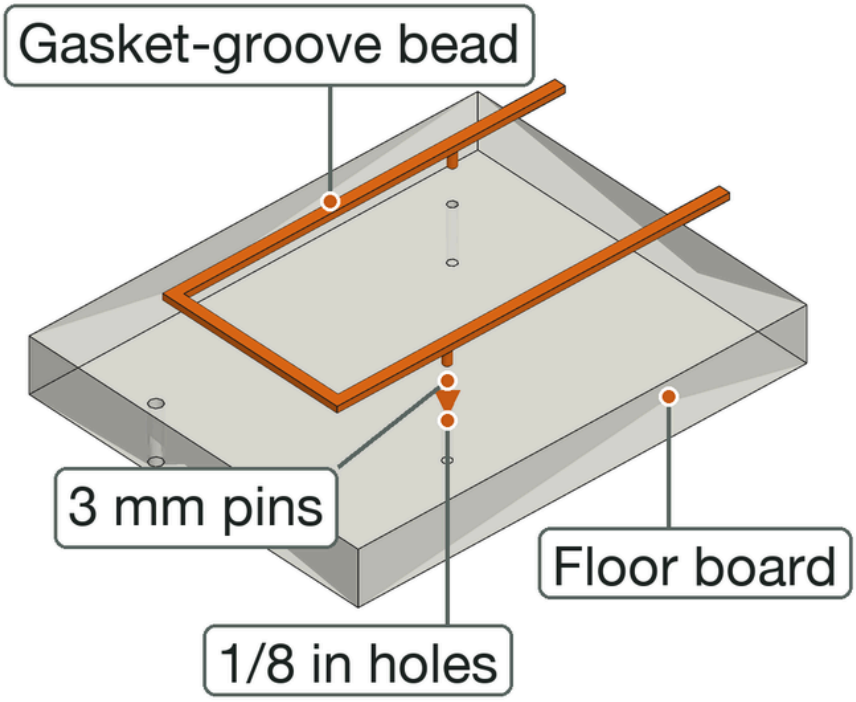

- **Long pieces** are printed in parts that peg together; each part bolts down on its own.

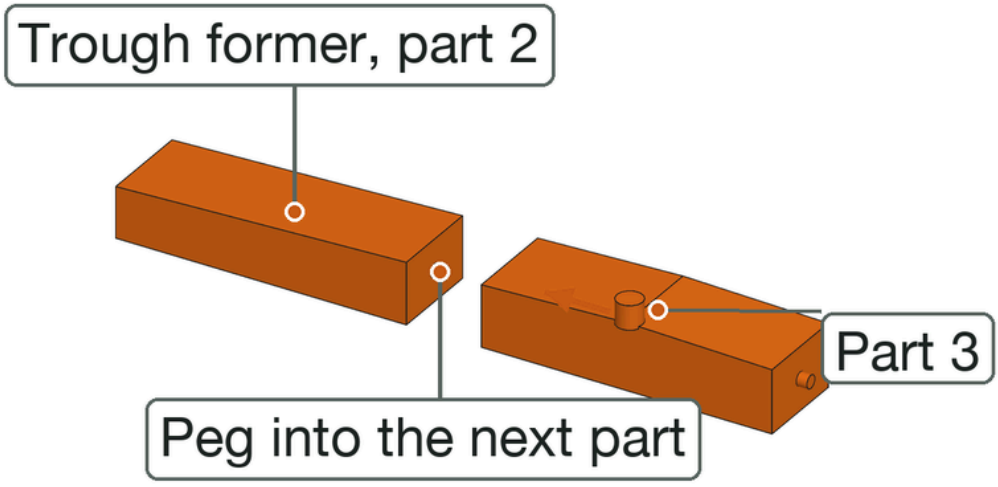

- **Cores** are taped foam blocks with a printed post that bolts to a bridge across the mold.

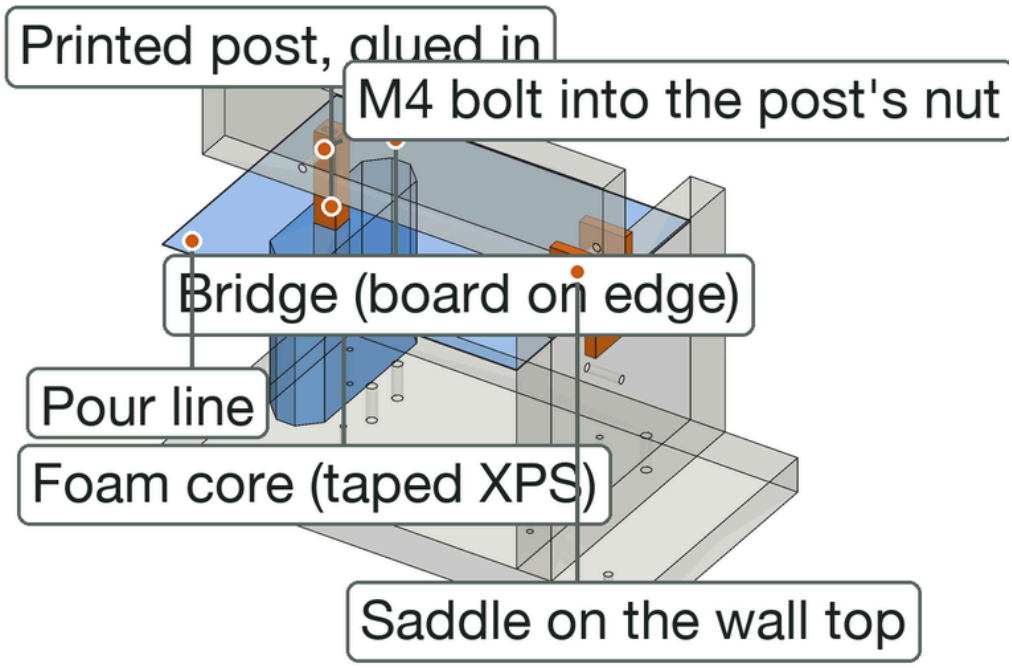

- **Fits** are 0.15 mm a side, and drawn for 19.05 mm board (Home Depot's 3/4 in melamine is a true 0.750 in). Measure yours; if it differs, set `mold_board` in `model/build_cnc.py` and re-run it.

2. What you need

Material	Amount	Notes
Melamine board, 3/4 in	about 1.3 m2	all the molds come out of 1 sheet, 4 x 8 ft
1x2 lumber (furring strip is fine)	2 x 8 ft 1x2 (2.7 m)	the cleats: they lie on the floor outside the walls
XPS foam board, 2 in	1 sheet, 2 x 8 ft	the cores
PETG	1.80 kg	sliced; everything printed for the machine fits in two 1 kg rolls
Packing tape, double-sided carpet tape	1 roll each	wrapping and holding the foam
Paste wax and PVA	1 each	release
3/8 in quarter-round PVC molding	a few meters	the rounded outside edges

Hardware	Qty
M3 nut	20
M3 washer	20
M3 x 25 bolt	20
M4 nut	116
M4 washer	112
M4 x 20 bolt (leg pinch screw)	4
M4 x 30 bolt	68

Hardware	Qty
M4 x 35 bolt	28
M4 x 45 bolt	16
M5 x 20 screw, greased (holds an insert)	17
M5 x 30 screw, greased (holds a rail bar or the BK pad)	12
M6 x 30 screw, greased (holds a support pad)	8

Add about 10 % spare small bolts, nuts and washers. **Tools:** drill and brad-point bits (sizes in section 5), a 2-1/2 in hole saw, a square, clamps, a 7 mm nut driver, a 3 mm hex key, an awl, a fine saw or hot wire for the foam.

3. Print

99 prints, 1.80 kg, about 116 hours (sliced; settings in the print guide). Print one corner bracket and one saddle first and check them on a board offcut. Press or slide the nuts in before the pieces go on the boards.

File	Qty	g	Time each
`base-box/kit-corner-bracket.stl`	4	33	39m 22s
`base-box/kit-partition-bracket.stl`	2	14	35m 31s
`base-box/kit-saddle.stl`	6	58	46m 6s
`base-box/kit-leg-holder.stl`	4	166	2h 31m 6s
`base-rear/former-gutter-L-part1of3.stl`	1	8	35m 5s
`base-rear/former-gutter-L-part2of3.stl`	1	8	33m 42s
`base-rear/former-gutter-L-part3of3.stl`	1	7	31m 18s
`base-rear/former-gutter-R-part1of3.stl`	1	8	35m 7s
`base-rear/former-gutter-R-part2of3.stl`	1	8	33m 42s
`base-rear/former-gutter-R-part3of3.stl`	1	7	31m 17s
`base-rear/former-floor-part1of9.stl`	1	14	50m 49s
`base-rear/former-floor-part2of9.stl`	1	31	1h 48m 52s
`base-rear/former-floor-part3of9.stl`	1	13	50m 1s
`base-rear/former-floor-part4of9.stl`	1	13	47m 47s
`base-rear/former-floor-part5of9.stl`	1	29	1h 43m 13s
`base-rear/former-floor-part6of9.stl`	1	13	47m 50s
`base-rear/former-floor-part7of9.stl`	1	11	39m 30s
`base-rear/former-floor-part8of9.stl`	1	11	42m 13s
`base-rear/former-floor-part9of9.stl`	1	11	39m 27s
`base-rear/filler-corner-L.stl`	1	29	2h 10m 25s
`base-rear/filler-bevel-L-part1of2.stl`	1	50	2h 39m 10s
`base-rear/filler-bevel-L-part2of2.stl`	1	50	2h 39m 43s

File	Qty	g	Time each
base-rear/filler-corner-R.stl	1	29	2h 11m 15s
base-rear/filler-bevel-R-part1of2.stl	1	50	2h 35m 0s
base-rear/filler-bevel-R-part2of2.stl	1	50	2h 35m 59s
base-rear/filler-bevel-end-part1of3.stl	1	50	2h 36m 46s
base-rear/filler-bevel-end-part2of3.stl	1	50	2h 37m 13s
base-rear/filler-bevel-end-part3of3.stl	1	50	2h 36m 47s
base-front/former-gutter-L-part1of2.stl	1	11	49m 21s
base-front/former-gutter-L-part2of2.stl	1	10	43m 43s
base-front/former-gutter-R-part1of2.stl	1	11	49m 19s
base-front/former-gutter-R-part2of2.stl	1	10	43m 45s
base-front/former-floor-part1of12.stl	1	44	2h 24m 52s
base-front/former-floor-part2of12.stl	1	23	1h 23m 35s
base-front/former-floor-part3of12.stl	1	5	24m 55s
base-front/former-floor-part4of12.stl	1	5	23m 14s
base-front/former-floor-part5of12.stl	1	16	1h 1m 11s
base-front/former-floor-part6of12.stl	1	21	1h 14m 46s
base-front/former-floor-part7of12.stl	1	16	1h 1m 0s
base-front/former-floor-part8of12.stl	1	21	1h 14m 46s
base-front/former-floor-part9of12.stl	1	5	24m 47s
base-front/former-floor-part10of12.stl	1	5	23m 14s
base-front/former-floor-part11of12.stl	1	44	2h 24m 48s
base-front/former-floor-part12of12.stl	1	23	1h 23m 37s
base-front/former-trough-part1of5.stl	1	19	1h 12m 22s
base-front/former-trough-part2of5.stl	1	22	1h 21m 40s
base-front/former-trough-part3of5.stl	1	24	1h 31m 38s
base-front/former-trough-part4of5.stl	1	22	1h 21m 54s
base-front/former-trough-part5of5.stl	1	20	1h 11m 52s
base-front/filler-corner-L.stl	1	29	2h 10m 54s
base-front/filler-bevel-L-part1of2.stl	1	46	2h 25m 11s
base-front/filler-bevel-L-part2of2.stl	1	46	2h 25m 26s
base-front/filler-corner-R.stl	1	29	2h 8m 14s
base-front/filler-bevel-R-part1of2.stl	1	46	2h 21m 16s
base-front/filler-bevel-R-part2of2.stl	1	46	2h 21m 45s
base-front/filler-bevel-end-part1of3.stl	1	50	2h 32m 31s
base-front/filler-bevel-end-part2of3.stl	1	50	2h 33m 48s

File	Qty	g	Time each
`base-front/filler-bevel-end-part3of3.stl`	1	50	2h 33m 22s
`base-rear/former-split-gasket-groove-part1of4.stl`	1	2	9m 41s
`base-rear/former-split-gasket-groove-part2of4.stl`	1	1	8m 49s
`base-rear/former-split-gasket-groove-part3of4.stl`	1	1	8m 49s
`base-rear/former-split-gasket-groove-part4of4.stl`	1	2	9m 44s
`base-front/core-center-a-post.stl`	1	5	44m 53s
`base-front/core-center-b-post.stl`	1	5	44m 53s
`base-rear/core-center-post.stl`	1	5	44m 53s
`base-front/core-outboard-L-post.stl`	1	5	44m 53s
`base-rear/core-foot-b-L-post.stl`	1	5	44m 53s
`base-rear/core-knee-L-post.stl`	1	5	44m 53s
`base-front/core-outboard-R-post.stl`	1	5	44m 53s
`base-rear/core-foot-b-R-post.stl`	1	5	44m 53s
`base-rear/core-knee-R-post.stl`	1	5	44m 53s
`base-front/plug-draw-pocket-L.stl`	1	12	46m 13s
`base-front/plug-draw-pocket-R.stl`	1	12	46m 13s
`base-rear/plug-draw-pocket-L.stl`	1	5	21m 23s
`base-rear/plug-draw-pocket-R.stl`	1	5	21m 23s
`tools/kit-pour-gauge.stl`	2	9	24m 41s
`tools/kit-screed-shoe.stl`	2	20	47m 40s
`base-front/cast-in-leg-front-l-plug.stl`	2	8	24m 42s
`base-front/cast-in-leg-front-l-foot-cup.stl`	2	18	1h 0m 43s
`base-rear/cast-in-leg-rear-l-plug.stl`	2	8	24m 42s
`base-rear/cast-in-leg-rear-l-foot-cup.stl`	2	18	1h 0m 43s

4. Cut the boards

Have the store rip the strips; crosscut at home. Write each board's name on its outside face, and mark the cast face (the melamine face the mix touches). The cleats are cut from 1x2 lumber, not the sheet; the bridges and struts come out of the sheet's offcuts.

Board	Qty	Size (mm)	Notes
Base floor	1	700 x 843	both halves are cast on it
Base front wall	1	620 x 135	
Base rear wall	1	620 x 135	
Base side wall, left	1	724 x 135	
Base side wall, right	1	724 x 135	

Board	Qty	Size (mm)	Notes
Base partition	1	582 x 135	rear half only; comes out before the front half
Base partition strut	2	326 x 60	offcut, stands on edge; holds the partition foot (rear half only)
Base cleat, front	1	620 x 38	1x2 lumber; flat on the floor
Base cleat, rear	1	620 x 38	1x2 lumber; flat on the floor
Base cleat, left	1	724 x 38	1x2 lumber; flat on the floor
Base cleat, right	1	724 x 38	1x2 lumber; flat on the floor
Base bridge y=-230	1	633 x 60	
Base bridge y=-130	1	633 x 60	
Base bridge y=-60	1	633 x 60	
Base bridge y=100	1	633 x 60	
Base bridge y=170	1	633 x 60	
Base bridge y=280	1	633 x 60	
Base leg bridge y=-280	1	402 x 60	
Base leg bridge y=318	1	402 x 60	

5. Mark and drill

1. Print the drilling templates (`templates/base-templates.pdf`) at **actual size** and check the 100 mm square.
2. Tape each board's pages onto it: printed edges on the board's edges, grid lines lined up.
3. Awl through every crosshair. Pencil the dashed **pour line** on the walls.
4. Drill from the marked face, at the size the color legend gives. Pilot the big ones; the 63.5 mm holes are a 2-1/2 in hole saw.

The appendix has every board as a drawing and a table, if you would rather measure.

Hole	Drill	For
3.2 mm	1/8 in	floor, split-gasket-groove
3.4 mm	9/64 in	corner-L, corner-R, gutter-L, gutter-R
4.5 mm	11/64 in	bevel-L, bevel-R, bevel-end, cleat, core post, corner bracket, corner-L, corner-R, draw-pocket-L, draw-pocket-R, gutter-L, gutter-R, leg holder, saddle, trough
5.5 mm	7/32 in	M5 insert screw, M5 screw into the steel
6.5 mm	17/64 in	M6 screw into a pad
9.6 mm	25/64 in	3/8 dowel, 3/8 dowel pin

6. Cut the foam

Fine saw, hot wire or a long knife. Stack and glue two layers of 2 in foam for the 90 mm cores. Wrap each piece smooth in packing tape. Cut a snug 12 mm square hole 30 mm deep for each core's post and glue the post in.


Casting	Piece	Qty	Size and how
base-front	center-a	1	XPS block 100 x 73 x 90 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-front	center-b	1	XPS block 100 x 72 x 90 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-rear	center	1	XPS block 88 x 190 x 90 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-front	outboard-L	1	XPS block 93 x 148 x 90 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-rear	foot-b-L	1	XPS block 30 x 99 x 90 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-rear	knee-L	1	XPS block 41 x 140 x 40 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-front	outboard-R	1	XPS block 93 x 148 x 90 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-rear	foot-b-R	1	XPS block 30 x 99 x 90 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
base-rear	knee-R	1	XPS block 41 x 140 x 40 mm, outline as the pocket (chamfered corners); taped, with its printed post glued in.
## 7. Wax			

- 3-5 coats of paste wax on every face the mix touches, boards and removable printed pieces, then PVA. Don't wax pieces that stay in (core posts, cast-in parts): scuff and degrease them.
- Glue quarter-round into the floor-to-wall corners that make outside edges; silicone fillets elsewhere.
- Grease every screw, bolt and rod that comes out of the casting.


8. Assemble

Base, rear half (first)


Cast upside down, top face on the floor; shown the right way up. New parts in color. Bolt each half's steel grid together first (the build guide, section 1), then it goes in as one piece.

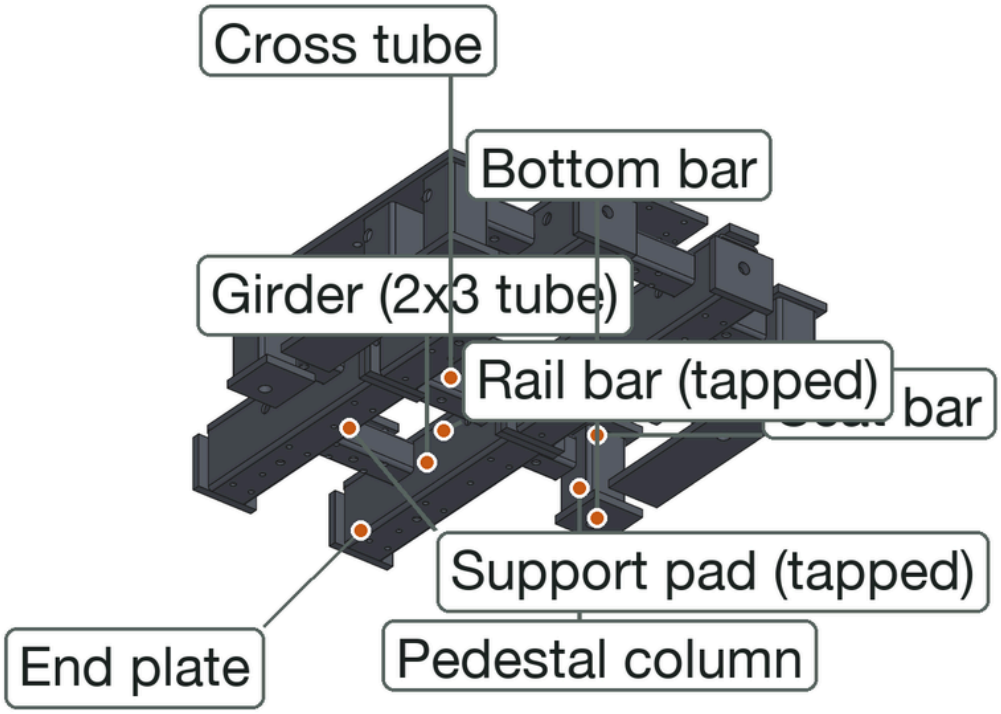


1. Floor on three battens. Bolt the cleats down.

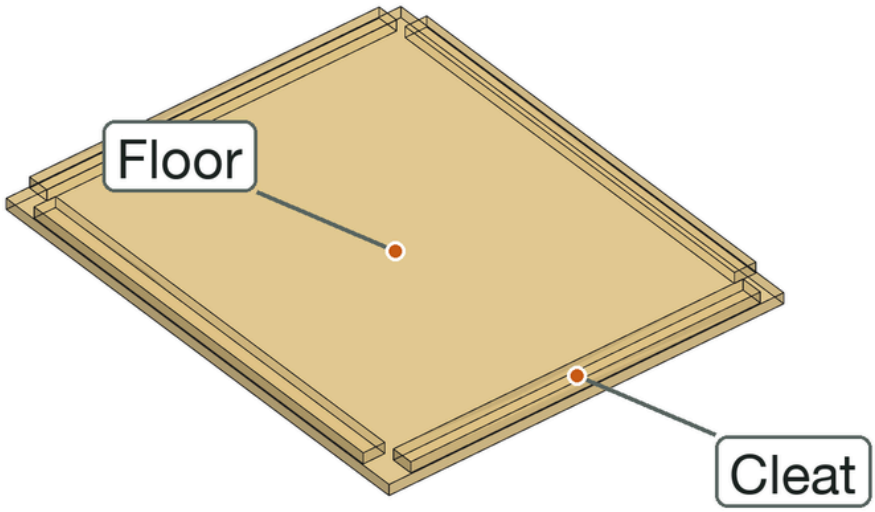


2. Walls against the cleats; corner brackets at the top. Diagonals equal within 2 mm, then tighten.

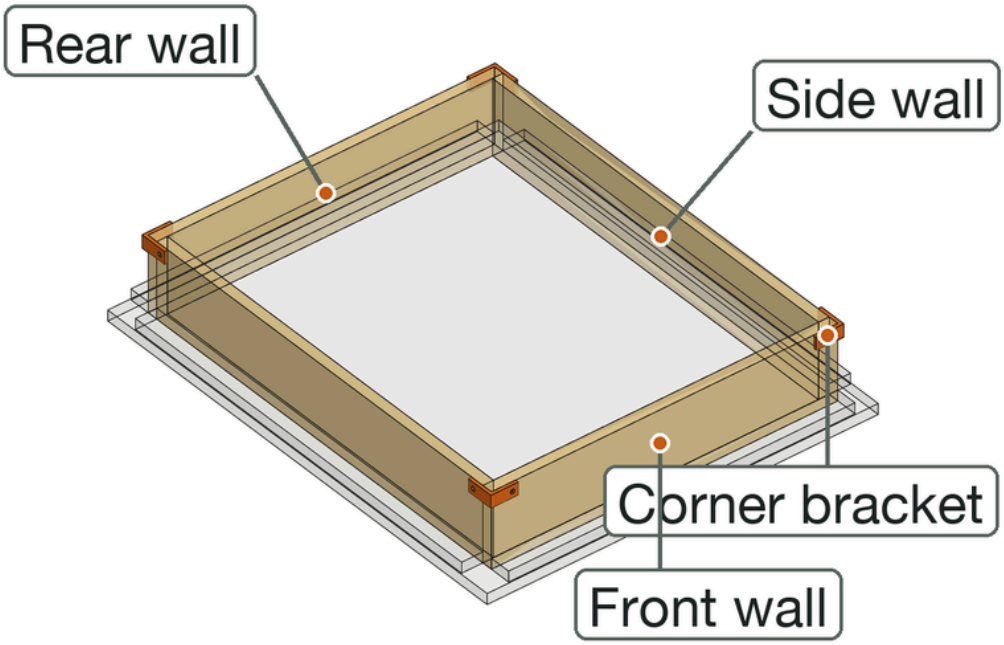


3. Partition between the side walls: two brackets, two struts to the front wall. Beads on its pins.

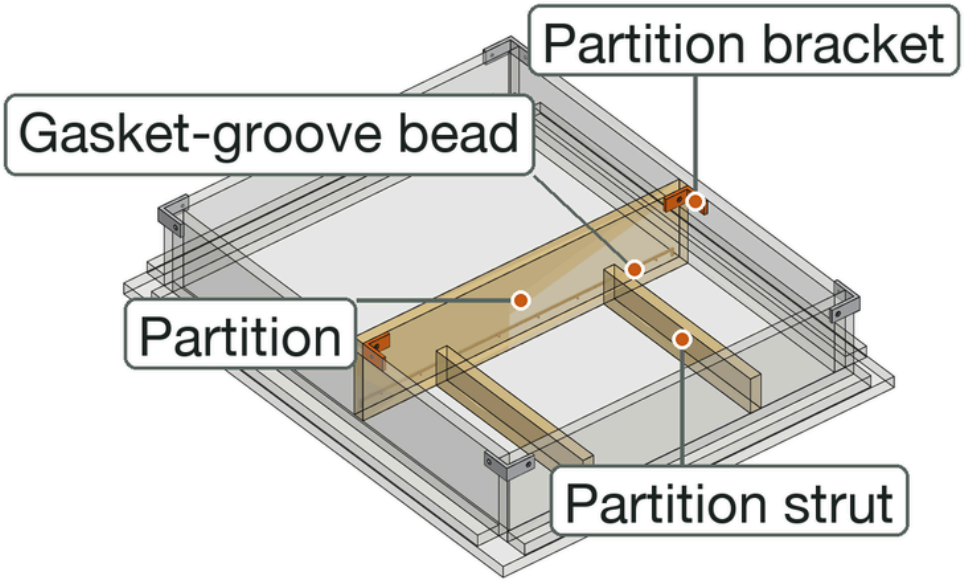


4. Gutter formers, corner fillers and the draw-rod pocket plugs on. Bevel strips on the side and rear walls, their 1-1/2 in face flush with the pour line.

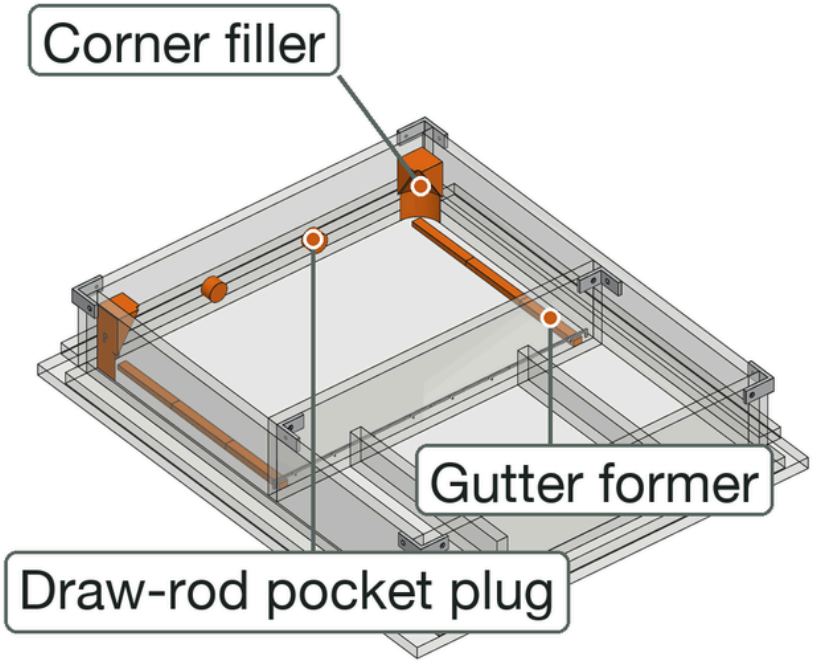

5. The steel grid in, bolted up and upside down: its rail bars and the BK pad screwed to the floor (greased M5 and M6), its seats over the dowels, the split end plates against the partition with their dowel pins through it. Tape over the holes in the pedestals' bottom bars. Inserts; leg holders, legs set to height, pinch screws tight.

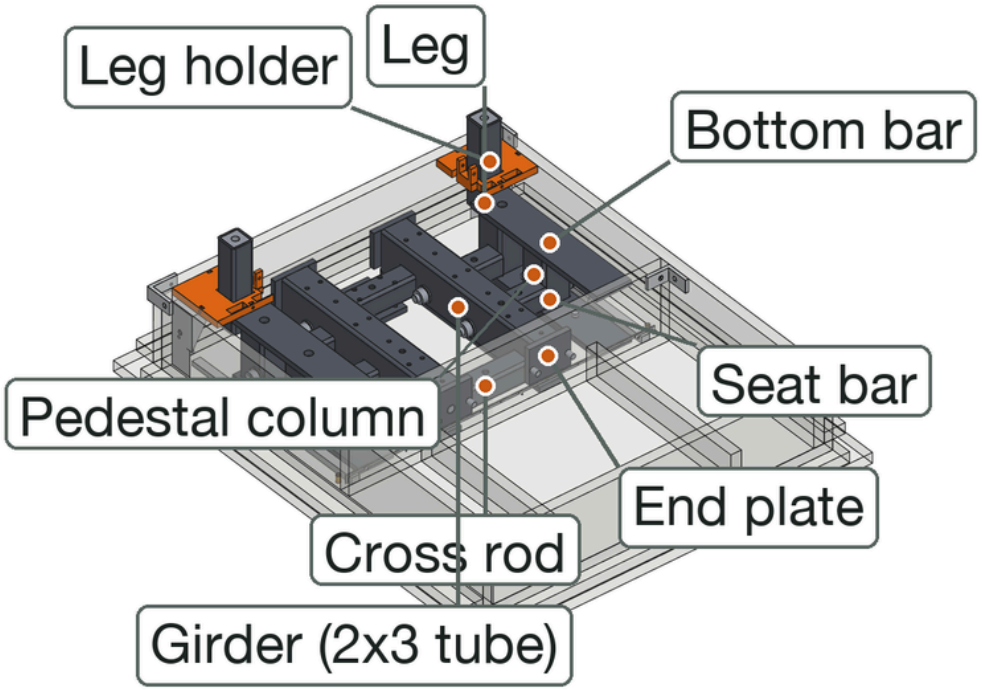


6. Pour the 20 mm skin. Foam cores on it between the steel, bridges into the saddles, each post bolted to its bridge. Fill to the pour line, packing the mix up under the bevel strips.

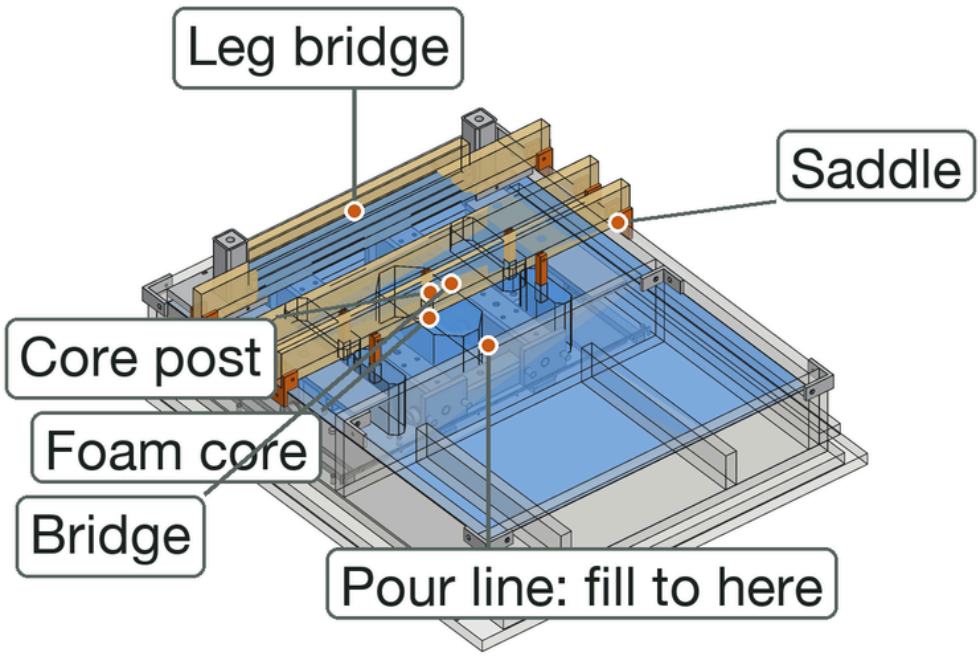


Base, front half (against the rear half)


1. After the cure: bridges, partition and struts off. Pull the beads, tape the groove, and wax the rear half's split face, end plates and dowel pins.

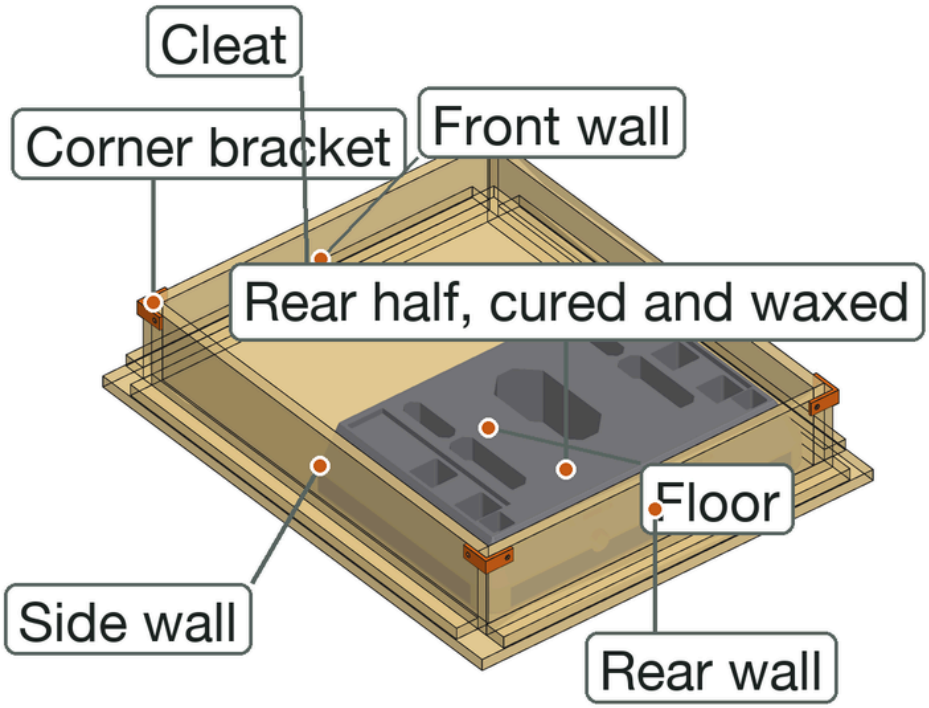

2. Trough and gutter formers, corner fillers, bevel strips and pocket plugs on; the front grid in, its rail bars and BF pad screwed down and its split end plates onto the dowel pins; inserts and legs.

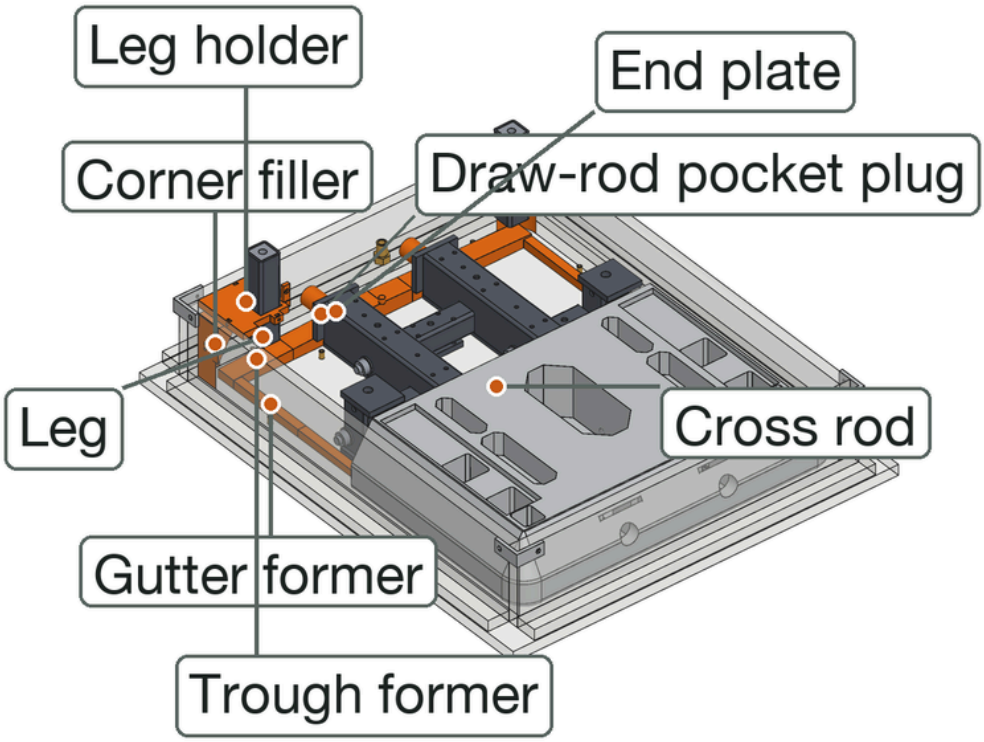


3. Skin, cores, bridges, fill (packed under the bevel strips). After the cure, take it apart and split the halves with wedges.

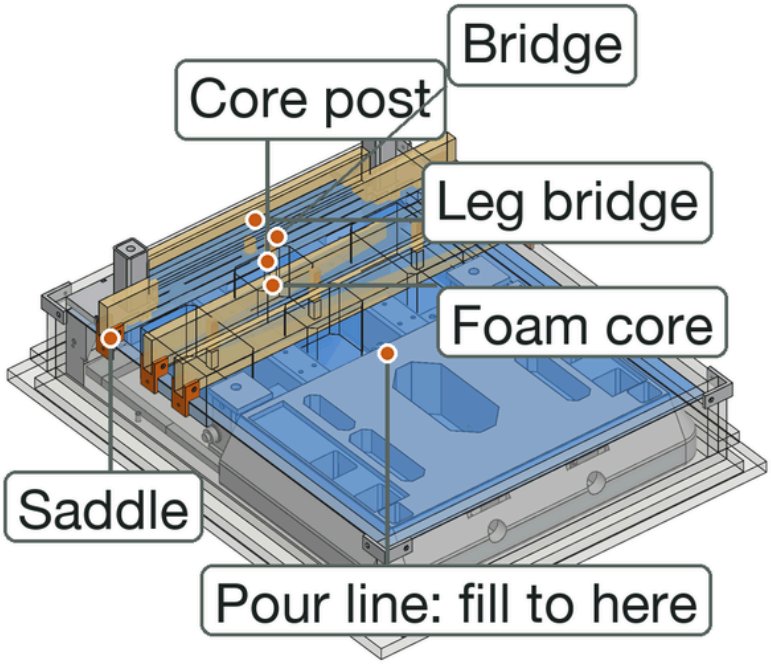

9. Pour

- Fill to the **pour line**, 25 mm below the wall tops (pencilled from the templates, or with the printed pour-line gauge clipped over a wall).
- Vibrate each layer until it stops bubbling; check the brackets halfway through.
- Strike the top off with a straight board in the two printed **screed shoes**: they hang it from the wall tops with its bottom edge on the pour line.

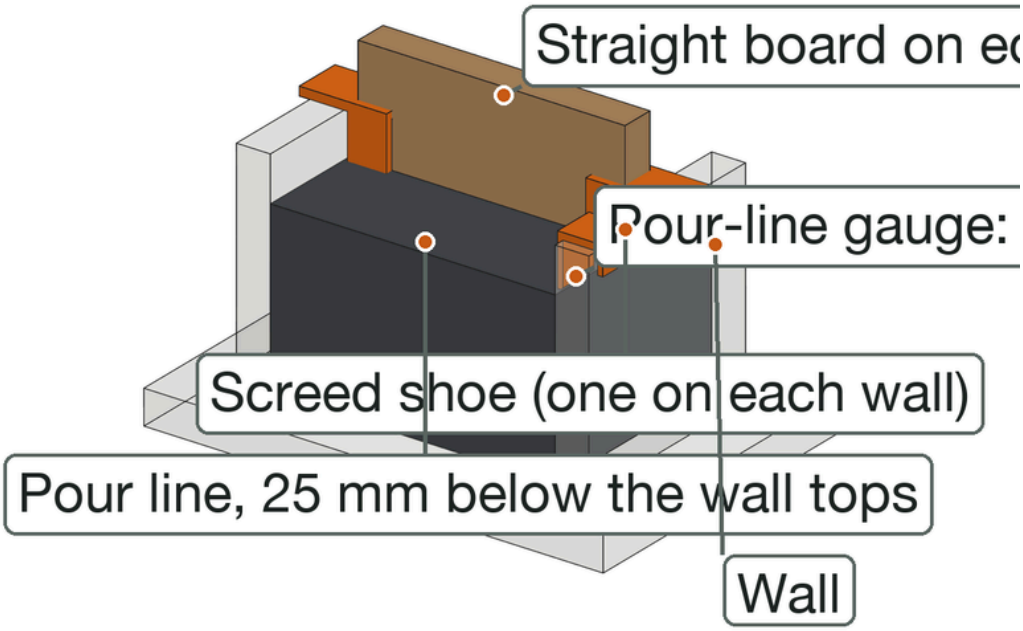

10. Take apart

1. After the full cure: bridges and saddles off, then corner brackets, then cleats; pull the walls off.
2. Screws, bolts and rods out from outside; lift the casting off the floor.
3. Unbolt and pull the formers and fillers.
4. Scrape and re-wax the boards; keep each mold's kit in a box. The kit is reused.

11. If something doesn't fit


Problem	Fix
Nut won't slide under the hole	Clean the pocket with a nut on a bolt; warm the nut
Bracket or saddle loose on the board	Board thinner than set: tape shim, or set `mold_board` and reprint
Pin won't go in	Run the 1/8 in bit through again; trim the pin tip
Foam core moves	Tighten its post bolt; carpet tape under it

Problem	Fix
Printed part won't go on or into a steel tube	File the weld seam; sand the part. Several tight: caliper the tube, put its sizes in `frame_tube` / `post_tube`, re-run and reprint
Printed part loose on a tube	A wrap of tape round the part
Leak at a corner	Silicone fillet inside before waxing; check the brackets and diagonals
Former stuck after curing	Bolts out first, then a dowel and a light tap

Appendix: hole maps

Every board as seen from the face you mark: x from the left edge, y from the bottom edge (for a wall, the edge on the floor). The templates carry the same holes at full size.

Base floor

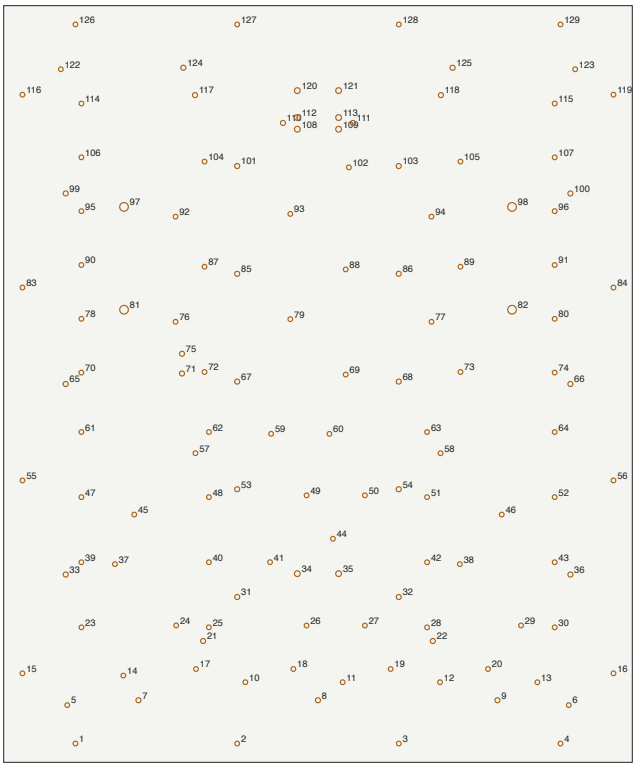

0,0 · 700 x 843 mm · seen from the cast side

#	x	y	Hole	For
1	80	21	4.5	cleat
2	260	21	4.5	cleat
3	440	21	4.5	cleat
4	620	21	4.5	cleat
5	71	64	3.4	corner-R
6	630	64	3.4	corner-L
7	150	69	5.5	M5 insert screw


#	x	y	Hole	For
8	350	69	5.5	M5 insert screw
9	550	69	5.5	M5 insert screw
10	269	89	4.5	trough
11	378	89	4.5	trough
12	486	89	4.5	trough
13	595	89	4.5	trough
14	133	97	4.5	trough
15	21	99	4.5	cleat
16	680	99	4.5	cleat
17	214	104	4.5	trough
18	323	104	4.5	trough
19	431	104	4.5	trough
20	540	104	4.5	trough
21	222	135	5.5	M5 insert screw
22	478	135	5.5	M5 insert screw
23	87	150	4.5	gutter-R
24	192	152	3.2	floor
25	229	150	3.2	floor
26	338	152	3.2	floor
27	402	152	3.2	floor
28	472	150	3.2	floor
29	577	152	3.2	floor
30	614	150	4.5	gutter-L
31	260	184	5.5	M5 screw into the steel
32	440	184	5.5	M5 screw into the steel
33	69	209	5.5	M5 insert screw
34	327	210	6.5	M6 screw into a pad
35	373	210	6.5	M6 screw into a pad
36	631	209	5.5	M5 insert screw
37	124	221	3.2	floor
38	508	221	3.2	floor
39	87	223	4.5	gutter-R
40	229	223	3.2	floor
41	297	223	3.2	floor
42	472	223	3.2	floor

#	x	y	Hole	For
43	614	223	4.5	gutter-L
44	367	249	3.2	floor
45	145	276	3.2	floor
46	555	276	3.2	floor
47	87	295	3.4	gutter-R
48	229	295	3.2	floor
49	338	297	3.2	floor
50	402	297	3.2	floor
51	472	295	3.2	floor
52	614	295	3.4	gutter-L
53	260	304	5.5	M5 screw into the steel
54	440	304	5.5	M5 screw into the steel
55	21	314	4.5	cleat
56	680	314	4.5	cleat
57	214	344	3.2	floor
58	487	344	3.2	floor
59	298	366	3.2	floor
60	363	366	3.2	floor
61	87	368	3.4	gutter-R
62	229	368	3.2	floor
63	472	368	3.2	floor
64	614	368	3.4	gutter-L
65	69	421	5.5	M5 insert screw
66	631	421	5.5	M5 insert screw
67	260	424	5.5	M5 screw into the steel
68	440	424	5.5	M5 screw into the steel
69	381	432	3.2	floor
70	87	434	3.4	gutter-R
71	199	433	5.5	M5 insert screw
72	224	435	3.2	floor
73	509	435	3.2	floor
74	614	434	3.4	gutter-L
75	199	455	5.5	M5 insert screw
76	191	491	3.2	floor
77	477	491	3.2	floor

#	x	y	Hole	For
78	87	494	3.4	gutter-R
79	319	494	3.2	floor
80	614	494	3.4	gutter-L
81	134	504	9.6	3/8 dowel
82	566	504	9.6	3/8 dowel
83	21	529	4.5	cleat
84	680	529	4.5	cleat
85	260	544	5.5	M5 screw into the steel
86	440	544	5.5	M5 screw into the steel
87	224	552	3.2	floor
88	381	549	3.2	floor
89	509	552	3.2	floor
90	87	554	3.4	gutter-R
91	614	554	3.4	gutter-L
92	191	608	3.2	floor
93	319	611	3.2	floor
94	477	608	3.2	floor
95	87	614	3.4	gutter-R
96	614	614	3.4	gutter-L
97	134	619	9.6	3/8 dowel
98	566	619	9.6	3/8 dowel
99	69	634	5.5	M5 insert screw
100	631	634	5.5	M5 insert screw
101	260	664	5.5	M5 screw into the steel
102	385	663	3.2	floor
103	440	664	5.5	M5 screw into the steel
104	224	669	3.2	floor
105	509	669	3.2	floor
106	87	674	3.4	gutter-R
107	614	674	3.4	gutter-L
108	327	705	6.5	M6 screw into a pad
109	373	705	6.5	M6 screw into a pad
110	311	712	5.5	M5 screw into the steel
111	389	712	5.5	M5 screw into the steel
112	327	718	6.5	M6 screw into a pad

#	x	y	Hole	For
113	373	718	6.5	M6 screw into a pad
114	87	734	3.4	gutter-R
115	614	734	3.4	gutter-L
116	21	744	4.5	cleat
117	213	743	5.5	M5 insert screw
118	487	743	5.5	M5 insert screw
119	680	744	4.5	cleat
120	327	748	6.5	M6 screw into a pad
121	373	748	6.5	M6 screw into a pad
122	64	772	3.4	corner-R
123	637	772	3.4	corner-L
124	200	774	5.5	M5 insert screw
125	500	774	5.5	M5 insert screw
126	80	822	4.5	cleat
127	260	822	4.5	cleat
128	440	822	4.5	cleat
129	620	822	4.5	cleat

Base front wall

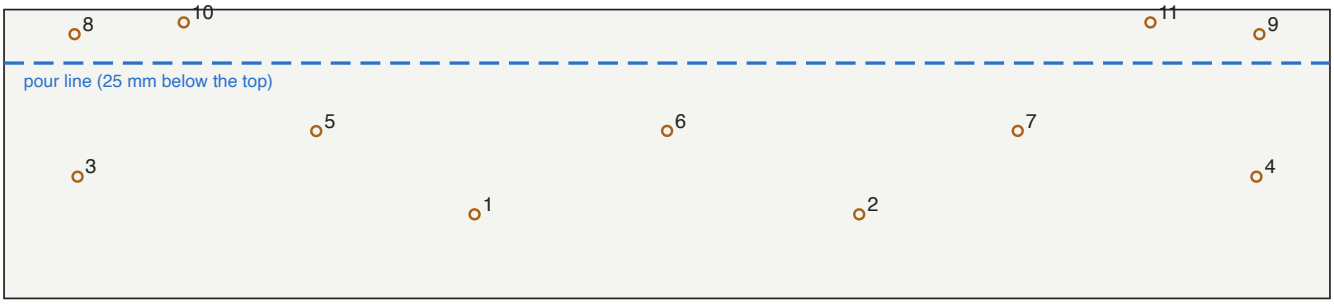


0,0 · 620 x 135 mm · seen from the cast side

#	x	y	Hole	For
1	220	39	4.5	draw-pocket-L
2	400	39	4.5	draw-pocket-R
3	34	57	4.5	corner-L
4	586	57	4.5	corner-R
5	146	78	4.5	bevel-end
6	310	78	4.5	bevel-end
7	474	78	4.5	bevel-end

#	x	y	Hole	For
8	33	124	4.5	corner bracket
9	588	124	4.5	corner bracket
10	84	129	4.5	leg holder
11	536	129	4.5	leg holder


Base rear wall

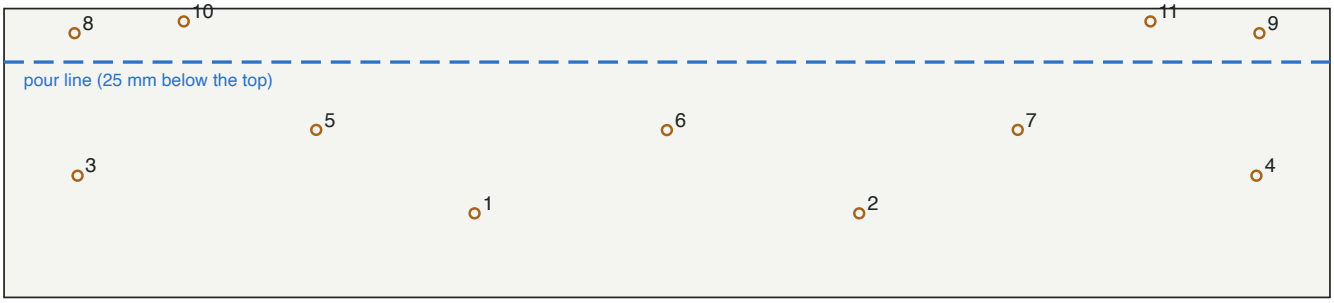

0,0 · 620 x 135 mm · seen from the cast side

#	x	y	Hole	For
1	220	39	4.5	draw-pocket-R
2	400	39	4.5	draw-pocket-L
3	34	57	4.5	corner-R
4	586	57	4.5	corner-L
5	146	78	4.5	bevel-end
6	310	78	4.5	bevel-end
7	474	78	4.5	bevel-end
8	33	124	4.5	corner bracket
9	588	124	4.5	corner bracket
10	84	129	4.5	leg holder
11	536	129	4.5	leg holder


Base side wall, left

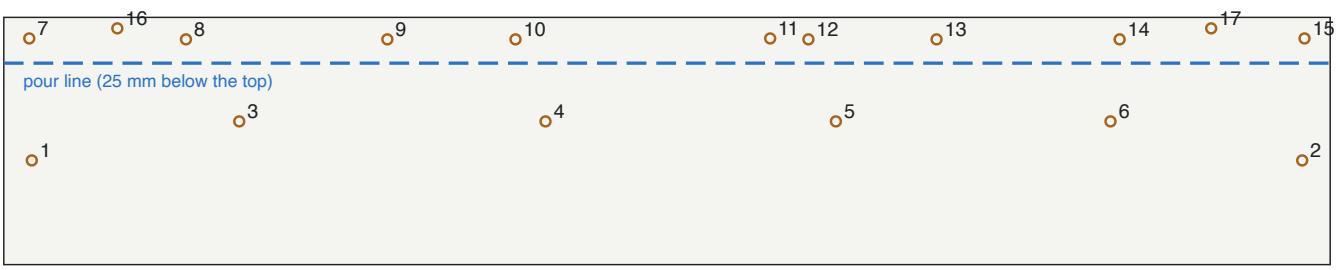

0,0 · 724 x 135 mm · seen from the cast side

#	x	y	Hole	For
1	15	57	4.5	corner-L
2	709	57	4.5	corner-L
3	129	78	4.5	bevel-L
4	296	78	4.5	bevel-L
5	454	78	4.5	bevel-L
6	604	78	4.5	bevel-L
7	14	124	4.5	corner bracket
8	100	123	4.5	saddle
9	210	123	4.5	saddle
10	280	123	4.5	saddle
11	419	124	4.5	corner bracket
12	440	123	4.5	saddle
13	510	123	4.5	saddle
14	610	123	4.5	saddle
15	711	124	4.5	corner bracket
16	62	129	4.5	leg holder
17	660	129	4.5	leg holder

Base side wall, right

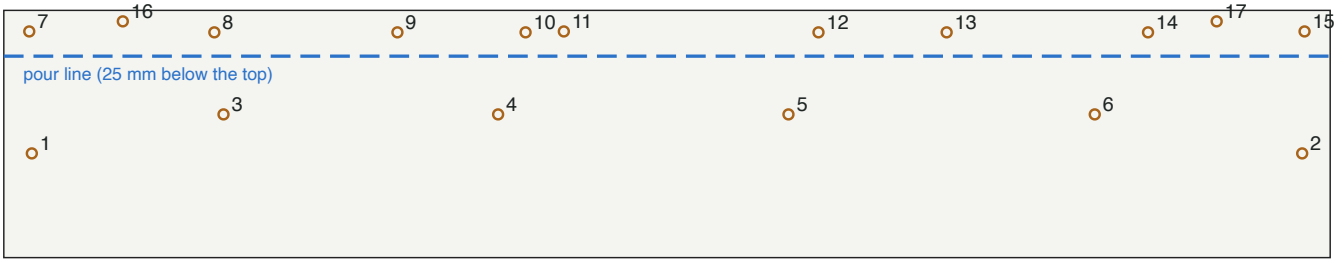


0,0 · 724 x 135 mm · seen from the cast side

#	x	y	Hole	For
1	15	57	4.5	corner-R
2	709	57	4.5	corner-R
3	120	78	4.5	bevel-R
4	270	78	4.5	bevel-R
5	429	78	4.5	bevel-R
6	596	78	4.5	bevel-R
7	14	124	4.5	corner bracket
8	115	123	4.5	saddle

#	x	y	Hole	For
9	215	123	4.5	saddle
10	285	123	4.5	saddle
11	306	124	4.5	corner bracket
12	445	123	4.5	saddle
13	515	123	4.5	saddle
14	625	123	4.5	saddle
15	711	124	4.5	corner bracket
16	65	129	4.5	leg holder
17	662	129	4.5	leg holder


Base partition

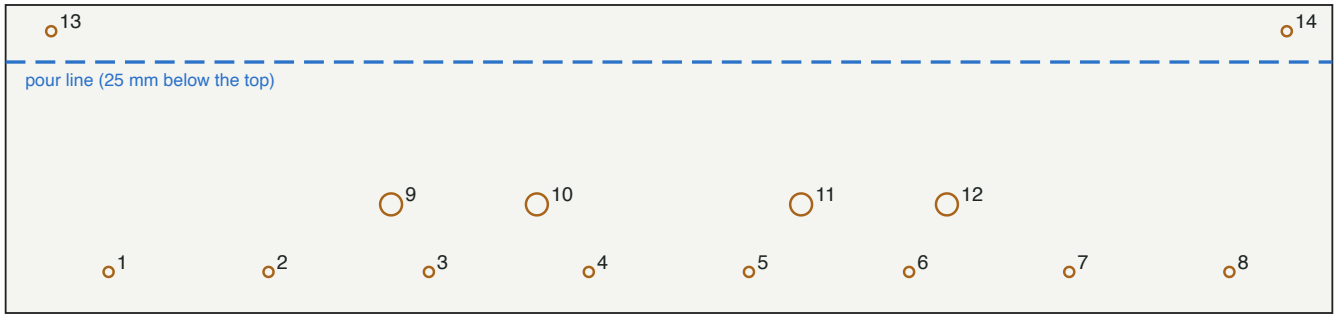

0,0 · 582 x 135 mm · seen from the cast side

#	x	y	Hole	For
1	45	18	3.2	split-gasket-groove
2	115	18	3.2	split-gasket-groove
3	186	18	3.2	split-gasket-groove
4	256	18	3.2	split-gasket-groove
5	326	18	3.2	split-gasket-groove
6	397	18	3.2	split-gasket-groove
7	467	18	3.2	split-gasket-groove
8	537	18	3.2	split-gasket-groove
9	169	48	9.6	3/8 dowel pin (split)
10	233	48	9.6	3/8 dowel pin (split)
11	349	48	9.6	3/8 dowel pin (split)
12	413	48	9.6	3/8 dowel pin (split)
13	20	124	4.5	corner bracket
14	562	124	4.5	corner bracket


Base cleat, front



0,0 · 620 x 38 mm · seen from the outside (top)

#	x	y	Hole	For
1	580	19	4.5	cleat
2	400	19	4.5	cleat
3	220	19	4.5	cleat
4	40	19	4.5	cleat

Base cleat, rear



0,0 · 620 x 38 mm · seen from the outside (top)

#	x	y	Hole	For
1	580	19	4.5	cleat
2	400	19	4.5	cleat
3	220	19	4.5	cleat
4	40	19	4.5	cleat

Base cleat, left



0,0 · 724 x 38 mm · seen from the outside (top)

#	x	y	Hole	For
1	684	19	4.5	cleat
2	470	19	4.5	cleat
3	255	19	4.5	cleat
4	40	19	4.5	cleat


Base cleat, right



0,0 · 724 x 38 mm · seen from the outside (top)

#	x	y	Hole	For
1	684	19	4.5	cleat
2	470	19	4.5	cleat
3	255	19	4.5	cleat
4	40	19	4.5	cleat


Base bridge y=-230

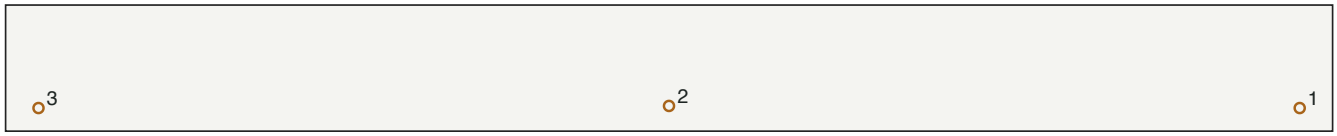

0,0 · 633 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	618	11	4.5	saddle
2	317	12	4.5	core post
3	16	11	4.5	saddle

Base bridge y=-130

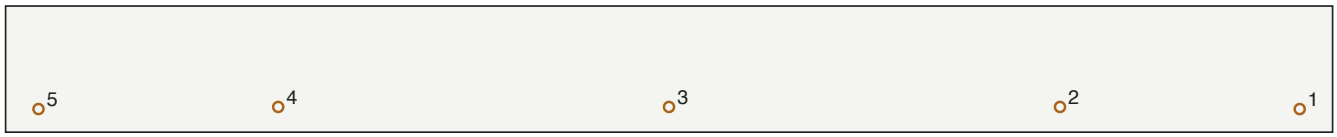

0,0 · 633 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	618	11	4.5	saddle
2	503	12	4.5	core post
3	317	12	4.5	core post
4	130	12	4.5	core post
5	16	11	4.5	saddle


Base bridge y=-60



0,0 · 633 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	618	11	4.5	saddle
2	16	11	4.5	saddle


Base bridge y=100

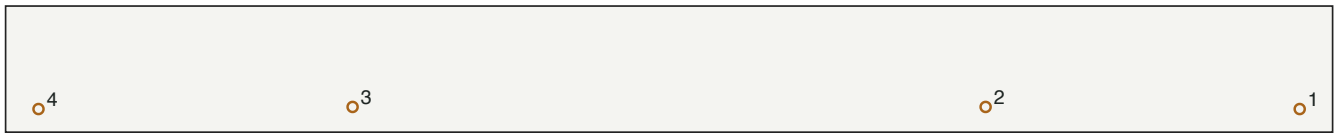

0,0 · 633 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	618	11	4.5	saddle
2	468	12	4.5	core post
3	166	12	4.5	core post
4	16	11	4.5	saddle


Base bridge y=170

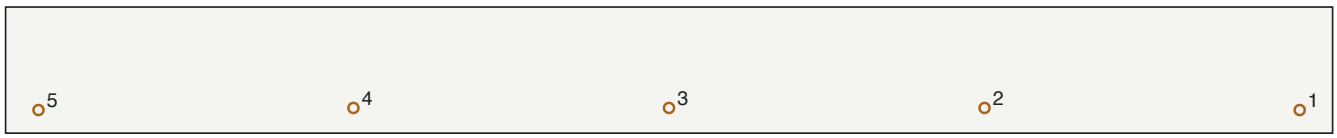

0,0 · 633 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	618	11	4.5	saddle
2	467	12	4.5	core post
3	317	12	4.5	core post
4	166	12	4.5	core post
5	16	11	4.5	saddle

Base bridge y=280

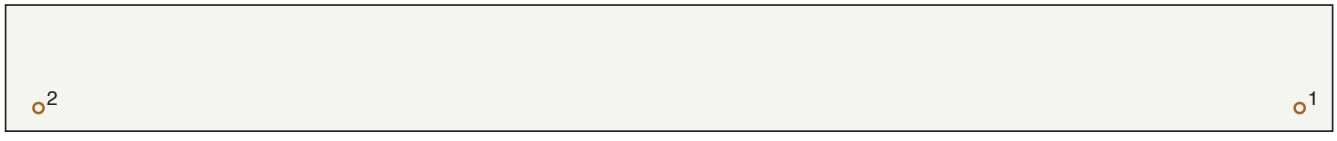


0,0 · 633 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	618	11	4.5	saddle

#	x	y	Hole	For
2	16	11	4.5	saddle


Base leg bridge y=-280

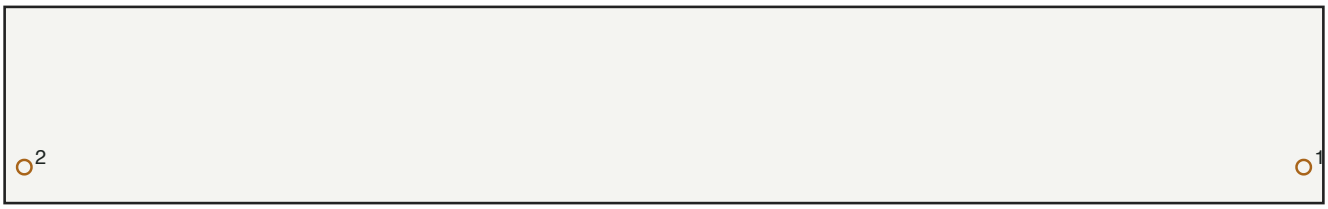

0,0 · 402 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	396	11	4.5	leg holder
2	6	11	4.5	leg holder

Base leg bridge y=318

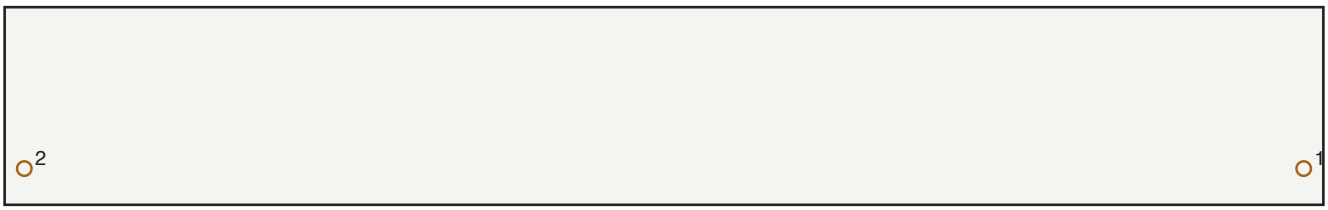

0,0 · 402 x 60 mm · seen from the outside (top)

#	x	y	Hole	For
1	396	11	4.5	leg holder
2	6	11	4.5	leg holder