Print guide

DIY CNC epoxy-granite mill · October 2026

Every printed part for the moulds, the castings and the machine, cut to fit a Bambu A1 mini (180 mm cube; no piece is over 170 mm). The STL files are in `print/`, one folder per casting, with the list in `print/manifest.csv`. They are written by `model/build_cnc.py` on every run. How the moulds go together is in the mould guide.


About 125 prints, roughly 1.4 kg of PETG. The filament figures are rough estimates.

Settings

- **PETG for everything.** Thick sections of curing epoxy get warm, and PLA softens at about 55 °C.
- 0.4 mm nozzle, 0.2 mm layers. Every file is already turned the way it prints best, without supports.
- **Cores** (`core-*`): thin shells, 1.2 mm walls (three lines), so they print solid; the posts get 2 walls and 10 % infill. The sand inside holds the walls while casting.
- **Fillers, formers, plugs** (`filler-*`, `former-*`, `plug-*`): 2 walls, 10 % infill. They only have to hold their shape against the mix; the nut pockets have their own walls.
- **Mould kit** (`kit-*`: brackets, saddles, holders, bushings): 3 walls, 15 % infill. Print one, check it over a 19 mm offcut of your board, then the rest.
- **Liners and cast-in parts** (`liner-*`, `cast-in-*`): 3 walls, 40 % infill.
- **Fits.** Slip fits are 0.15 mm a side, nut pockets 0.15 mm over the nut, pins 3.0 mm into a 1/8 in hole. If your printer runs tight, print a bracket and a former first and adjust the horizontal expansion (XY compensation) rather than the files.

Joining the pieces

- **Nuts.** Every piece that bolts to a board has its nut built in. On cast faces the nut drops into a pocket in the face against the board and slides sideways under the bolt hole; on brackets it presses into a hex pocket. Fit the nuts before the piece goes on the board.
- **Parts cut to fit the bed** (`-partNofM`) have a peg on one cut face and a socket on the other: push them together, no glue. Each part has its own bolts or pins to the board.
- **Cores** cut in two have a bulkhead on each side of the cut with two M3 x 10 bolts through them.
- **Pins.** Thin formers (gasket-groove beads, the shallow end of a gutter) have 3 mm pins that push into 1/8 in holes. Nothing else holds them; the casting presses them onto the board.
- **Removable pieces** (formers, fillers, plugs, kit): 3-5 coats of paste wax and PVA like the boards. **Pieces that stay in** (cores, liners, cast-in parts): no wax; scuff and degrease them so the epoxy grips. Fill the cores with dry sand before the bridge goes on.

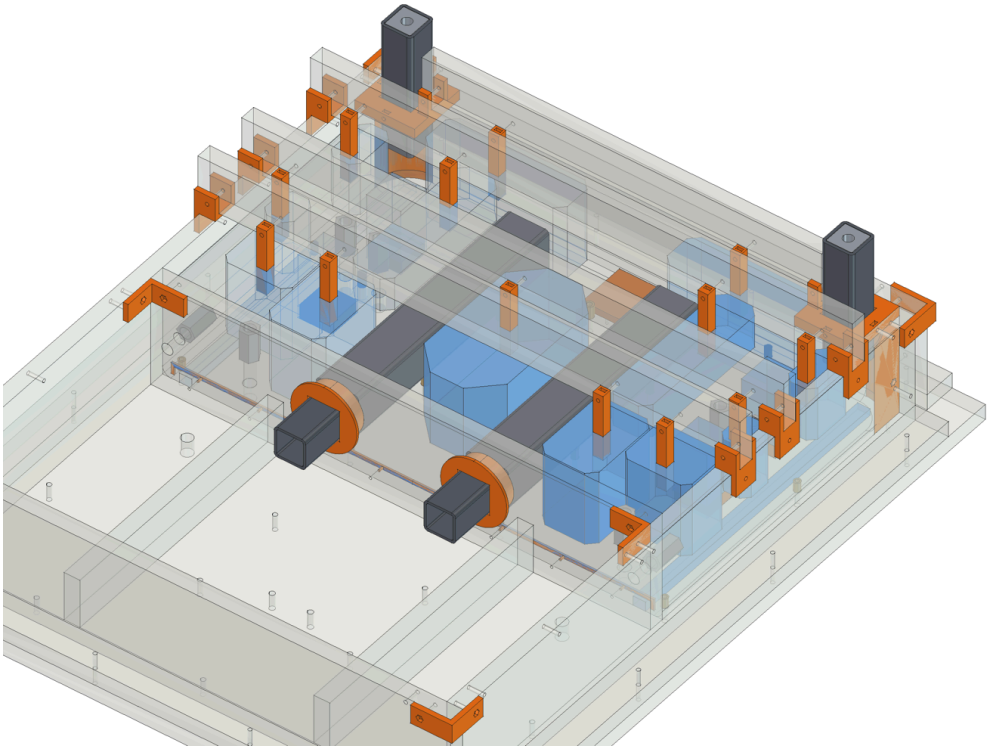

Foam pieces

With `foam=True` (the default in `model/build_cnc.py`) the bulky mould pieces are XPS foam board instead of PETG: the base pocket cores (only their posts are printed), the socket cores, the coolant trough and gutters, and the beam's back-edge filler. The mould guide lists them with their sizes. Set `foam=False` and re-run to print them all instead (about 1.7 kg more PETG).

Base mould kit (both halves)

Folder `print/base-box/`, about 202 g.

File	What	Qty	Size (mm)	Notes
`kit-corner-bracket.stl`	Mould kit (reused)	4	50 x 50 x 23	
`kit-partition-bracket.stl`	Mould kit (reused)	2	44 x 44 x 23	
`kit-saddle.stl`	Mould kit (reused)	2	53 x 31 x 25	The rear half needs six; four move over for the front half.
`kit-leg-holder.stl`	Mould kit (reused)	4	72 x 72 x 40	Set the leg 92 mm proud of the holder and tighten the pinch screw (M4 x 20).

Base, rear half (cast first)

Folder `print/base-rear/`, about 342 g.

File	What	Qty	Size (mm)	Notes
`former-motor-relief.stl`	Former (removable)	1	72 x 60 x 14	Bolts to the floor from underneath (the base is cast top face down).
`filler-corner-L.stl`	Filler (removable)	1	40 x 40 x 110	Rounded corner; bolts to the floor and both walls.
`filler-corner-R.stl`	Filler (removable)	1	40 x 40 x 110	Rounded corner; bolts to the floor and both walls.
`former-split-gasket-groove-part1of4.stl`	Former (removable)	1	145 x 14 x 8	Pins into the partition.
`former-split-gasket-groove-part2of4.stl`	Former (removable)	1	145 x 4 x 8	
`former-split-gasket-groove-part3of4.stl`	Former (removable)	1	145 x 4 x 8	
`former-split-gasket-groove-part4of4.stl`	Former (removable)	1	145 x 14 x 8	
`core-centre-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-foot-b-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-foot-c-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-knee-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-outer-a-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-outer-b-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-rear-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-foot-b-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-foot-c-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-knee-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-outer-a-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-outer-b-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-rear-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`plug-socket-plug.stl`	Plug (removable)	4	41 x 41 x 15	Fills the open end of a socket; bolts to the floor.

File	What	Qty	Size (mm)	Notes
`kit-spigot-bushing.stl`	Mould kit (reused)	2	79 x 79 x 22	Push fit in a 2-1/2 in hole-saw hole; flange on the far side.
`cast-in-base-rear-tube-plug-l.stl`	Cast-in part (stays in)	2	42 x 10 x 42	Cast in, stays.
`cast-in-base-rear-spigot-sleeve-l.stl`	Cast-in part (stays in)	2	44 x 69 x 44	Cast in, stays.
`cast-in-leg-rear-l-plug.stl`	Cast-in part (stays in)	2	30 x 30 x 10	Cast in, stays.

Base, front half

Folder `print/base-front/`, about 216 g.

File	What	Qty	Size (mm)	Notes
`filler-corner-L.stl`	Filler (removable)	1	40 x 40 x 110	Rounded corner, and the plug that forms the draw-rod nut pocket; bolts to the floor and both walls.
`filler-corner-R.stl`	Filler (removable)	1	40 x 40 x 110	Rounded corner, and the plug that forms the draw-rod nut pocket; bolts to the floor and both walls.
`core-centre-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-outboard-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-trough-band-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-draw-rod-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-foot-a-L-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-outboard-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-trough-band-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-draw-rod-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`core-foot-a-R-post.stl`	Pocket core (shell, stays in)	1	12 x 12 x 81	Post for a foam core: push it 30 mm into a snug hole in the foam and glue it.
`cast-in-base-front-tube-plug-l.stl`	Cast-in part (stays in)	2	42 x 10 x 42	Cast in, stays.
`cast-in-base-front-spigot-sleeve-l.stl`	Cast-in part (stays in)	2	44 x 69 x 44	Cast in, stays.

File	What	Qty	Size (mm)	Notes
`cast-in-leg-front-l-plug.stl`	Cast-in part (stays in)	2	30 x 30 x 10	Cast in, stays.

Uprights (two moulds: print quantities are for both)

Folder `print/upright/`, about 438 g.

File	What	Qty	Size (mm)	Notes
`kit-back-bracket.stl`	Mould kit (reused)	4	33 x 33 x 23	
`kit-front-bracket.stl`	Mould kit (reused)	8	50 x 50 x 22	Two at the top of the front board and two at its foot (only the side-plate bolt there).
`kit-saddle-flat.stl`	Mould kit (reused)	4	31 x 25 x 25	The bridge rests on them; its rods locate it.
`filler-toe-filler.stl`	Filler (removable)	2	80 x 60 x 48	Rounds the nose into the slope; the front board stands on it. Bolts to the floor.
`former-foot-gasket-groove-part1of4.stl`	Former (removable)	2	68 x 139 x 8	Pins into the floor.
`former-foot-gasket-groove-part2of4.stl`	Former (removable)	2	4 x 139 x 8	
`former-foot-gasket-groove-part3of4.stl`	Former (removable)	2	4 x 139 x 8	
`former-foot-gasket-groove-part4of4.stl`	Former (removable)	2	68 x 139 x 8	
`plug-slope-pocket--60.stl`	Plug (removable)	2	32 x 32 x 54	Forms a nut pocket in the slope; bolts to the front board; its rod stops inside it.
`plug-slope-pocket-40.stl`	Plug (removable)	2	32 x 32 x 54	Forms a nut pocket in the slope; bolts to the front board; its rod stops inside it.
`plug-tie-rod-pocket.stl`	Plug (removable)	4	32 x 32 x 49	Forms a top nut pocket: slides down its rod; the bridge holds it down.
`kit-plate-spacer.stl`	Mould kit (reused)	4	16 x 16 x 31	Between the bridge and the top plate, on its greased 3/8 bolt.
`kit-post-bushing.stl`	Mould kit (reused)	4	79 x 79 x 22	Push fit in a 2-1/2 in hole-saw hole in the floor, flange underneath.
`cast-in-post-l1-plug.stl`	Cast-in part (stays in)	4	30 x 30 x 10	Cast in, stays.

Beam

Folder `print/beam/`, about 117 g.

File	What	Qty	Size (mm)	Notes
`kit-corner-bracket.stl`	Mould kit (reused)	4	50 x 50 x 23	
`kit-tube-locator.stl`	Mould kit (reused)	4	44 x 44 x 51	Square end into the tube, stem to the end wall, M4 x 70 through the wall into a nut slid in from inside the tube. Leaves a 16 mm hole in each beam end.
`kit-dowel-stop.stl`	Mould kit (reused)	2	18 x 18 x 11	Pushes into the dowel hole from outside so the dowel stands 10 mm proud.

Machine parts

Folder `print/machine/`, about 123 g.

File	What	Qty	Size (mm)	Notes
`part-pocket-cap-l3.stl`	Machine part	4	32 x 32 x 42	
`part-chain-mount-fixed.stl`	Machine part	1	25 x 38 x 21	
`part-chain-mount-moving.stl`	Machine part	1	37 x 123 x 45	
`part-sump-filter-frame-part1of2.stl`	Machine part	1	148 x 6 x 92	
`part-sump-filter-frame-part2of2.stl`	Machine part	1	148 x 6 x 92	