
Beam mold

DIY CNC epoxy-granite mill · October 2026

How to make the beam mold. Drilling templates: `templates/beam-templates.pdf`. The complete guide (all the molds and the sheet layout for the boards) is `molds-complete.pdf`.

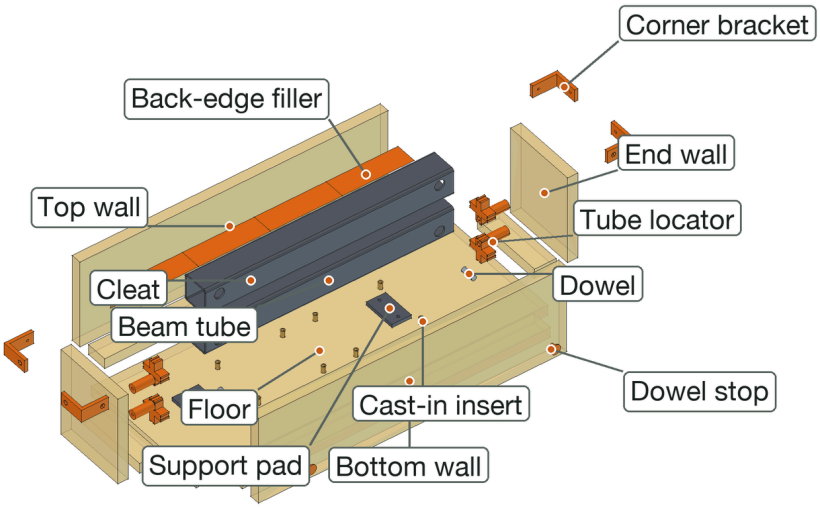


In short: melamine boards bolt together with printed brackets. Every printed piece bolts or pins to its board from outside. The walls stand 25 mm above the pour line, so no bolt goes through a face the mix touches. Nothing is glued, and it all comes apart for the next casting.


Order of work: print → cut the boards → mark them with the templates and drill → wax → assemble → pour → take apart.

1. How it works


- **Walls** stand on the floor against bolted-down **cleats**; **corner brackets** square the tops. All the bolts go through the top 25 mm, above the pour line.

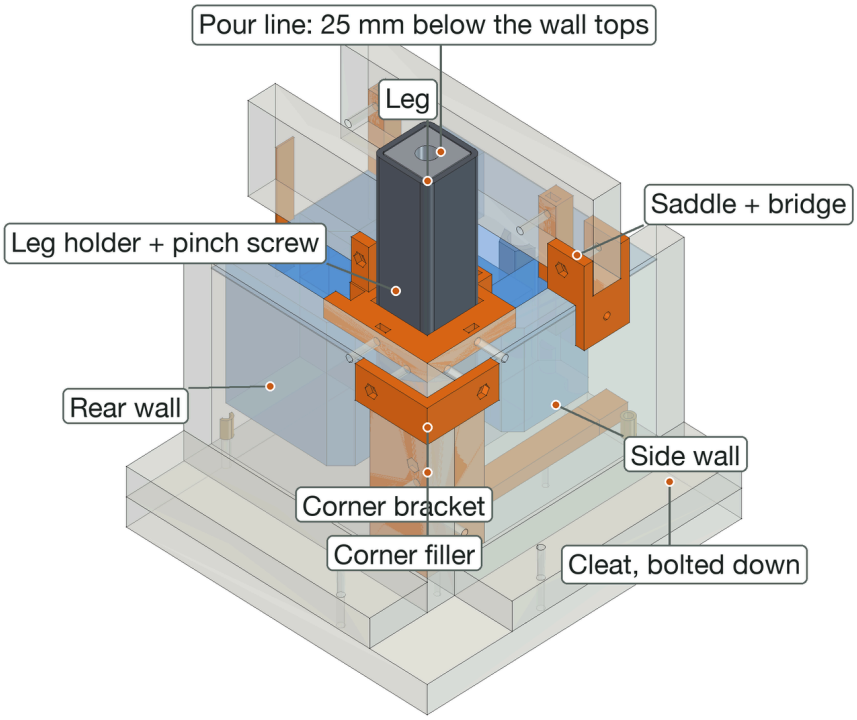


- **Printed pieces** have a nut built in: it goes into a pocket on the board side and slides under the hole; an M4 bolt comes through the board from outside.

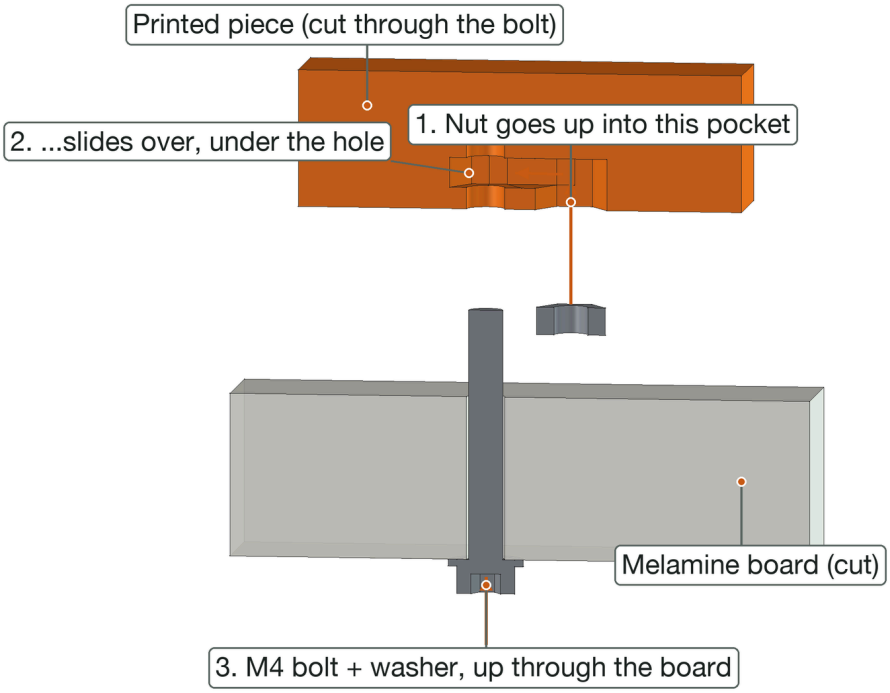

- **Thin pieces** (gasket-groove beads, motor relief) have 3 mm pins that push into 1/8 in holes.

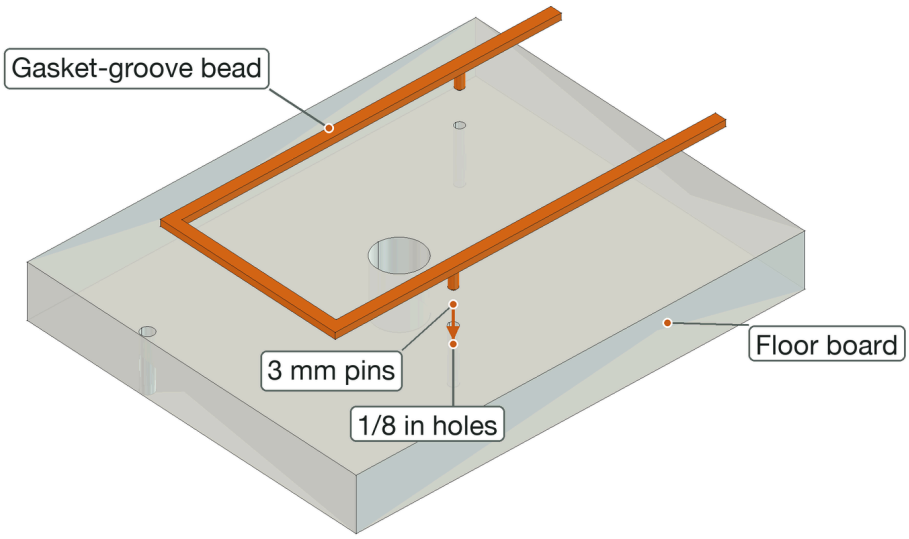

- **Long pieces** are printed in parts that peg together; each part bolts down on its own.

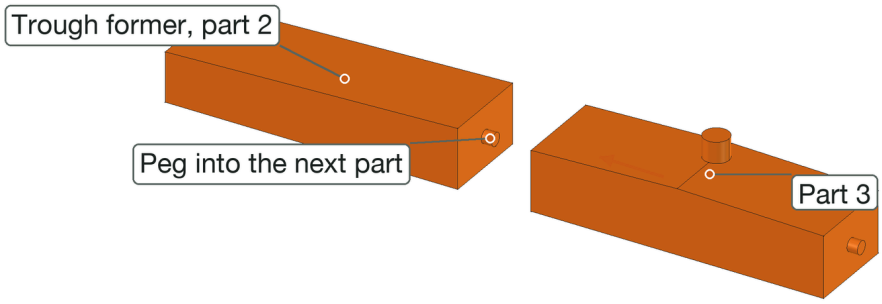

- **Fits** are 0.15 mm a side, and drawn for 19.05 mm board (Home Depot's 3/4 in melamine is a true 0.750 in). Measure yours; if it differs, set `mold_board` in `model/build_cnc.py` and re-run it.

2. What you need

Material	Amount	Notes
Melamine board, 3/4 in	about 0.5 m2	all the molds come out of two 4 x 8 ft sheets
PETG	0.18 kg	sliced; everything printed for the machine fits in two 1 kg rolls
Paste wax and PVA	1 each	release
3/8 in quarter-round PVC molding	a few meters	the rounded outside edges

Hardware	Qty
M4 nut	26
M4 washer	26
M4 x 30 bolt	12
M4 x 45 bolt	10
M4 x 70 bolt	4
M5 x 20 screw, greased (holds an insert)	8
M6 x 20 screw, greased (holds a pad)	6
1/2 in plain steel rod, greased (forms a beam bolt hole), 198 mm	8

Add about 10 % spare small bolts, nuts and washers. **Tools:** drill and brad-point bits (sizes in section 5), a square, clamps, a 7 mm nut driver, a 3 mm hex key, an awl.

3. Print

18 prints, 0.18 kg, about 14 hours (sliced; settings in the print guide). Print one corner bracket and one saddle first and check them on a board offcut. Press or slide the nuts in before the pieces go on the boards.

File	Qty	g	Time each
`beam/kit-corner-bracket.stl`	4	33	40m 3s
`beam/filler-back-edge-part1of4.stl`	1	19	1h 14m 46s
`beam/filler-back-edge-part2of4.stl`	1	19	1h 14m 46s
`beam/filler-back-edge-part3of4.stl`	1	19	1h 14m 46s
`beam/filler-back-edge-part4of4.stl`	1	19	1h 15m 1s
`beam/kit-tube-locator.stl`	4	43	58m 26s
`beam/kit-dowel-stop.stl`	2	2	6m 51s
`tools/kit-pour-gauge.stl`	2	9	24m 33s
`tools/kit-screed-shoe.stl`	2	20	44m 42s

4. Cut the boards

Have the store rip the strips; crosscut at home. Write each board's name on its outside face, and mark the cast face (the melamine face the mix touches).

Board	Qty	Size (mm)	Notes
Beam floor	1	648 x 258	
Beam top wall	1	568 x 165	
Beam bottom wall	1	568 x 165	
Beam end wall, left	1	140 x 165	
Beam end wall, right	1	140 x 165	
Beam cleat, top	1	568 x 40	offcut strip, flat on the floor
Beam cleat, bottom	1	568 x 40	offcut strip, flat on the floor
Beam cleat, left	1	140 x 40	offcut strip, flat on the floor
Beam cleat, right	1	140 x 40	offcut strip, flat on the floor

5. Mark and drill

1. Print the drilling templates (`templates/beam-templates.pdf`) at **actual size** and check the 100 mm square.
2. Tape each board's pages onto it: printed edges on the board's edges, grid lines lined up.
3. Awl through every crosshair. Pencil the dashed **pour line** on the walls.
4. Drill from the marked face, at the size the color legend gives. Pilot the big ones; the 63.5 mm holes are a 2-1/2 in hole saw.

The appendix has every board as a drawing and a table, if you would rather measure.

Hole	Drill	For
4.5 mm	11/64 in	back-edge, cleat, corner bracket, tube locator
5.5 mm	7/32 in	M5 insert screw
6.5 mm	17/64 in	M6 insert screw
9.6 mm	25/64 in	3/8 dowel
13.1 mm	33/64 in	1/2 core rod

6. Wax


- 3-5 coats of paste wax on every face the mix touches, boards and removable printed pieces, then PVA. Don't wax pieces that stay in (core posts, cast-in parts): scuff and degrease them.
- Glue quarter-round into the floor-to-wall corners that make outside edges; silicone fillets elsewhere.
- Grease every screw, bolt and rod that comes out of the casting.

7. Assemble


Beam

Cast front (rail) face down, back open.


1. Cleats bolted down; support pads and riser inserts screwed to the floor.

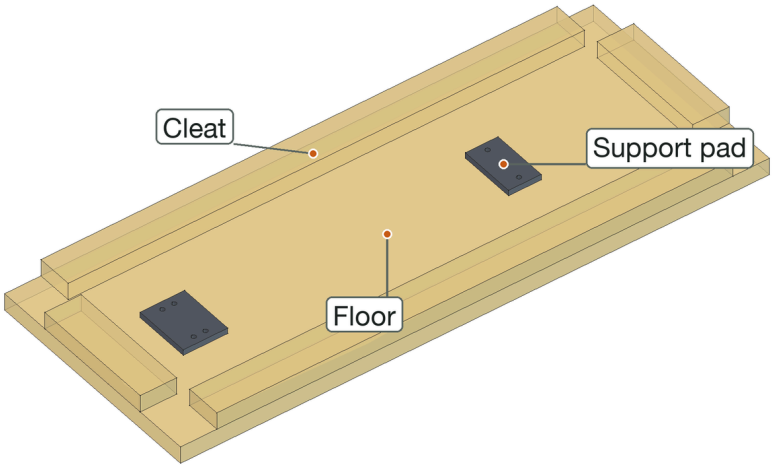


2. Walls against the cleats; four corner brackets.

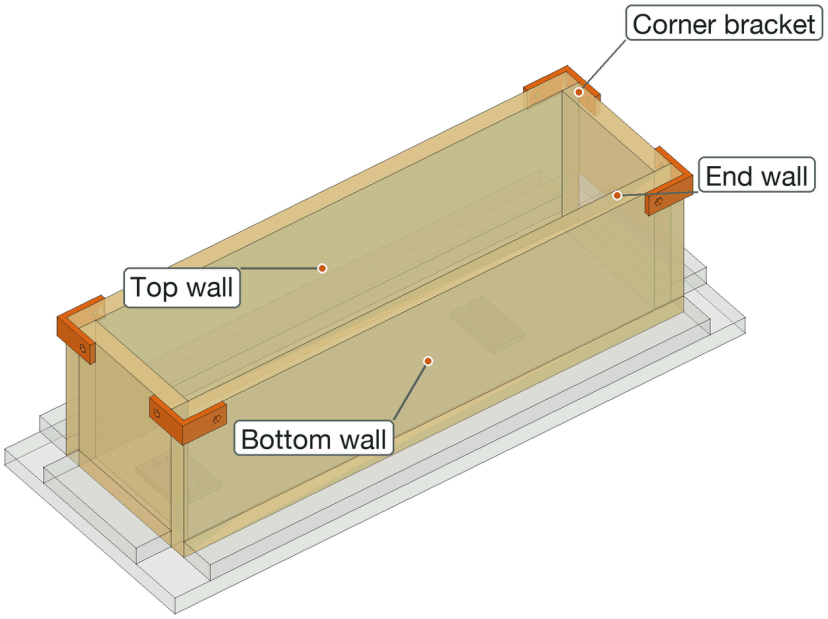


3. Tube locators bolted through the end walls. Butter the support pads with thickened epoxy (about 3 mm), then the tubes between the locators, holes over the rod holes; back-edge filler on the top wall; dowels on their stops; greased 1/2 in rods through both walls and the tubes. Fill to the line.

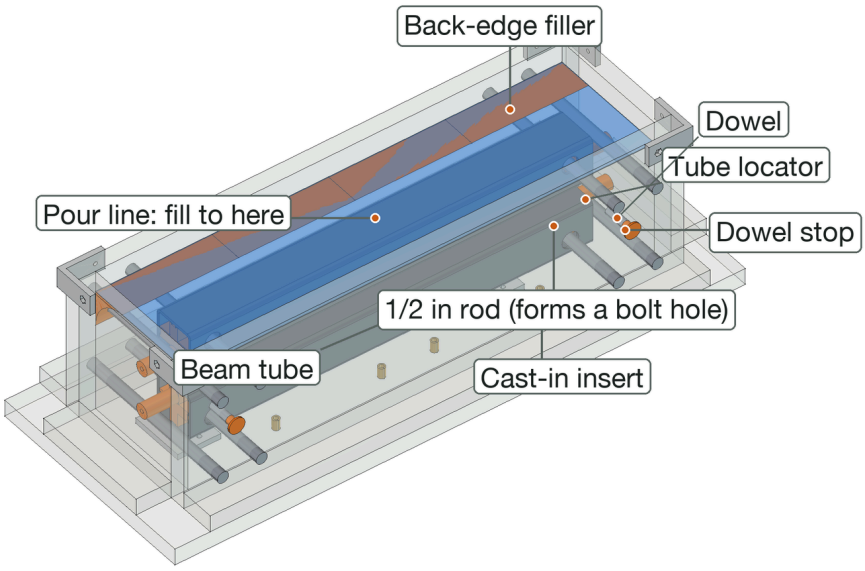

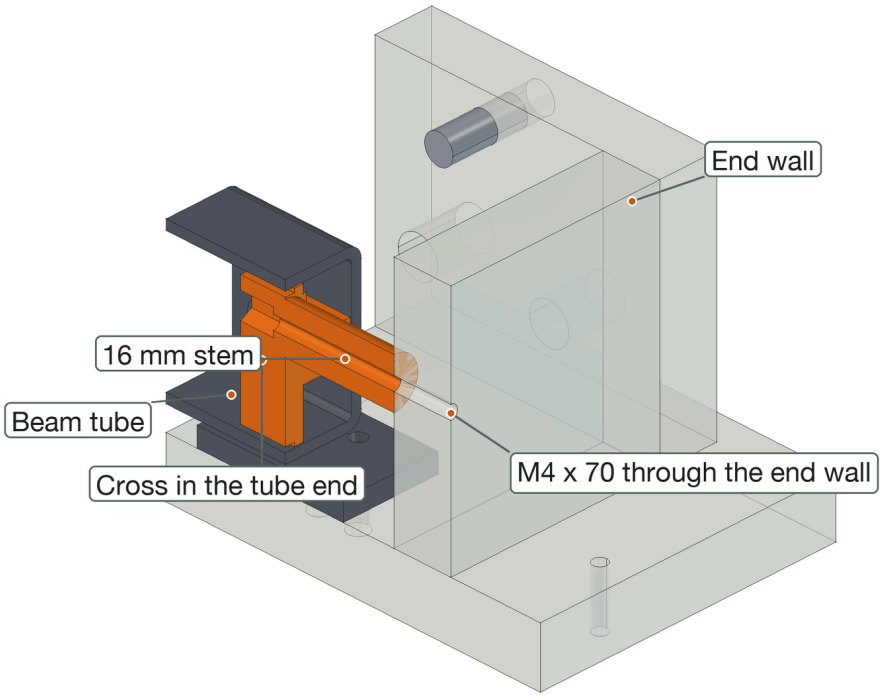

8. Pour

- Fill to the **pour line**, 25 mm below the wall tops (pencilled from the templates, or with the printed pour-line gauge clipped over a wall).
- Vibrate each layer until it stops bubbling; check the brackets halfway through.
- Strike the top off with a straight board in the two printed **screed shoes**: they hang it from the wall tops with its bottom edge on the pour line.

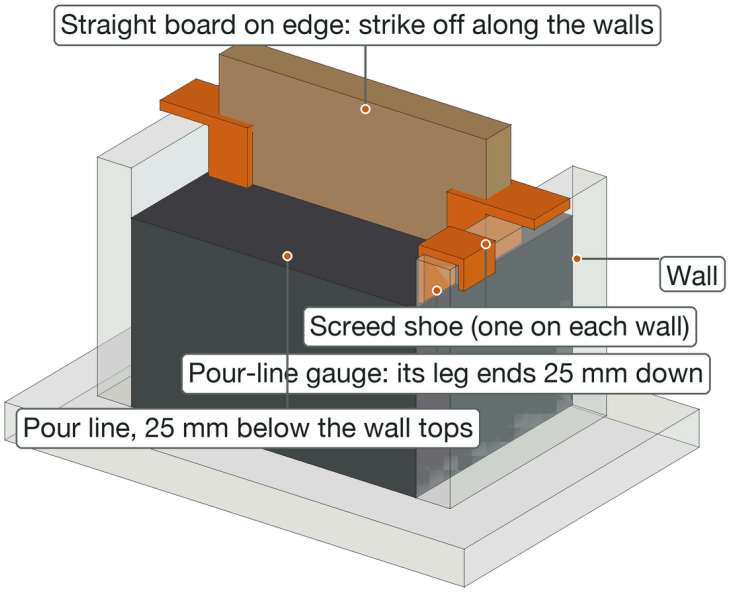

9. Take apart

1. After the full cure: bridges and saddles off, then corner brackets, then cleats; pull the walls off.
2. Screws, bolts and rods out from outside; lift the casting off the floor.
3. Unbolt and pull the formers and fillers.
4. Scrape and re-wax the boards; keep each mold's kit in a box. The kit is reused.


10. If something doesn't fit

Problem	Fix
Nut won't slide under the hole	Clean the pocket with a nut on a bolt; warm the nut
Bracket or saddle loose on the board	Board thinner than set: tape shim, or set `mold_board` and reprint
Pin won't go in	Run the 1/8 in bit through again; trim the pin tip
Foam core moves	Tighten its post bolt; carpet tape under it
Printed part won't go on or into a steel tube	File the weld seam; sand the part. Several tight: caliper the tube, put its sizes in `frame_tube` / `post_tube`, re-run and reprint
Printed part loose on a tube	A wrap of tape round the part
Leak at a corner	Silicone fillet inside before waxing; check the brackets and diagonals
Former stuck after curing	Bolts out first, then a dowel and a light tap

Appendix: hole maps

Every board as seen from the face you mark: x from the left edge, y from the bottom edge (for a wall, the edge on the floor). The templates carry the same holes at full size.

Beam floor

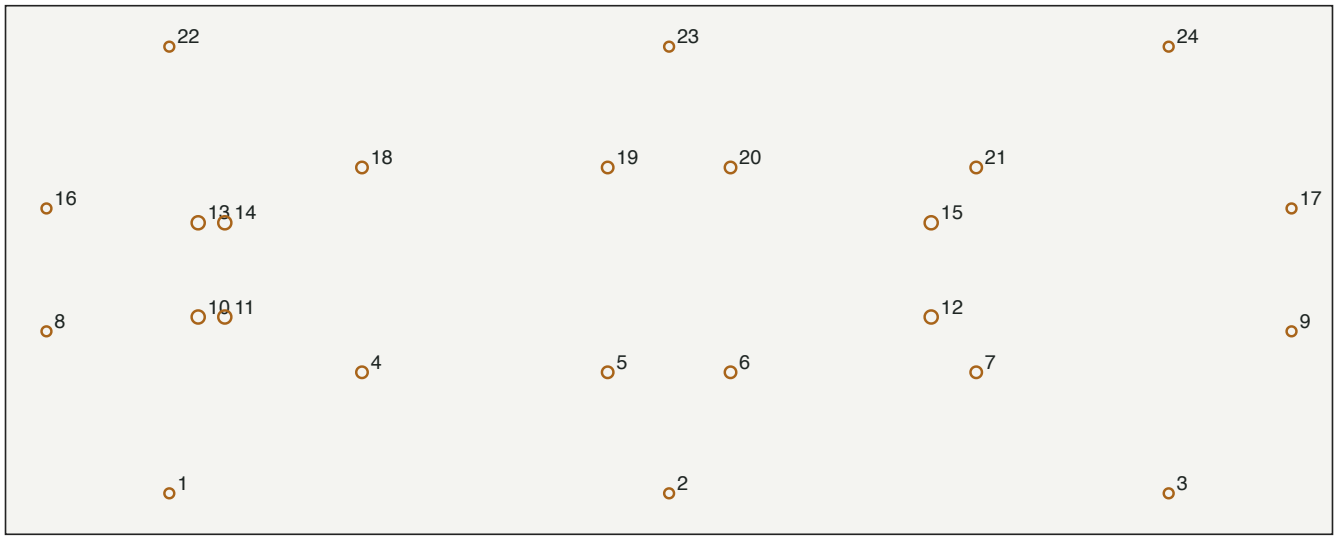


0,0 · 648 x 258 mm · seen from the cast side

#	x	y	Hole	For
1	80	20	4.5	cleat
2	324	20	4.5	cleat
3	568	20	4.5	cleat
4	174	79	5.5	M5 insert screw
5	294	79	5.5	M5 insert screw
6	354	79	5.5	M5 insert screw
7	474	79	5.5	M5 insert screw
8	20	99	4.5	cleat
9	628	99	4.5	cleat
10	94	106	6.5	M6 insert screw
11	107	106	6.5	M6 insert screw
12	452	106	6.5	M6 insert screw
13	94	152	6.5	M6 insert screw
14	107	152	6.5	M6 insert screw
15	452	152	6.5	M6 insert screw
16	20	159	4.5	cleat
17	628	159	4.5	cleat

#	x	y	Hole	For
18	174	179	5.5	M5 insert screw
19	294	179	5.5	M5 insert screw
20	354	179	5.5	M5 insert screw
21	474	179	5.5	M5 insert screw
22	80	238	4.5	cleat
23	324	238	4.5	cleat
24	568	238	4.5	cleat


Beam top wall

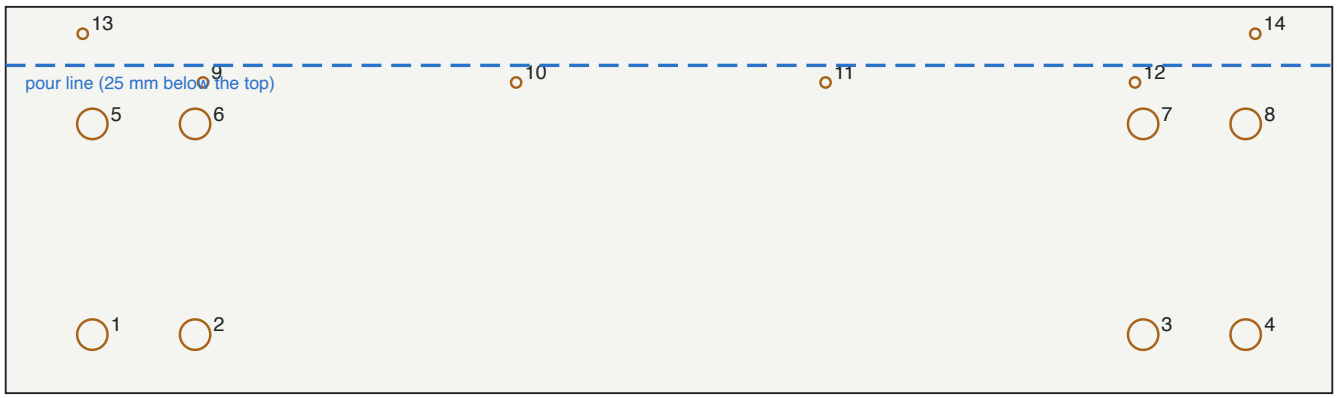

0,0 · 568 x 165 mm · seen from the cast side

#	x	y	Hole	For
1	37	25	13.1	1/2 core rod
2	81	25	13.1	1/2 core rod
3	487	25	13.1	1/2 core rod
4	531	25	13.1	1/2 core rod
5	37	115	13.1	1/2 core rod
6	81	115	13.1	1/2 core rod
7	487	115	13.1	1/2 core rod
8	531	115	13.1	1/2 core rod
9	84	133	4.5	back-edge
10	219	133	4.5	back-edge
11	351	133	4.5	back-edge
12	484	133	4.5	back-edge
13	33	154	4.5	corner bracket
14	535	154	4.5	corner bracket


Beam bottom wall

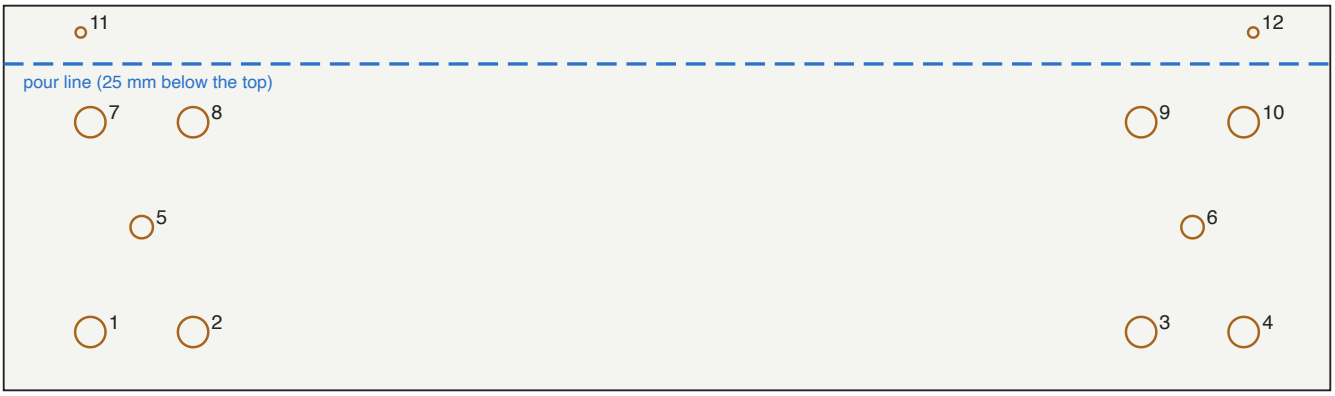

0,0 · 568 x 165 mm · seen from the cast side

#	x	y	Hole	For
1	37	25	13.1	1/2 core rod
2	81	25	13.1	1/2 core rod
3	487	25	13.1	1/2 core rod
4	531	25	13.1	1/2 core rod
5	59	70	9.6	3/8 dowel
6	509	70	9.6	3/8 dowel
7	37	115	13.1	1/2 core rod
8	81	115	13.1	1/2 core rod
9	487	115	13.1	1/2 core rod
10	531	115	13.1	1/2 core rod
11	33	154	4.5	corner bracket
12	535	154	4.5	corner bracket


Beam end wall, left

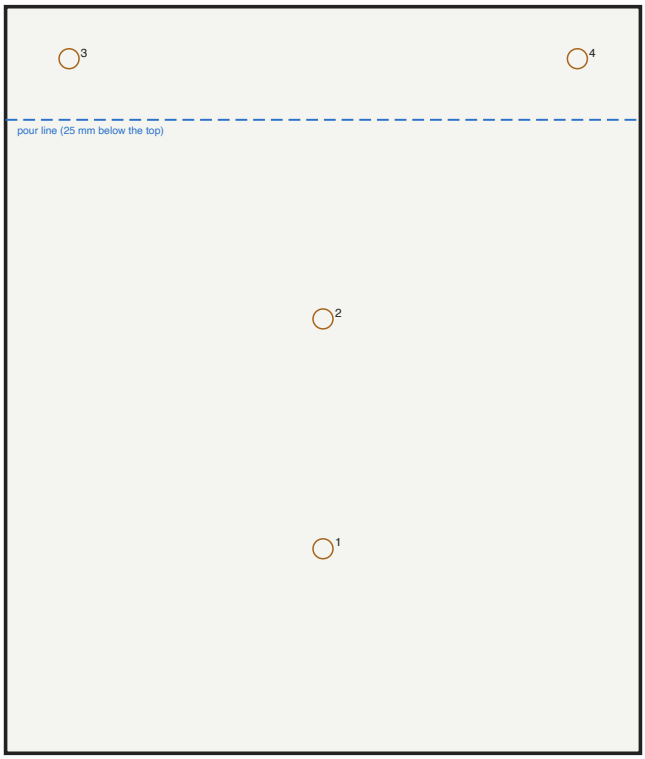

0,0 · 140 x 165 mm · seen from the cast side

#	x	y	Hole	For
1	70	45	4.5	tube locator
2	70	96	4.5	tube locator
3	14	154	4.5	corner bracket
4	126	154	4.5	corner bracket

Beam end wall, right

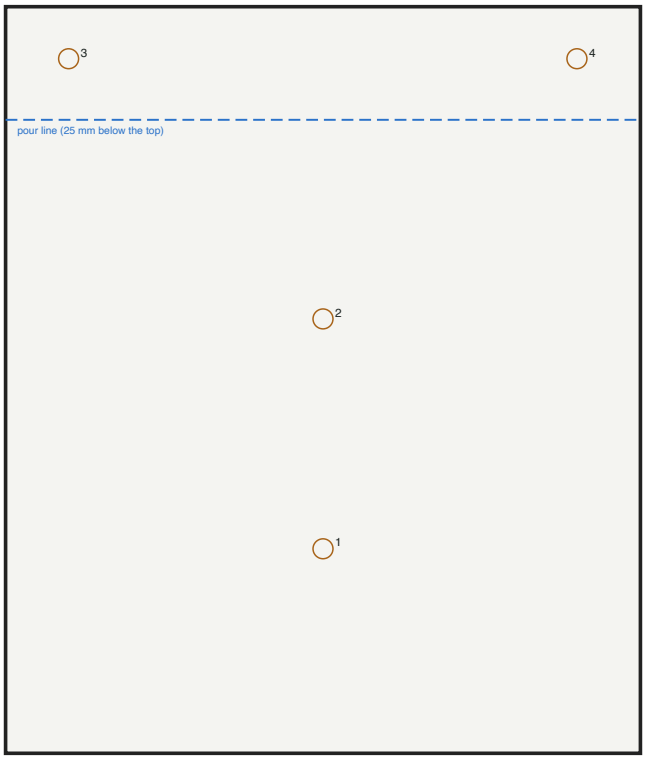

0,0 · 140 x 165 mm · seen from the cast side

#	x	y	Hole	For
1	70	45	4.5	tube locator
2	70	96	4.5	tube locator
3	14	154	4.5	corner bracket
4	126	154	4.5	corner bracket

Beam cleat, top



0,0 · 568 x 40 mm · seen from the outside (top)

#	x	y	Hole	For
1	528	20	4.5	cleat
2	284	20	4.5	cleat
3	40	20	4.5	cleat

Beam cleat, bottom



0,0 · 568 x 40 mm · seen from the outside (top)

#	x	y	Hole	For
1	528	20	4.5	cleat
2	284	20	4.5	cleat
3	40	20	4.5	cleat

Beam cleat, left



0,0 · 140 x 40 mm · seen from the outside (top)

#	x	y	Hole	For
1	100	20	4.5	cleat
2	40	20	4.5	cleat

Beam cleat, right



0,0 · 140 x 40 mm · seen from the outside (top)

#	x	y	Hole	For
1	100	20	4.5	cleat
2	40	20	4.5	cleat