


BEFORE ENGINE START		
1	Pre-flight inspection	COMPLETED
2	Emergency equipment	CHECKED
3	Crew & Aircraft documents	CHECKED
4	Crew stations	CHECKED
5	Dep / Emergency briefing	REVIEWED
6	Brakes	SET
7	Circuit breakers	CHECKED
8	Trim tab	SET FOR T/O
9	Carburetor heat	OFF
10	Avionics master	OFF
11	BAT switch	ON
12	Fuel quantity	CHECKED
13	Fuel selector	L / R
14	Fuel pump	ON
15	Mixture	RICH
16	Throttle (cold 1/4" hot 1/2")	SET
17	Primer	AS REQUIRED
18	Propeller danger area	CLEAR L / R
19	Starter	ENGAGE
AFTER ENGINE START		
1	Throttle	800-1200 RPM
2	Oil pressure	CHECKED
3	ALT switch	ON
4	Avionics master	ON
5	COM / NAV / EFIS	SET
TAXI		
1	Brakes	CHECKED
2	Flight instruments	CHECKED
BEFORE TAKE OFF		
1	Brakes	SET
2	Flaps	SET
3	Flight controls	CHECKED
4	Mixture	RICH
5	Throttle	2000 RPM
6	Magnetos (175 / 50)	CHECKED
7	Engine instruments	CHECKED
8	Annunciator panel	CHECKED
9	Carburetor heat	CHECKED
10	Fuel pump	OFF
11	Fuel pressure	CHECKED
12	Throttle	1000 RPM
13	Fuel pump	ON
14	Doors & Windows	CHECKED
15	Altimeters	SET / CHECKED
16	NAV / EFIS	SET / CHECKED
17	Dep / Emergency briefing	REVIEWED
LINE UP		
1	Strobe lights	ON
2	Transponder	SET
3	Pitot heat	AS REQUIRED
CLIMB		
1	Flaps	UP
2	Power	SET
3	Engine instruments	CHECKED
4	Landing lights	OFF
CRUISE		
1	Power	SET
2	Engine instruments	CHECKED
3	Fuel pump	OFF
4	Mixture	LEAN
5	Fuel selector	L / R

DESCENT		
1 Cabin		READY
2 NAV / EFIS		SET
3 Altimeters	SET /	CHECKED
4 Approach briefing		REVIEWED
5 Fuel selector		L / R
6 Mixture		ADJUST
APPROACH		
1 Fuel selector		BEST TANK
2 Mixture		RICH
3 Fuel pump		ON
4 Flaps	AS REQUIRED	
Go around - CLIMB CHECKLIST		
AFTER LANDING		
1 Flaps		UP
2 Landing & Strobe lights		OFF
3 Transponder		GND
4 Pitot heat		OFF
PARKING		
1 Avionics master		OFF
2 Mixture	IDLE CUT-OFF	
3 Magnetos		OFF
4 Electrical equipment		OFF
5 BAT / ALT switch		OFF
6 Control wheel		SECURE
7 Tacho time		NOTE
8 ATS Flight Plan		CLOSED

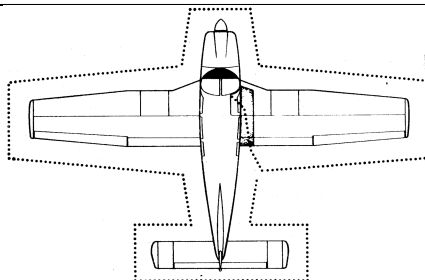

PRE-FLIGHT INSPECTION		
1 Control wheel		RELEASE
2 POH / Reference Guides	ACCESSIBLE	
3 Aircraft Documents	ON BOARD	
4 Avionics master		OFF
5 BAT switch		ON
6 Fuel quantity	CHECKED	
7 Lights	CHECKED	
8 Stall warning	CHECKED	
9 BAT switch		OFF
10 Ignition		OFF
11 Exterior	CHECKED	
12 Fuel tank / Fuel strainer	CHECKED	
13 Fuel vents		OPEN
14 Oil	CHECKED	
15 Cowling / Inspection covers	SECURED	
16 Propeller and spinner	CHECKED	
17 Air inlets		CLEAR
18 Alternator belt		TENSION
19 Tires	CHECKED	
20 Nose gear strut	PROPER INF	
21 Main gear struts	PROPER INF	
22 Brake blocks	CHECKED	
23 Wings	CHECKED	
24 Control Surfaces / Hinges	CHECKED	
25 Pitot heat cover	REMOVED	
26 Windshield		CLEAN
27 Tow bar		STOWED
28 Baggage / Door	SEC / CLOSED	
29 Primary flight controls	OPERATION	

ENGINE FAILURE

- | | | |
|---|-----------------|----------|
| 1 | Airspeed | 76 KIAS |
| 2 | Field | IN SIGHT |
| 3 | Fuel selector | SHIFT |
| 4 | Fuel pump | ON |
| 5 | Mixture | RICH |
| 6 | Carburetor heat | ON |
| 7 | Primer | LOCKED |
| 8 | Magnetos | CHECKED |

EMERGENCY LANDING

- | | | |
|---|----------------------|--------------|
| 1 | Airspeed App / Final | 76 / 66 KIAS |
| 2 | Fuel selector | OFF |
| 3 | Ignition | OFF |
| 4 | Mixture | IDLE CUT-OFF |
| 5 | Safety belts | SECURED |
| 6 | Radio / TRSP | 121.5 / 7700 |
| 7 | ALT / BAT switch | OFF ON FINAL |

ENGINE FIRE DURING START

- | | | |
|---|---------------|--------------|
| 1 | Starter | CRANK ENGINE |
| 2 | Mixture | IDLE CUT-OFF |
| 3 | Throttle | OPEN |
| 4 | Fuel pump | OFF |
| 5 | Fuel selector | OFF |

ABANDON IF FIRE CONTINUES

FIRE IN FLIGHT

Source of fire	CHECK
----------------	-------

ELECTRICAL FIRE

- | | | |
|---|------------------|------------|
| 1 | ALT / BAT switch | OFF |
| 2 | Vents | OPEN |
| 3 | Cabin heat | OFF |
| 4 | Fire | EXTINGUISH |

Land as soon as practicable

ENGINE FIRE

- | | | |
|---|----------------------|--------------|
| 1 | Fuel selector | OFF |
| 2 | Throttle | CLOSED |
| 3 | Mixture | IDLE CUT-OFF |
| 4 | Fuel pump | OFF |
| 5 | Heater and defroster | OFF |

EMERGENCY LANDING

LOW OIL PRESSURE

- | | |
|---|-------------------------------|
| 1 | Land as soon as possible |
| | Prepare for EMERGENCY LANDING |

HIGH OIL TEMPERATURE

- | | |
|---|-------------------------------|
| 1 | Land at nearest airport |
| | Prepare for EMERGENCY LANDING |

LOW FUEL PRESSURE

- | | | |
|---|---------------|-------|
| 1 | Fuel pump | ON |
| 2 | Fuel selector | SHIFT |

ALTERNATOR FAILURES

If ammeter zero

- | | | |
|---|---------------------|---------------|
| 1 | ALT switch | OFF |
| 2 | Electrical load | REDUCE TO MIN |
| 3 | ALT circuit breaker | CHECK / RESET |
| 4 | ALT switch | ON |

If power not restored

- | | | |
|---|-----------------|---------------|
| 5 | ALT switch | OFF |
| 6 | Electrical load | REDUCE TO MIN |

Land as soon as practicable

ELECTRICAL OVERLOAD		
1	ALT switch	ON
2	BAT switch	OFF

If ALT loads are reduced		
3	Electrical load	REDUCE TO MIN
Land as soon as practicable		

If ALT loads not reduced		
4	ALT switch	OFF
5	BAT switch	AS REQUIRED
Land as soon as possible		
Anticipate complete electrical failure		
SPIN RECOVERY		
1	Throttle	IDLE
2	Ailerons	NEUTRAL
3	Rudder	FULL OPPOSITE
4	Control wheel	FULL FORWARD
5	Rudder	NEUTRAL
6	Control wheel	AS REQUIRED
CLOSE OPEN DOOR IN FLIGHT		
1	Airspeed	87 KIAS
2	Cabin vents	CLOSE
3	Storm window	OPEN
4	Side latch	LATCH
5	Upper latch	LATCH
CARBURETOR ICING		
1	Carburetor heat	ON
2	Mixture	ADJUST
ENGINE ROUGHNESS		
1	Carburetor heat	ON

If roughness cont. 1 min		
2	Carburetor heat	OFF
3	Mixture	ADJUST
4	Fuel pump	ON
5	Fuel selector	SHIFT
6	Engine instrument	CHECK
7	Magneto switch	L / R / BOTH
Prepare for EMERGENCY LANDING		
AUTOPILOT MALFUNCTION		
If the airplane deviates unexpectedly		
1	Control Wheel	GRIP FIRMLY
2	AP DISC	PRESS AND HOLD
3	Aircraft Attitude	MAINTAIN
4	Elevator Trim	RE-TRIM
5	AP Circuit Breaker	PULL
6	AP DISC	RELEASE
AUTOPILOT ABNORMAL DISCONNECT		
Red AP in autopilot status box on display, continuous aural disconnect tone		
1	AP DISC	PRESS AND RELEASE
2	Aircraft Attitude	MAINTAIN
PITCH TRIM FAILURE / RUNAWAY		
1	Control Wheel	GRIP FIRMLY
2	TRIM ACTIVATE	OFF
3	Elevator Trim	RE-TRIM MANUALLY