


## MRT-1086S SWAK-OS 4.0 & 3.0 **Setting Camera Streams**


Note: Must be logged in with proper user rights to perform these actions.



Step 2: Select "Setup Video Streams"

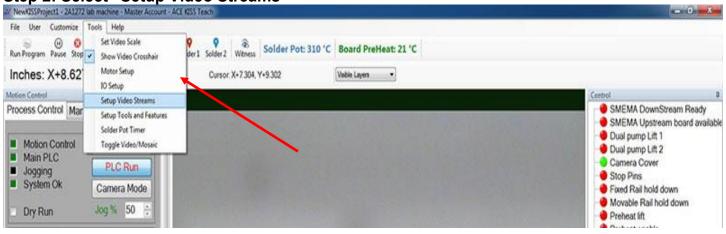

**Step 3: Select the first camera located in the GREEN box.** Identify the camera locations by placing a tool or hand (CAUTION SOLDER POT WILL BE HOT!) in front of the cameras. If no image is displayed select the next device listed. The teach camera will be looking up at the PCB. Witness 1 is located closest to you and the camera furthest away from you is Witness 2 if equipped. Once you have located your selected camera click the proper location button in the BLUE box below.

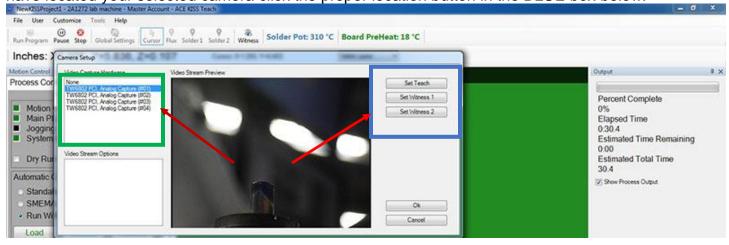

## Step 4: Select "Ok" after selecting the correct camera location.


Tip: If you make a mistake by selecting the wrong camera location return to Step 3.



**Step 5: Select the next camera located below in the green box.** Repeat steps 4-5 until you have correctly assigned camera locations to TEACH, WITNESS 1, and WITNESS 2.



Step 6: Select "Ok" to close camera setup when completed.

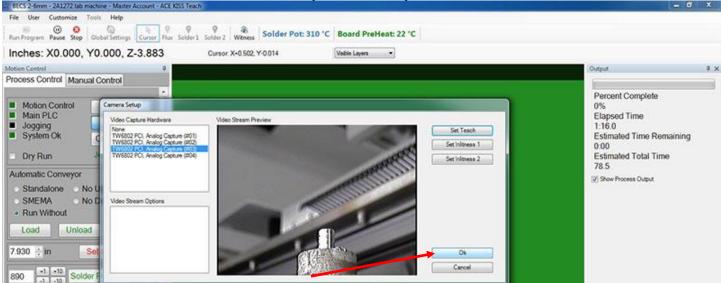

Customer Service Nordson SELECT, Inc. 22425 East Appleway Ave Suite 1 Liberty Lake, WA 99019

Office: +1.509.924.4898 Fax: +1.509.533.1299