
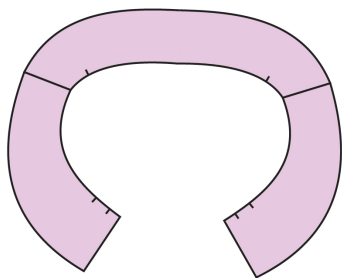
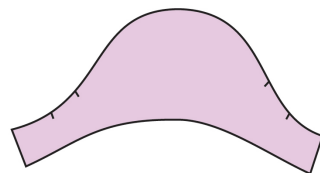
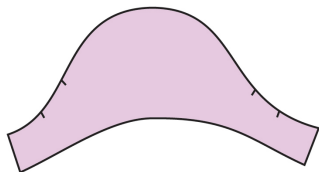
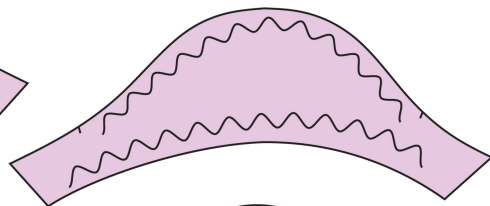
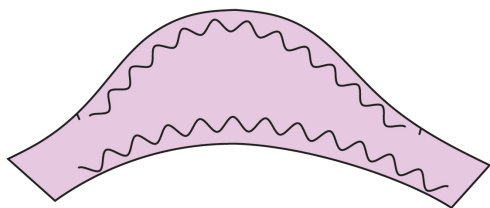




Right  
Side

Wrong  
Side

1

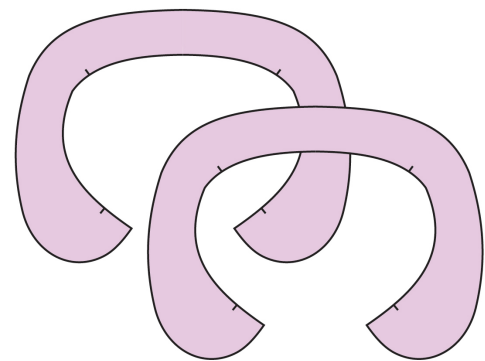


There will be 10 pattern pieces in total, and a small amount of interfacing will be required.

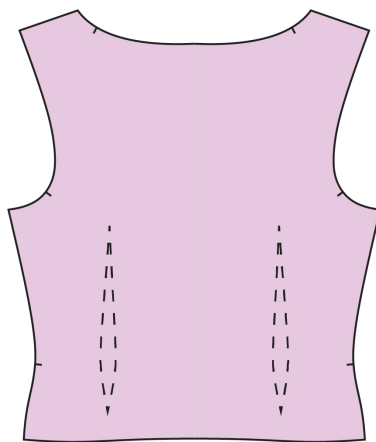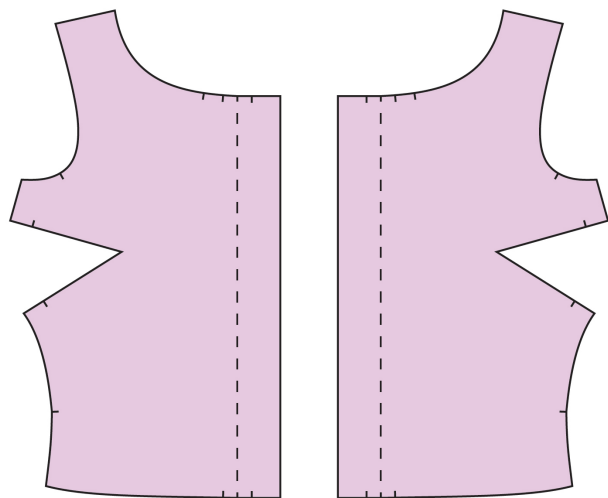






Apply interfacing to the wrong side of the collar, collar facing, and front pattern pieces as indicated in the transparent guide.



Interfacing is required for only one collar piece. For the front bodice, apply a 3 cm wide interfacing and adjust the length to match the bodice.

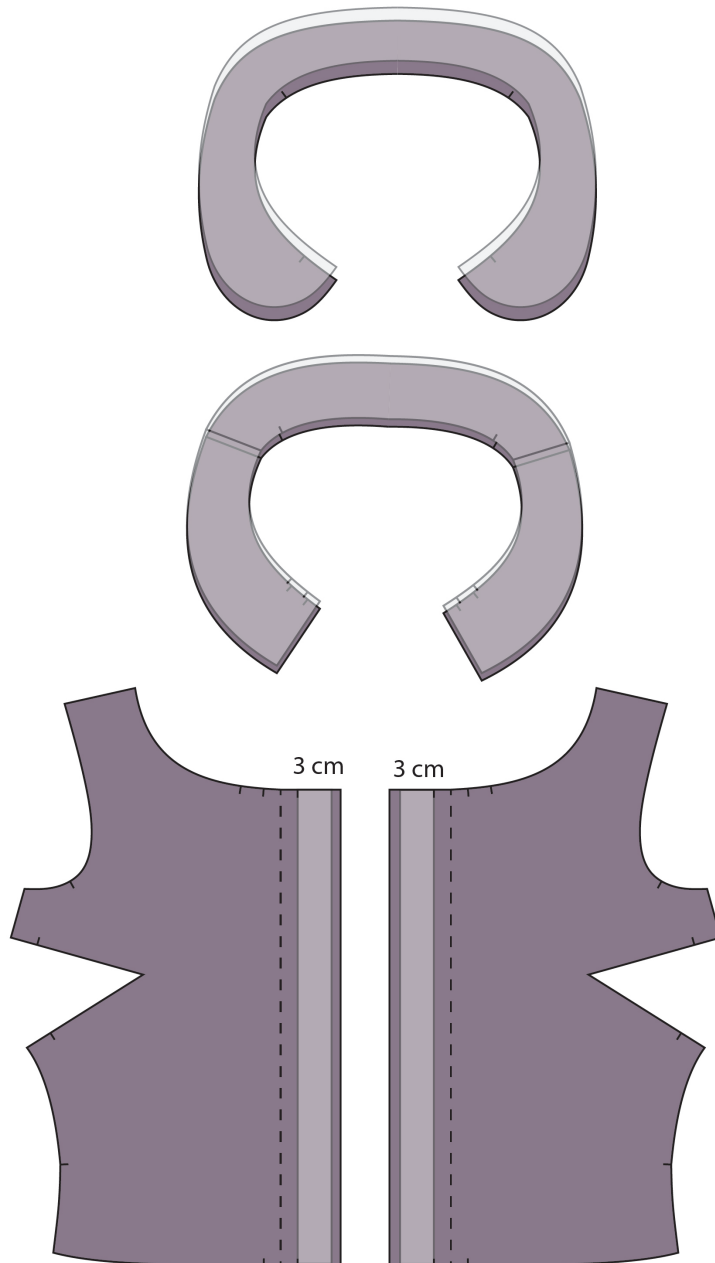

Place the collar pieces right sides together and stitch the outer edge with a 1 cm seam allowance. Make notches along the seam, trim the seam allowance slightly, then turn the collar right side out and press.



Overlock the outer edge of the collar facing. Position the collar and collar facing together as shown in the illustration. They will be joined after the bodice and sleeves are sewn.

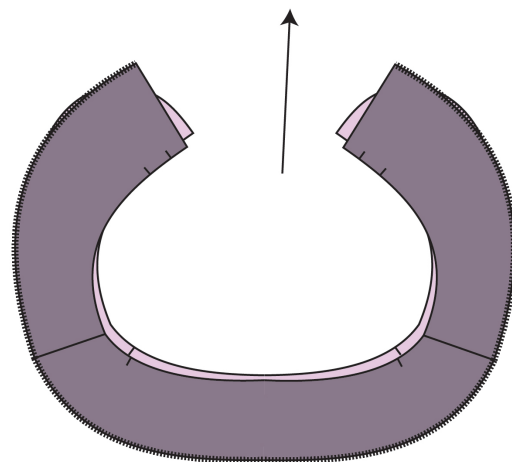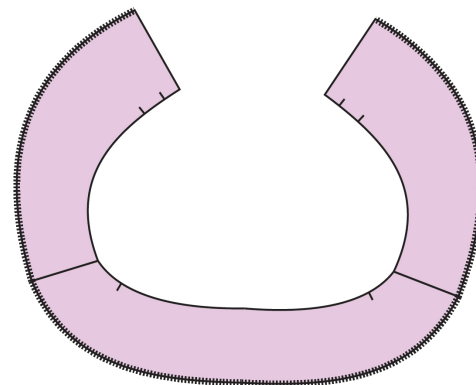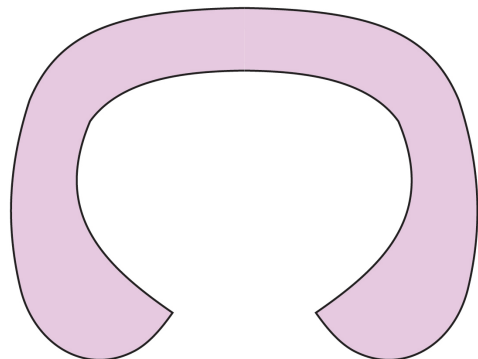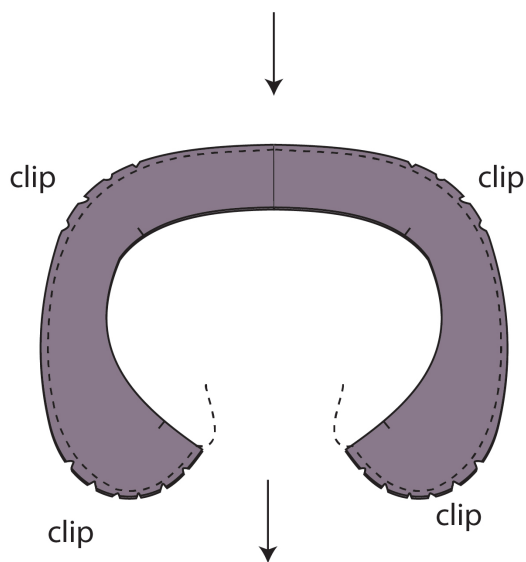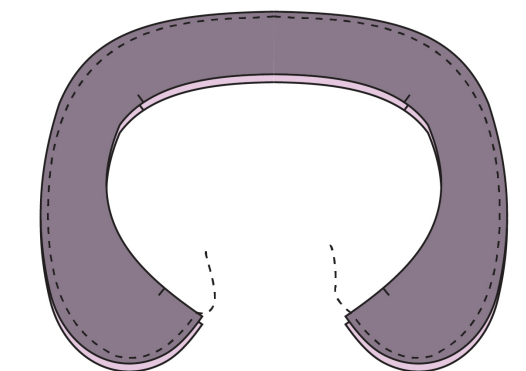

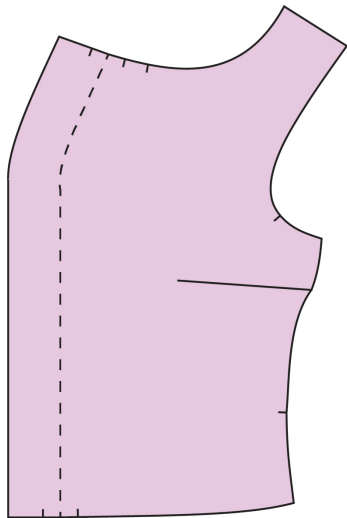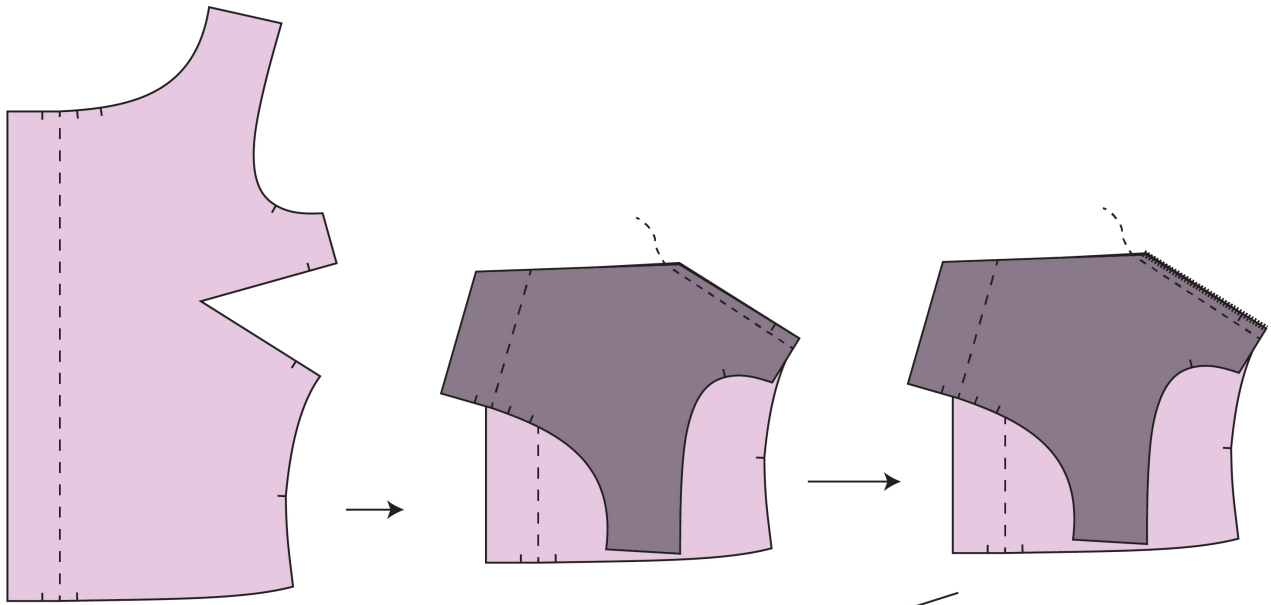


Fold the front dart as shown in the illustration and sew it with a 1 cm seam allowance. Then overlock the stitched area and press.



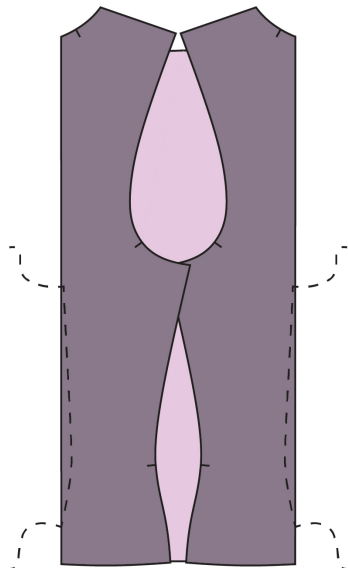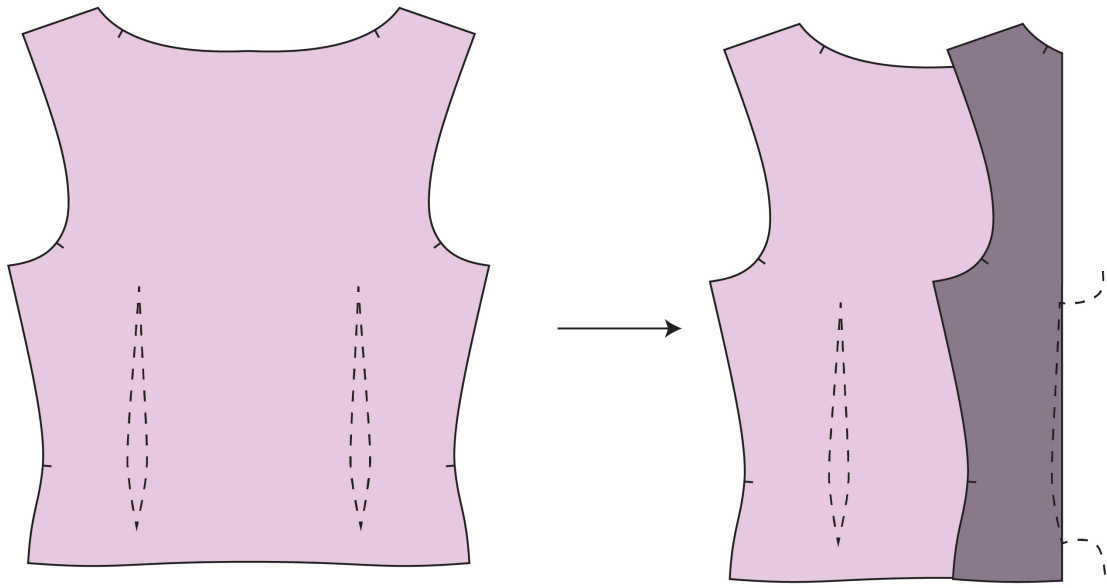

Mark the darts on the back bodice with tailor's chalk and sew them as shown in the illustration. When sewing the darts, instead of backstitching at the beginning and end, leave some thread and tie 4–5 knots to achieve a cleaner finish.


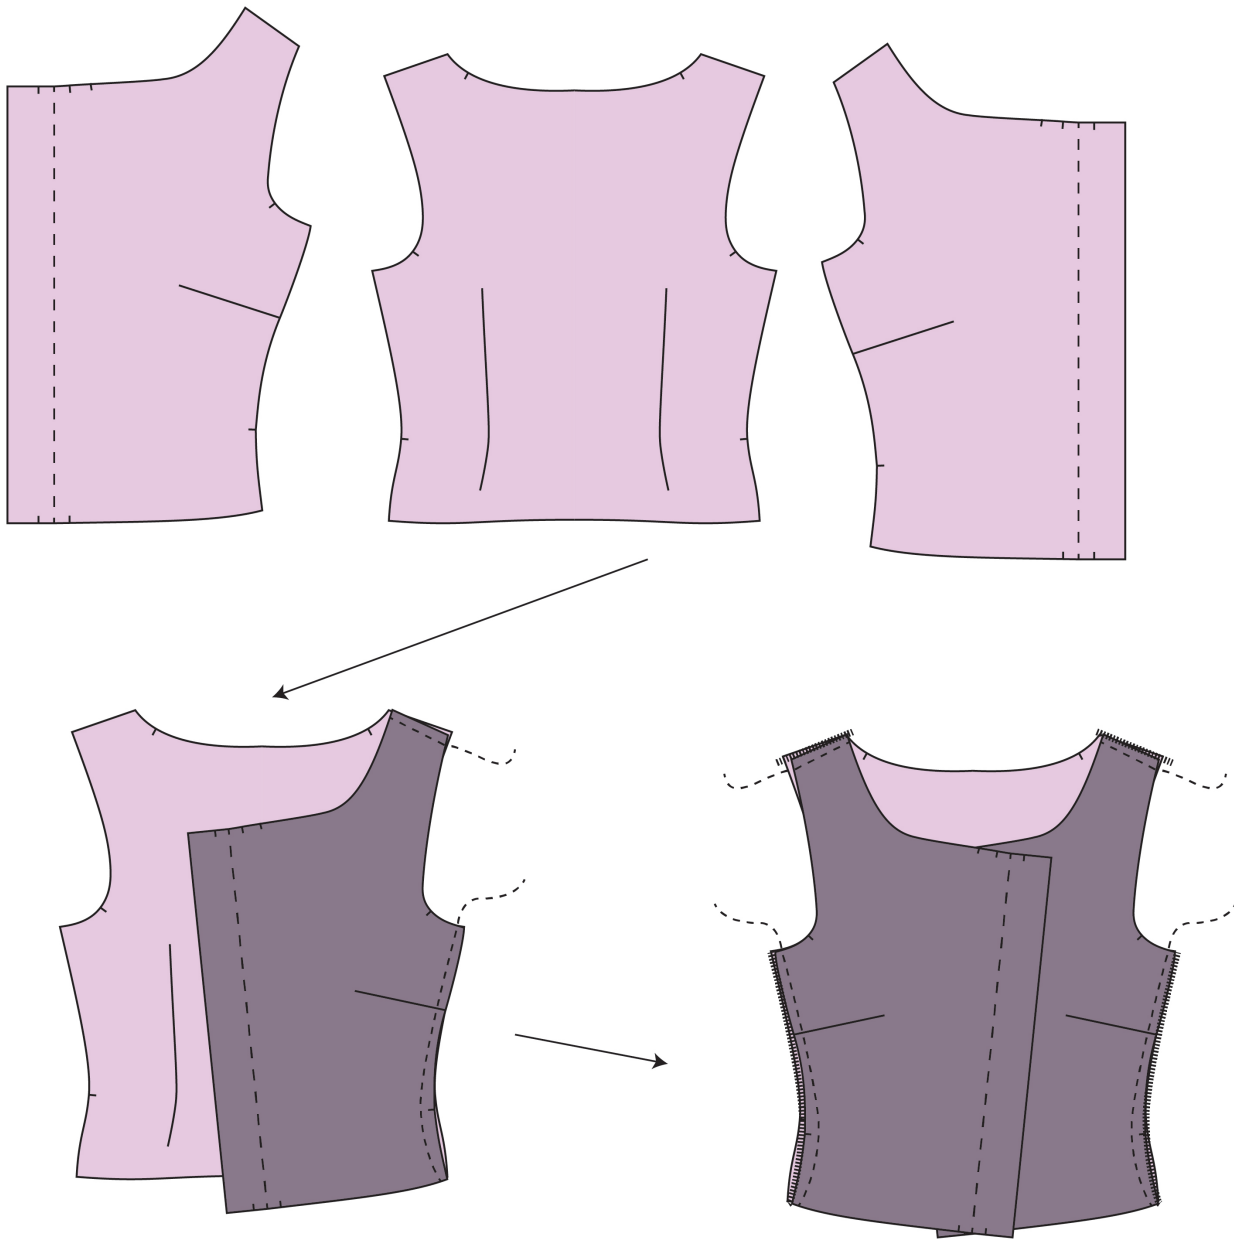


After sewing and pressing the darts, place the pieces right sides together and sew the side seams and shoulder seams, then finish them with an overlock stitch. As you may notice, the button plackets have not been sewn yet; we will sew them last, after attaching the lining.


Place the upper sleeve and under sleeve right sides together as shown in the illustration. Pay attention to the notches; the notches must match on the wrong side. First, sew along the lower edge using the longest stitch length on the sewing machine, then gather the fabric.

Align the bottom edge of the upper sleeve with the bottom edge of the under sleeve, then stitch along the lower edge with a 1 cm (3/8 inch) seam allowance.



7

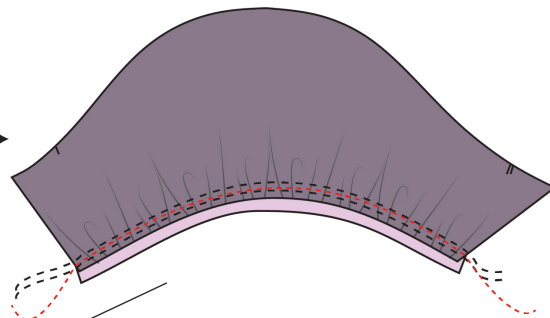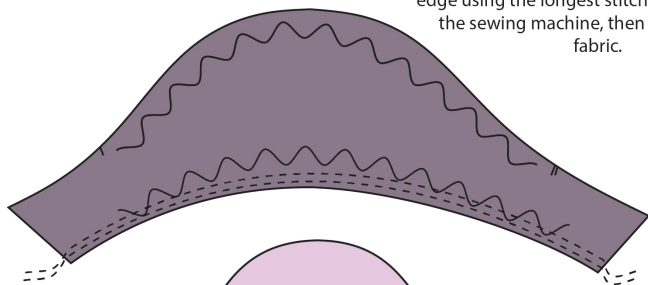


After sewing, press the seam open, take a stitch along the ungathered section, and secure with a basting stitch.

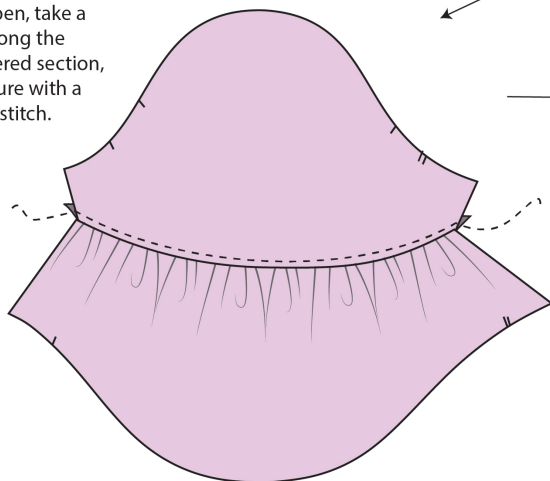


Proceed to gather the top section of the upper sleeve as illustrated, aligning it with the matching section of the under sleeve.

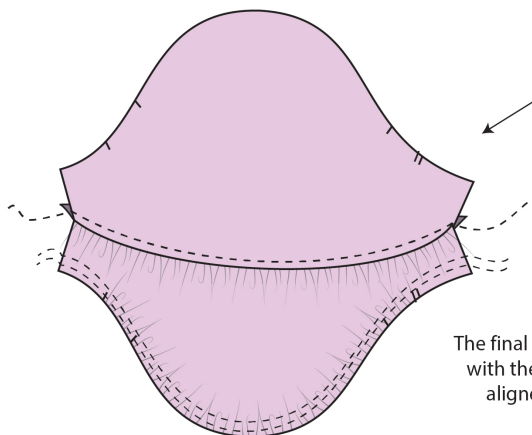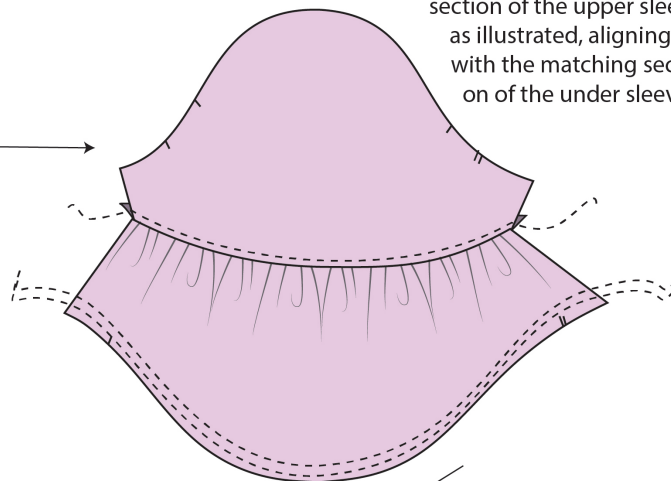


The final result should look like this, with the upper and under sleeve aligned and equal in length.

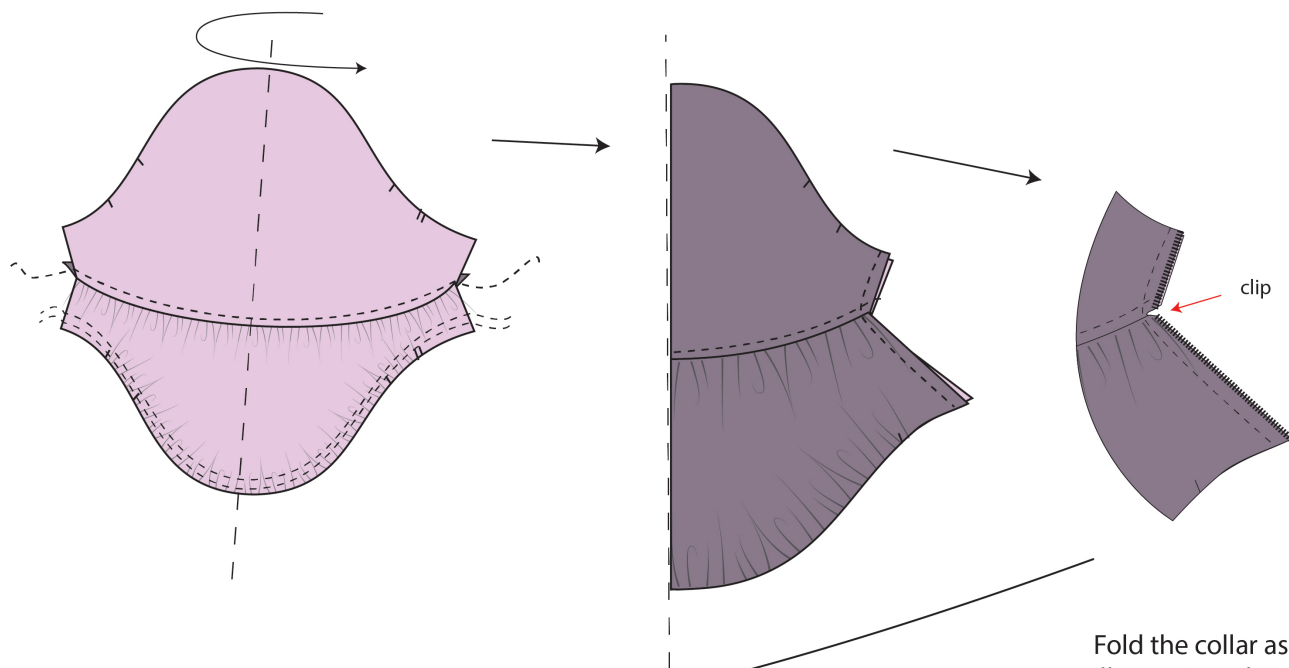


Fold the collar as shown in the illustration, placing the straight edges together, and stitch with a 1 cm (3/8 inch) seam allowance. Then overlock the seam and place a notch in the center


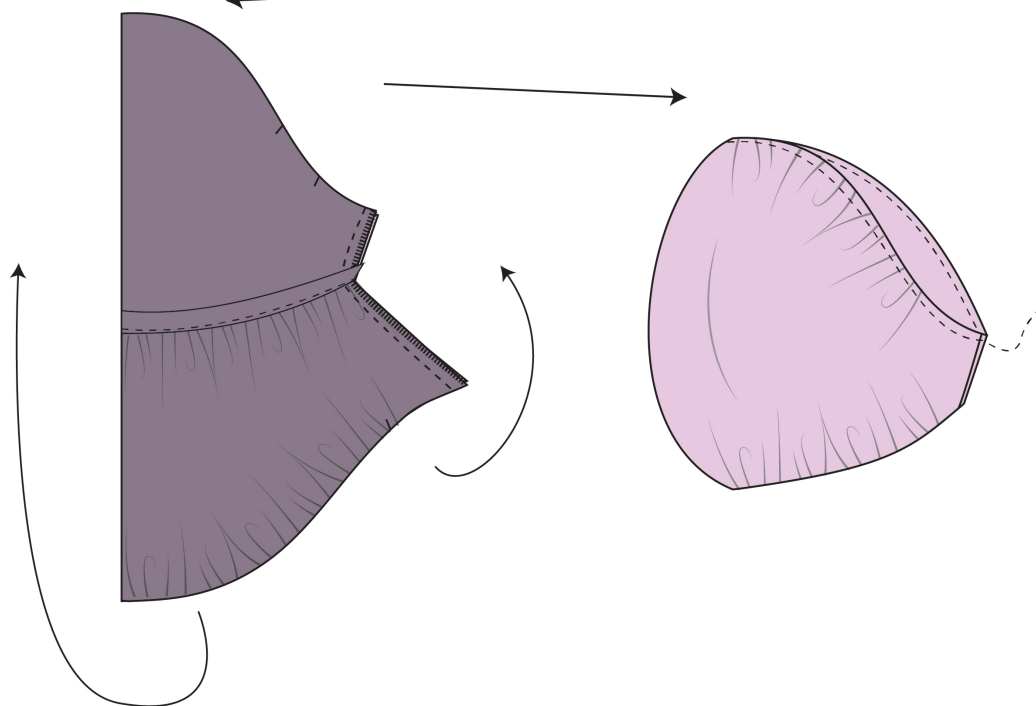


Turn the gathered portion of the sleeve outward so that it lies on top. As the next step involves joining the sleeve to the bodice, secure the upper section with fine basting stitches.

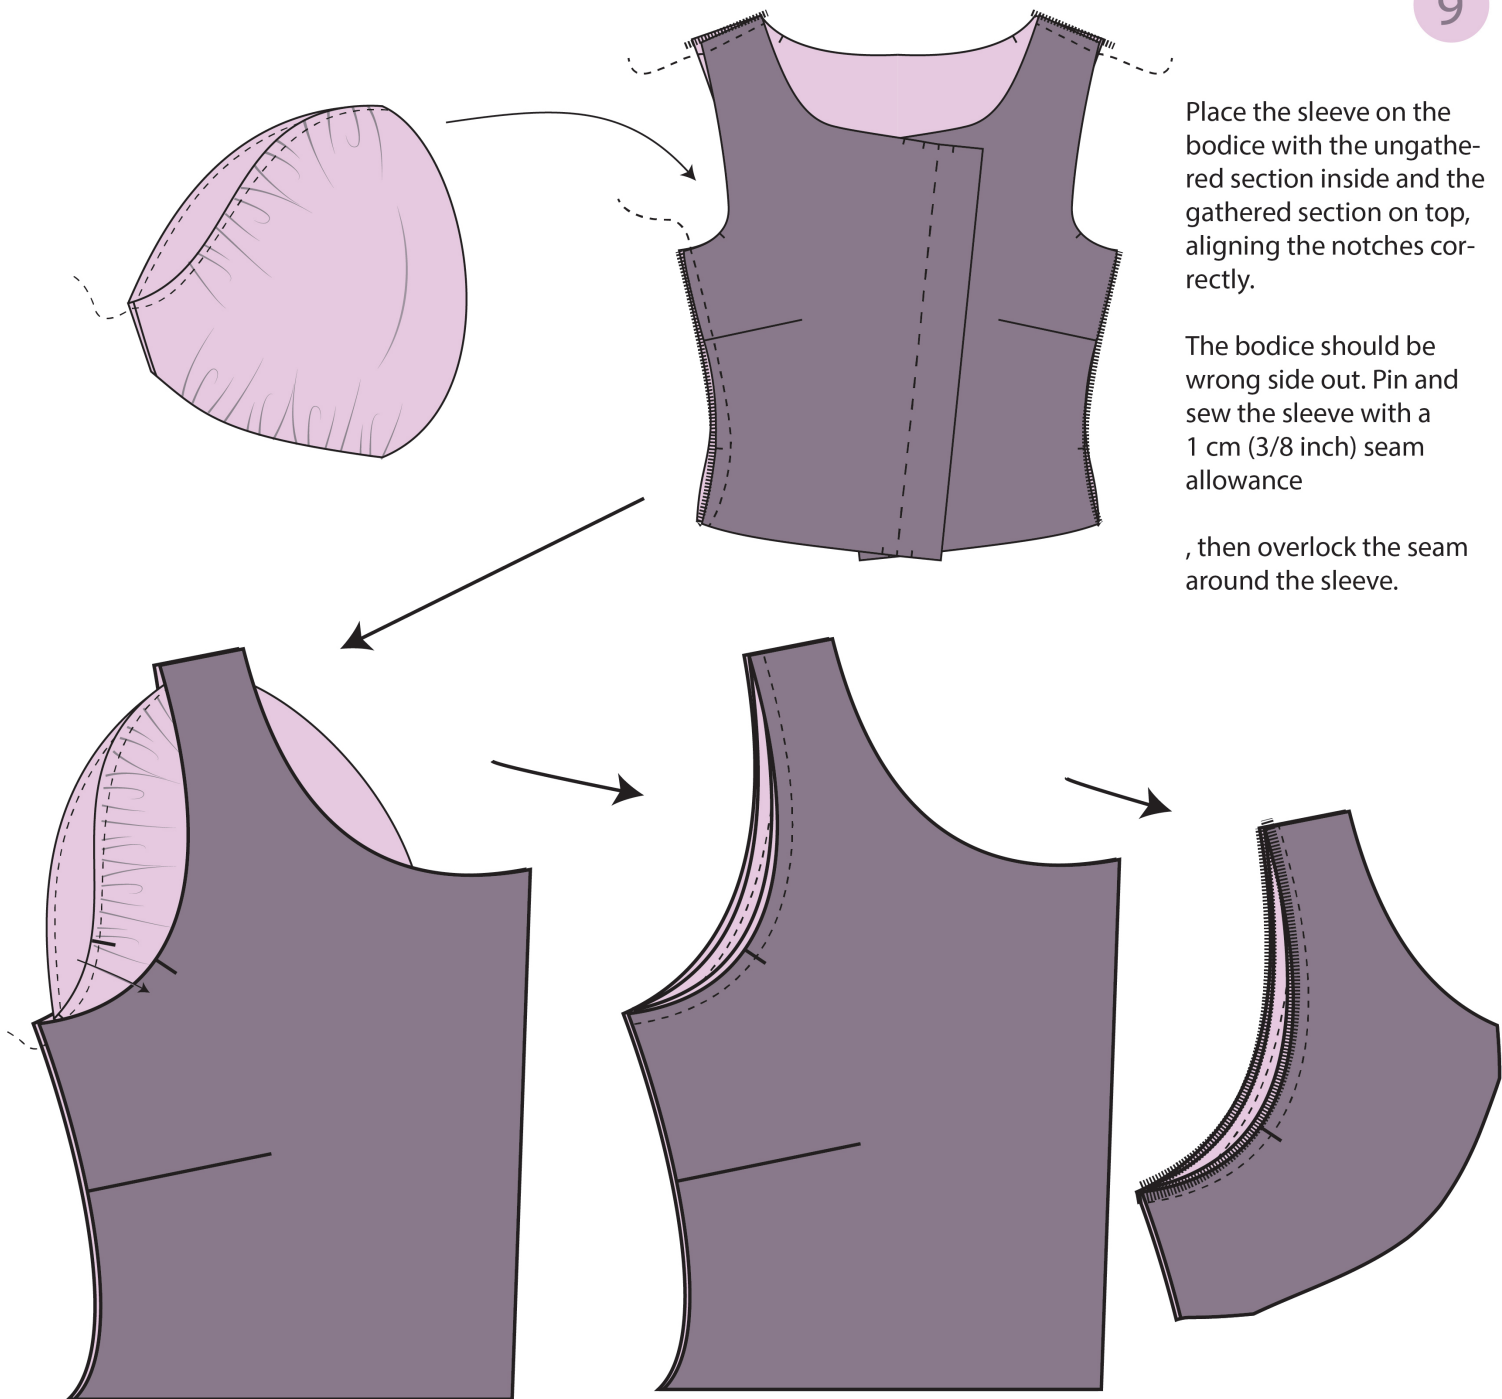


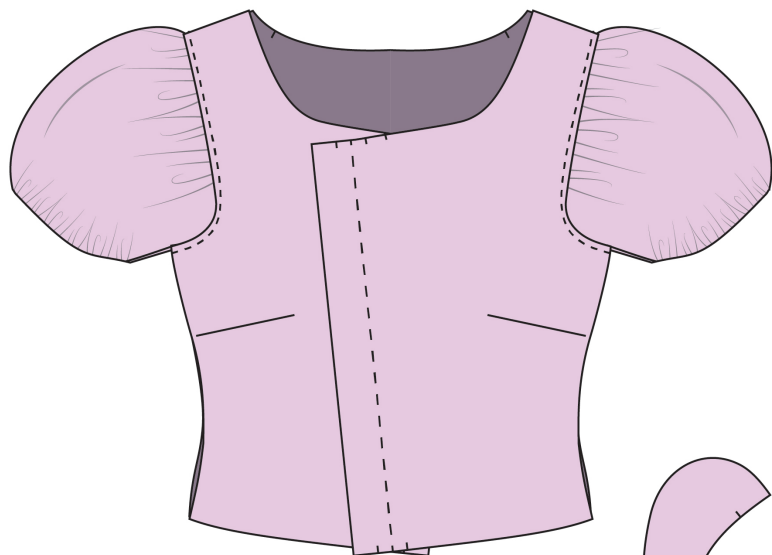

After sewing, stitch around the sleeve seam from the right side to secure it.

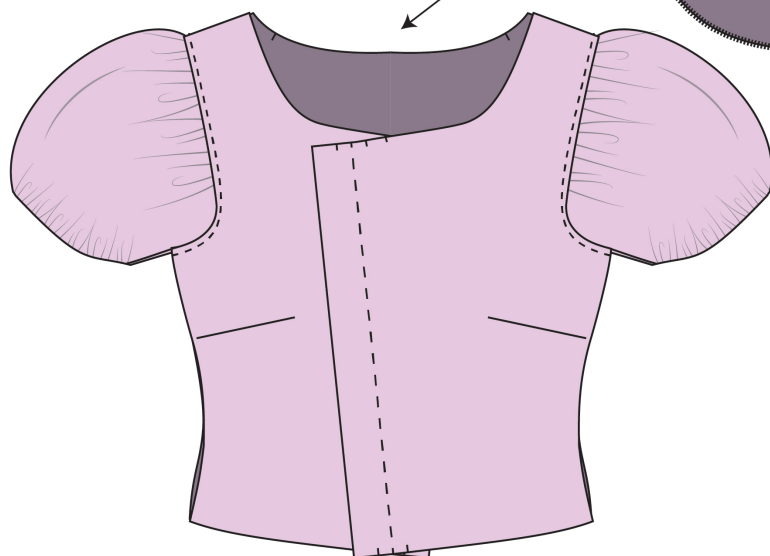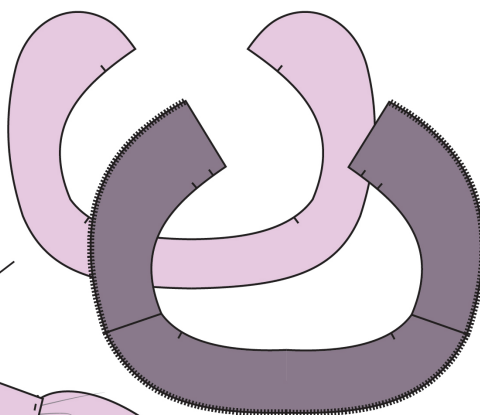

Next, take the collar and collar facing and proceed to attach the collar to the garment.

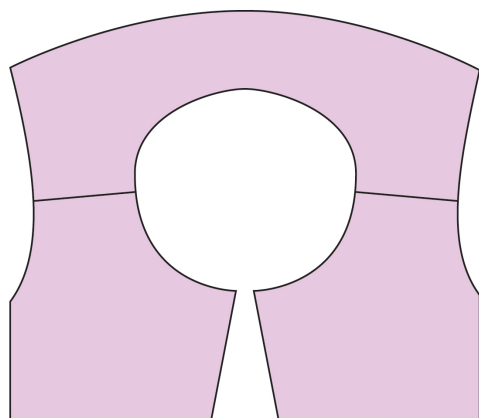

With the bodice right side out, mark the center with a notch.






Likewise, mark the center of the collar and collar facing with a small cut.


Align the collar with the bodice using the notches as a guide.

Position the collar facing on top with the wrong side up, and sew with a 1 cm (3/8 inch) seam allowance.

Clip the curved edges and trim the inner seam allowance of the collar and collar facing to reduce bulk at the neckline.

Press the collar and understitch along the inner edge of the collar facing

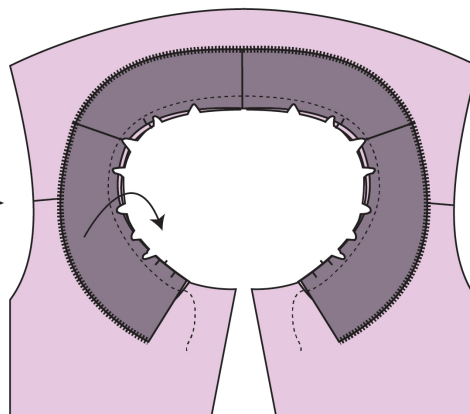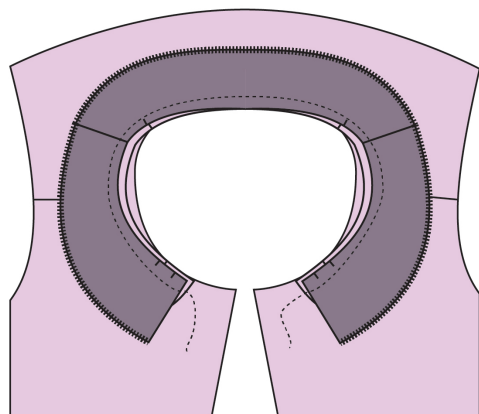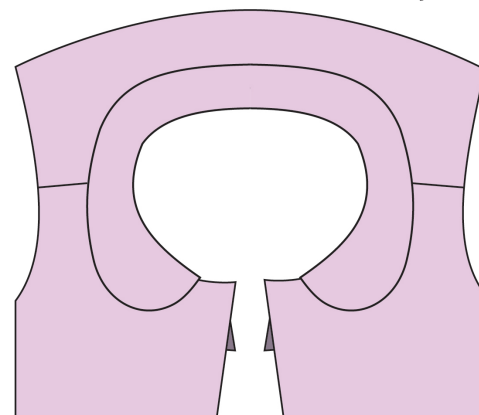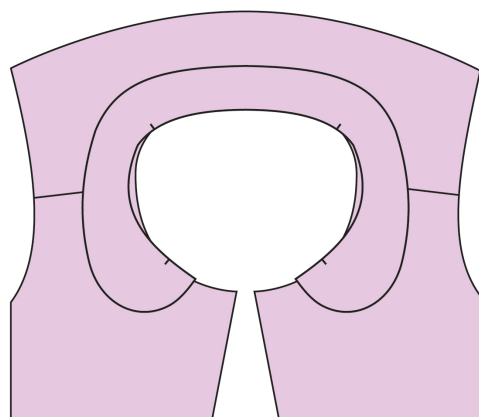
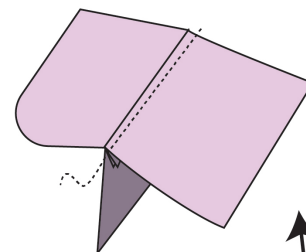


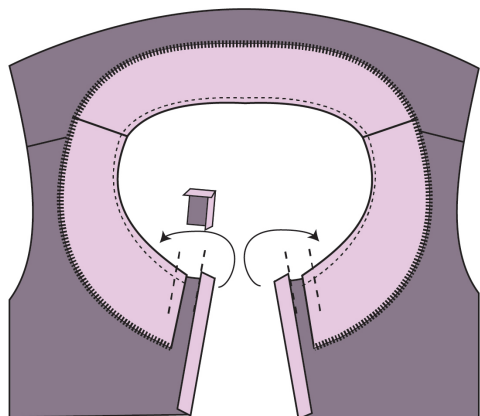

After turning the bodice inside out as shown in the illustration, the result should look like this. The lining may be close to the shoulder, which is not a problem; you may trim if desired.

Now we can sew the button plackets. The 3 cm (1 1/8 inch) interfacing will guide us. Fold 1 cm (3/8 inch) inward, then fold the remaining 3 cm as shown and stitch. Enclose the collar facing within the placket while stitching, and fold the top edge of the button placket inward for a clean finish.

After sewing these, turn the hem of the skirt 2 cm (3/4 inch) inward.

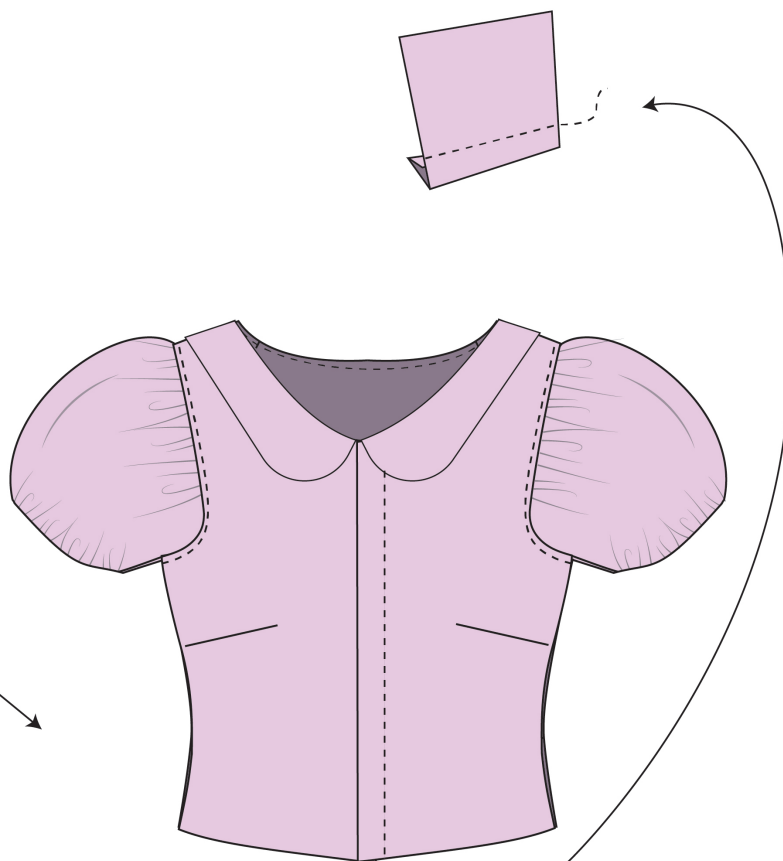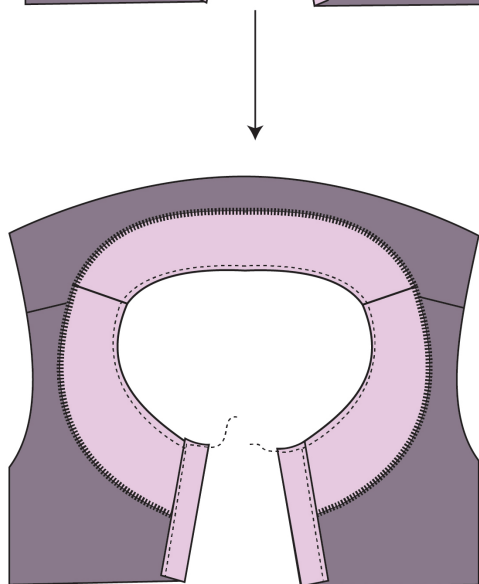





Next, all that remains is to make the buttonholes and sew on the buttons; the number is up to you. Once done, trim any loose threads, press the garment, and it's ready to wear <3

\*

bugra.akyel1726@gmail.com  
<https://www.etsy.com/shop/BugraPatterns>

If you have any questions or if anything is unclear, please don't hesitate to get in touch. Your feedback is very important to me ^^.