


AM-3121

User Guide




AM-3121 Dimensions


• Dimensions (mm)

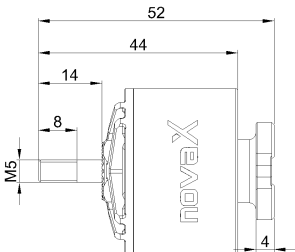

Side

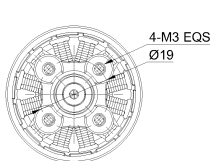

Bottom · mount

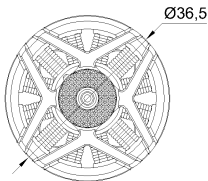

Top · propeller side

AM-3121 Specifications

• Basic Specifications

Slots / Poles	12N14P (7 pole pairs)
KV Value	KV600
Rated Voltage	22.2 V (6S LiPo)
Max Current	48.6 A
Max Power	1180 W
Recommended Prop	13 × 7
Operating Temp	-20 ~ +85 °C

AM-3121 Performance Data

6S LiPo, 20%–100% throttle on static thrust stand. Measured values; rated specs may differ.

• Propeller 13 × 7

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	311	1.26	32	8.8	35.4
40%	1021	5.68	142	7.9	—
60%	2136	16.58	413	5.5	—
80%	3471	35.79	877	4.5	—
100%	4681	62.48	1496	3.5	—

AM-3121 Installation



1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.
4. **Propeller** — Fit a propeller matching the rotation and tighten the nut firmly.
Recommended: 13 × 7.

AM-3121 Safety Notes

- Do not exceed the rated voltage. Rated: 22.2 V (6S LiPo).
- Use an ESC rated with margin above the motor maximum current. Max current: 48.6 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX