


AM-6212

User Guide




AM-6212 Dimensions


• Dimensions (mm)

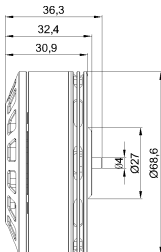

Side



Bottom · mount

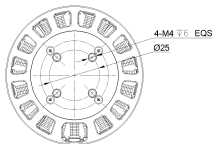

Top · propeller side

AM-6212 Specifications

• Basic Specifications

Stator Dimensions	$\Phi 68.6 \times 36.3$ mm
Slots / Poles	24N28P (14 pole pairs)
Motor Weight	292 g
KV Value	KV180
Rated Voltage	44.4 V (12S LiPo)
Max Current	58 A
Max Power	2685 W
Recommended Prop	22 inch (22×7.8)
Operating Temp	-20 ~ +85 °C


AM-6212 Performance Data

12S LiPo, 20%–100% throttle on static thrust stand. Measured values; rated specs may differ.

• Propeller 22 × 7.8

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	763	1.20	60	12.0	30.7
40%	2671	6.60	332	8.0	—
60%	5703	17.85	894	6.5	—
80%	9495	38.21	1901	5.0	—
100%	11991	53.23	2445	4.5	—

AM-6212 Installation

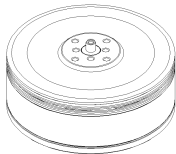

1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.
4. **Propeller** — Fit a propeller matching the rotation and tighten the nut firmly.
Recommended: 22 inch (22×7.8).

AM-6212 Safety Notes

- Do not exceed the rated voltage. Rated: 44.4 V (12S LiPo).
- Use an ESC rated with margin above the motor maximum current. Max current: 58 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX