# Suprema Plugin for Genetec

## USER GUIDE

Version 1.00

English
EN 102.00.SPG

suprema
SECURITY & BIOMETRICS

# CONTENTS


## Installation 3

Minimum System Requirements 3

Prerequisites 4

Fingerprint enrollment device 5

Plugin Installation 5

Added Suprema Plugin in Genetec Config Tool 8

## System Management 16

System Configuration 16

Device Registration 20

Editing Device Settings and Information 21

Device Settings 22

Assign Device to Cloud Link 33

Card Format Setting 35

Door Configuration 35

View the Device Sync Information 37

## Cardholder Management 40

Card Enrollment 40

Face Enrollment 42

Bulk Enrollment 48

How to Search for a Cardholder with a Face Template 49

## Appendices 51

Disclaimers 51

Copyright Notice 51

Open Source License 52

# Installation

## Minimum System Requirements

<table>
<tr><th colspan="2">Item</th><th>Small Business Server</th><th>Medium Business Server</th><th>Enterprise Business Server</th></tr>
<tr><td>Environment</td><td>Total Devices</td><td>50</td><td>Up to 100</td><td>More than 100</td></tr>
<tr><td rowspan="8">System requirement</td><td>OS</td><td colspan="3">Microsoft Windows 10 or later (64-bit)</td></tr>
<tr><td>CPU</td><td>8 Core or higher</td><td>16 Core or higher</td><td rowspan="2">Enterprise-level deployment requires prior consultation</td></tr>
<tr><td>RAM</td><td>32 GB or higher</td><td>64 GB Core or higher</td></tr>
<tr><td rowspan="4">Communication</td><td colspan="3">Supports the Standard Transmission Control Protocol (TCP/IP) networking communication protocol between servers, clients, and devices.</td></tr>
<tr><td colspan="3">Supports Dynamic Host Configuration Protocol (DHCP) or Static IP address.</td></tr>
<tr><td colspan="3">Supports network configuration.</td></tr>
<tr><td colspan="3">Supports Network Time Protocol (NTP).</td></tr>
<tr><td rowspan="2">Encryption</td><td colspan="3">Supports HTTPS communication protected by Secure Socket Layer (SSL) between the client (web browser) and platform.</td></tr>
<tr><td colspan="3">Supports AES-256 for Fingerprint Template, and Face Template.</td></tr>
<tr><td colspan="3">Supports AES-256 for Fingerprint Template and Face Template (Optional).</td></tr>
</table>

**Caution**

For stable operation, Suprema recommends using dedicated server for the Suprema Plugins.

Please refer to the server specifications below.

# Prerequisites

## Server Specification

Suprema recommends using a dedicated server for the Suprema Plugin to ensure stable operation.

- Recommended specification: CPU 8 Core / RAM 32 GB or higher

| Deployment Scale | Recommendation |
|---|---|
| 0-20 devices | Installation on an existing server may be possible, but server specification and resource review are required. |
| Up to 100 devices | Dedicated Plugin server recommended. |
| More than 100 devices | Additional plugin server recommended. |

## Synergis cloud link

1. Enabling RIO Protocol.

   > *https://[IP Address of Cloud link]/Features/DuiRIO/Enabled/Set?value=true*

2. Recommended and Max. Device connection.

| No. of Users | Recommended Devices per one Cloud link | Max. Possible devices |
|---|---|---|
| 20,000 + | Up to 40 | Not recommended |
| Below 10,000 | Up to 50 | Up to 64 |

> **Caution**
>
> - Dedicated Cloud Links for Suprema devices are required.
> - Connecting devices other than Suprema products to the Cloud Link is not recommended.

## Database

- Plugin Database (Device & Extractor) is automatically created in same SQL server of Directory.
  - Admin can modify the database installation location.
  - Supports backup/restore.
- SQL account needs below authority.

- Server roles: db_creator, processadmin, public
- Database roles: db_backupoperator, db_datareader, db_datawriter, public


# Fingerprint enrollment device

To use a USB-type fingerprint enrollment device, a separate driver installation is required.


Please contact the Suprema Partner Business Team for assistance.

# Plugin Installation


1. Run the installation file (setup.exe) as an administrator.

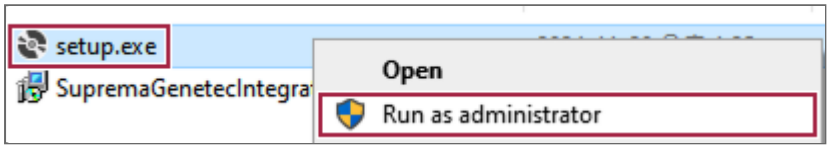



2. Click **Next**.

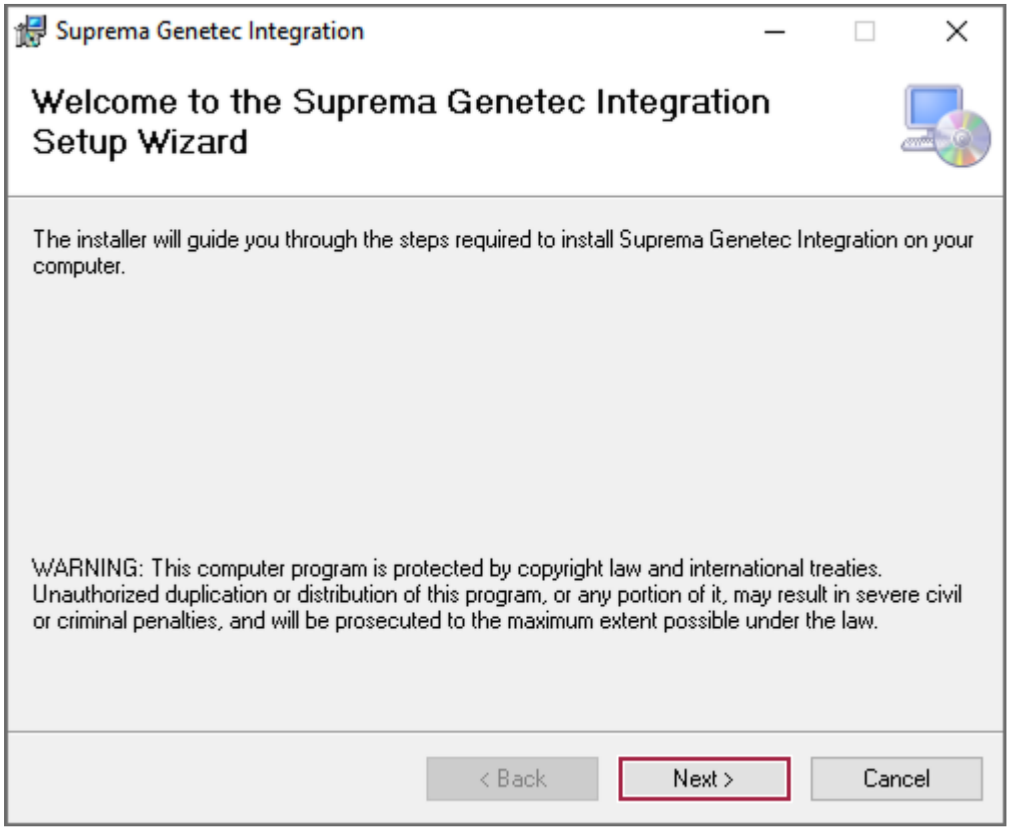



3. Set the path where Suprema Plugin will be installed, then click **Next**.

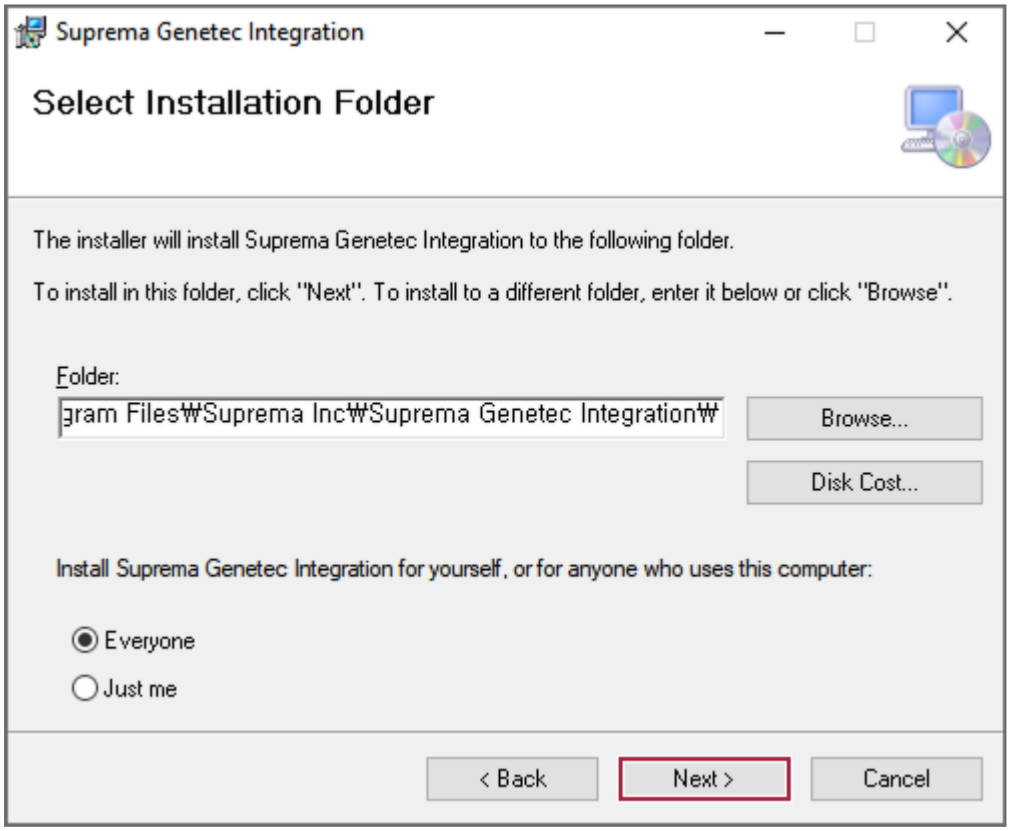



4. If the installation is ready, click **Next**.

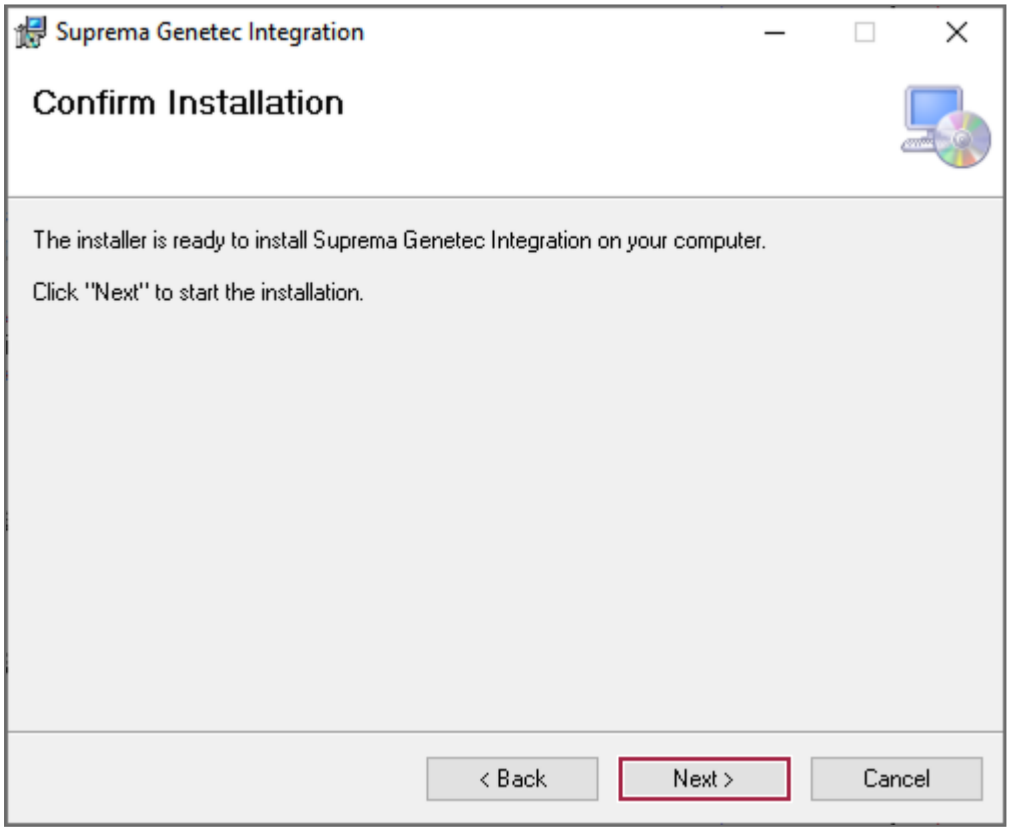



5. The installation will begin. Please wait until it completes successfully.

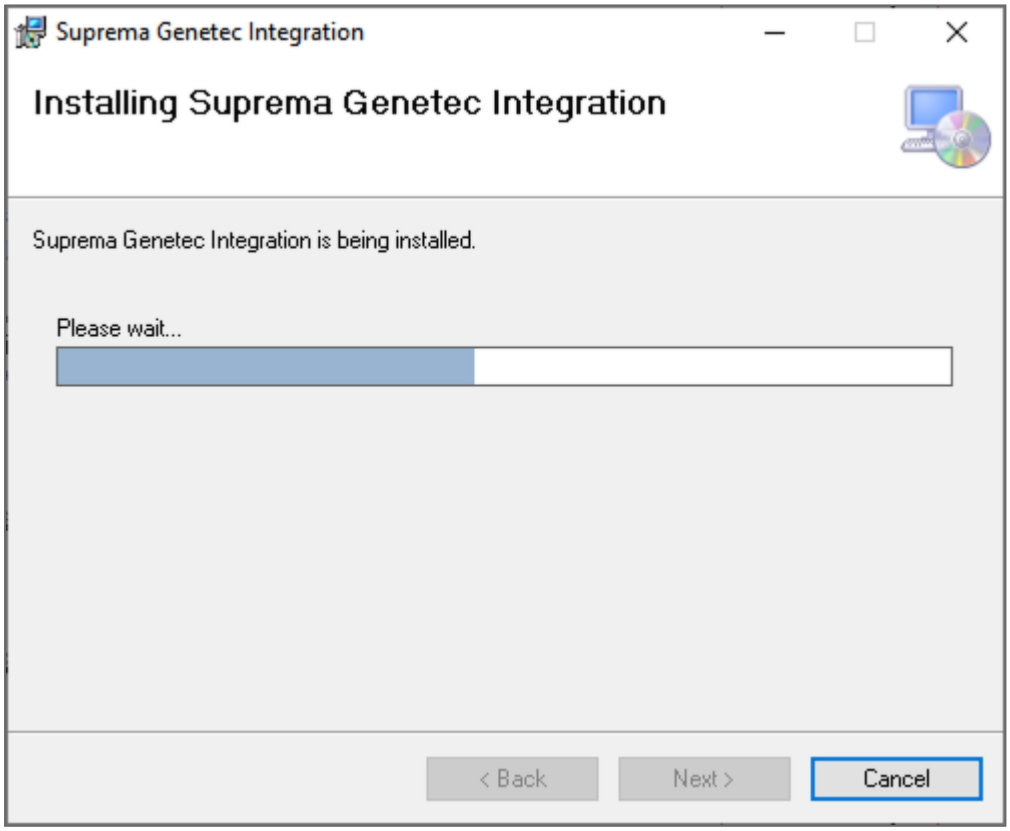



6. Once the installation is complete, a command prompt window will appear. Press any key to close the window.

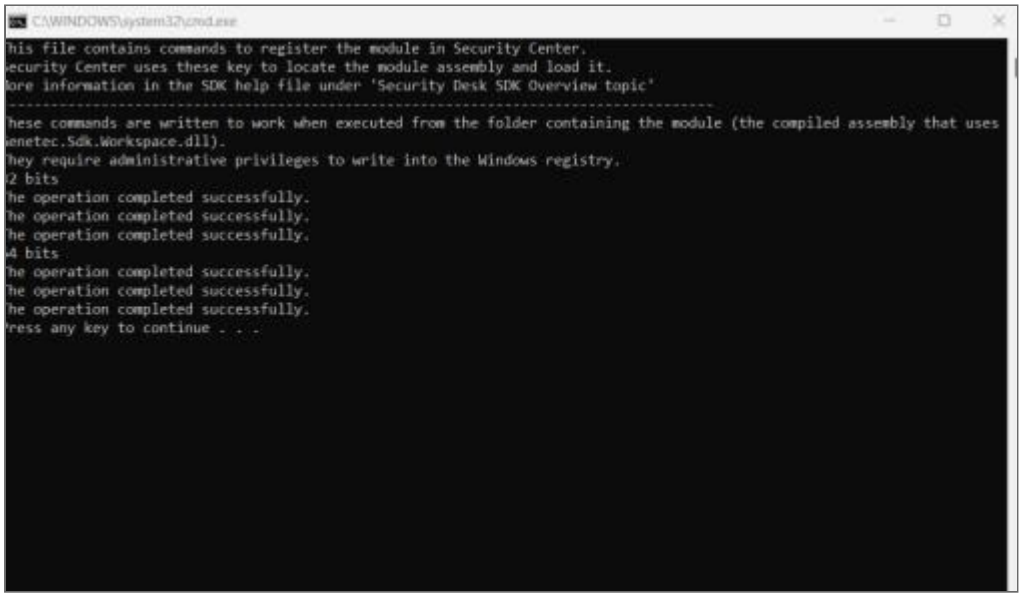


7. Click **Close** button.

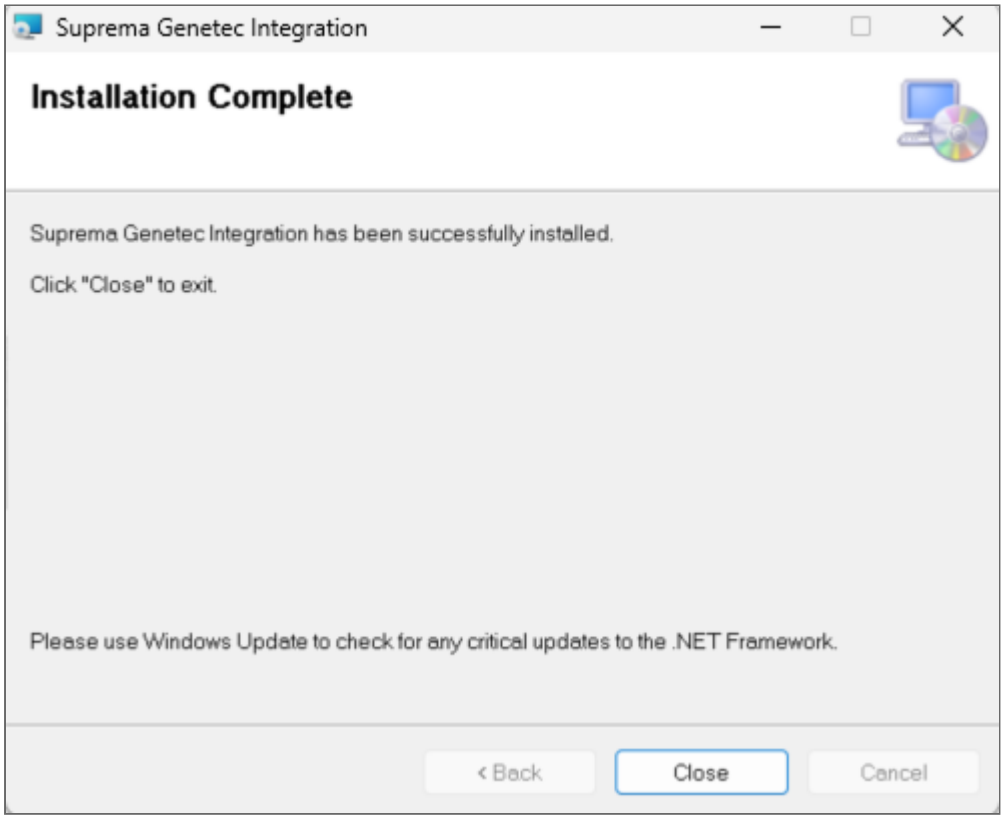


8. Press Any Key to complete.

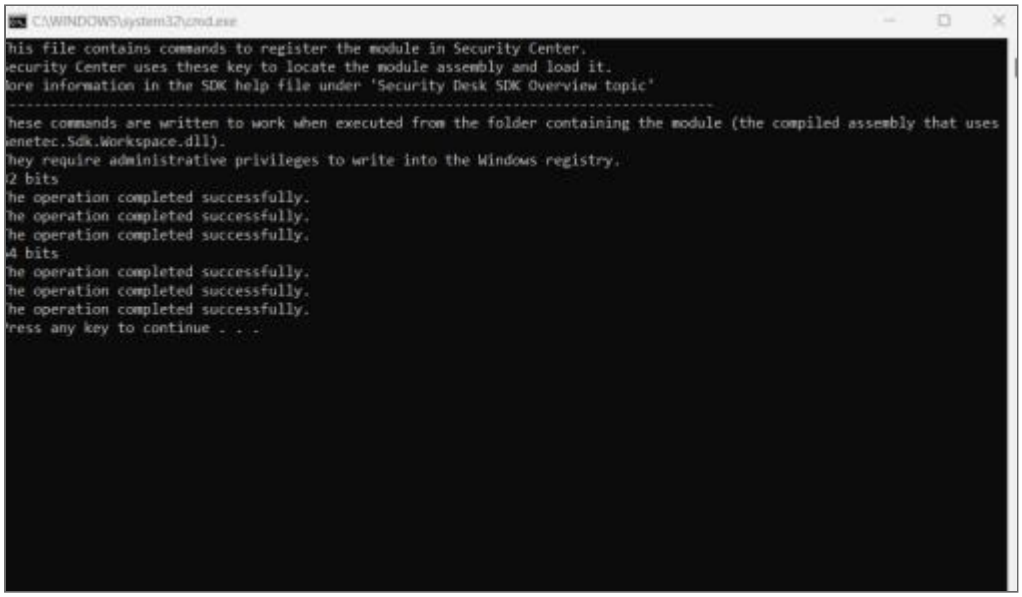



# Added Suprema Plugin in Genetec Config Tool


1. Run the Genetec **Config Tool**.




2. Click the **Plugins** under **Tasks**.

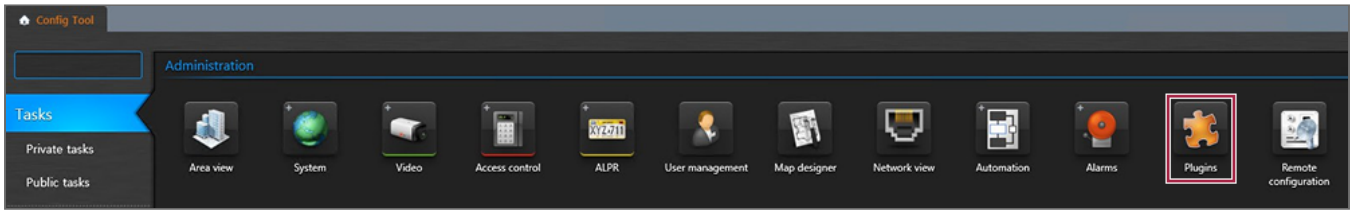



3. Click **Add an entity** under the **Plugins** screen, then select **Plugin** from the list.

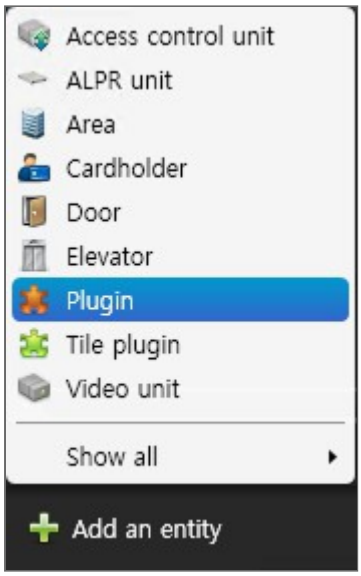


4. In **Select plugin type**, select **Suprema Extractor Plugin** and click **Next**.

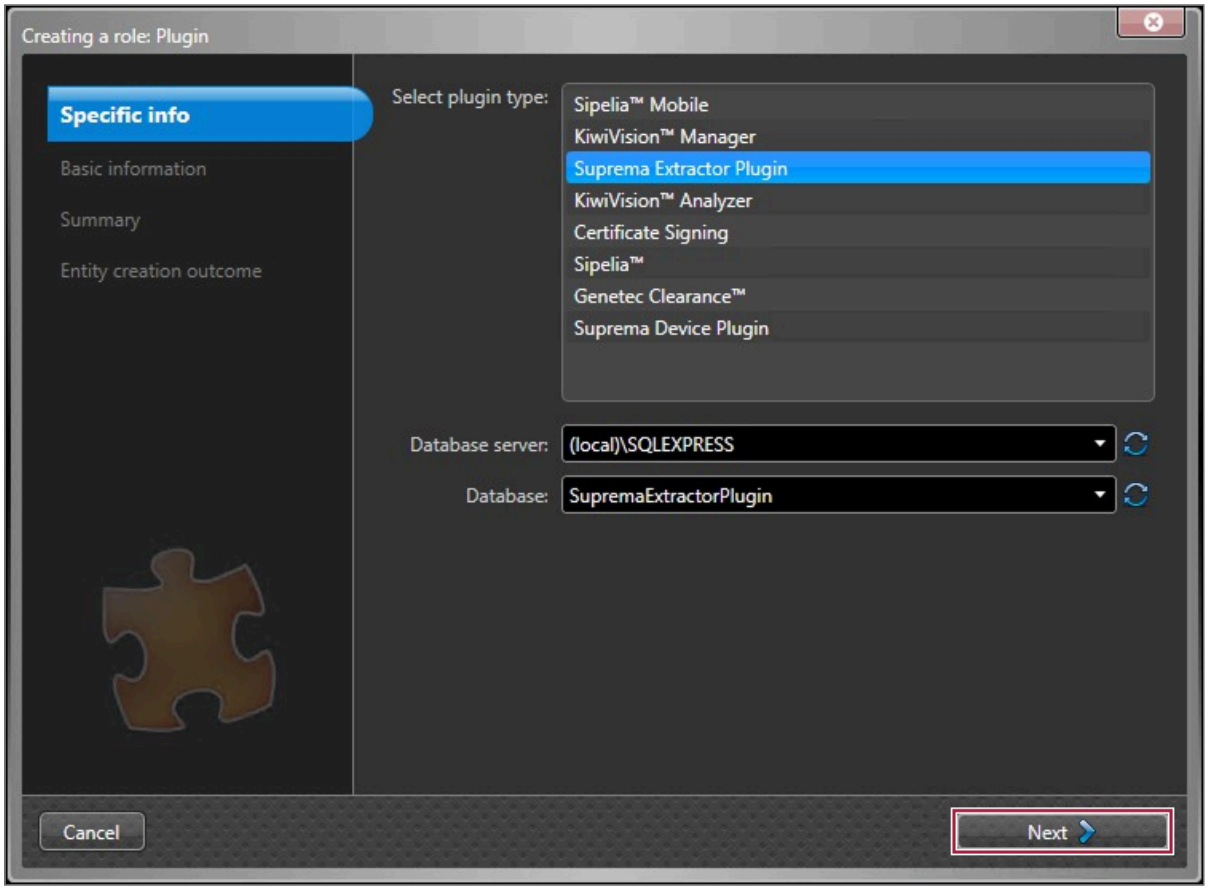



5. Enter the **Entity name** and **Entity description**, then click **Next**.

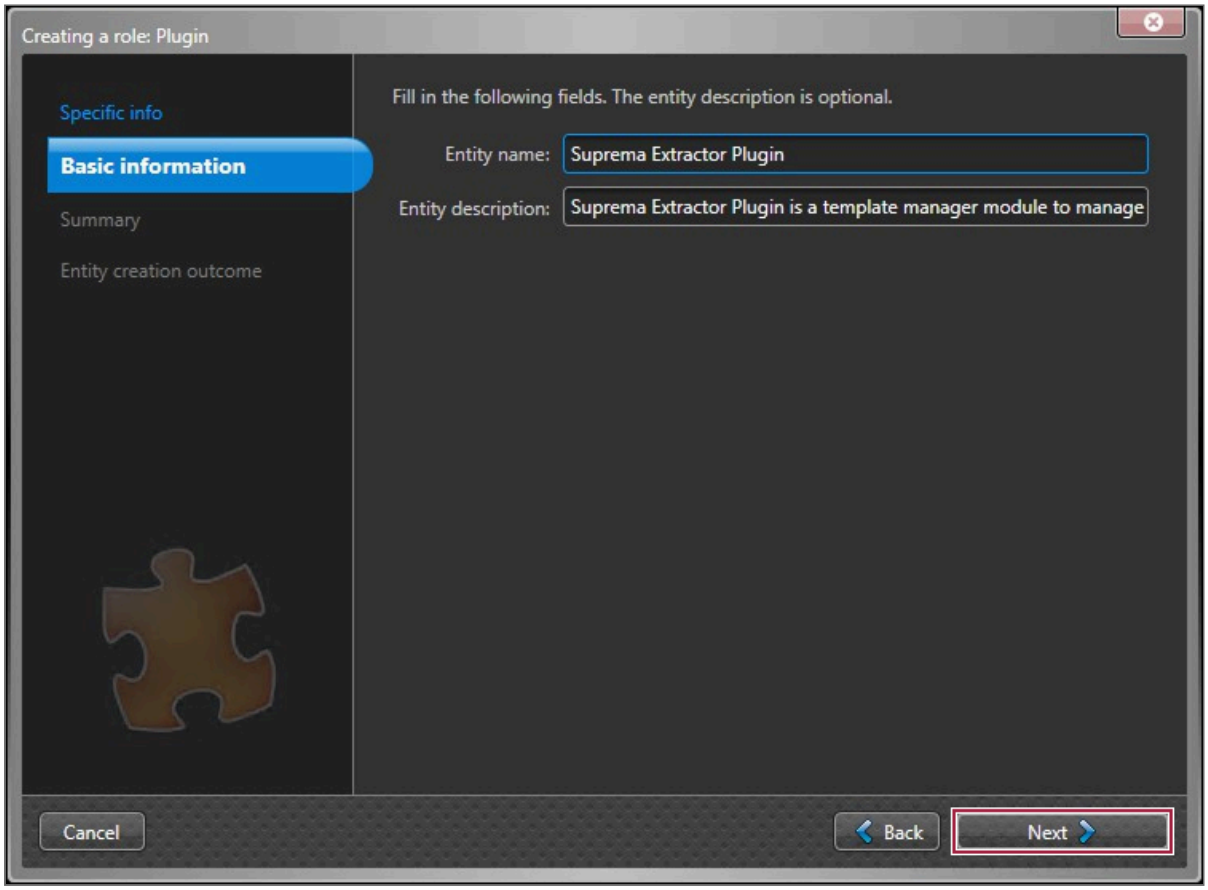



> **Info**
> The **Entity description** is optional.


6. Verify the information and click **Create**.

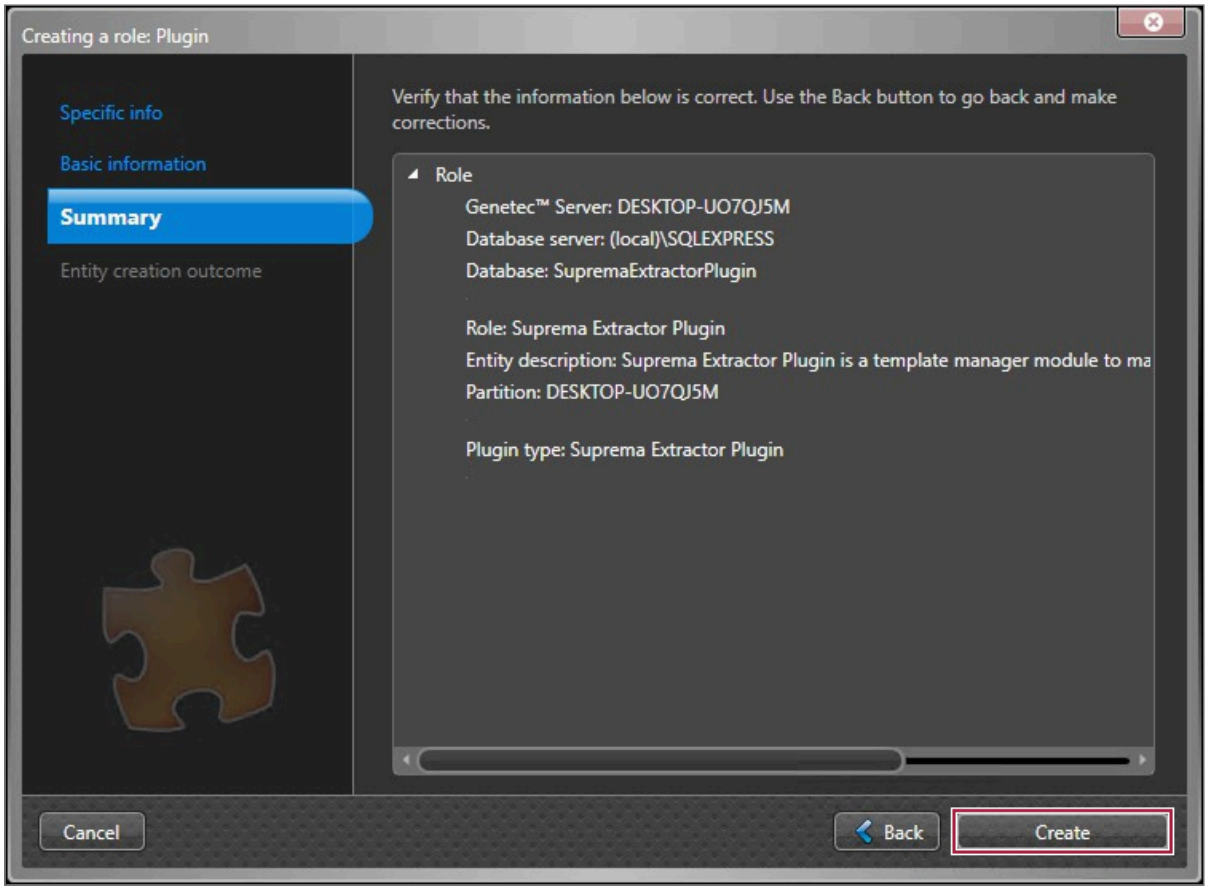



7. The **Suprema Extractor Plugin** will be created. Click **Close**.

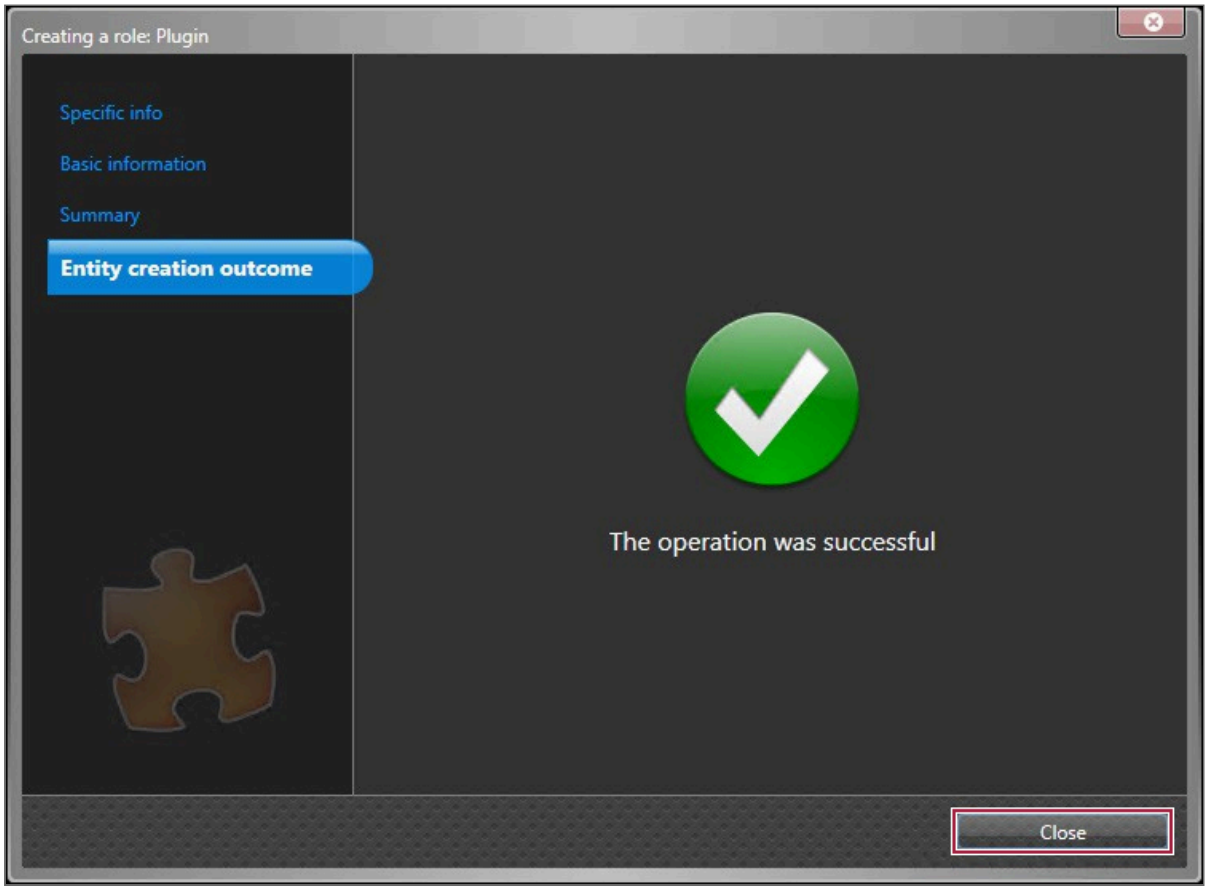



8. Click **Add an entity** under **Plugins** screen, then select **Plugin** from the list.

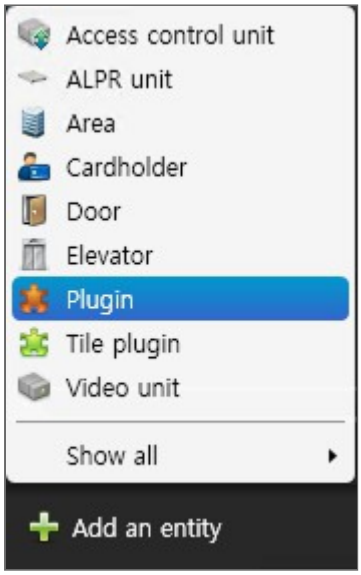


9. In **Select plugin type**, select **Suprema Device Plugin** and click **Next**.

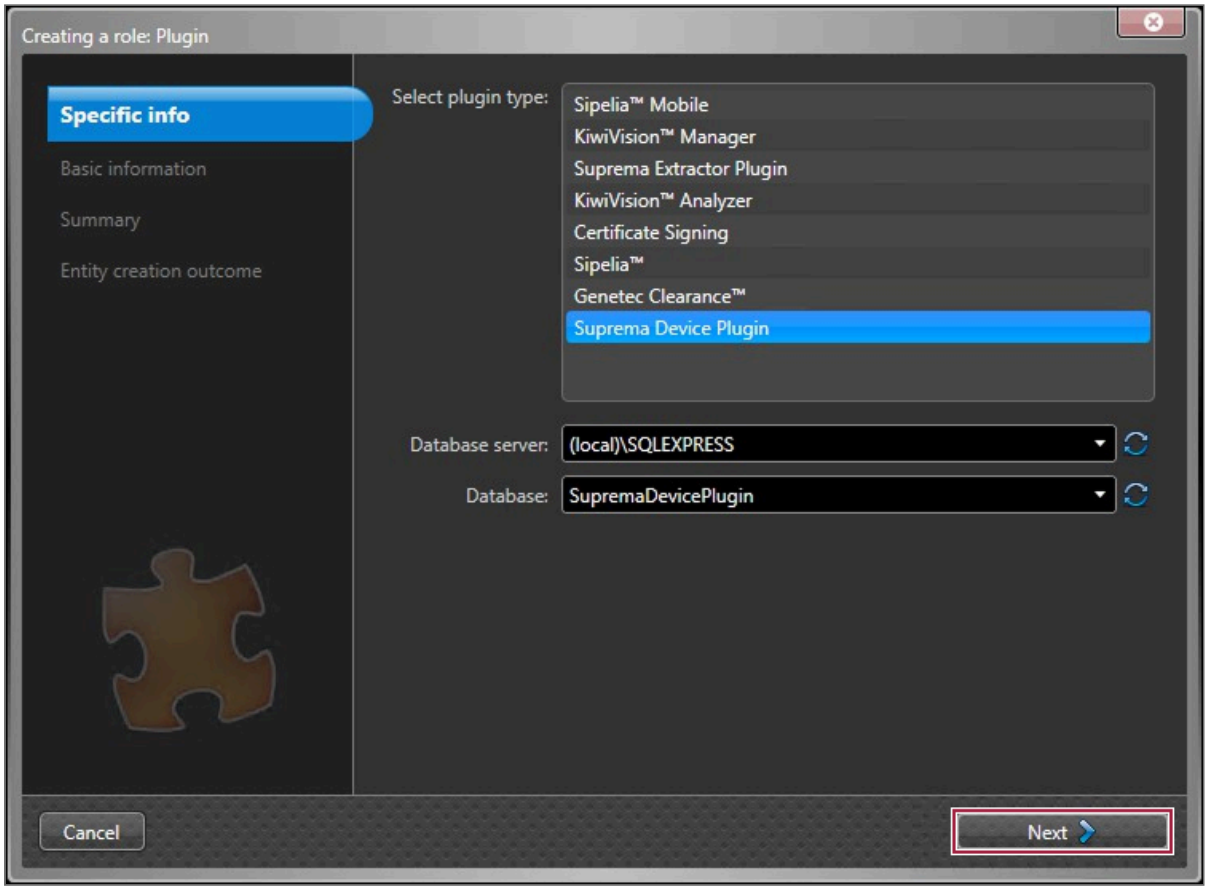



10. Enter the **Entity name** and **Entity description**, then click **Next**.

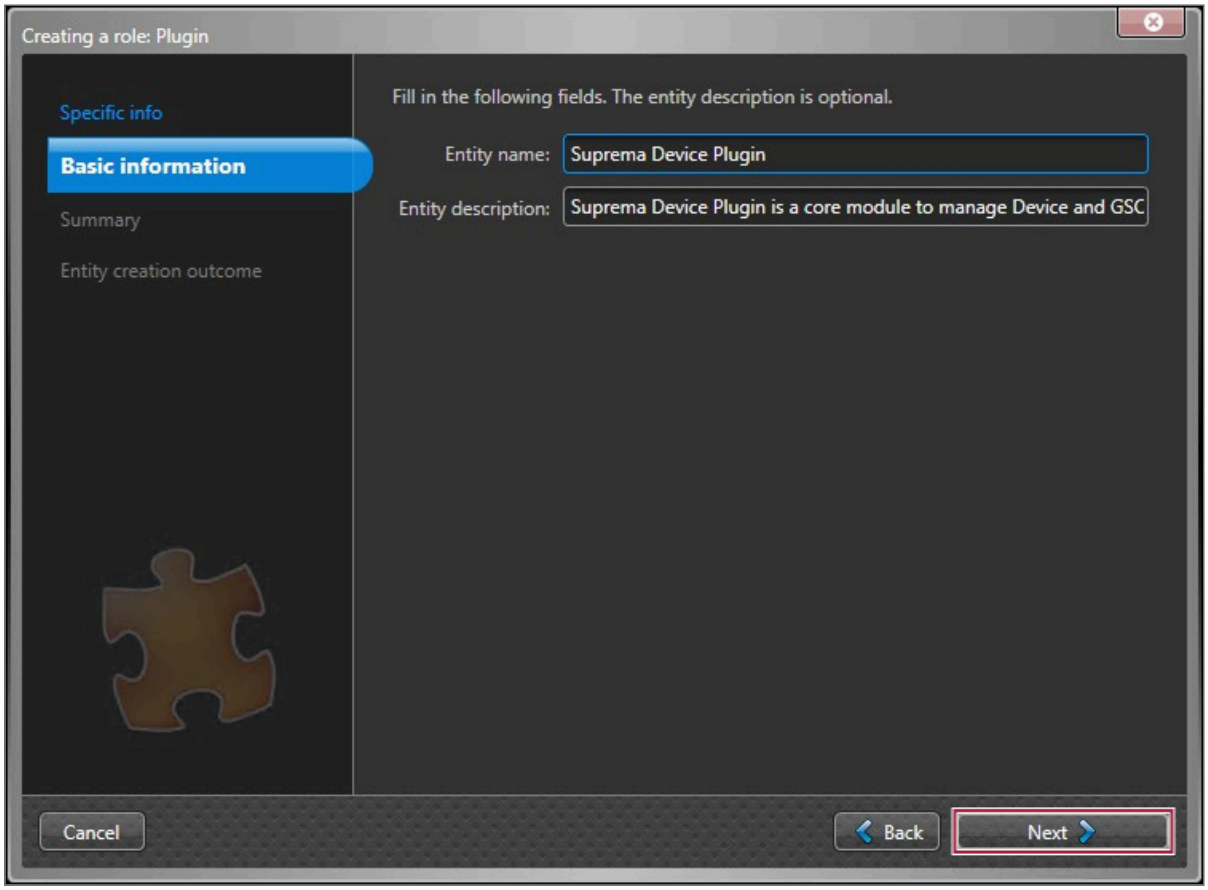



**Info**

The **Entity description** is optional.


11. Verify the information and click **Create**.

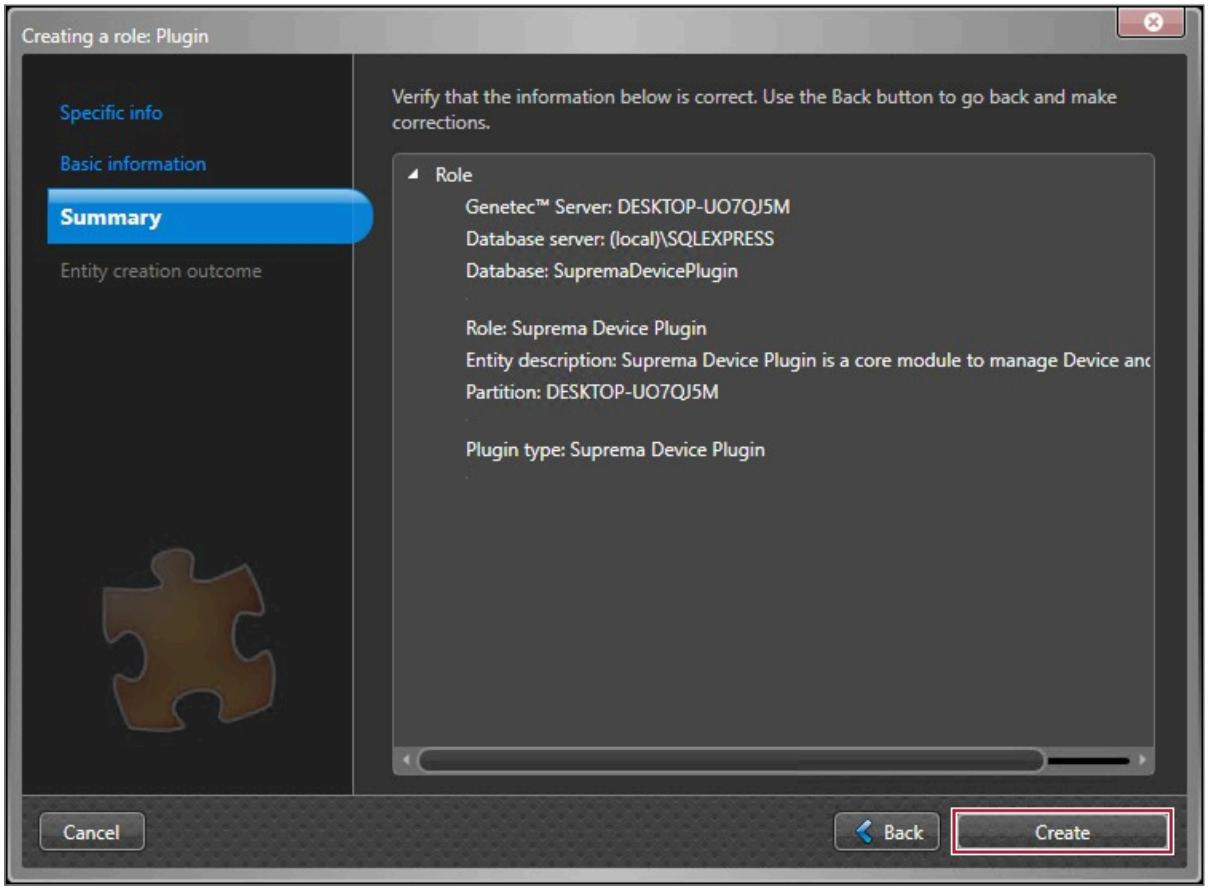


12. The **Suprema Device Plugin** will be created. Click **Close**.

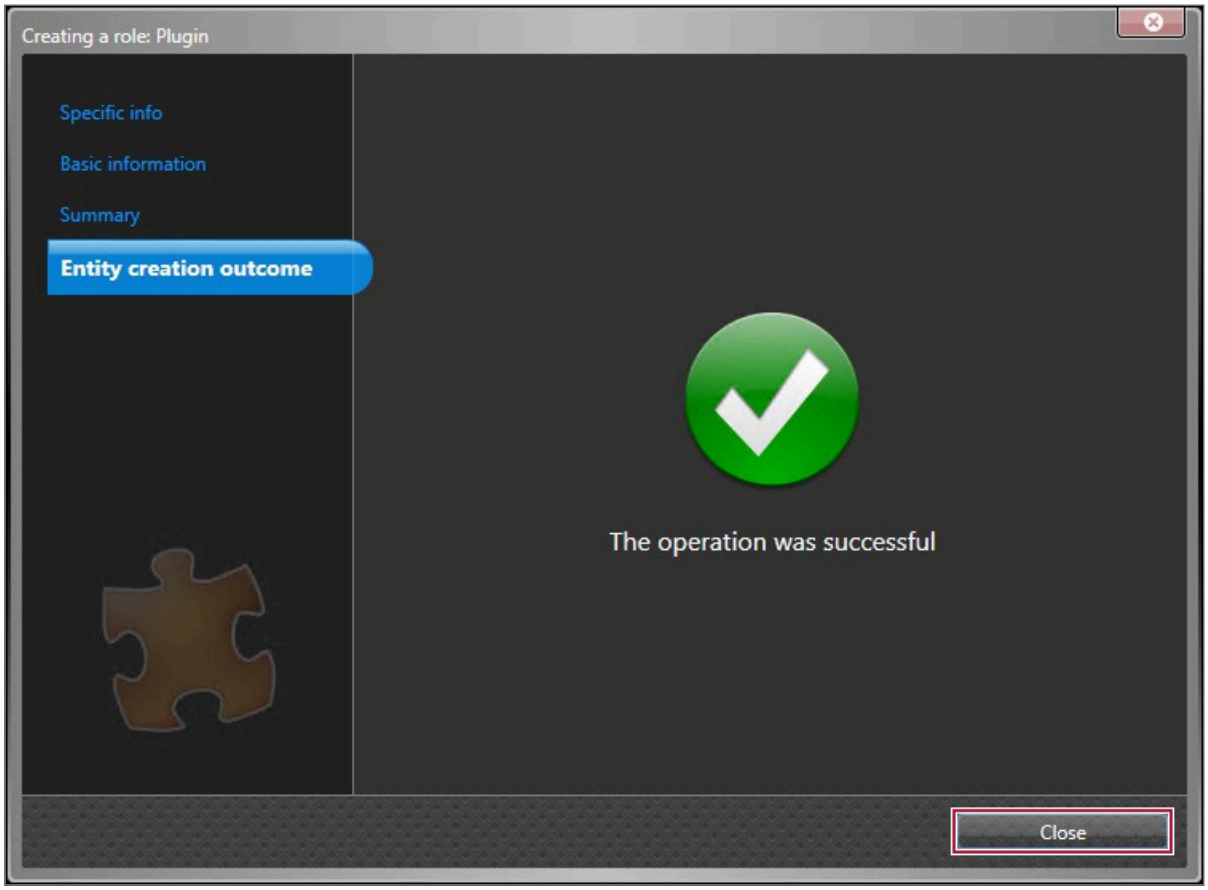


13. The addition of the **Suprema Plugin** is complete.

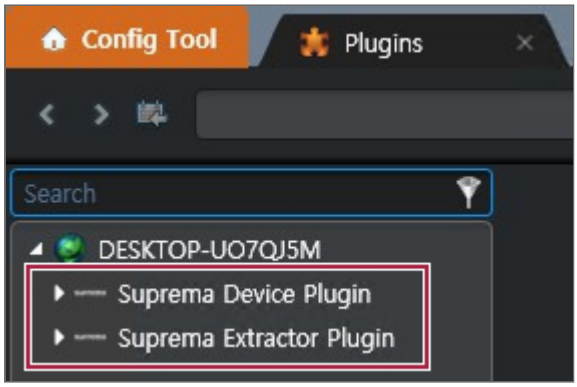
Config Tool
Plugins
Search
DESKTOP-UO7QJ5M
Suprema Device Plugin
Suprema Extractor Plugin

# System Management

## System Configuration

### Prerequisites

#### License

1. Software license
    1. Genetec
        - Security Center: 1ea.
        - SDK Connection: GSC-1SDK-SUPREMA-READ (One license supports 2 connection.)
            1. Config Tool login: 2ea
            2. Security desk login: 1ea
            3. Suprema extractor plugin: 1ea per **Genetec Security Center Server**
            4. Suprema device plugin: 1ea per **Suprema device plugin**

            > **Info**
            > One device plugin supports up to 4 cloud links (256 Suprema devices), and you can add as many Suprema Device Plugin as you need.
            > – Needs total 3 GSC-1SDK-SUPREMA-READ per Server.
    2. Suprema
        - Plugin license: INT_GEN_GSC
2. Device license
    1. Genetec
        - GSC-Sy-X-1R(E): 1ea per Suprema device assigned to door as reader.
    2. Suprema
        - Only devices that it's ID is registered in Server license can be registered in Plugin.
        - Sku: Device model - GEN.

#### Database

1. Permission for SQL database

    To ensure proper operation of the Plugin (Device Plugin and Extractor DB), please grant the SQL account the following

permissions:

1. Server roles:
    - db_creator
    - processadmin
    - public
2. Database roles:
    - db_backupoperator
    - db_datareader
    - db_datawriter

2. Database size requirements

The required database storage capacity varies depending on the number of users enrolled with biometric data. When face templates are enrolled, the Suprema Extractor Plugin generates and stores the corresponding templates in its Database.

> - Each face template requires approximately 104 KB of database space.
> - Ensure that sufficient storage capacity is allocated based on the expected number of biometric users.

Results | Messages

| | name | rows | reserved | data | index_size | unused |
|---|---|---|---|---|---|---|
| 1 | TBL_CARDHOLDER_FACEDATA | 1 | 400 KB | 104 KB | 24 KB | 272 KB |

## RIO protocol

To ensure proper operation of the Plugin, please enable RIO protocol for Synergis Cloud Link or Softwire.

### Process

1. Enter the following URL into your browser.

> *https://[Unit IP]/Features/DuiRIO/Enabled/Set?value=true*





2. Login to Synergis Cloud Link or Softwire.

3. Click a URL `http://[IPaddress]/Features/DuiRIO/Enabled/Set?value=true`.





When the RIO protocol is enabled, the **RIO** tab becomes available on the **Hardware** page under **Config Tool → Access Control → Cloud Link**.

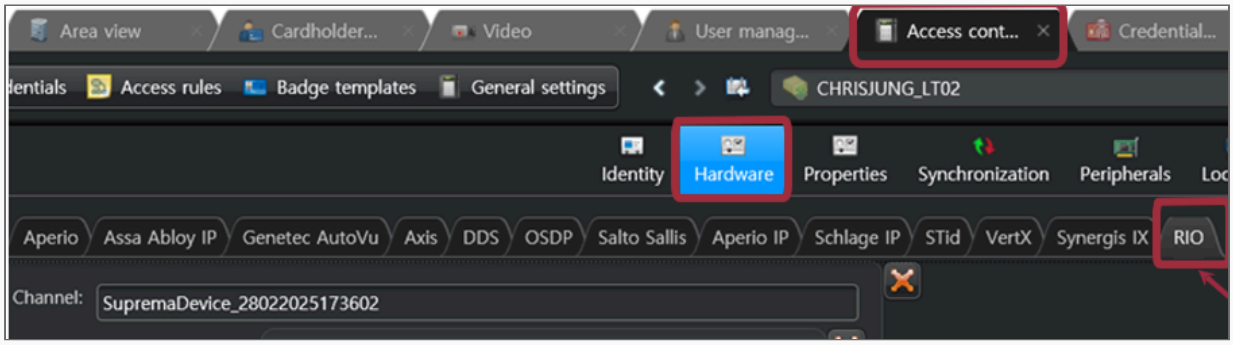


## Profile image quality setting

If you'd like to **extract face templates from cardholder profile images** in GSC, please adjust picture size to ensure picture quality.

- Path: **Config Tool → Access Control → General settings**

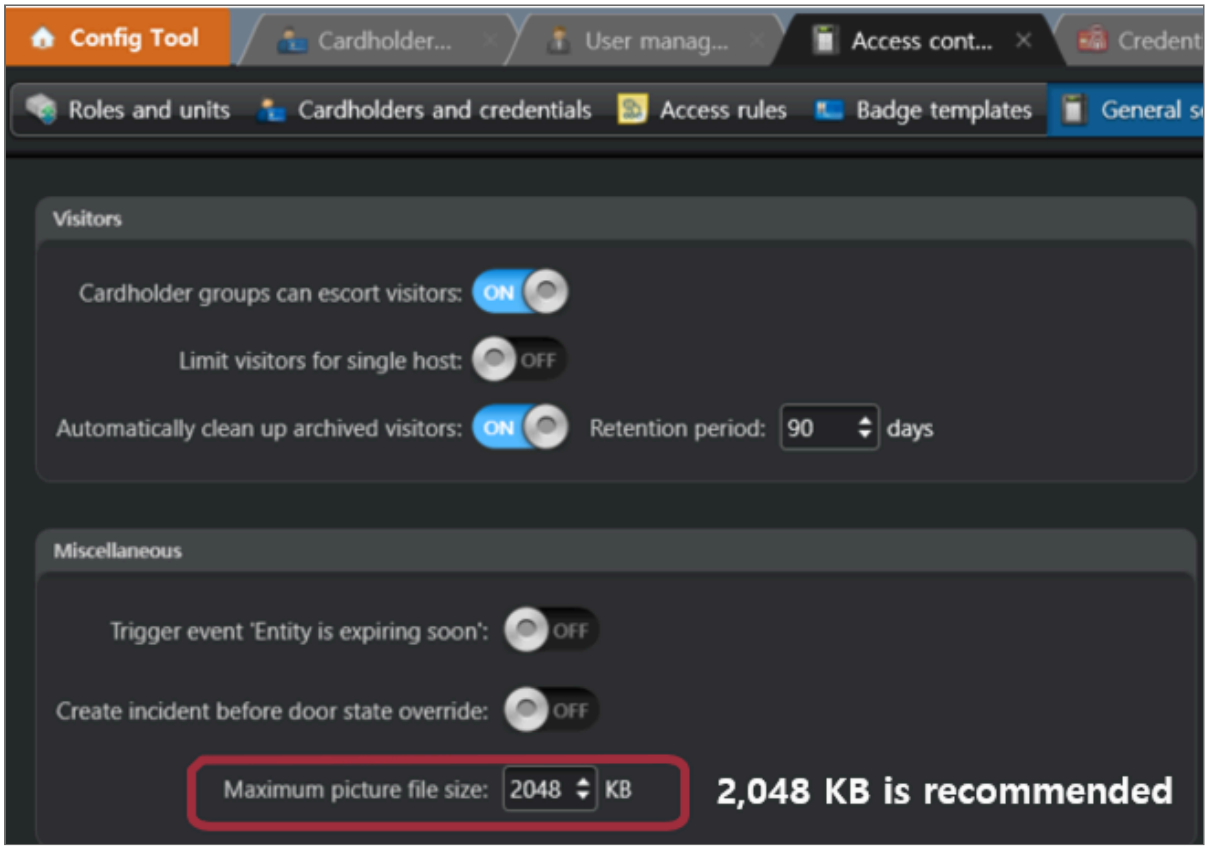


## Device setting

1. Removing all users and logs from devices.
2. Factory reset devices.
3. Set User ID type as Alphanumeric.


> **Info**
> **Default IP and PW for device admin.**
>
> - ID: su
> - PW: 1234
>
> You can change PW from **Config Tool** → **Suprema Plugin Configuration** → **Superadmin Credential** page.

4. Network setting.
   - Supports DHCP.
   - Network settings required according to site policy.
5. User ID type setting.


   The user ID type must be set to alphanumeric before connecting the device to the Suprema plugin.

# Device Registration


1. In the **Config Tool**, click the **Plugins** under **Tasks**.

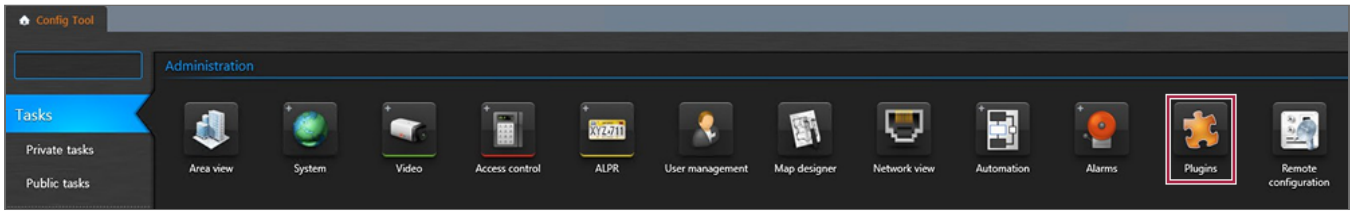


2. Click the **Suprema Device Plugin**.

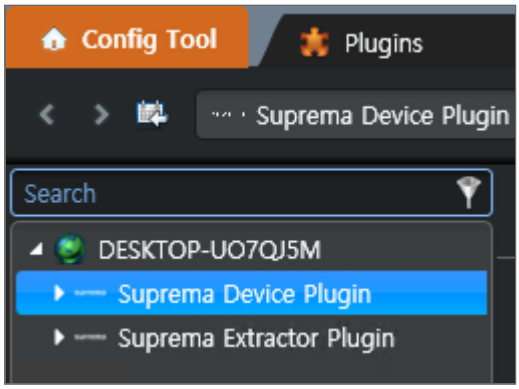



3. Go to **Device Management** tab.

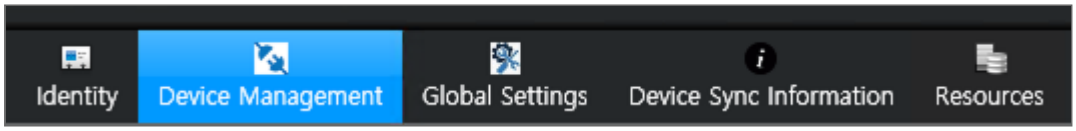



4. Click the **Search Device** button. All available devices will appear.

   If Device Communication Mode is set to Device To Server, please click the **Refresh List** button in the pane below.

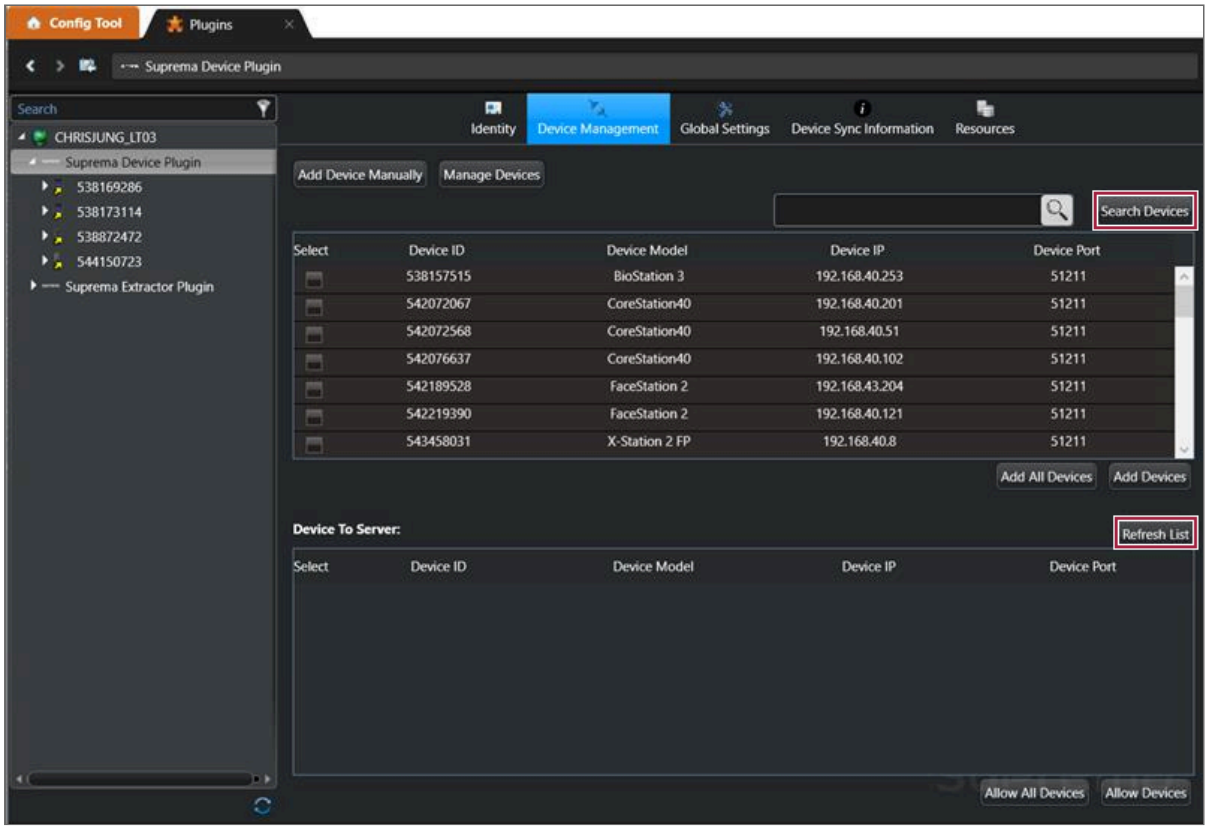



5. Select the device to add by checking the **Select** box, and click the **Add Devices** button. To register all devices, click the **Add All Devices** button.

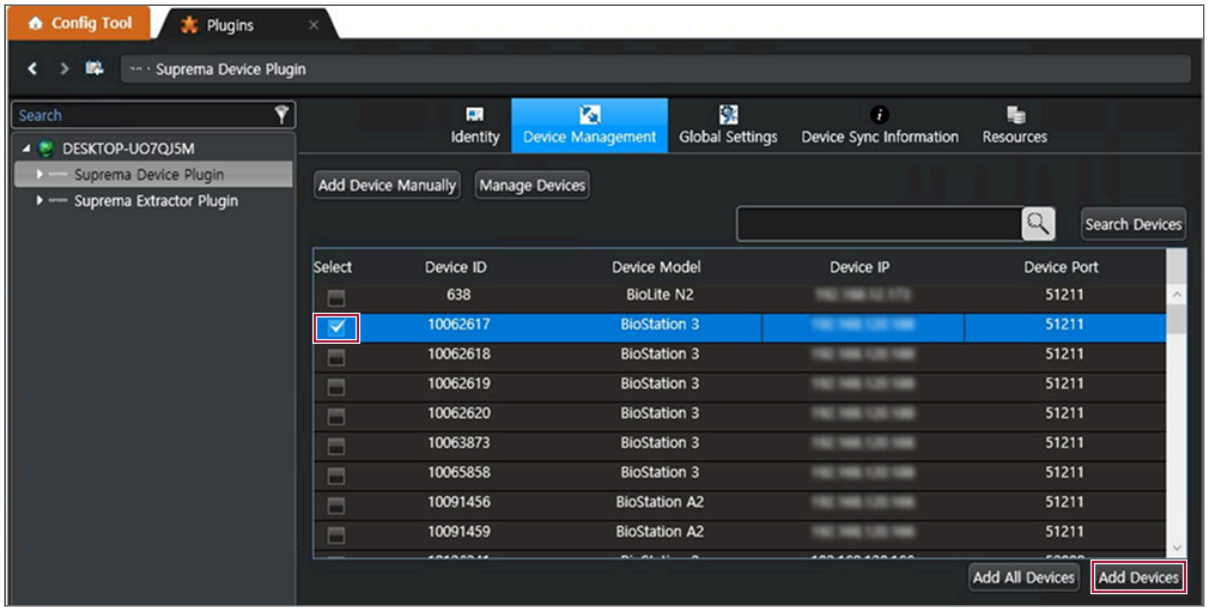



# Editing Device Settings and Information

Settings and information of registered devices can be edited.

1. In the **Config Tool**, click the **Plugins** under **Tasks**.

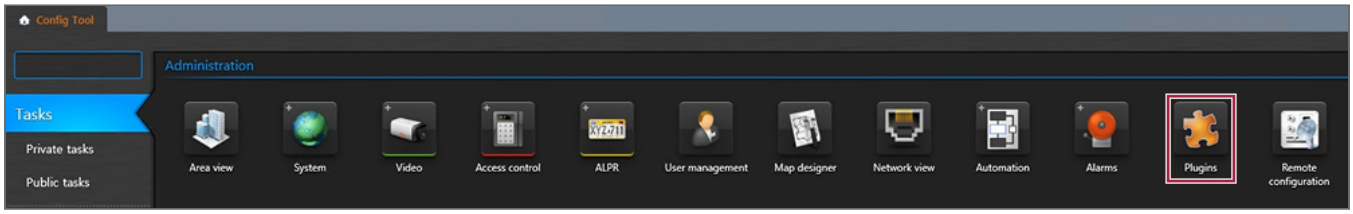


2. Open the left arrow of the **Suprema Device Plugin** and select a registered device. The **Device Settings** area will appear.

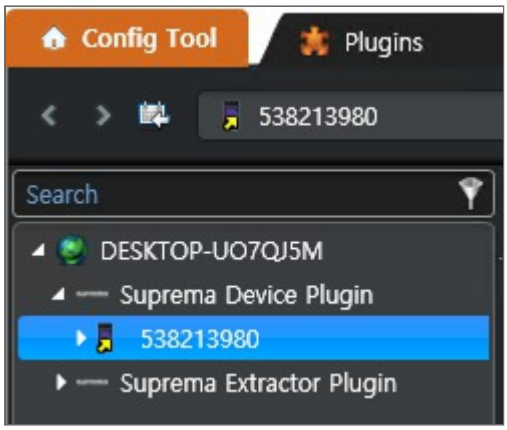



3. Set the desired options, then click the **Apply** button at the bottom to apply the edited settings.

# Device Settings

## Information


You can enter or edit the name and the group of a device. If a new firmware version is available, you can upgrade to it.

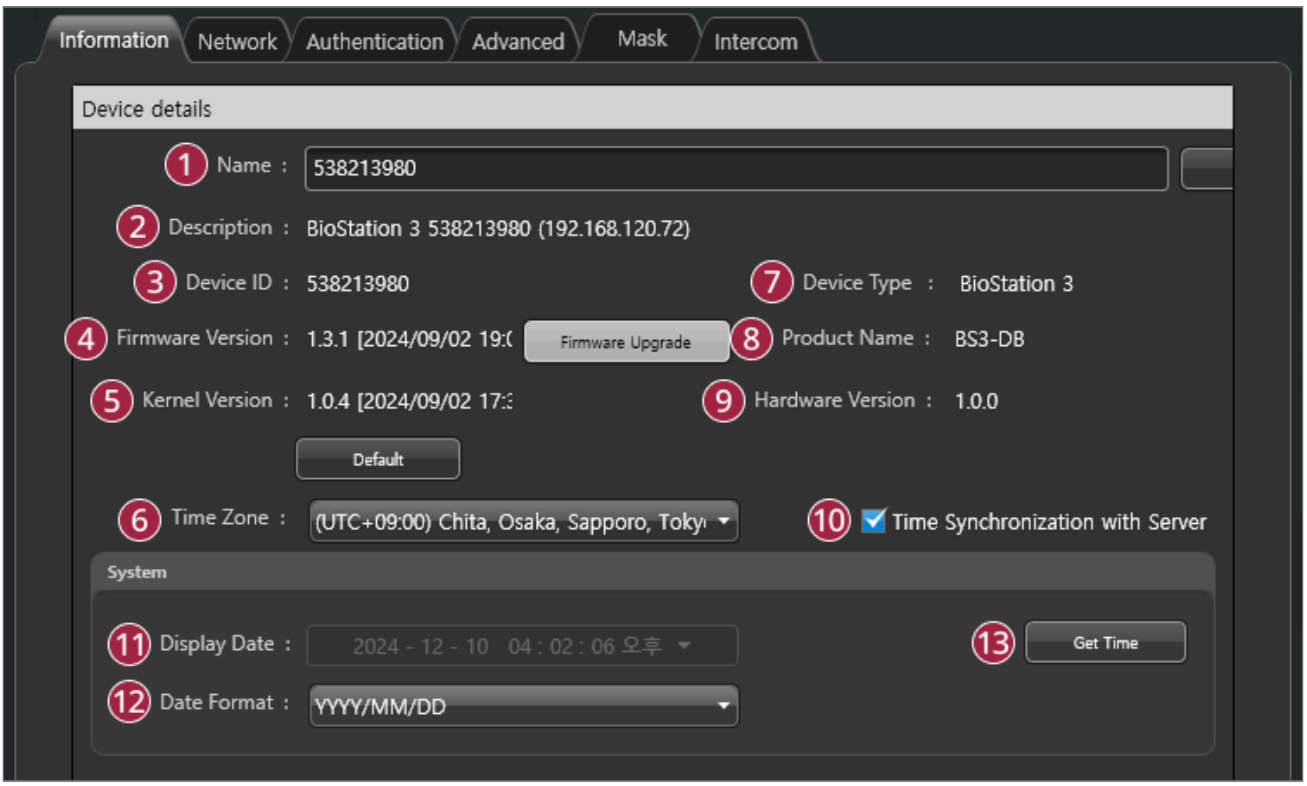

| No. | Item | Description |
|---|---|---|
| 1 | **Name** | Enter a device name. |
| 2 | **Description** | View the product name, ID, and IP. |
| 3 | **Device ID** | View the device ID. |
| 4 | **Firmware Version** | Click **Upgrade** to install a new firmware version. |
| 5 | **Kernel Version** | View the kernel version. |
| 6 | **Time Zone** | Set the time zone of the device. |
| 7 | **Device Type** | View the device type. |
| 8 | **Product Name** | View the model name. |
| 9 | **Hardware Version** | View the hardware version. |
| 10 | **Time Synchronization with Server** | Select the option to synchronize the time information of the device with the server. |
| 11 | **Display Date** | View the displayed time. |
| 12 | **Date Format** | Select a date format. |
| 13 | **Get Time** | Click the button to fetch the time set in the device. |

## Network

You can configure the network connection settings of the device.

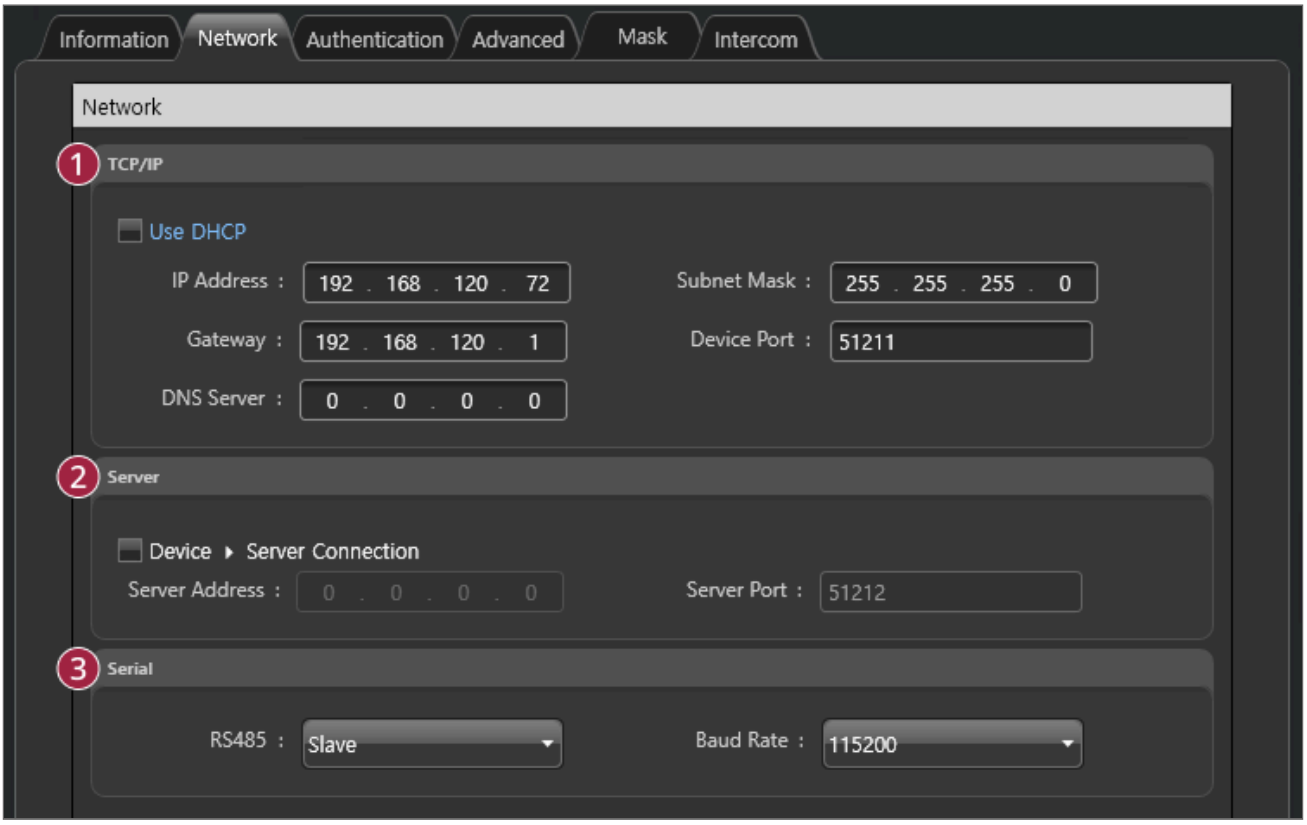



| No. | Item | Description |
|---|---|---|
| 1 | TCP/IP | You can configure the TCP/IP connection settings of the device.<br>• **Use DHCP**: Select this option to allow the device to use a dynamic IP address. If this option is selected, network settings cannot be entered.<br>• **IP Address**, **Subnet Mask**, **Gateway**: Enter network settings of the device.<br>• **Device Port**: Enter a port to be used by the device.<br>• **DNS Server**: Enter a DNS server address. |
| 2 | Server | You can enter connection settings to use in the server mode.<br>• **Device → Server Connection**: Select this option to configure the settings for connecting to the devices. If this option is selected, server network settings can be entered.<br>• **Server Address**: Enter the IP address or domain name of the server.<br>• **Server Port**: Enter the port number of the server. |
| 3 | Serial | You can configure the connection mode, and baud rate of devices connected over RS-485.<br>• **RS-485**: Set a RS-485 mode.<br>• **Baud Rate**: Set a baud rate of the RS-485 connection. |

# Authentication

You can configure the user authentication settings of the device.


## Face Authentication Device

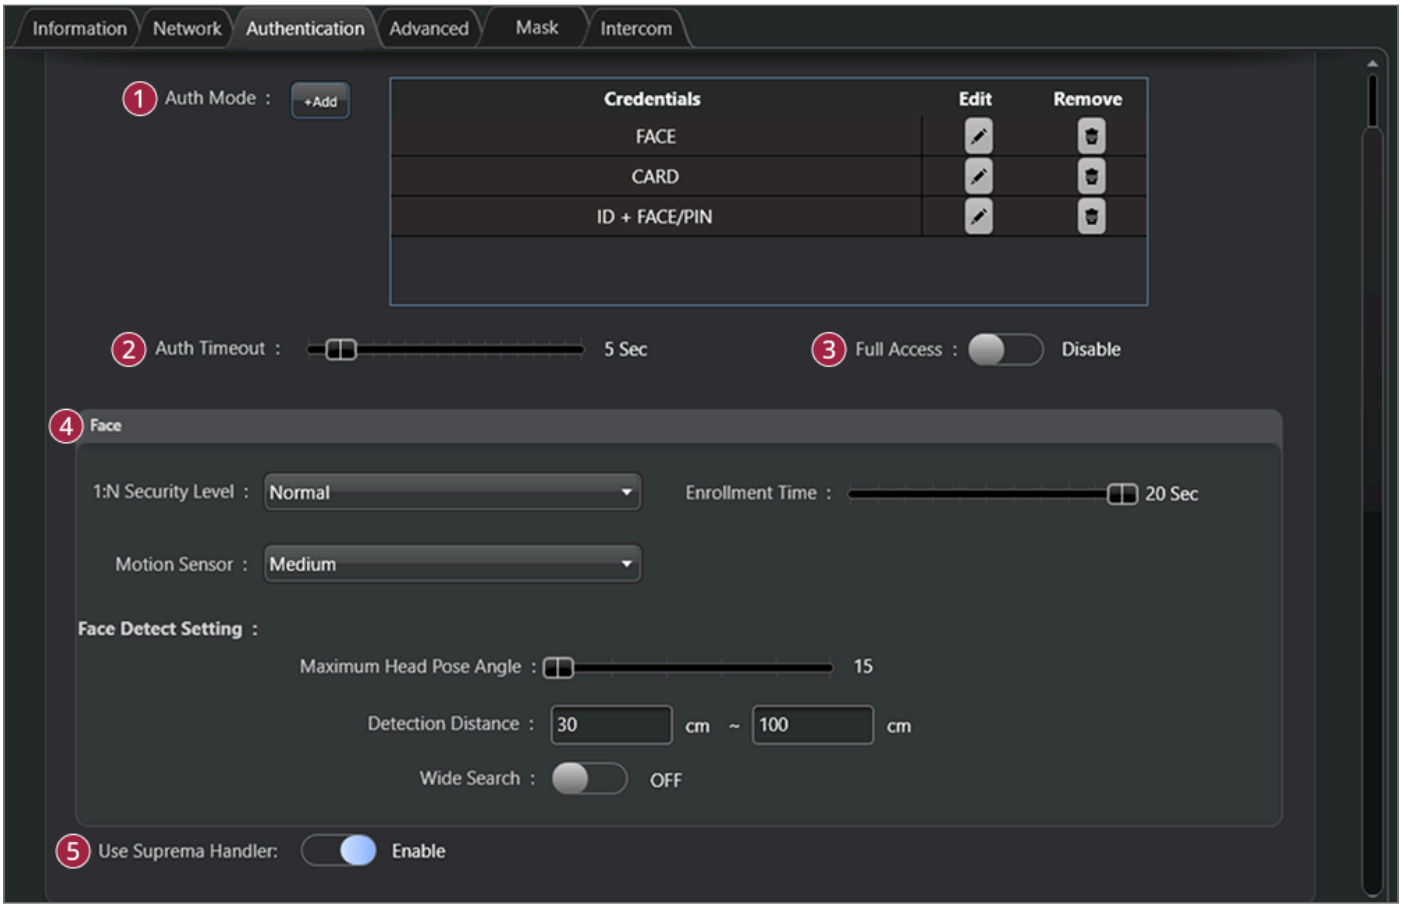


| No. | Item | Description |
|---|---|---|
| 1 | Auth Mode | You can configure the authentication modes of the device. Use any combinations of fingerprint, ID, card, PIN and face as authentication modes.<br><br>Click **+Add** and create an authentication mode by dragging and dropping available options. |
| 2 | Auth Timeout | When using a combination of multiple credentials in **Auth Mode**, the system waits for this length of time to authenticate the second credential.<br><br>Set a timeout period for authenticating the second credential after authenticating the first credential. If the second credential is not authenticated within this time, the authentication fails. |
| 3 | Full Access | You can grant full access to users registered within the device without setting any access groups. |

| No. | Item | Description |
|---|---|---|
| 4 | **Face** | You can configure the detail settings concerning face authentication.<br>• **1:N: Security Level**: You can set a security level to use for face authentication. The higher the security level is set, the false rejection rate (FRR) gets higher, but the false acceptance rate (FAR) gets lower.<br>• **Enrollment Time**: If a face is not registered during the set time when registering a user's face, the face registration will be canceled.<br>• **Motion Sensor**: Set the sensitivity for detecting motion near the device.<br>• **Face Detect Setting**: Set the environment for recognizing the user's face during face authentication.<br>– **Maximum Head Pose Angle**: Set maximum angle of head rotation.<br>– **Detection Distance**: Set the minimum and maximum detection distance.<br>– **Wide Search**: Set to **ON**, search for a face in the entire camera image. |
| 5 | **Use Suprema Handler** | This option enables or disables RIO communication between the Suprema device and the Cloud Link.<br>• **Enable**: Events generated from the Suprema device are sent to the Cloud Link through the Plugin.<br>• **Disable**: Events generated from the Suprema device are not sent to the Plugin.<br>Disable this option when the **Suprema device is used as a reader connected to a Mercury controller**. |

## Fingerprint Authentication Device

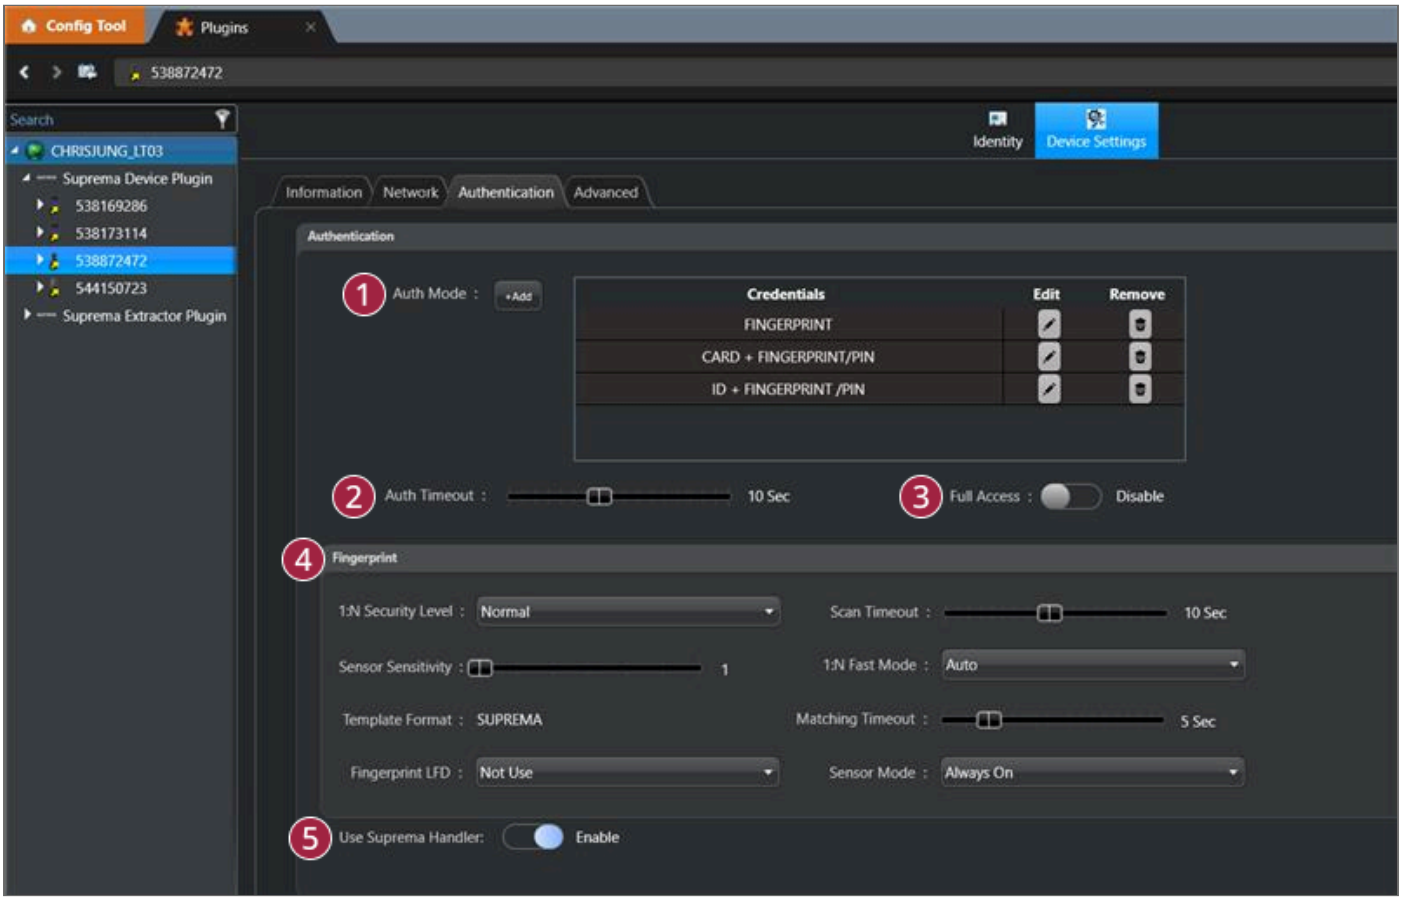



| No. | Item | Description |
|---|---|---|
| 1 | Auth Mode | You can configure the authentication modes of the device. Use any combinations of fingerprint, ID, card, PIN and face as authentication modes.<br><br>Click **+Add** and create an authentication mode by dragging and dropping available options. |
| 2 | Auth Timeout | When using a combination of multiple credentials in **Auth Mode**, the system waits for this length of time to authenticate the second credential.<br><br>Set a timeout period for authenticating the second credential after authenticating the first credential. If the second credential is not authenticated within this time, the authentication fails. |
| 3 | Full Access | You can grant full access to users registered within the device without setting any access groups. |

| No. | Item | Description |
|---|---|---|
| 4 | **Fingerprint** | You can configure the detail settings concerning fingerprint authentication.<br>• **1:N: Security Level**: You can set a security level to use for fingerprint authentication. The higher the security level is set, the false rejection rate (FRR) gets higher, but the false acceptance rate (FAR) gets lower.<br>• **Scan Timeout**: If a finger is not registered during the set time when registering a user's finger, the finger registration will be canceled.<br>• **Sensor Sensitivity**: Set the sensitivity of the fingerprint recognition sensor. Set the sensitivity higher to obtain precise fingerprint information.<br>• **1:N: Fast Mode**: You can set the speed of fingerprint authentication. Selecting **Auto** sets the authentication speed according to the total number of fingerprint templates enrolled on the device.<br>• **Template Format**: You can check the configured fingerprint template format.<br>• **Matching Timeout**: Set the timeout for fingerprint matching. If authentication is not completed within the specified time, it will fail.<br>• **Fingerprint LFD**: Set the level for fake fingerprint detection. Higher levels for fake fingerprint detection may also increase rejection rates for actual people's fingerprints.<br>• **Sensor Mode**: Set the operating mode of the fingerprint sensor.<br>– **Auto On**: The fingerprint sensor turns on by recognizing the user's finger.<br>– **Always On**: The fingerprint sensor remains always on. |
| 5 | **Use Suprema Handler** | This option enables or disables RIO communication between the Suprema device and the Cloud Link.<br>• **Enable**: Events generated from the Suprema device are sent to the Cloud Link through the Plugin.<br>• **Disable**: Events generated from the Suprema device are not sent to the Plugin.<br>Disable this option when the **Suprema device is used as a reader connected to a Mercury controller**. |

## Advanced

You can set the display/sound and wiegand.

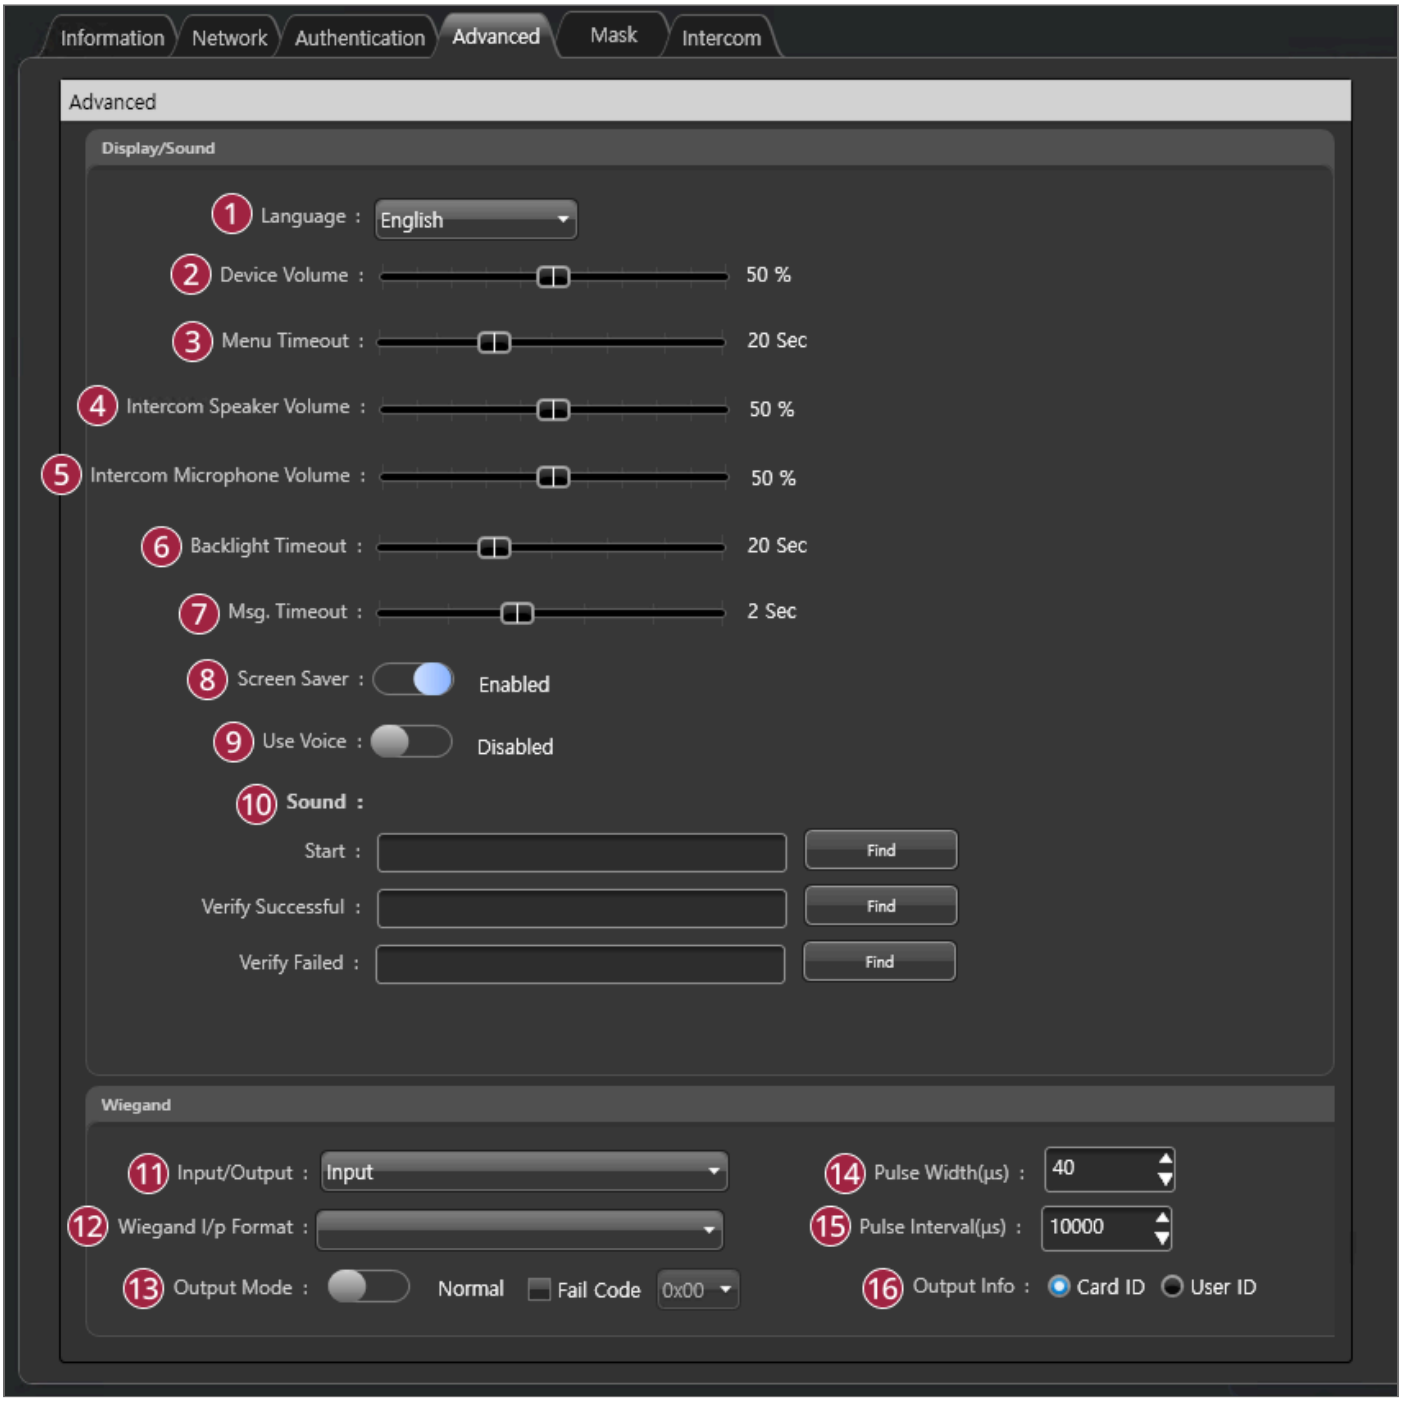



| No. | Item | Description |
|---|---|---|
| 1 | Language | Sets the display language of the device. |
| 2 | Device Volume | Controls the device's default volume. |
| 3 | Menu Timeout | Sets the timeout for the menu screen. |

| No. | Item | Description |
|---|---|---|
| 4 | Intercom Speaker Volume | Sets the speaker volume when using the Intercom function. |
| 5 | Intercom Microphone Volume | Sets the microphone volume when using the Intercom function. |
| 6 | Backlight Timeout | Sets the timeout for the backlight. |
| 7 | Msg. Timeout | Sets the timeout period for various messages to disappear automatically. |
| 8 | Screen Saver | Sets this option to use the screen saver feature. It reduces unnecessary energy consumption by lowering the brightness of the LCD screen when the device is not in use. |
| 9 | Use Voice | Enables voice guidance. |
| 10 | Sound | Configures the sound effect for boot, authentication success, and authentication failure events.<br>Click **Find** and select a `*.wav` file (less than 500 KB). |
| 11 | Input/ Output | You can select input/output mode. |
| 12 | Wiegand I/p Format | You can set a format for Wiegand. |
| 13 | Output Mode | You can set the Wiegand signal output mode. If it is set to **Normal**, a card will be scanned in the set Wiegand format. If it is set to **ByPass**, CSN will be sent regardless of Wiegand authentication. **ByPass** should be set when using the device without an entrance door control function.<br>If it is set to **Normal** mode, it is possible to set **Fail Code**, and select a value to be transmitted when Wiegand card authentication fails. |
| 14 | Pulse Width(µs) | You can set the pulse width of the Wiegand signal. |
| 15 | Pulse Interval(µs) | You can set the pulse interval of the Wiegand signal. |
| 16 | Output Info | You can select the information output to the device when the user authenticates. |

## Mask

You can set the detailed settings of mask detection.


Face authentication devices can detect masks and restrict access to users without masks.

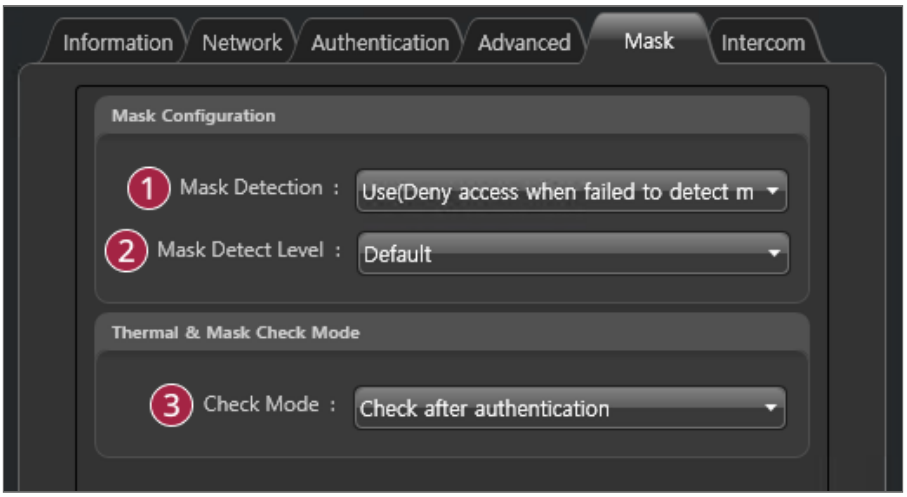


| No. | Item | Description |
|---|---|---|
| 1 | Mask Detection | You can set whether to use mask detection or not. If you select **Use (Deny access when failed to detect mask)**, it refuses authentication of users who are not wearing a mask and saves event logs. If you select **Use (Allow access after leaving log when failed to detect mask)** users who are not wearing a mask can authenticate but event logs still be saved. |
| 2 | Mask Detect Level | You can set sensitivity for mask detection. |
| 3 | Check Mode | • **Check after authentication**: Authenticate and then detect whether the user is wearing a mask.<br>• **Check before authentication**: Detect whether the user is wearing a mask and then authenticate. This mode does not attempt to authenticate a user's identity if they do not wear masks.<br>• **Check without authentication**: Detect whether a user is wearing a mask without authentication. When this mode is activated, any user wearing a mask can access it regardless of authentication. |

## Intercom

You can set the detailed settings of SIP Intercom.

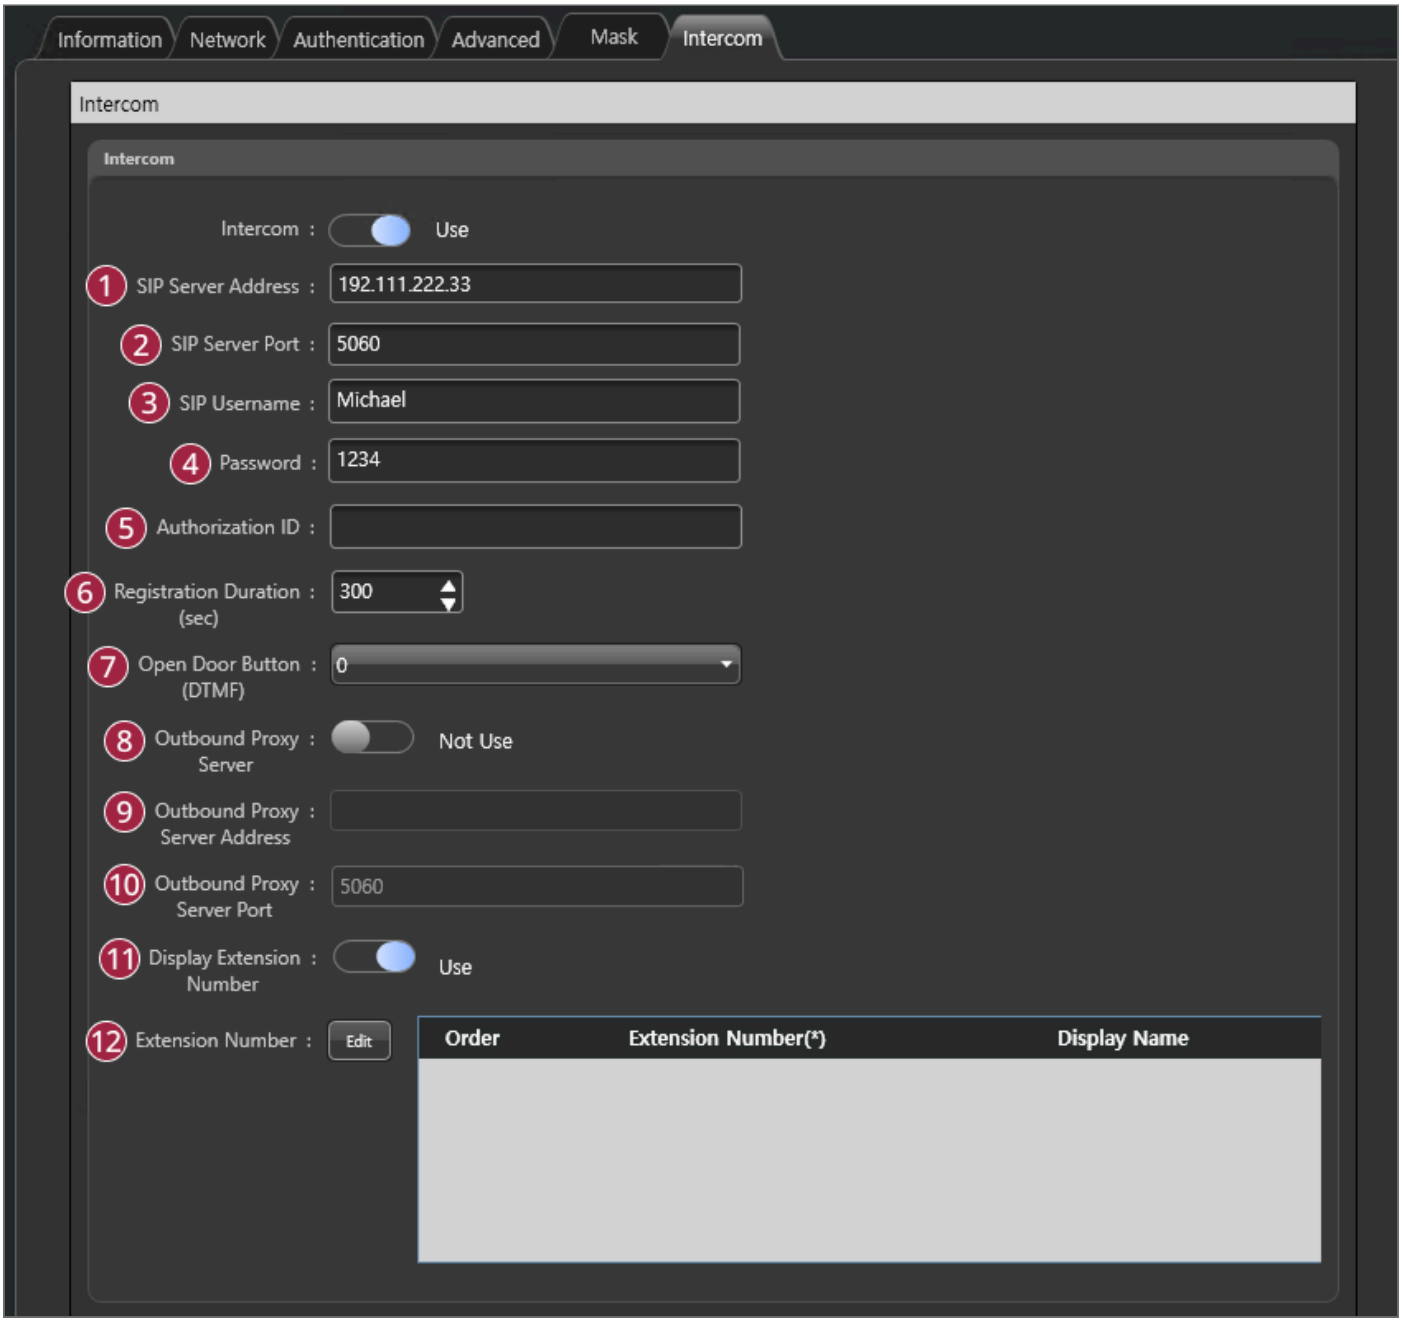



| No. | Item | Description |
|---|---|---|
| 1 | **SIP Server Address** | Enter SIP server address. |
| 2 | **SIP Server Port** | Enter SIP server port. |
| 3 | **SIP Username** | Enter username of your SIP account. |
| 4 | **Password** | Enter password of your SIP account. |
| 5 | **Authorization ID** | Enter authorization ID of your SIP account. |


| No. | Item | Description |
|---|---|---|
| 6 | Registration Duration(sec) | Enter Registration Duration in seconds. The device (SIP endpoint) tries to register to the SIP server every set Registration Duration.<br>- Registration Duration can be set between 60 to 600 secs. |
| 7 | Open Door Button(DTMF) | Set a button to open the door on the phone. |
| 8 | Outbound Proxy Server | If your SIP service has a separate (outbound) proxy server, set this to **Use**. |
| 9 | Outbound Proxy Server Address | Enter the outbound proxy server address. |
| 10 | Outbound Proxy Server Port | Enter the outbound proxy server port. |
| 11 | Display Extension Number | If you mind the device displaying extension numbers on the screen, set this to **Not Use**. |
| 12 | Extension Number | Register extension numbers up to 128. Click **Edit** to add or delete.<br>- **Add**: Add an extension number.<br>- **Delete**: Delete an extension number. |

# Assign Device to Cloud Link

1. In the **Config Tool**, click the **Access Control** under **Tasks**.

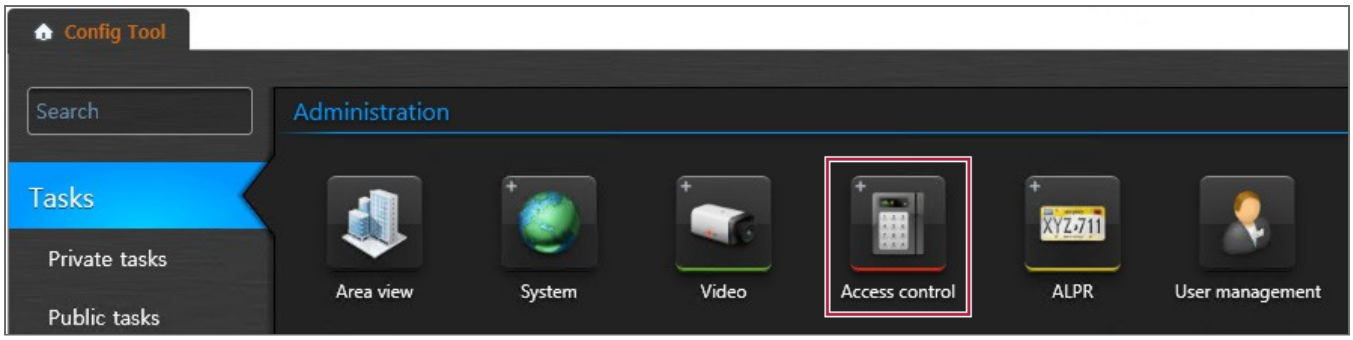



2. Go to **Manage Suprema Devices** tab at the top of the screen.

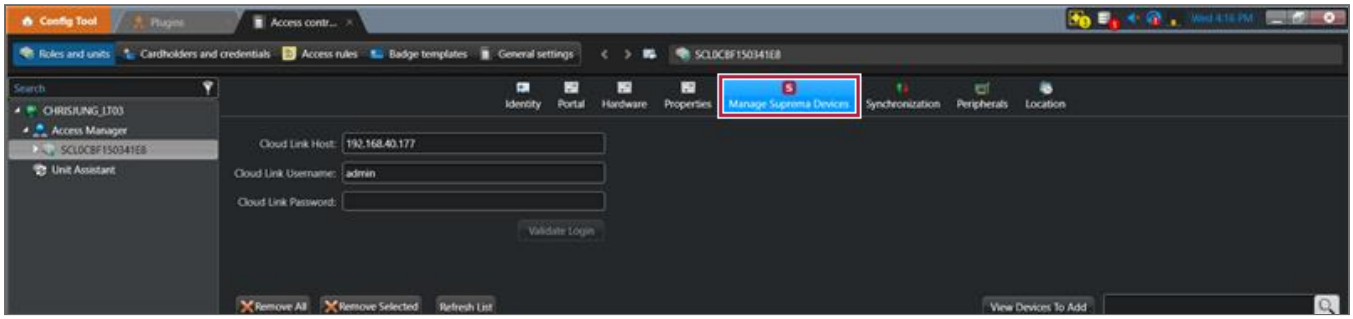



3. Enter the **Cloud Link Host** (IP address), **Cloud Link Username** (ID), and **Cloud Link Password**, and then click the


**Validate Login** button.

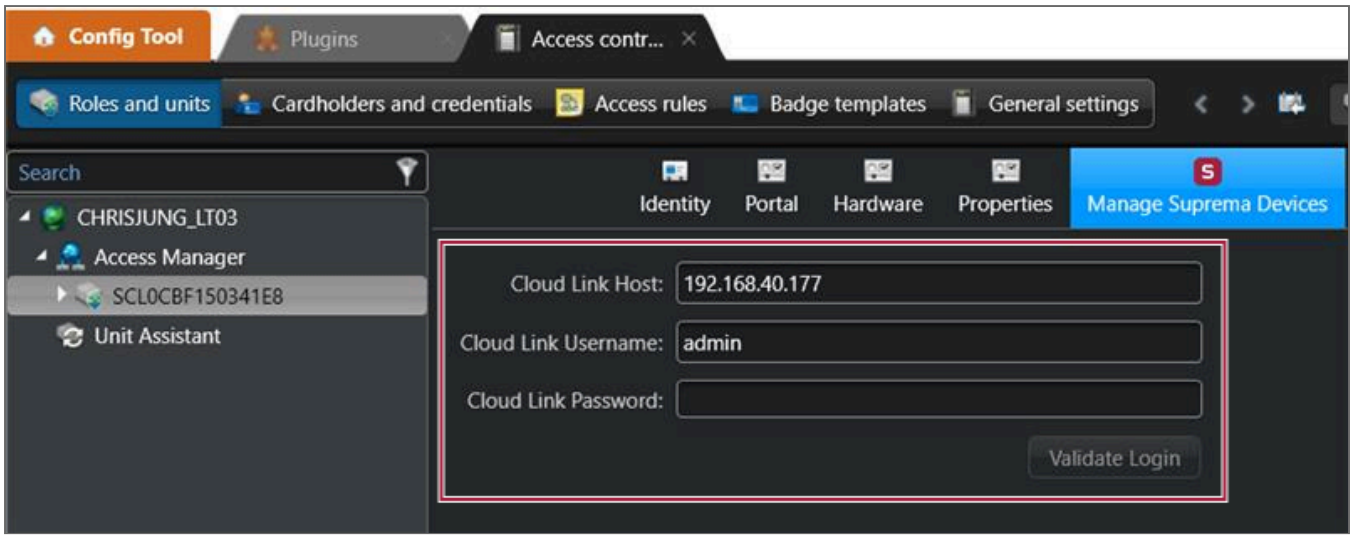


4. Click the **View Devices To Add** button.

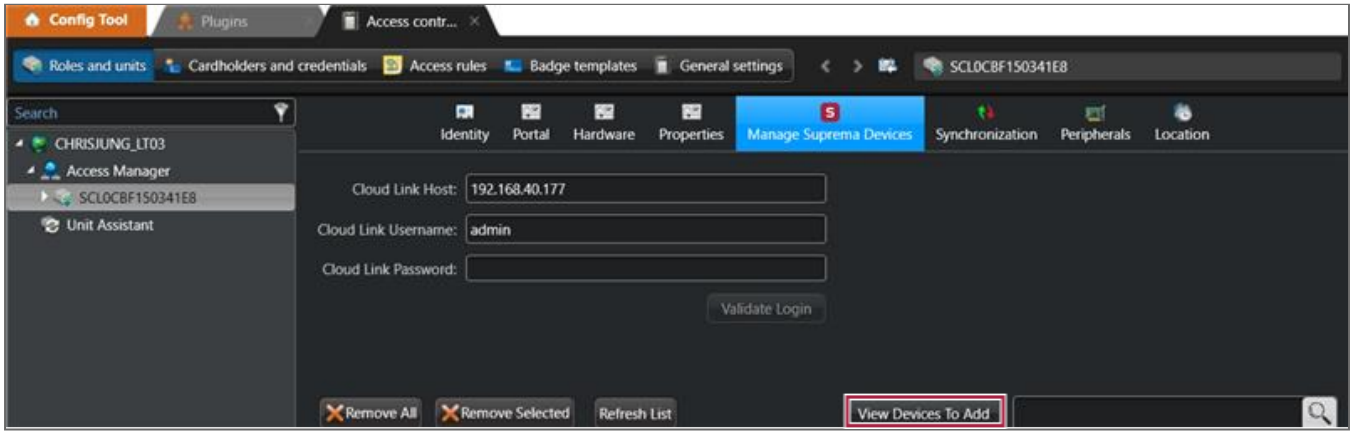



5. Select the device to assign by checking the **Select** box, and click the **Assign** or **Assign Selected** button. To assign all devices, click the **Assign All** button.

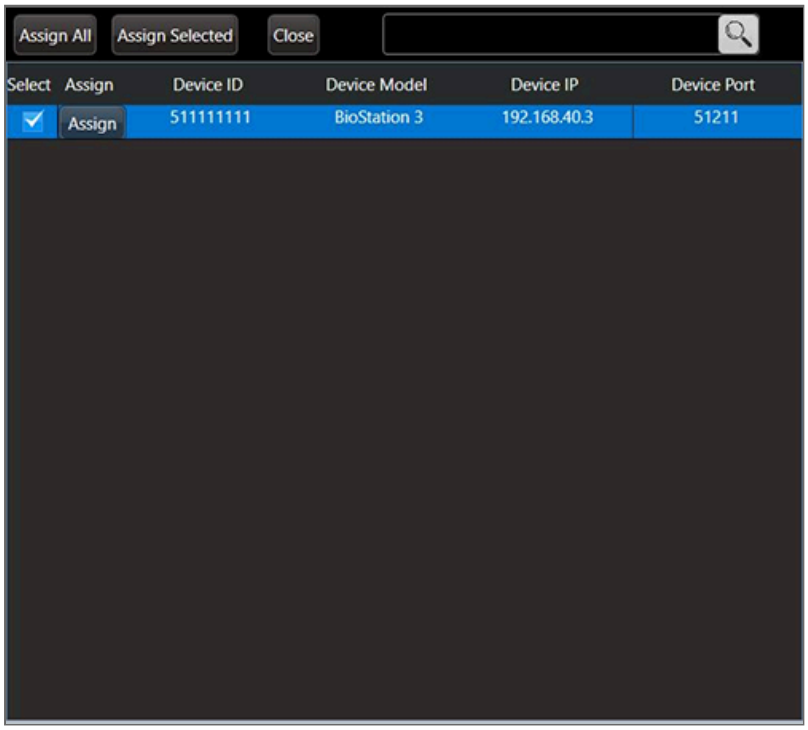


# Card Format Setting

1. In the **Config Tool**, click the **Suprema Plugin Configuration** under **Tasks**.

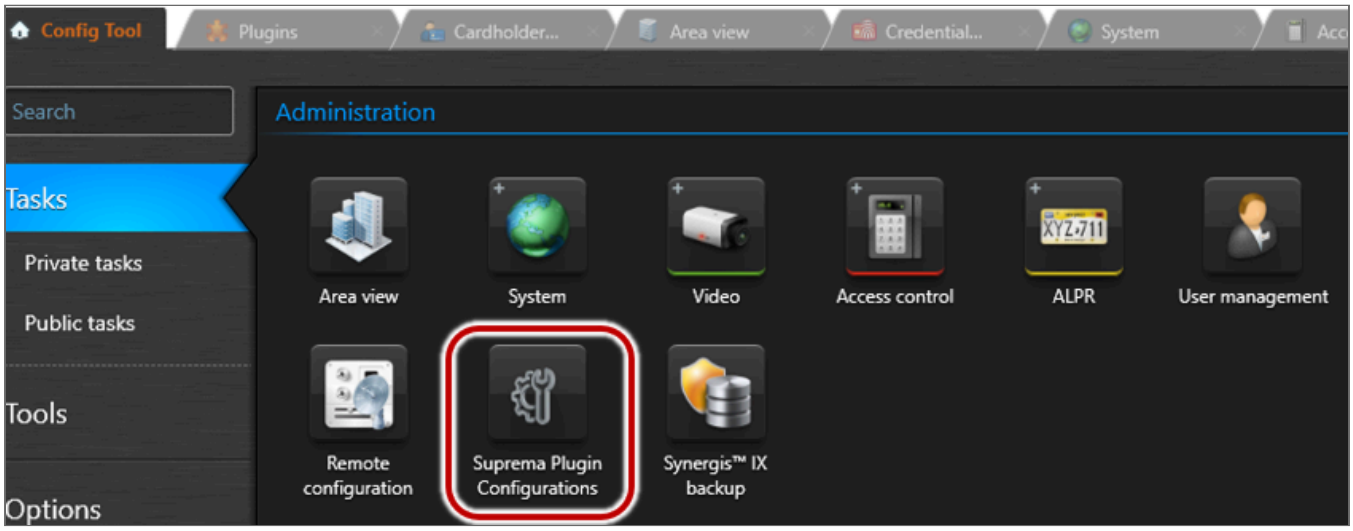


2. Select card type and format.

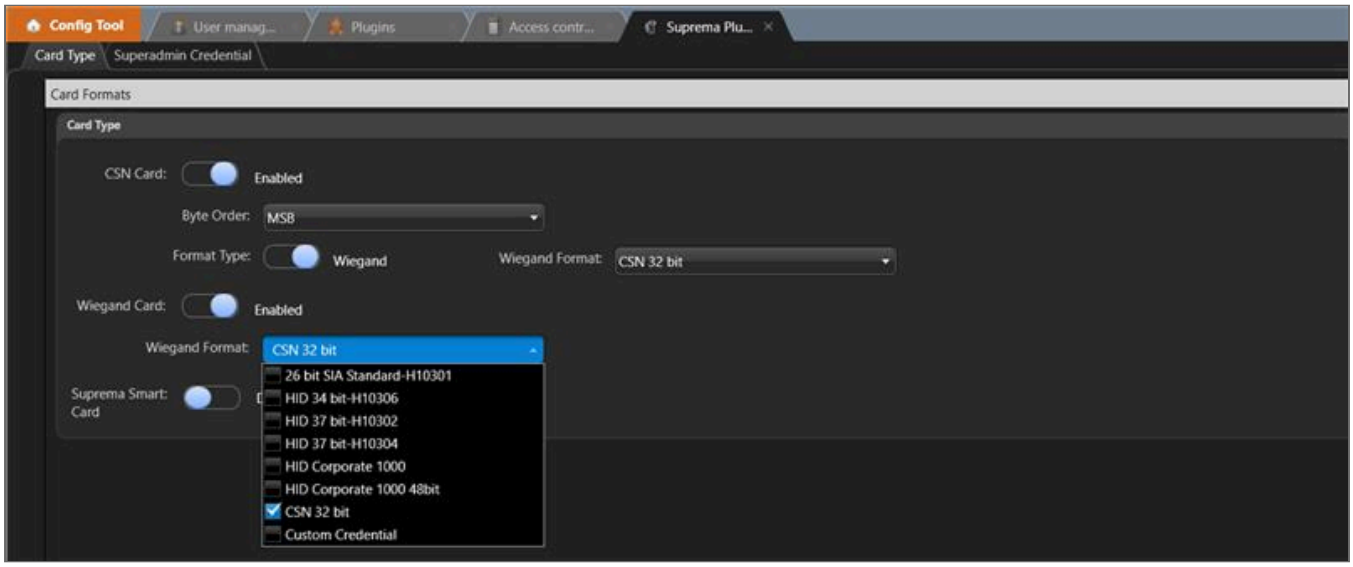



   - Byte Order: Supports MSB or LSB
   - CSN Card_Format type: After enabling the **CSN Card_Format type** and selecting a Wiegand format, the **Plugin converts the card data received from the device into the selected Wiegand format and delivers it to the Cloud Link**.
   - Wiegand Card Setting: Devices can read wiegand cards based on the **selected Wiegand Card Format**.
   - Custom Credential: When using a Custom Credential Format, compatibility with Suprema devices must be verified in advance.

3. Click **Save button** to set selected card type and format into all devices.


# Door Configuration

1. In the **Config Tool**, click the **Area view** under **Tasks**.

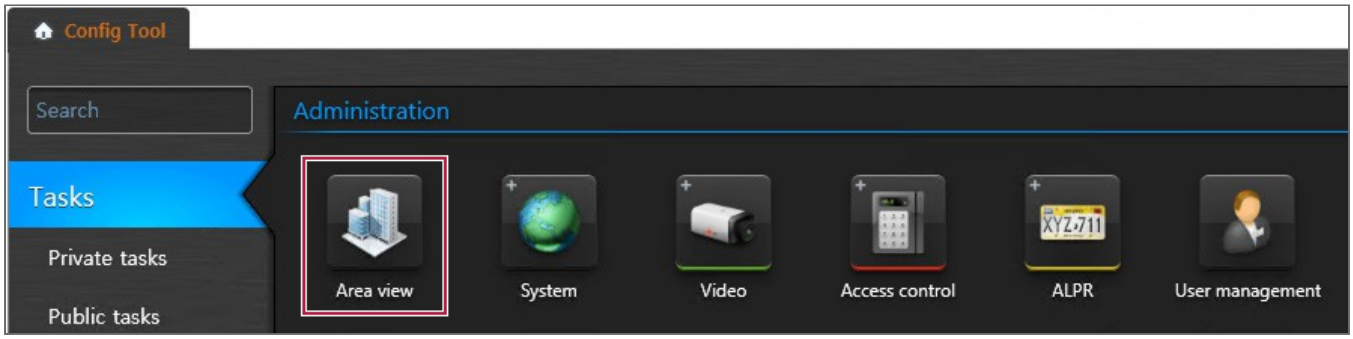


2. Select the door and go to the **Hardware** tab.

3. Assign Suprema devices to **Reader**, **Request to exit**, and **Entry sensor**.

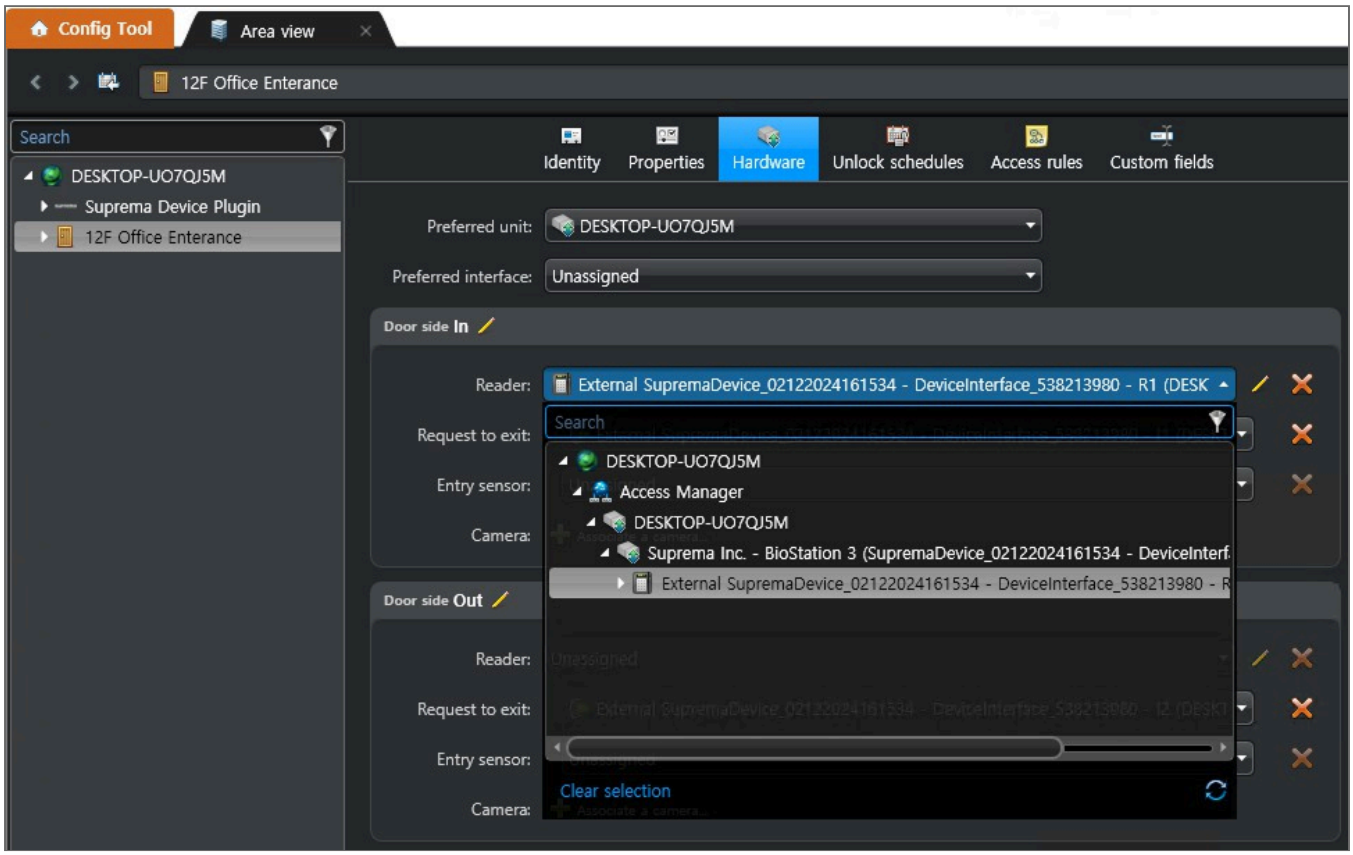


**Input Configuration Limitation**

In Suprema architecture, **input types (e.g., REX, Door Contact)** can only be configured **after the device is mapped to a Door**.

Root Cause:

- **Suprema SDK requires inputs to be assigned at the Door level**, not at the device level.
- Therefore, there is **no way to pre-configure input types before assigning the device to a Door** in Genetec.

**Caution**

Any input type changes made via:


**Config Tool → Access Control → Cloud Link → Peripherals Tab** will **not apply to the Suprema device** directly.

**Plugin's Auto Assignment Logic**

| Input Number | Input Type Assigned by Plugin |
|---|---|
| Odd Numbers | NO (Normally Open) |
| Even Numbers | NC (Normally Closed) |


This automatic assignment helps ensure compatibility when mapping inputs post-Door configuration.

After configuring or updating a door, click **Sync Now** in **Suprema Device Plugin → Device Sync Information** to apply the changes to the device.

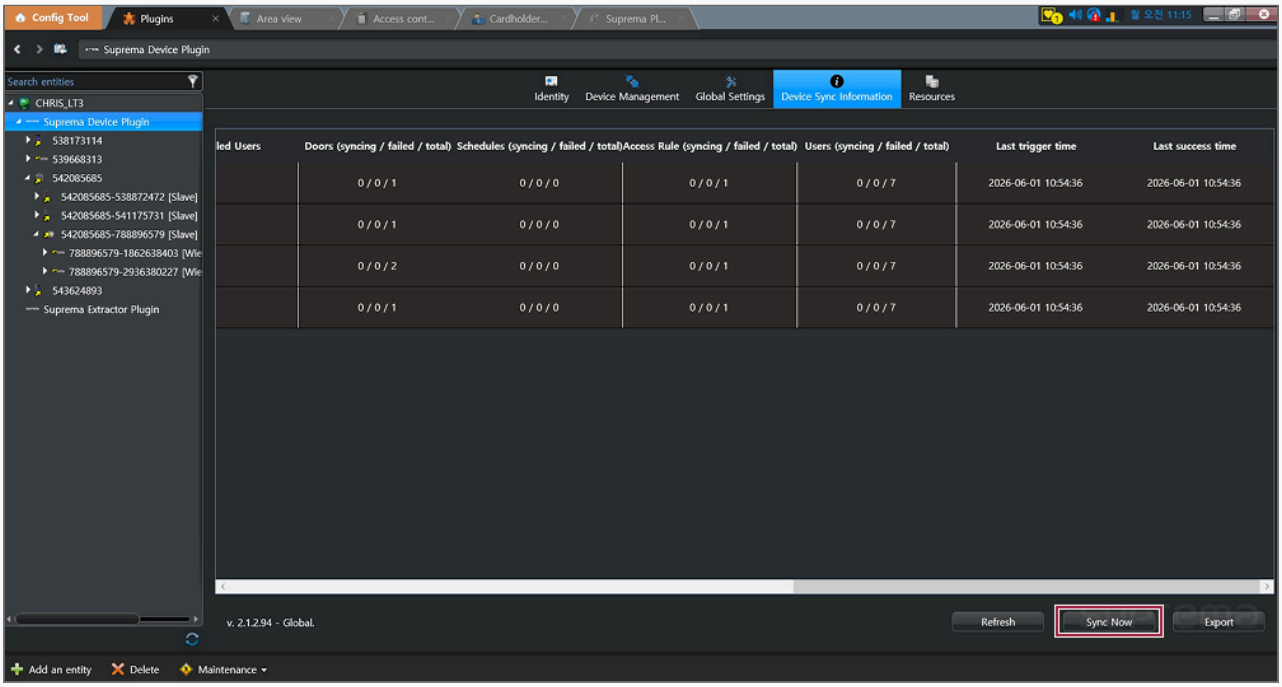



# View the Device Sync Information


1. In the **Config Tool**, click the **Plugins** under **Tasks**.

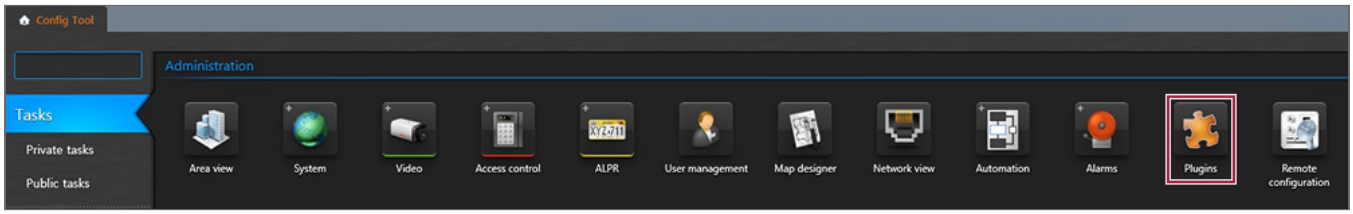



2. Click the **Suprema Device Plugin**.

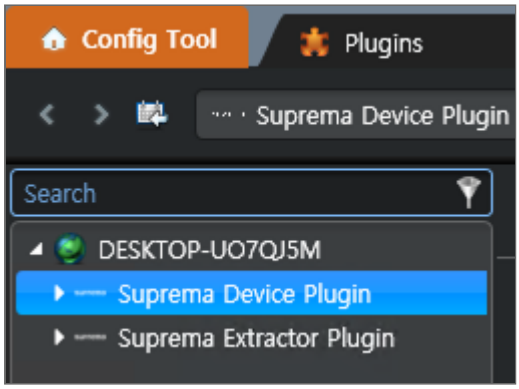


3. Go to **Device Sync Information** tab.

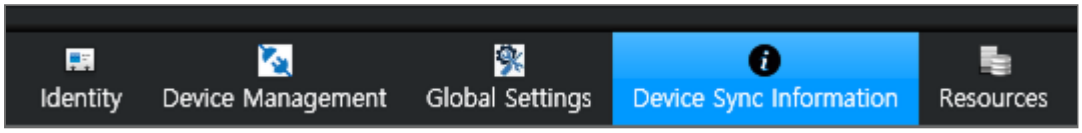


4. Synchronization information of connected Suprema devices can be checked.

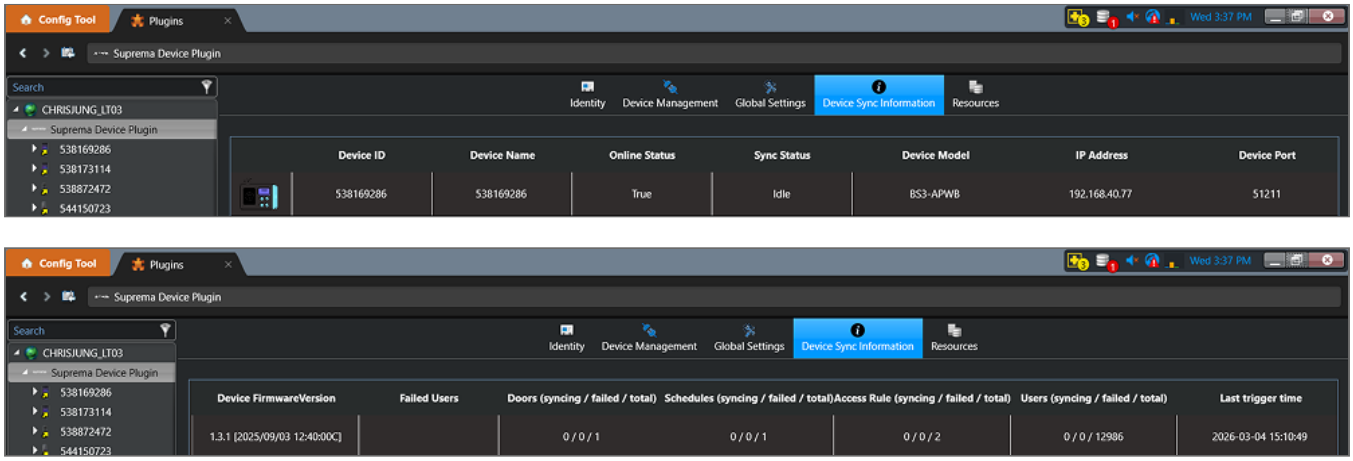





| No. | Item | Description |
|---|---|---|
| 1 | **Device ID** | Displays the Suprema device ID. |
| 2 | **Device Name** | Displays the Suprema device name. |
| 3 | **Online Status** | Displays the network status of the device.<br>- **True / False** |
| 4 | **Sync Status** | Displays the synchronization status of the device.<br>- **Idle** /Cache loading/ Biometric downloading/ **Syncing** |
| 5 | **Device Model** | Displays the Suprema device model. |
| 6 | **IP Address** | Displays the Suprema device IP Address. |
| 7 | **Device Port** | Displays the Suprema device port. |
| 8 | **Device Firmware Version** | Displays the Suprema device firmware version. |

| No. | Item | Description |
|---|---|---|
| 9 | **Failed Users** | Allows checking users who failed to synchronize. |
| 10 | **Doors (syncing / failed / total)** | Displays the synchronization status of the door. |
| 11 | **Schedules (syncing / failed / total)** | Displays the synchronization status of the schedule. |
| 12 | **Access Levels (syncing / failed / total)** | Displays the synchronization status of the access level. |
| 13 | **Access Groups (syncing / failed / total)** | Displays the synchronization status of the access group. |
| 14 | **Users (syncing / failed / total)** | Displays the synchronization status of the cardholder. |
| 15 | **Last Trigger Time** | The time when synchronization with the device was last triggered. |
| 16 | **Last Success Time** | The time when synchronization with the device was last completed successfully. |

**Info**


The values displayed for each synchronization status are as follows:

- **syncing**: Number of items currently being synchronized with the device.
- **failed**: Number of items that failed to synchronize with the device.
- **total**: Number of items that have been successfully synchronized.

# Cardholder Management

## Card Enrollment


1. In the **Config Tool**, click the **Cardholder management** under **Tasks**.

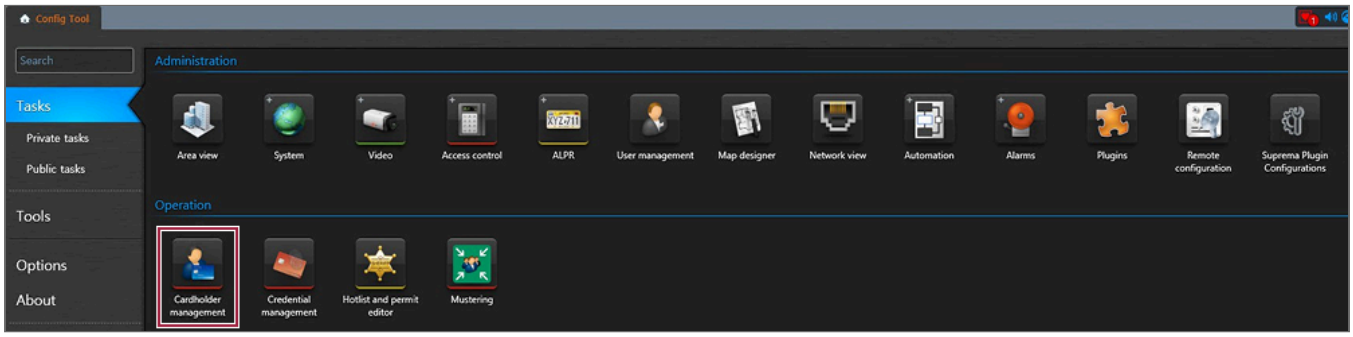



2. Click the **New** button from the bottom.





3. Enter the **First name** and **Last name**, then click the **Add a credential** button. In the popup that appears, click **Automatic entry**.

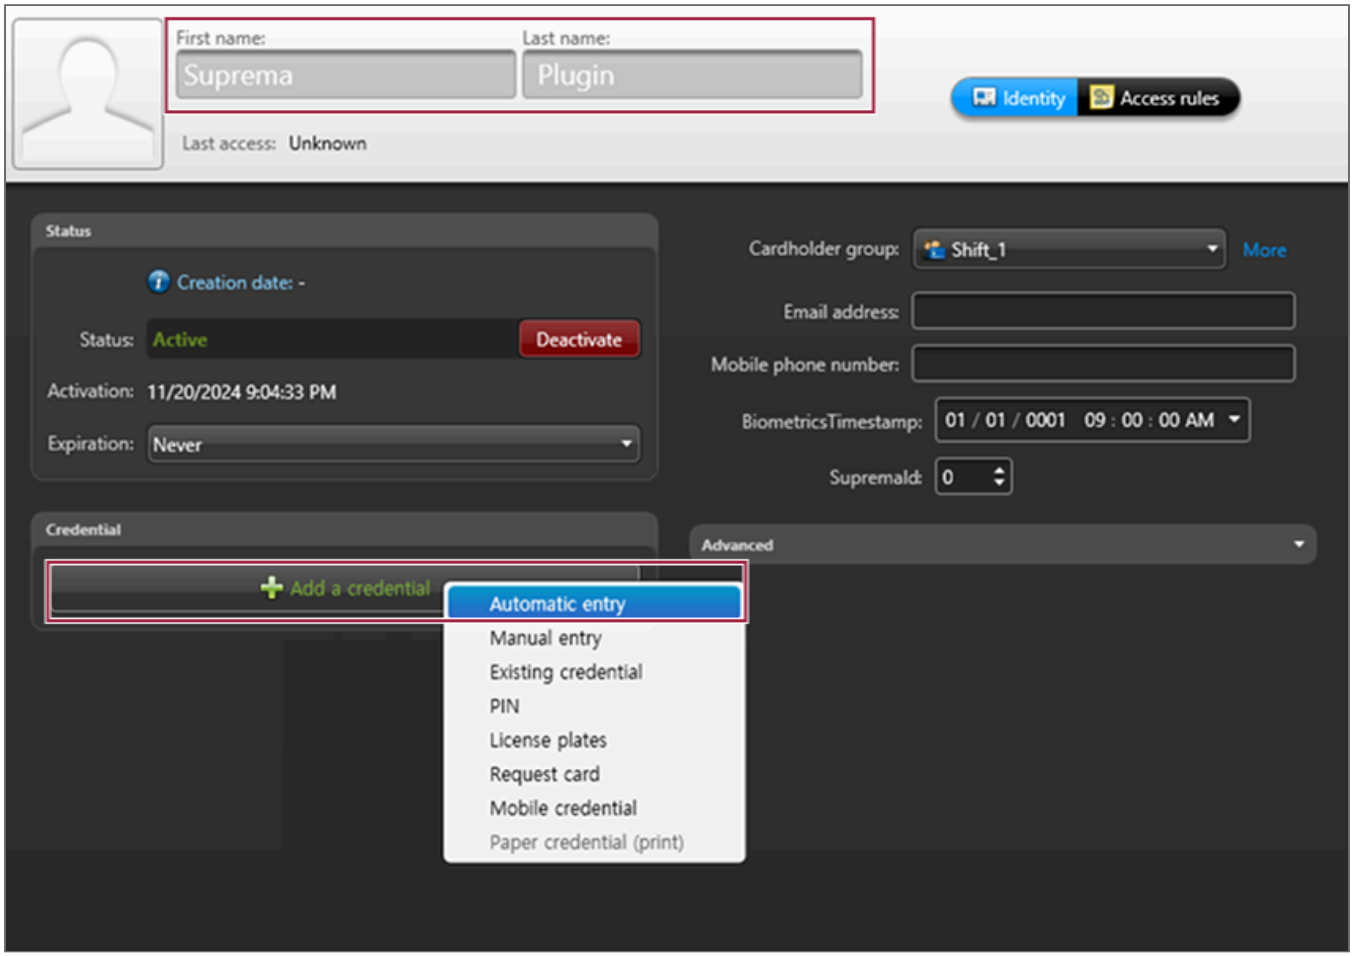


4. Select the **Door** assigned to the Suprema device as a reader, then tag a card to the device.

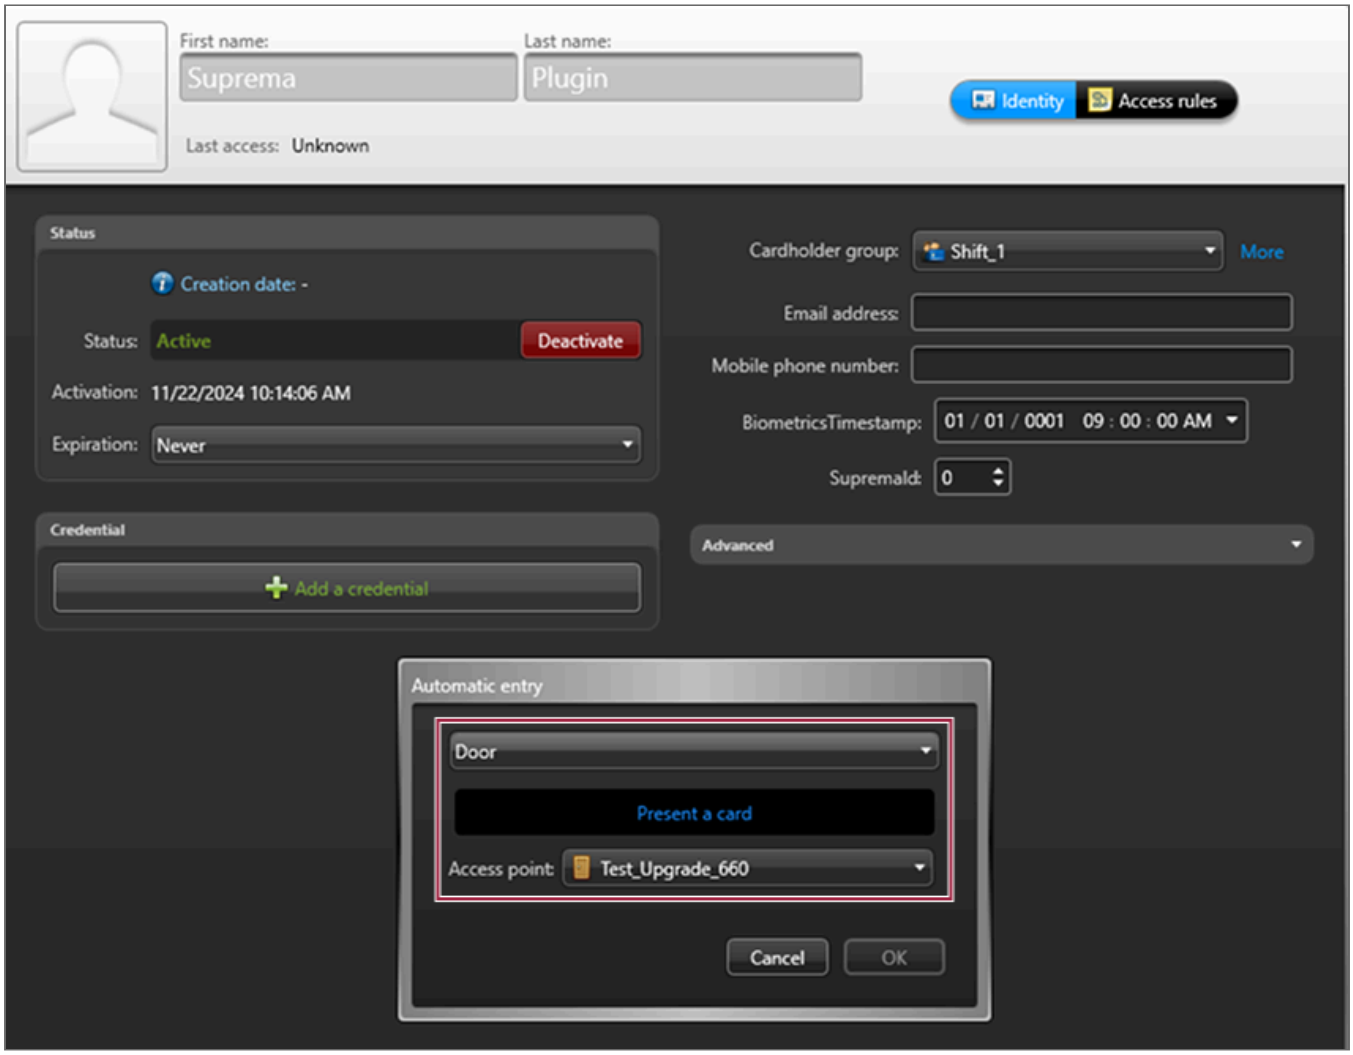


5. The card is automatically enrolled to the credential.

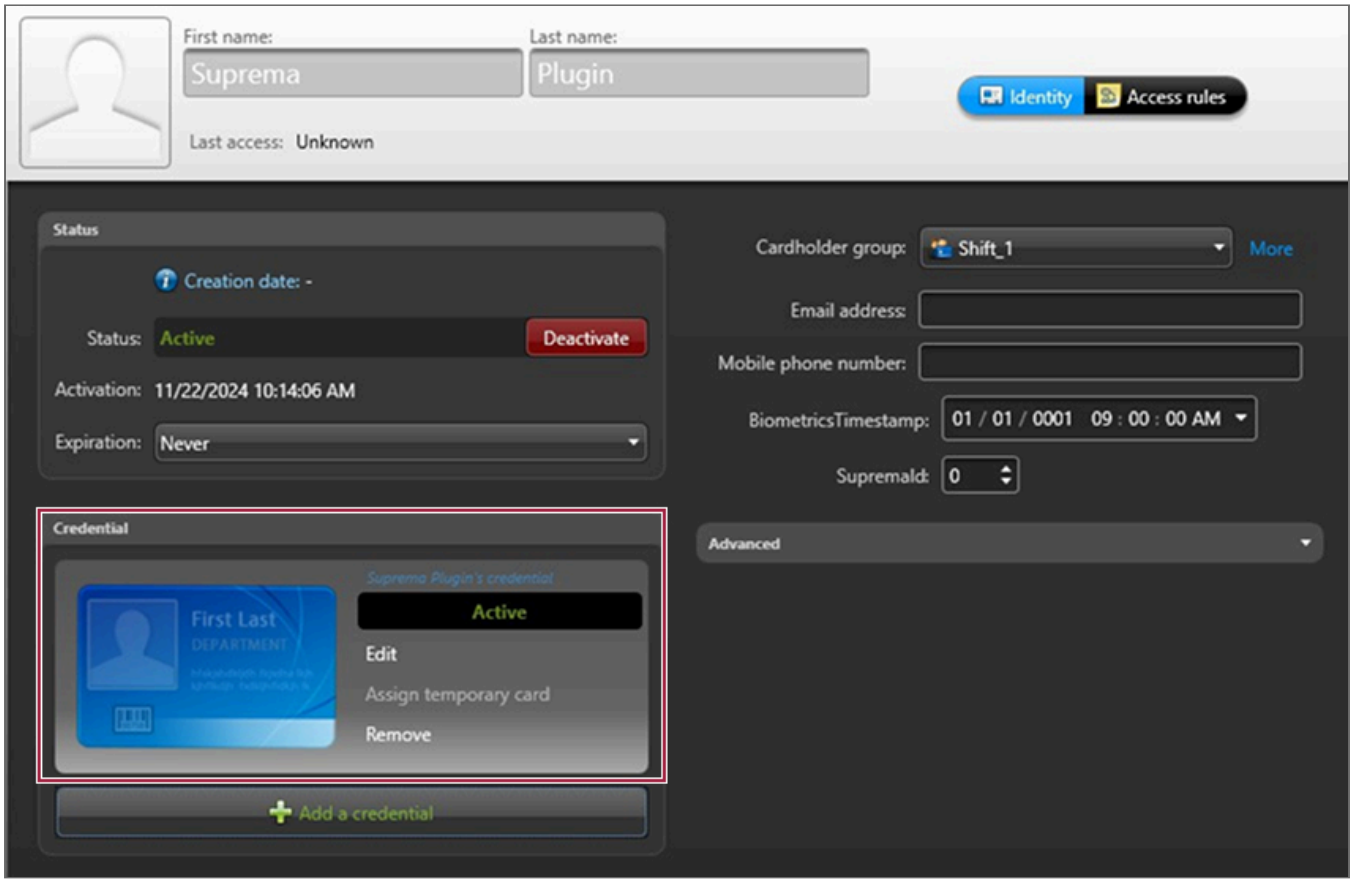



# Face Enrollment

## Precautions when Enrolling Face

When enrolling your face for authentication, refer to the picture below to enroll your face correctly.

If you do not follow the on-screen instructions, face enrollment may take a long time or authentication may fail.

- When enrolling a face, maintain a distance of 60-100 cm between the device and the face.
- Make sure that your expression does not change.
- Do not wear a mask, hat, sunglasses, or eye patches.
- Do not raise head up or lower head.
- Do not wear thick makeup.
- Do not close your eyes.
- Make sure that both of your shoulders correctly appear on the screen.
- Do not use a corrected picture.
- Stand still and enroll your face by staring at the screen.
- Be careful not to display two faces on the screen. Make sure to enroll one face at a time.
- Do not enroll your face in dark places.

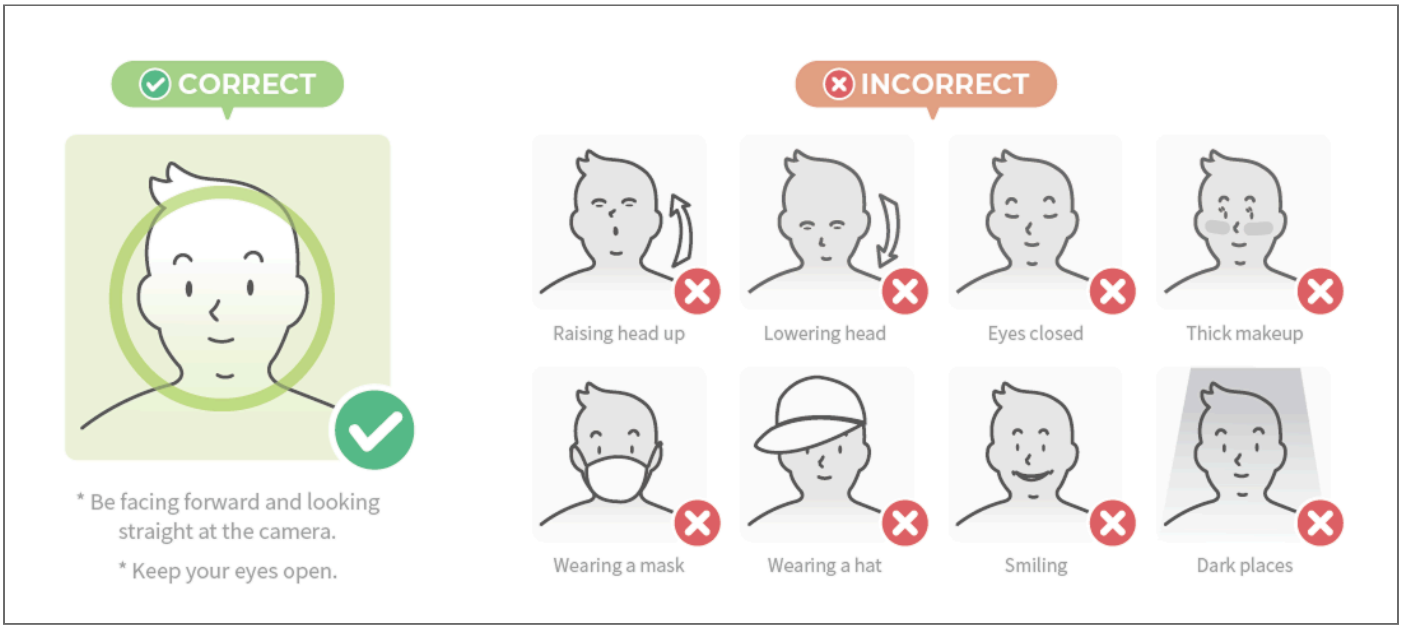



**Info**


- **Resolution**: Larger than 250 x 250 pixels
- **Image size**: Up to 10 MB
- **Supported format**: JPG, JPEG or PNG only

## Enroll from Device


1. In the cardholder details window, click **Suprema Enrollment**.

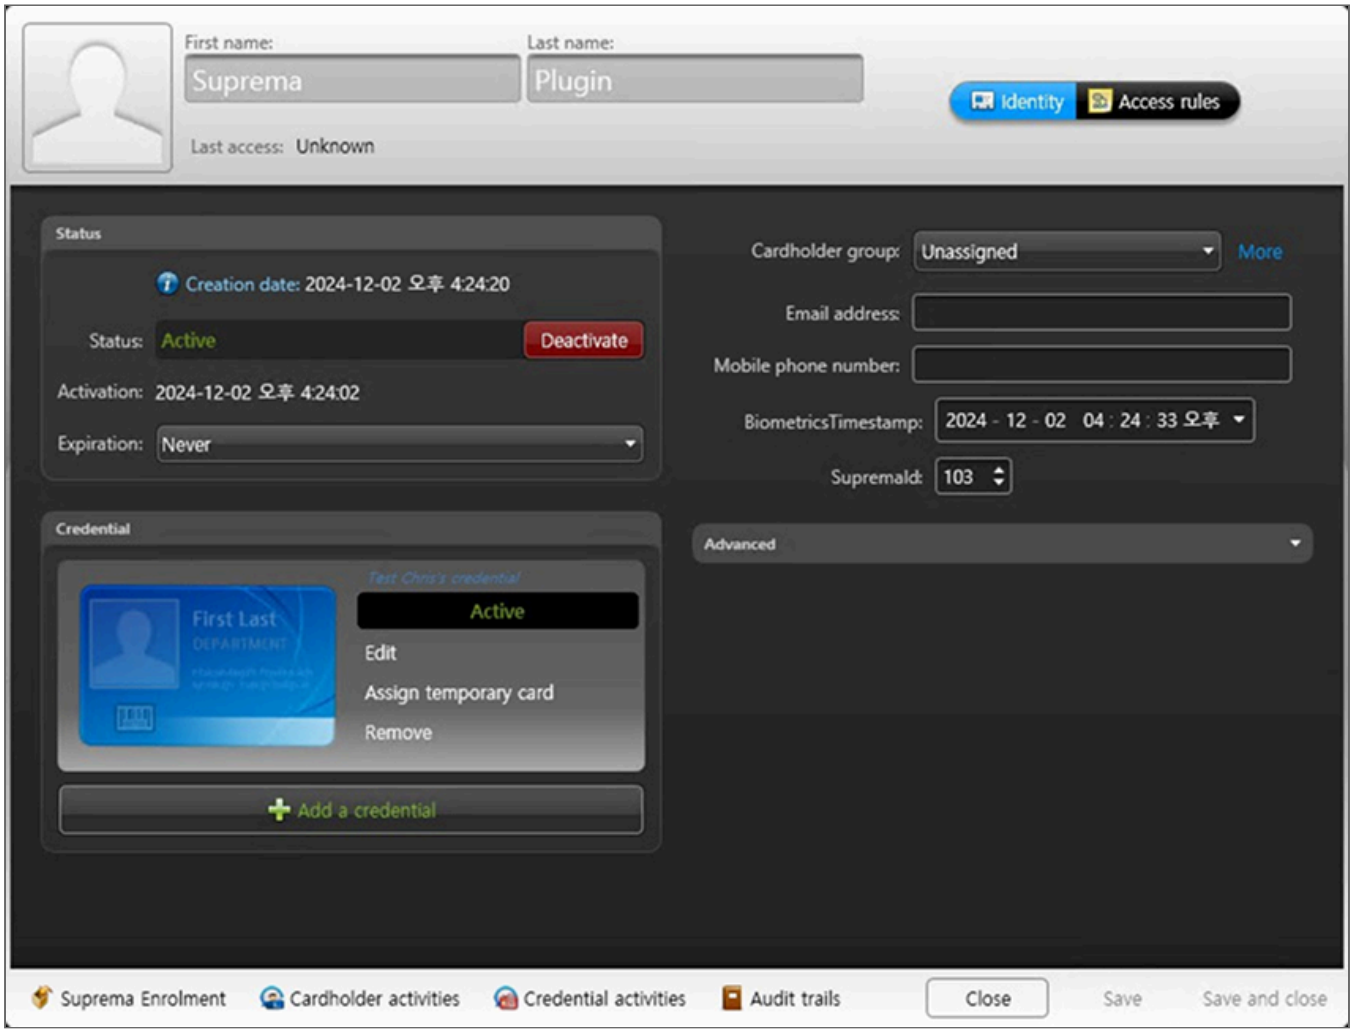



2. Click the **Face-Scan**.

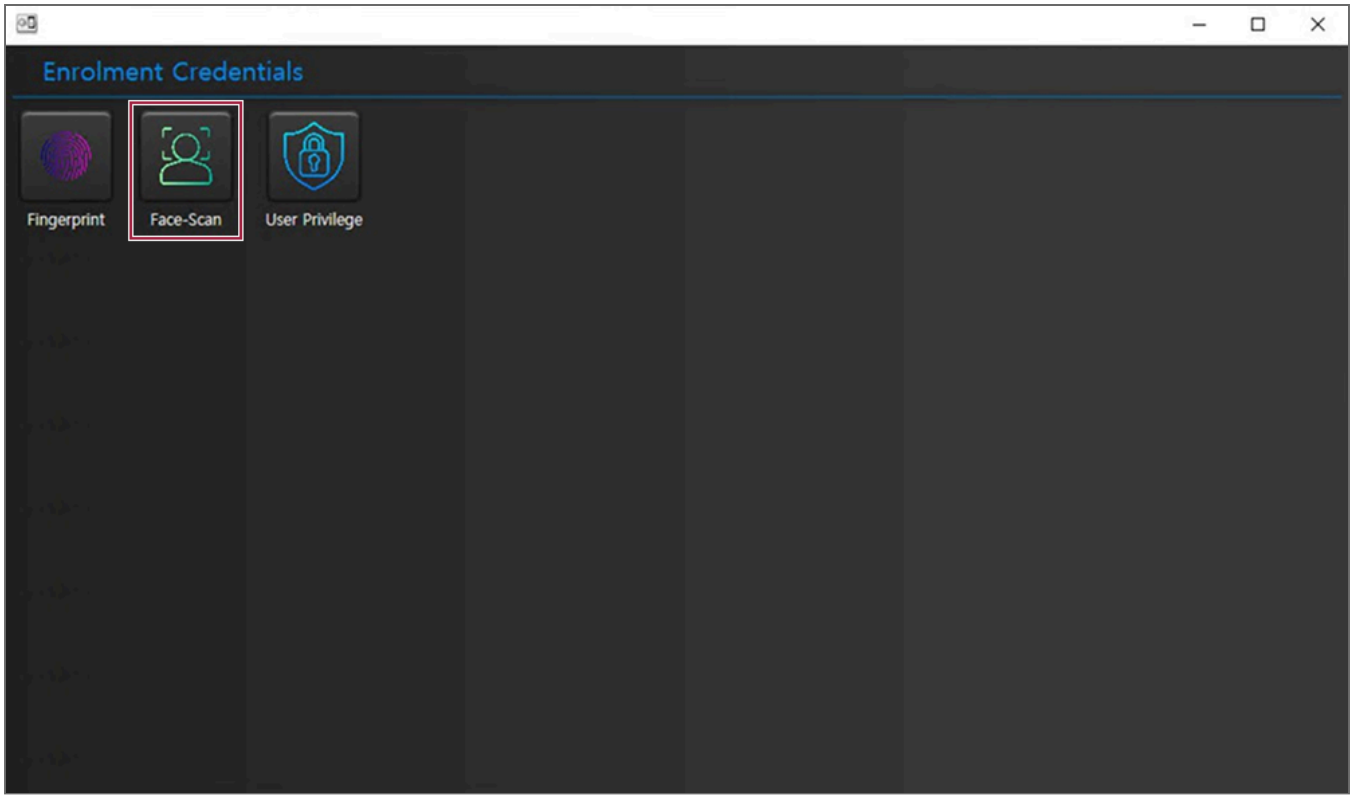


3. Select the Suprema face authentication device to enroll the face credential.

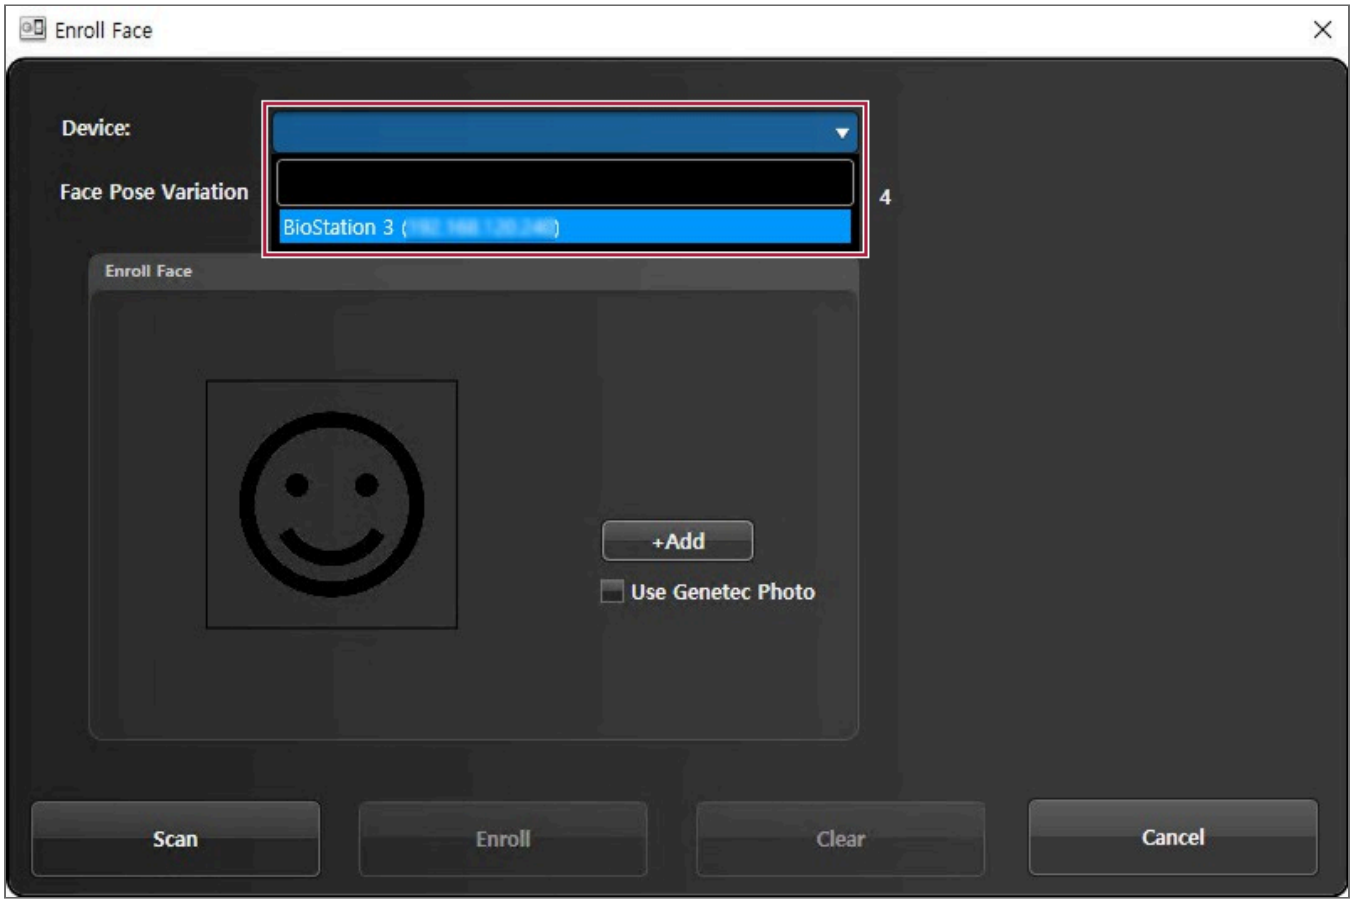



4. Click the **+Add** button to create a face template, then click the **Scan** button and scan the face on the device.

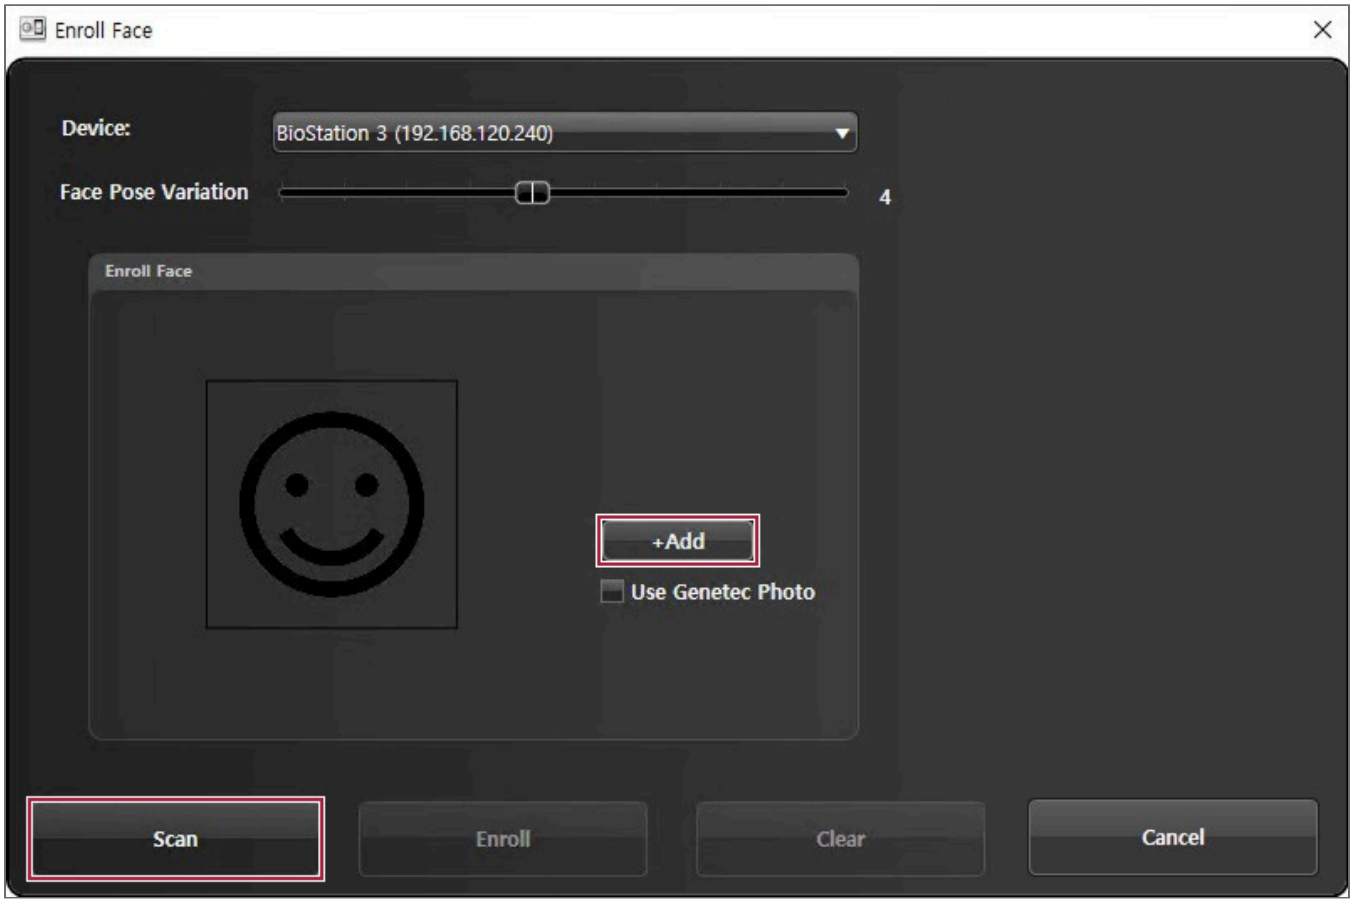



5. Check the face has been properly scanned, and then click the **Enroll** button to enroll the face.

## Enroll Face Template with Genetec Profile Photo


1. In the cardholder details window, click **Suprema Enrollment**.

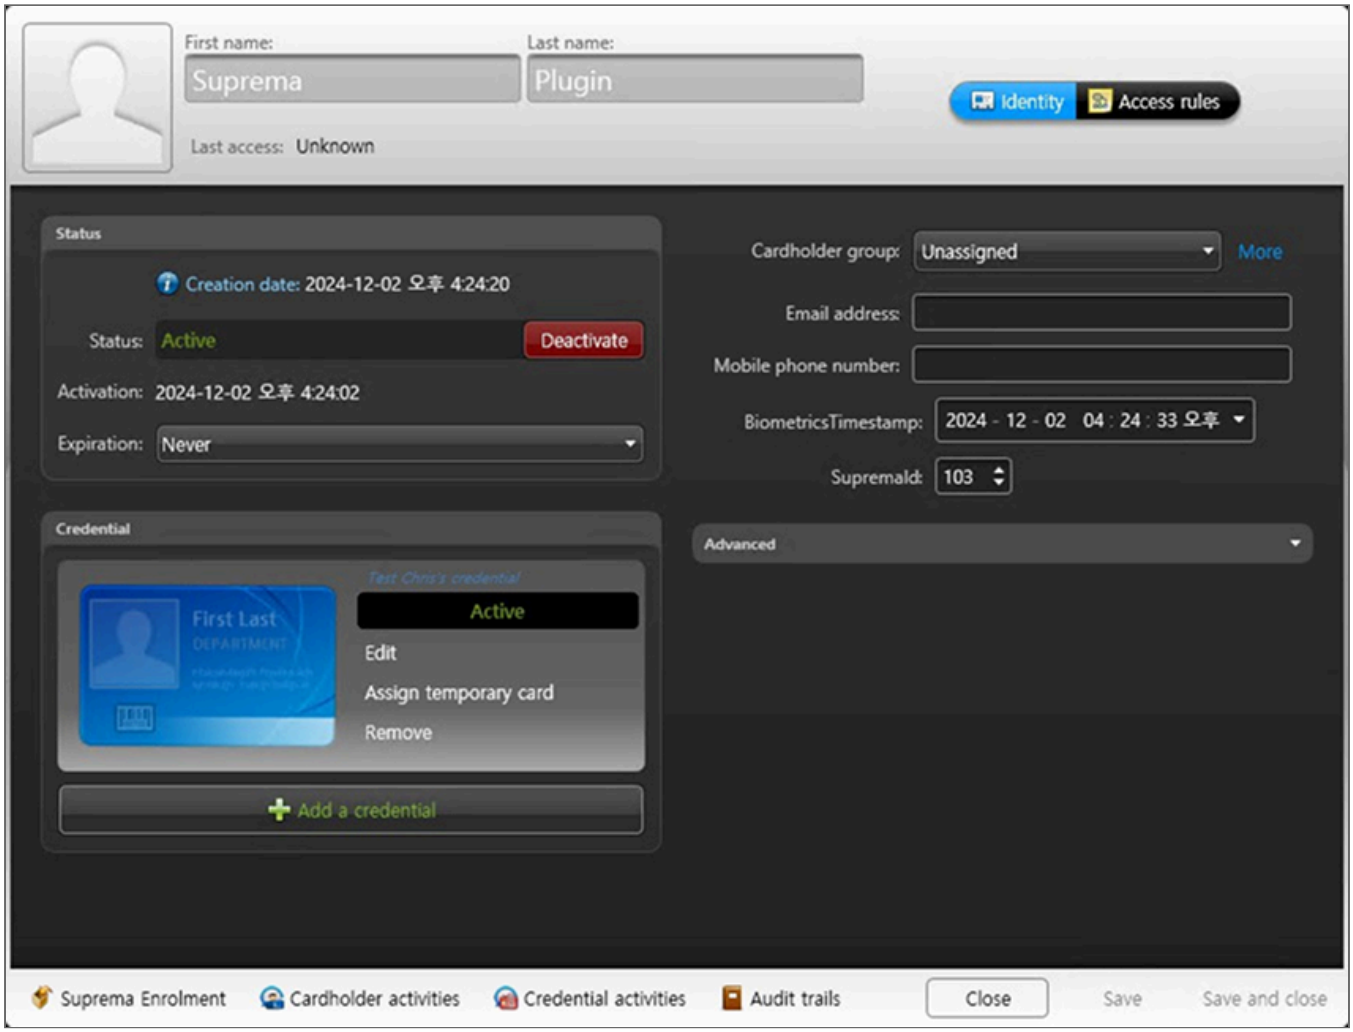



2. Click the **Face-Scan**.

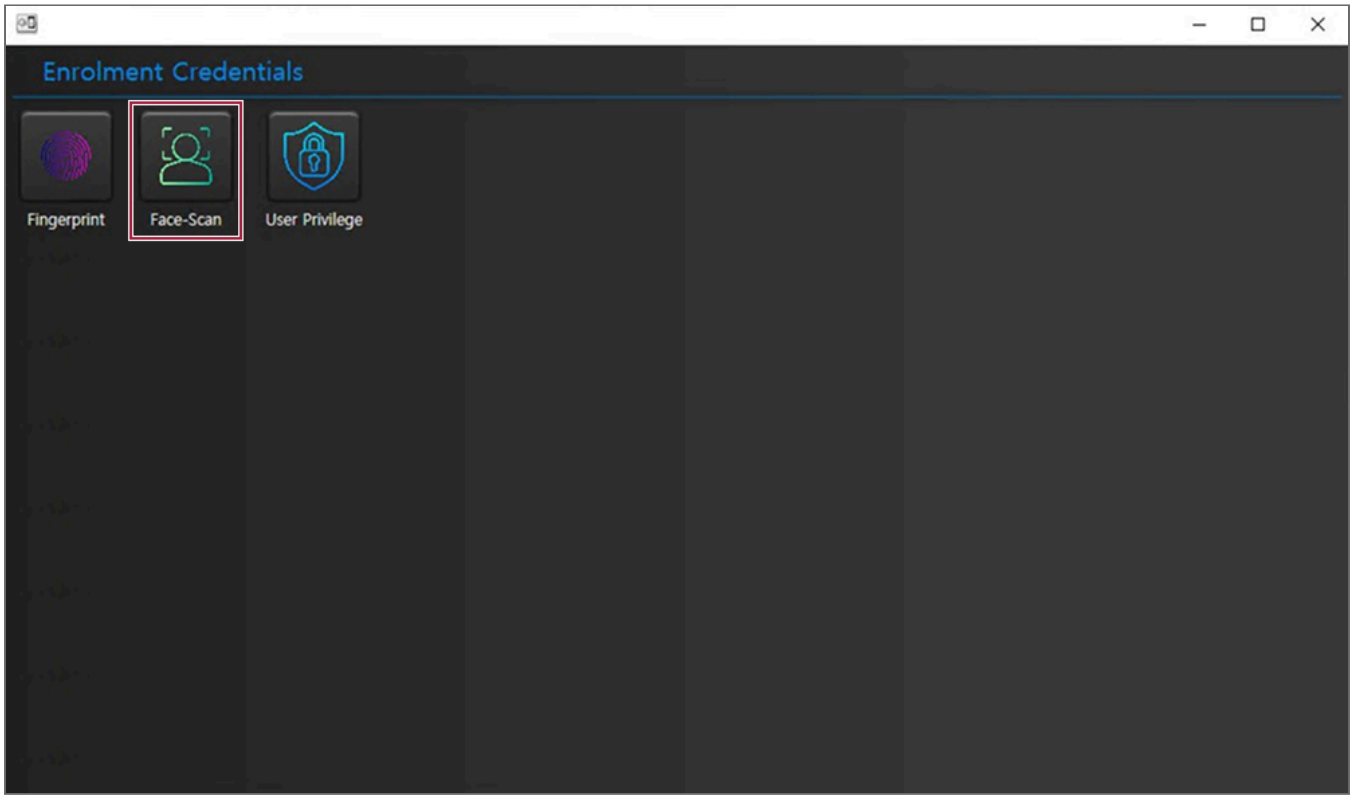


3. Select the Suprema face authentication device to enroll the face credential.

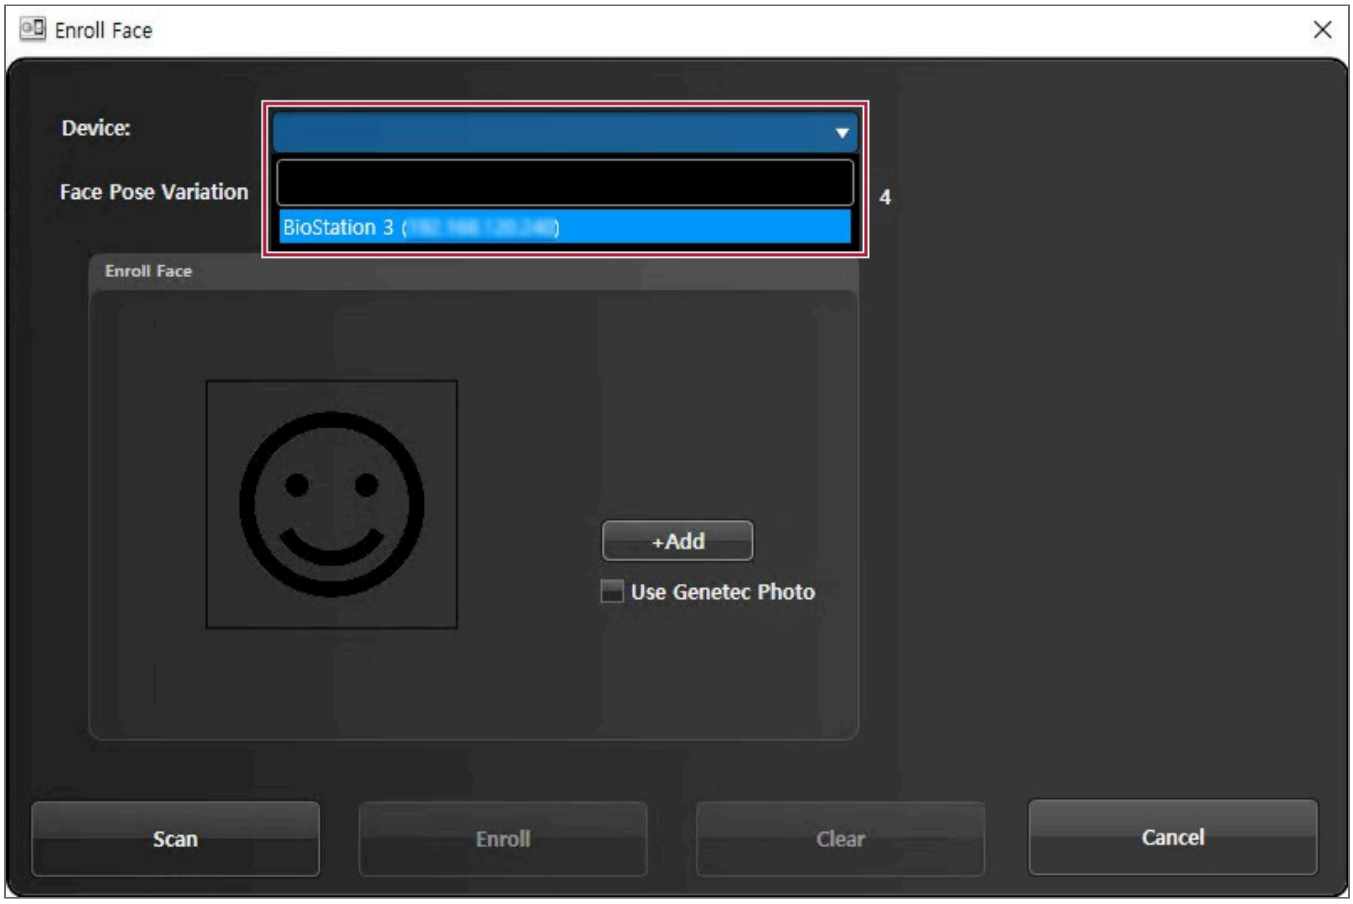



4. Click the **+Add** button to create a face template, then check **Use Genetec Photo** to automatically upload the user profile photo. The Suprema device extracts face templates from user profile photos.

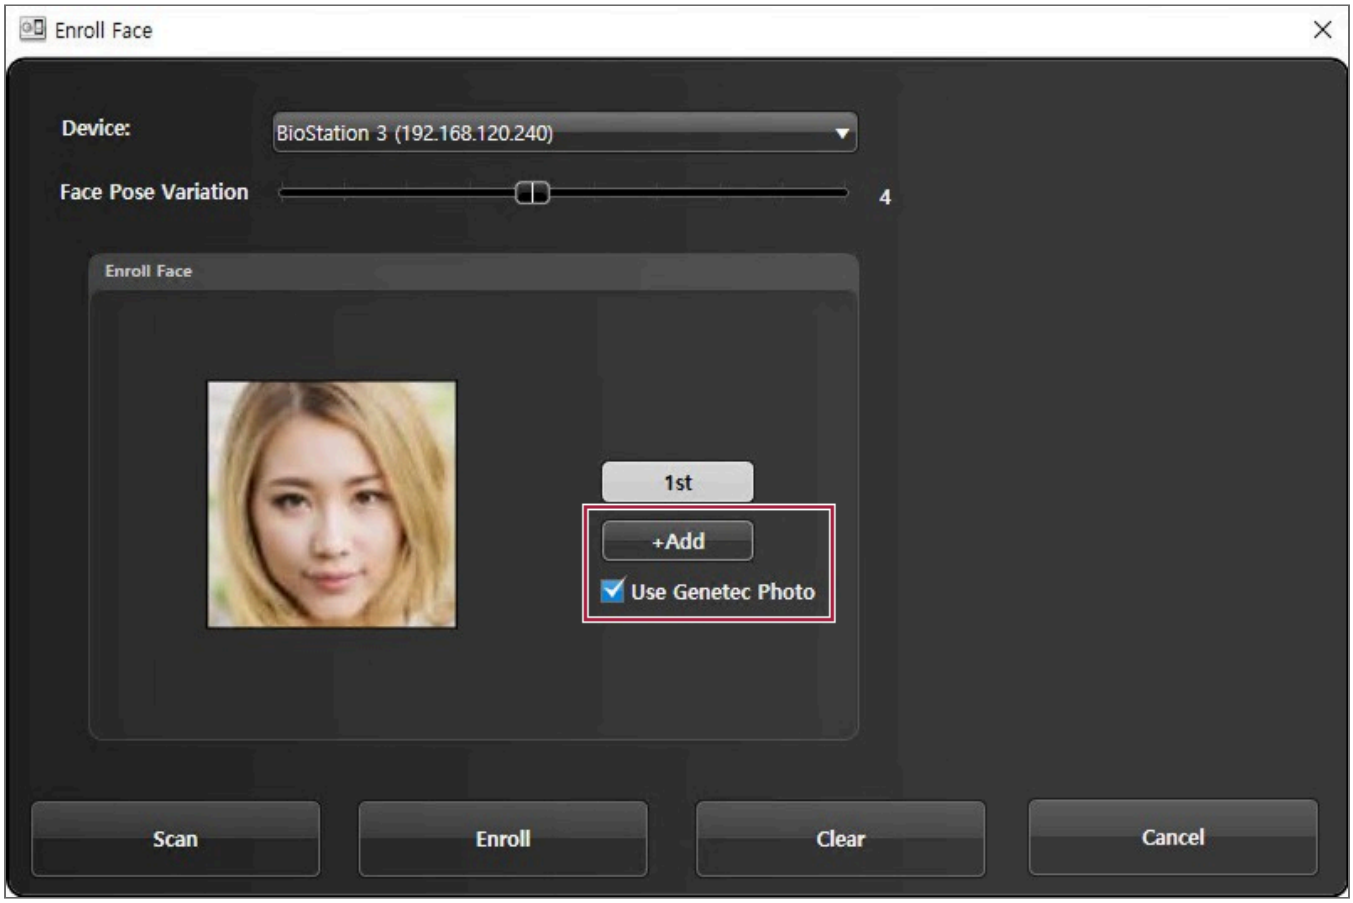



5. Check the uploaded photo, and then click the **Enroll** button to enroll the face.

# Bulk Enrollment

1. Go to **Suprema Device Plugin** → **Global Settings**.

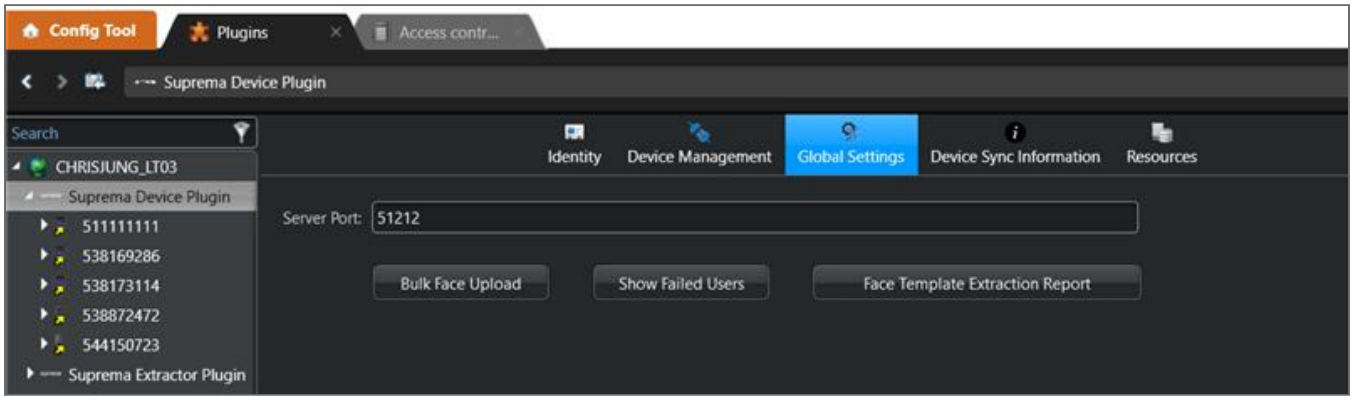


2. Click the **Bulk Face Upload** button. You can check the Face Extraction progress.

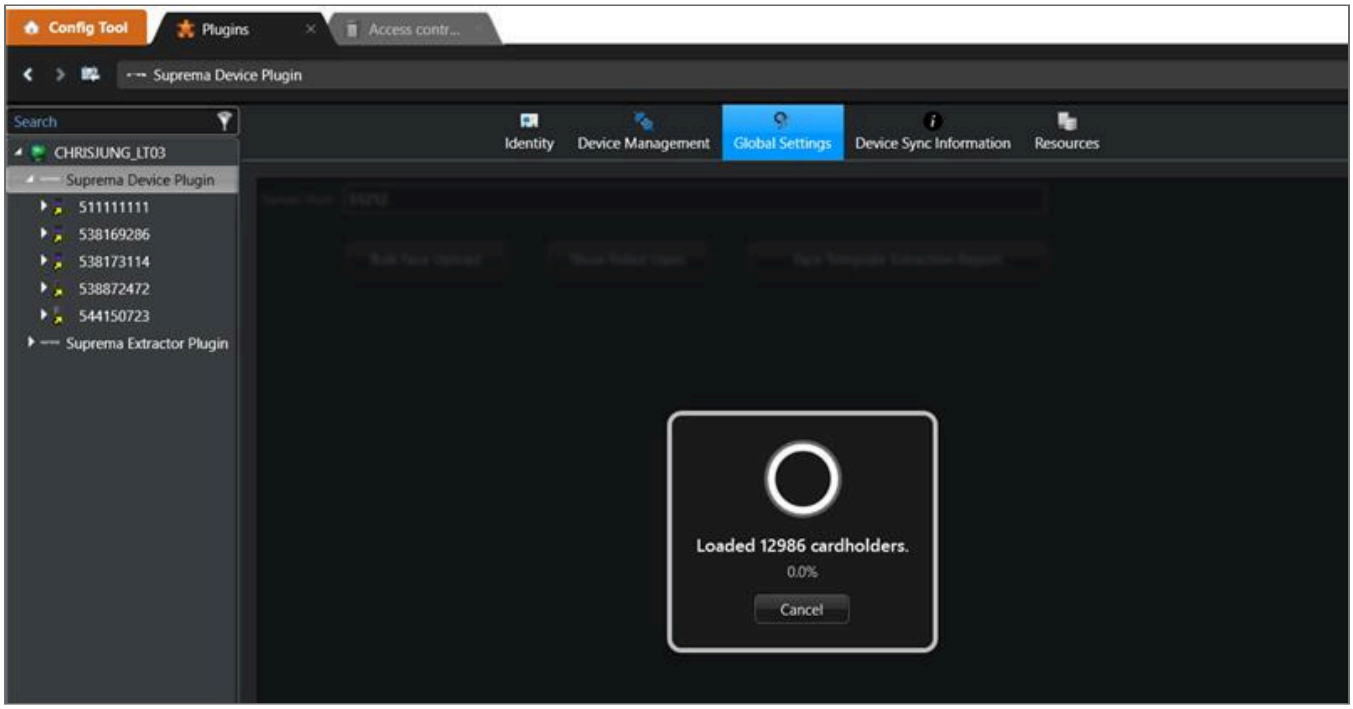



> **Info**
> Face template extraction is performed only for GSC cardholders who have a profile image.


3. Once the process is completed, you can check the results.
   - Show Failed Users: View the list of users for whom face extraction failed.
   - Face Template Extraction Report: View the report related to face template extraction.

# How to Search for a Cardholder with a Face Template

1. Click the **Advanced search** on the **Cardholder management** page.

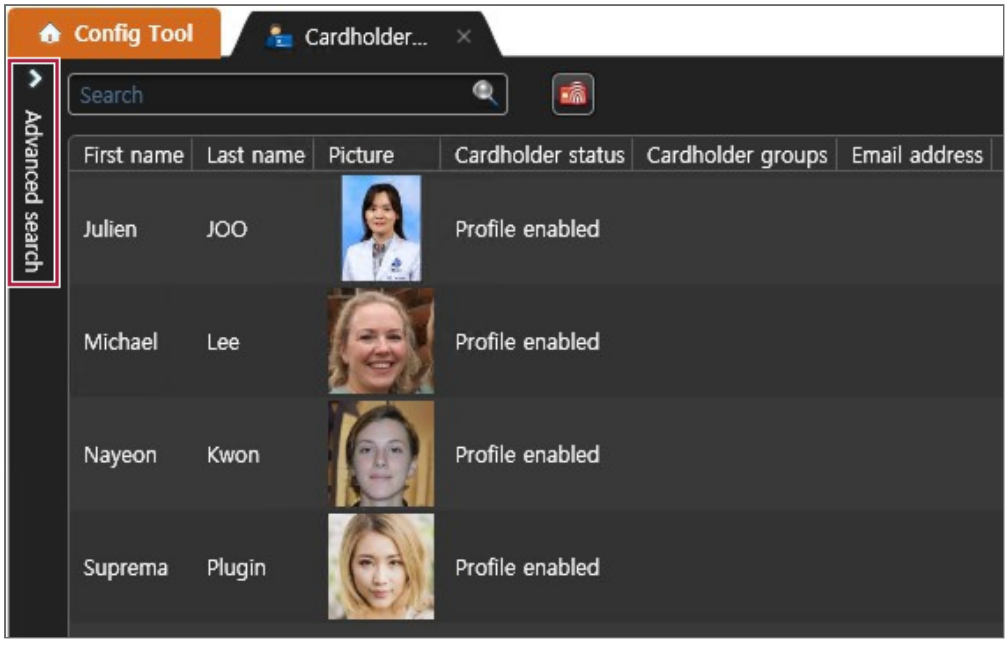


2. Click the **Custom fields**, switch it to **On**, and click **Add criterion**. Then, select the **BiometricsTimestamp**.

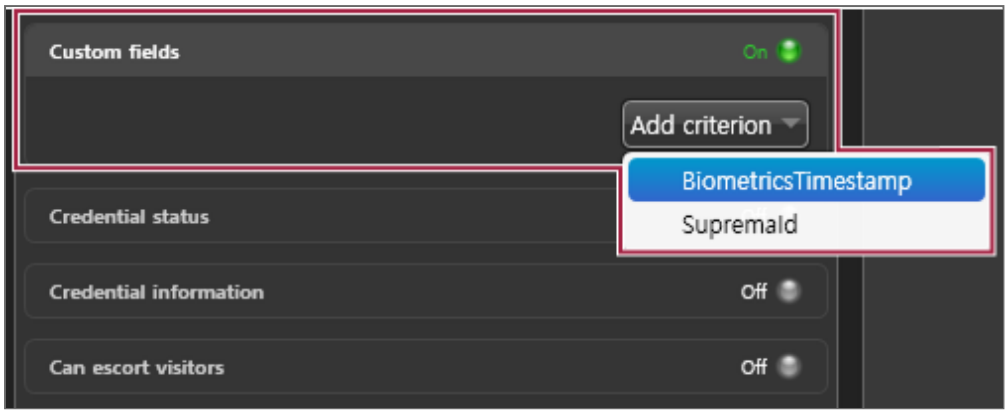


3. Select the **Specific range** and set the period to search.

> **Example**
> - **From**: Plugin installation date
> - **To**: Today

To search by specific time, click **Set time** and enter the time.

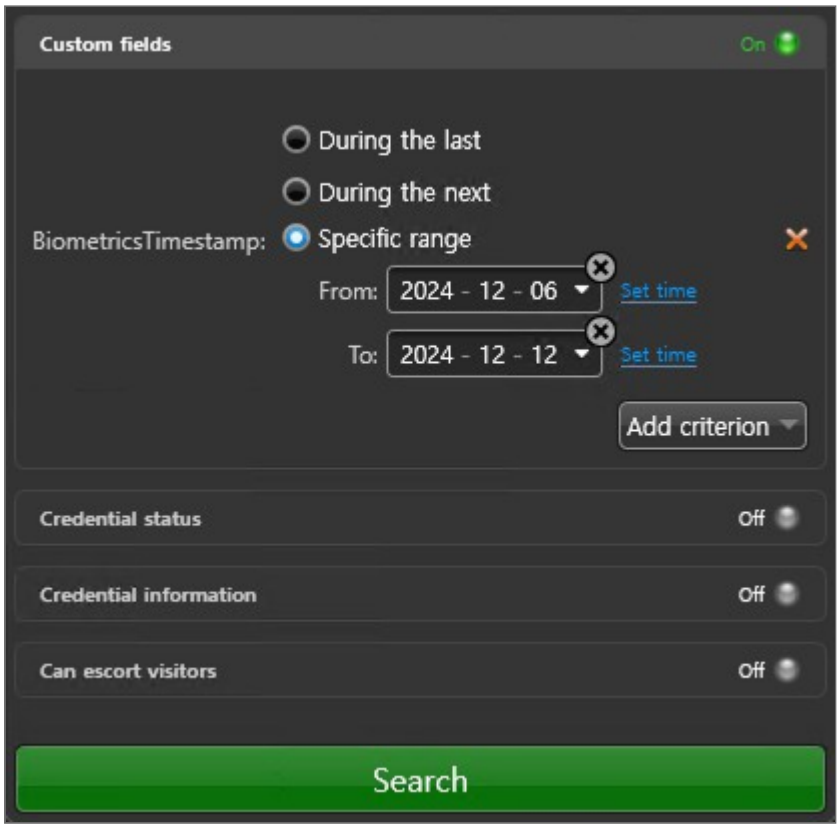


4. Click the **Search** button.

5. All cardholders who have face templates appear.

# Appendices

## Disclaimers

- Information in this web site is provided in connection with Suprema products.
- The right to use is acknowledged only for Suprema products included in the terms and conditions of use or sale for such products guaranteed by Suprema. No license, express or implied, by estoppel or otherwise, to any intellectual property is granted by this web site.
- Except as expressly stated in an agreement between you and Suprema, Suprema assumes no liability whatsoever, and Suprema disclaims all warranties, express or implied including, without limitation, relating to fitness for a particular purpose, merchantability, or noninfringement.
- All warranties are VOID if Suprema products have been: 1) improperly installed or where the serial numbers, warranty date or quality assurance decals on the hardware are altered or removed; 2) used in a manner other than as authorized by Suprema; 3) modified, altered or repaired by a party other than Suprema or a party authorized by Suprema; or 4) operated or maintained in unsuitable environmental conditions.
- Suprema products are not intended for use in medical, lifesaving, life-sustaining applications, or other applications in which the failure of the Suprema product could create a situation where personal injury or death may occur. Should you purchase or use Suprema products for any such unintended or unauthorized application, you shall indemnify and hold Suprema and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Suprema was negligent regarding the design or manufacture of the part.
- Suprema reserves the right to make changes to specifications and product descriptions at any time without notice to improve reliability, function, or design.
- Personal information, in the form of authentication messages and other relative information, may be stored within Suprema products during usage. Suprema does not take responsibility for any information, including personal information, stored within Suprema’s products that are not within Suprema’s direct control or as stated by the relevant terms and conditions. When any stored information, including personal information, is used, it is the responsibility of the product users to comply with national legislation (such as GDPR) and to ensure proper handling and processing.
- You must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Suprema reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.
- Except as expressly set forth herein, to the maximum extent permitted by law, the Suprema products are sold "as is".
- Contact your local Suprema sales office or your distributor to obtain the latest specifications and before placing your product order.

## Copyright Notice

The copyright for this website is owned by Suprema. Rights to other product names, trademarks, and registered trademarks belong to the respective individuals or organizations that own them.

# Open Source License

## gin-gonic/gin

The MIT License (MIT)

Copyright (c) 2014 Manuel Martínez-Almeida

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## Gorm

The MIT License (MIT)

Copyright (c) 2013-NOW Jinzhu <wosmvp@gmail.com>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## Go-ps

The MIT License (MIT)

Copyright (c) 2014 Mitchell Hashimoto

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## google/uuid

Copyright (c) 2009,2014 Google Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Google Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---

## gorilla/websocket

Copyright (c) 2013 The Gorilla WebSocket Authors. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## CommandLineParser

The MIT License (MIT)

Copyright (c) 2005 - 2015 Giacomo Stelluti Scala & Contributors

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## MahApps Metro

MIT License

Copyright (c) .NET Foundation and Contributors. All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## MahApps Metro IconPacks

The MIT License (MIT)

Copyright (c) 2016-2019 MahApps, Jan Karger

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## Newtonsoft.Json

The MIT License (MIT)

Copyright (c) 2007 James Newton-King

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## Apache/log4net

Apache License

Version 2.0, January 2004

http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but

not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.

3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

   (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and

   (b) You must cause any modified files to carry prominent notices stating that You changed the files; and

   (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and

   (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

   You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this

License.

5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

---

## CovenantSQL/go-sqlite3-encrypt

The MIT License (MIT)

Copyright (c) 2014 Yasuhiro Matsumoto

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## mattn/go-sqlite3

The MIT License (MIT)

Copyright (c) 2014 Yasuhiro Matsumoto

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## tdewolff/Minify

Copyright (c) 2015 Taco de Wolff

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## go-ole/go-ole

The MIT License (MIT)

Copyright © 2013-2017 Yasuhiro Matsumoto, <mattn.jp@gmail.com>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---

## ControlzEx/ControlzEx

The MIT License (MIT)

Copyright (c) 2015-2019 Jan Karger, Bastian Schmidt

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

**Suprema Inc.**

17F Parkview Tower, 248, Jeongjail-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13554, Rep. of KOREA

Tel: +82 31 783 4502 | Fax: +82 31 783 4503 | Inquiry: sales_sys@supremainc.com

For more information about Suprema's global branch offices,
visit the webpage below by scanning the QR code.
https://supremainc.com/en/about/global-office.asp

© 2026 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc.
All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies.
Product appearance, build status and/or specifications are subject to change without notice.