





Example of a 67PE pulse


Example of a 54PE pulse

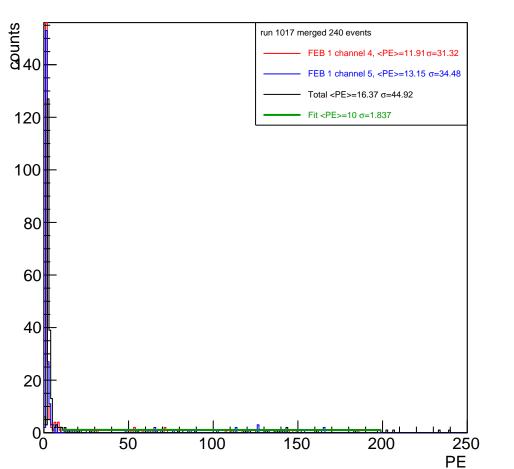


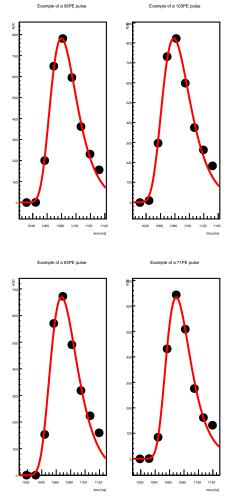


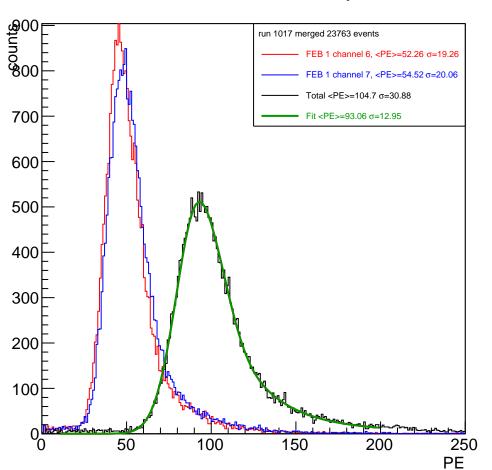


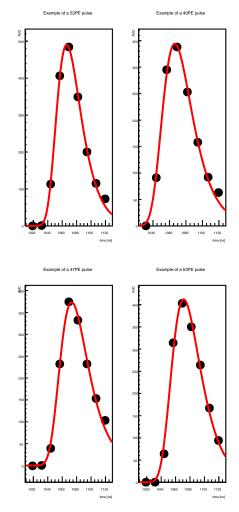


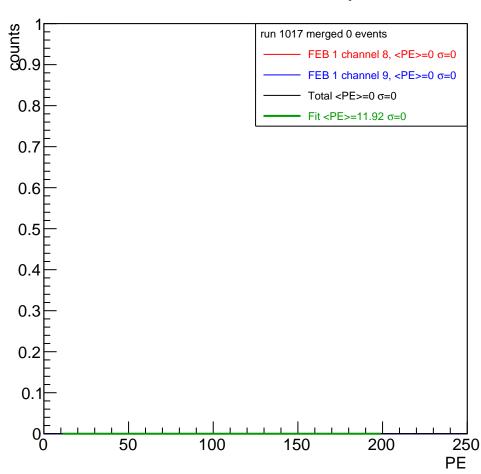


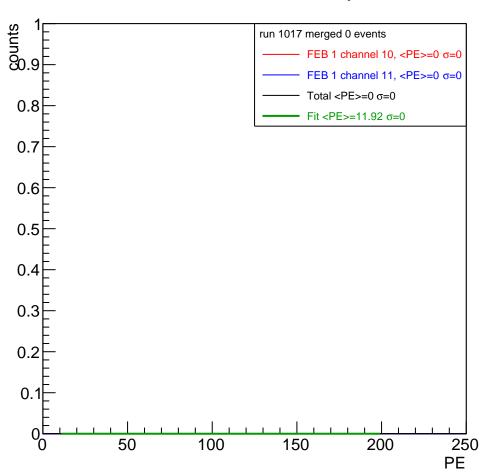


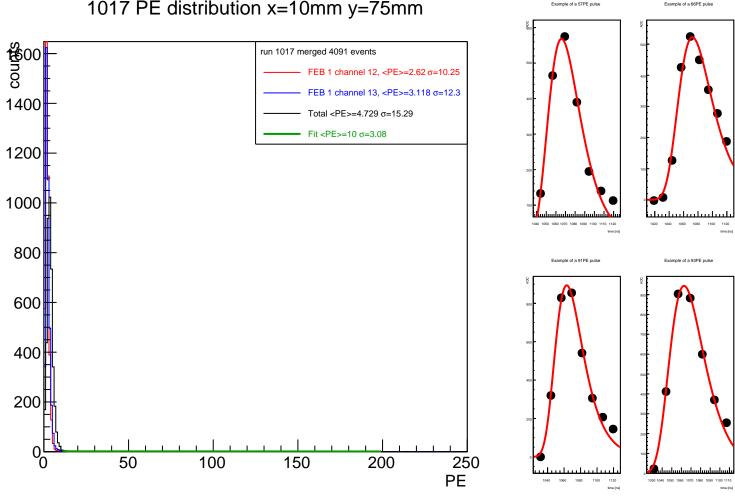


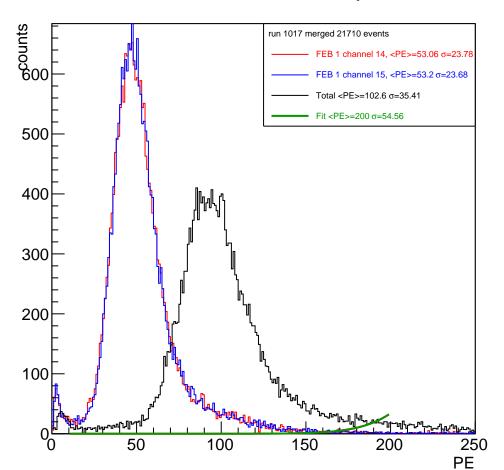


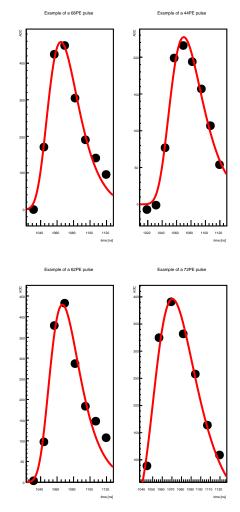

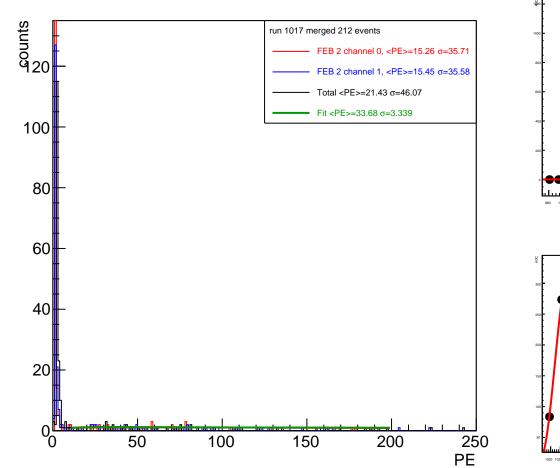

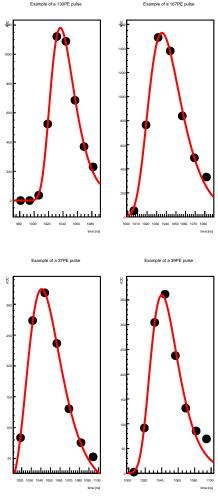


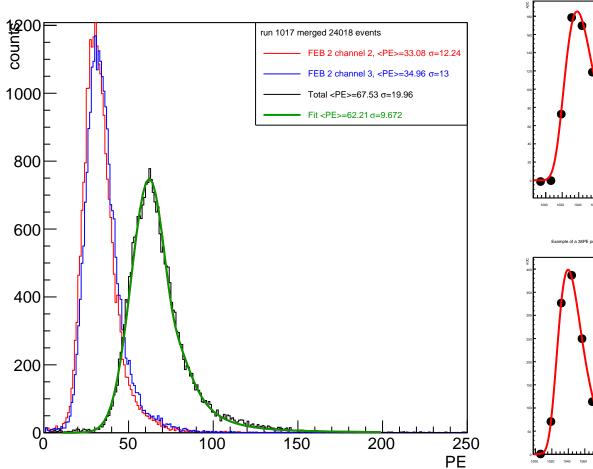


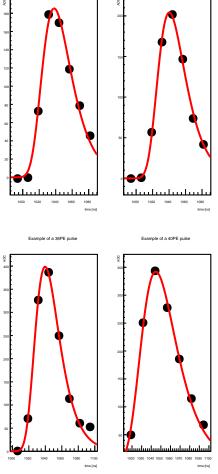

Example of a 22PE pulse


Example of a 21PE pulse

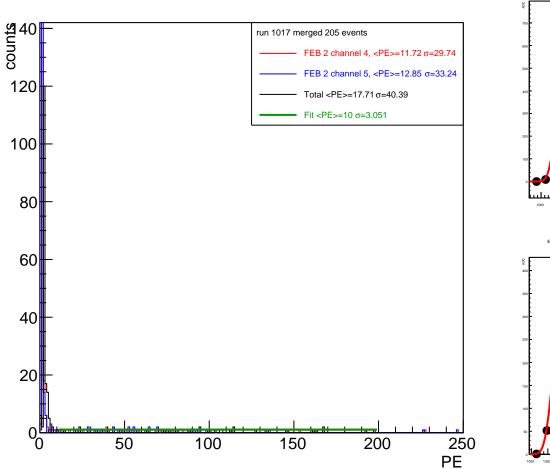

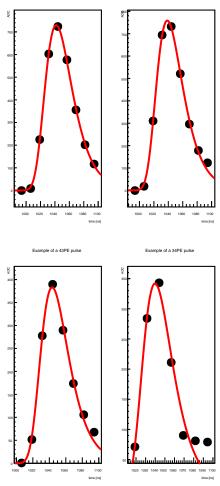


Example of a 89PE pulse


Example of a 90PE pulse

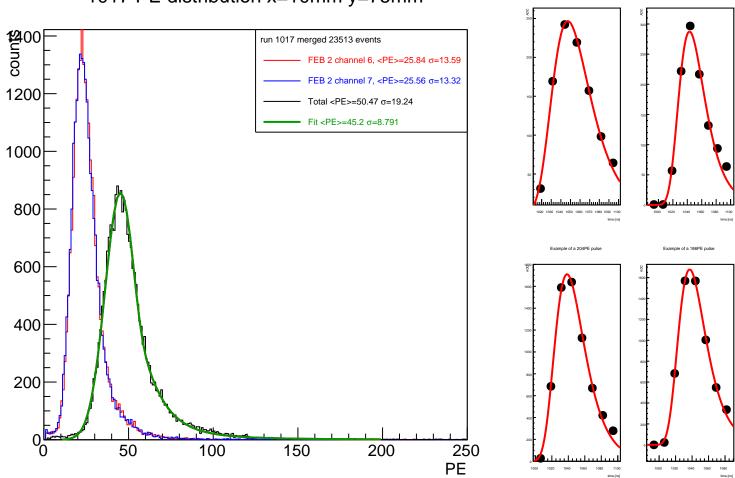


Example of a 33PE pulse

Example of a 35PE pulse

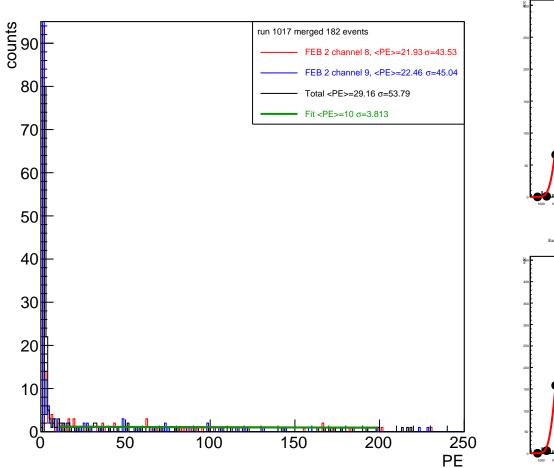


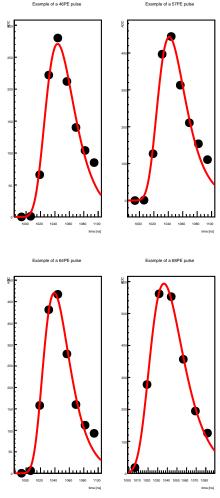

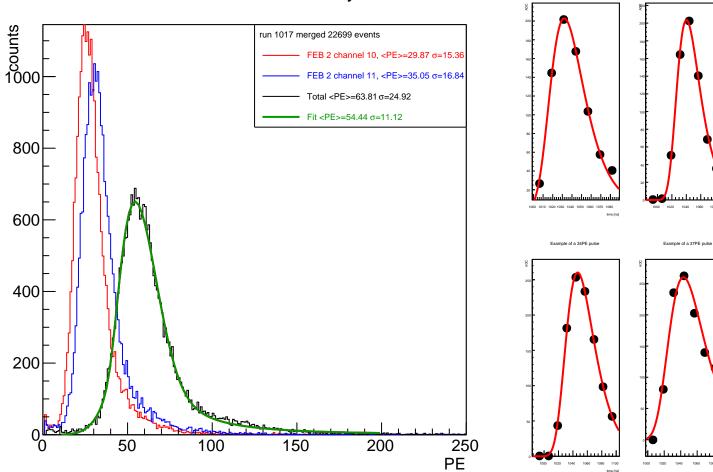


Example of a 21PE pulse

Example of a 24PE pulse

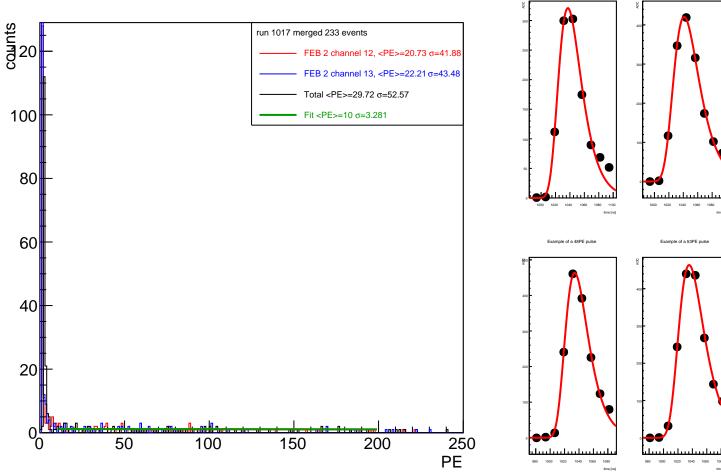

Example of a 33PE pulse

Example of a 48PE pulse

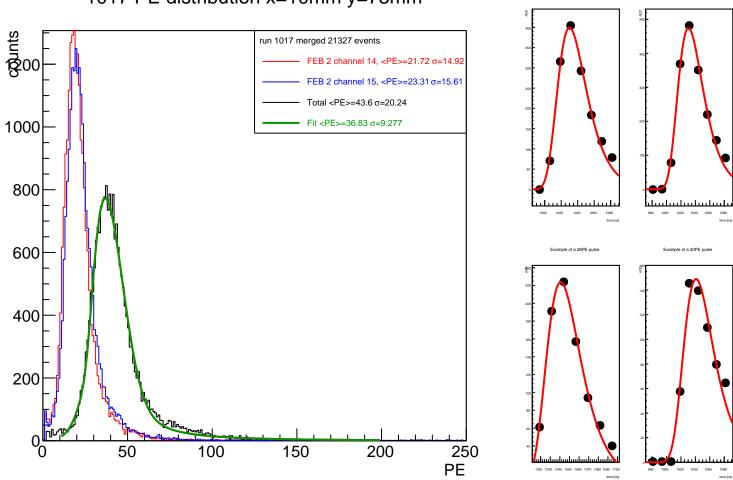

Example of a 46PE pulse

Example of a 54PE pulse