




Example of a 187PE pulse

Example of a 142PE pulse

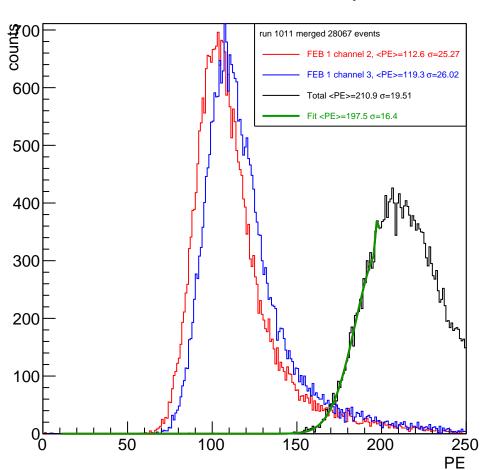


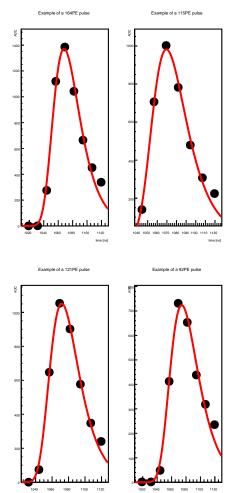


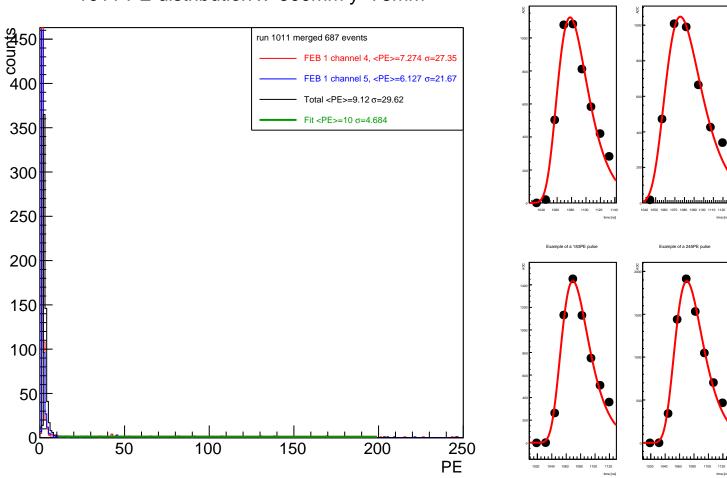



Example of a 158PE pulse


Example of a 130PE pulse

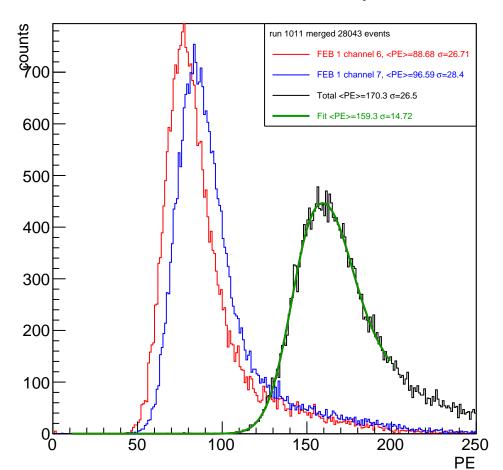


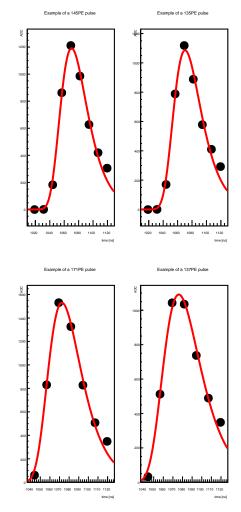


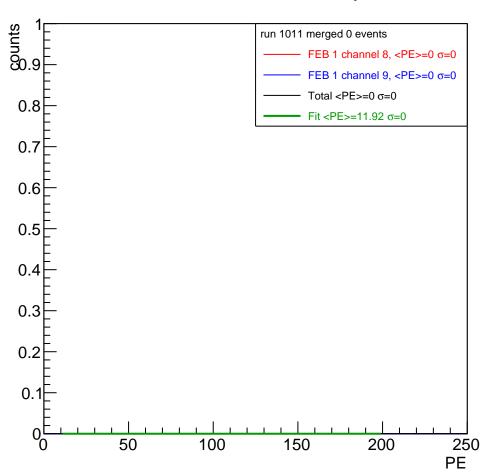


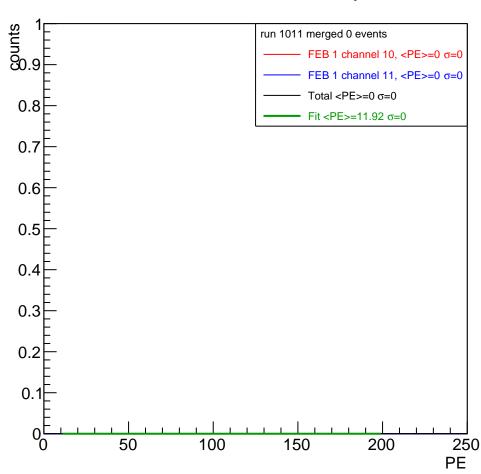


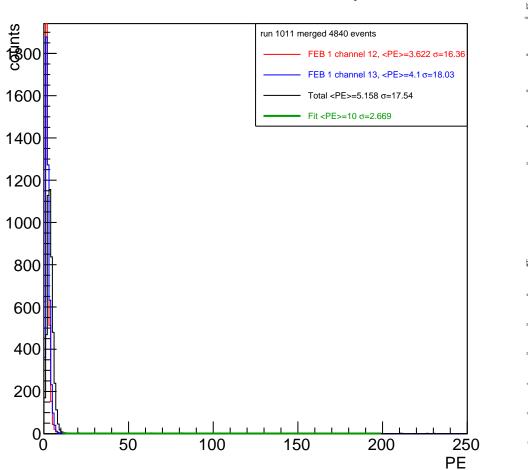

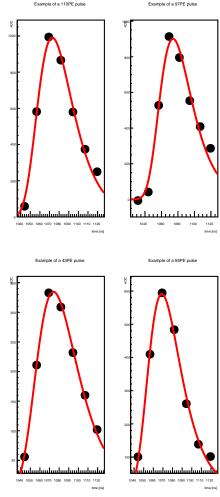

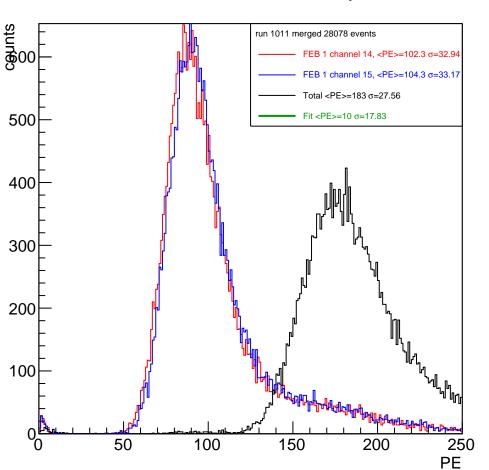


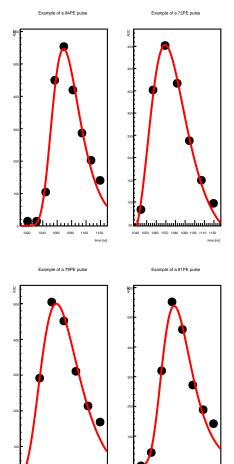


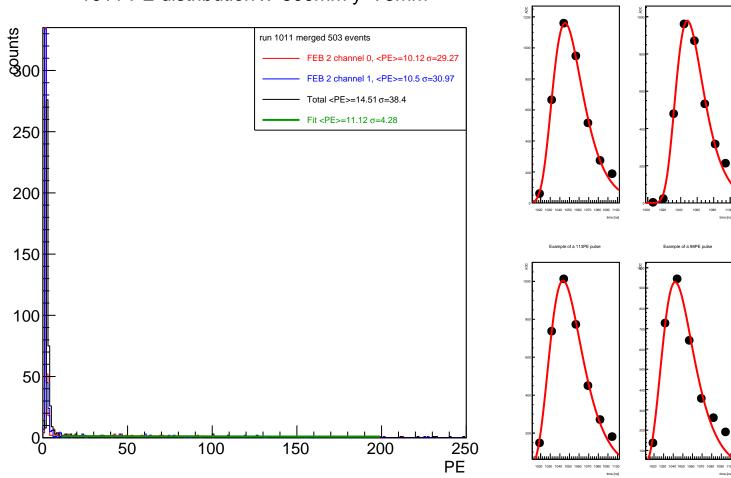



Example of a 119PE pulse


Example of a 105PE pulse

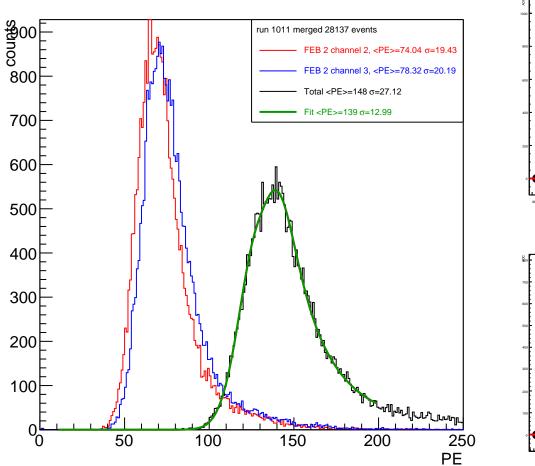


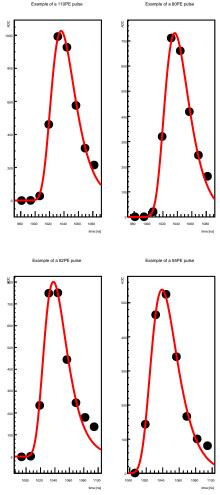


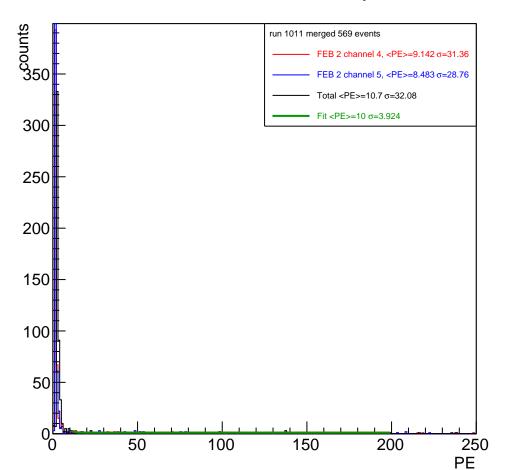

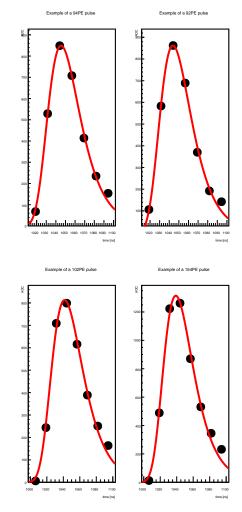

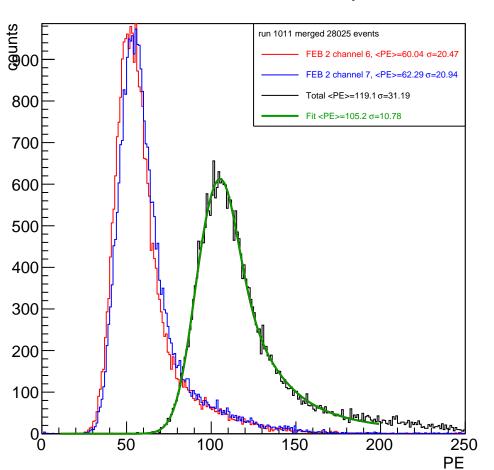


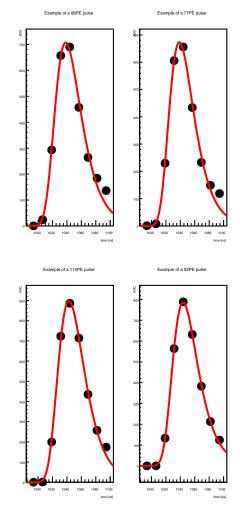


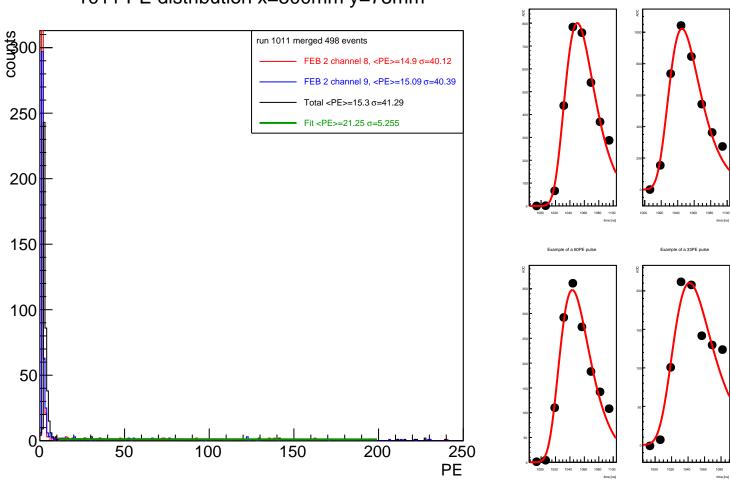


Example of a 136PE pulse

Example of a 129PE pulse

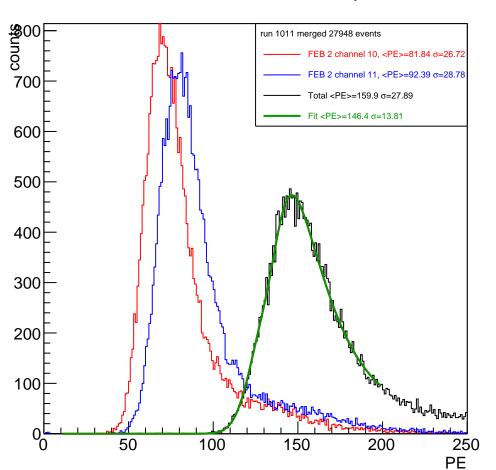

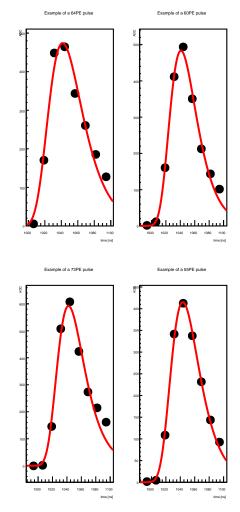

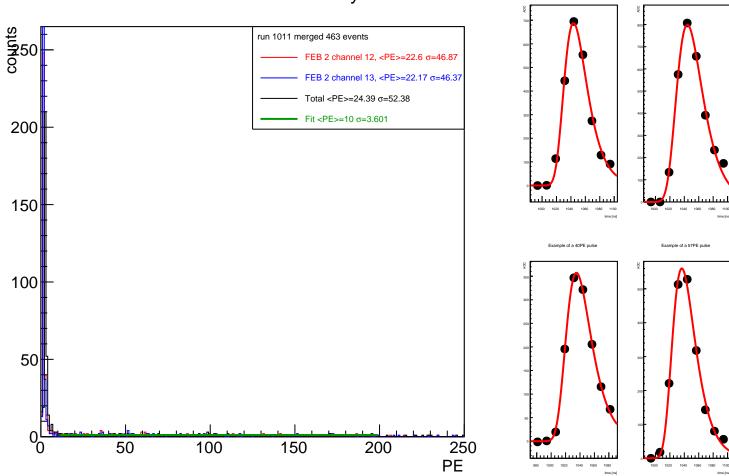

Example of a 71PE pulse

Example of a 93PE pulse

