





Example of a 100PE pulse


Example of a 102PE pulse

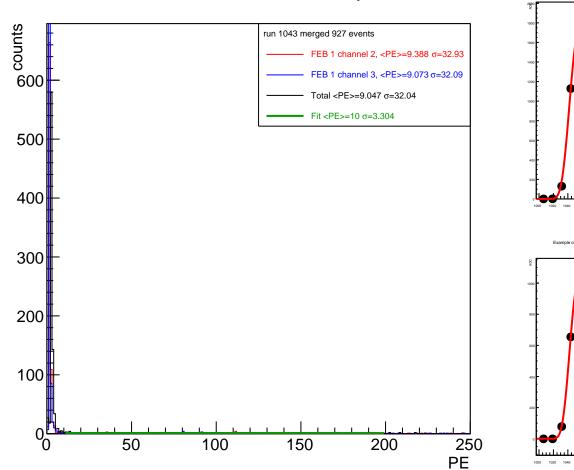


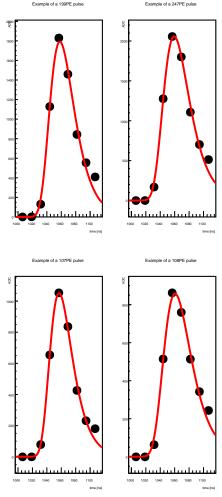

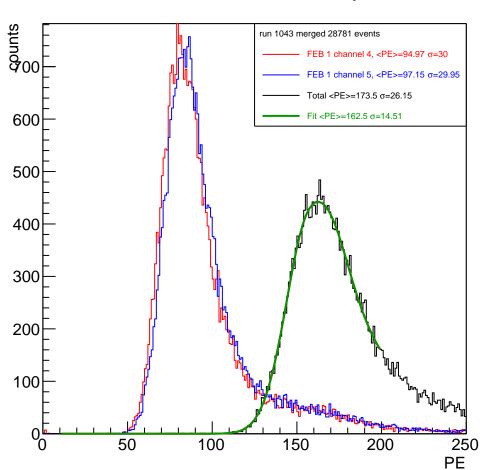

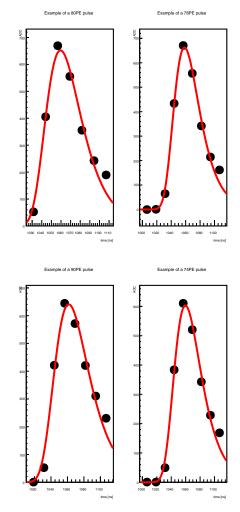


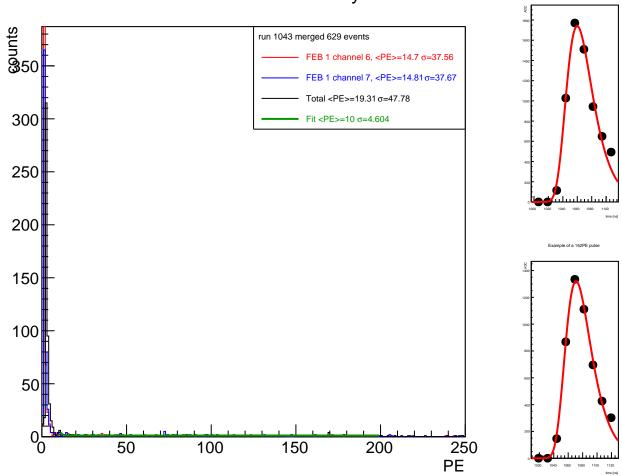


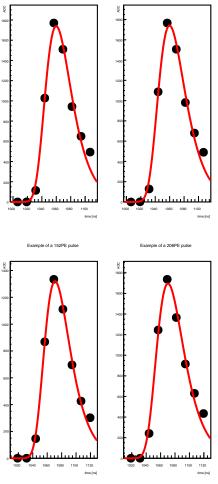



Example of a 209PE pulse


Example of a 204PE pulse

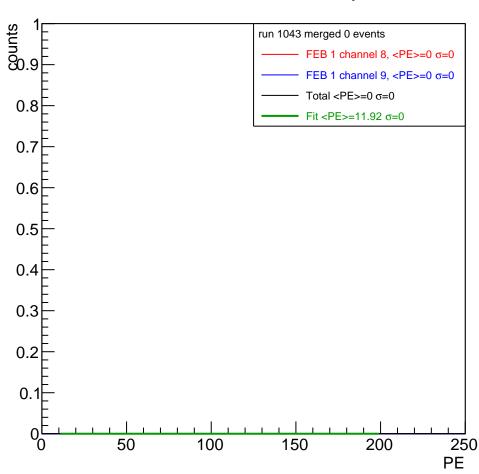

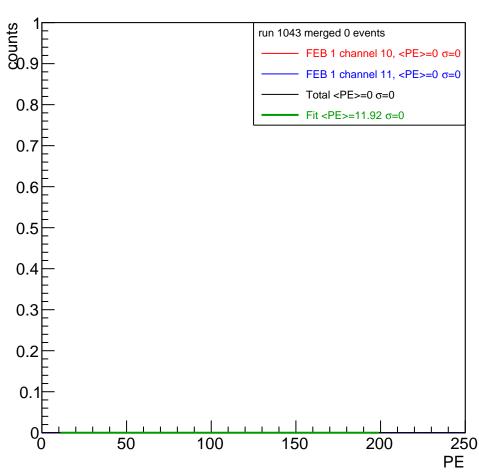

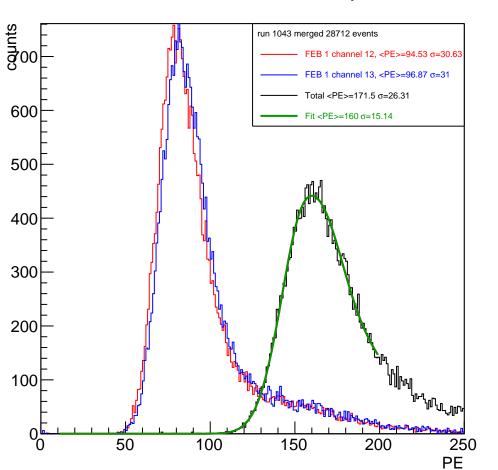


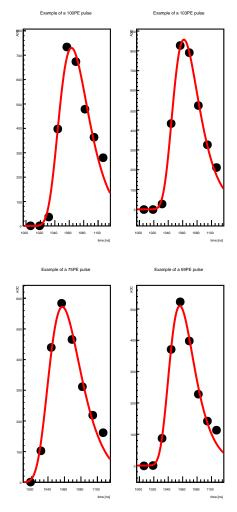


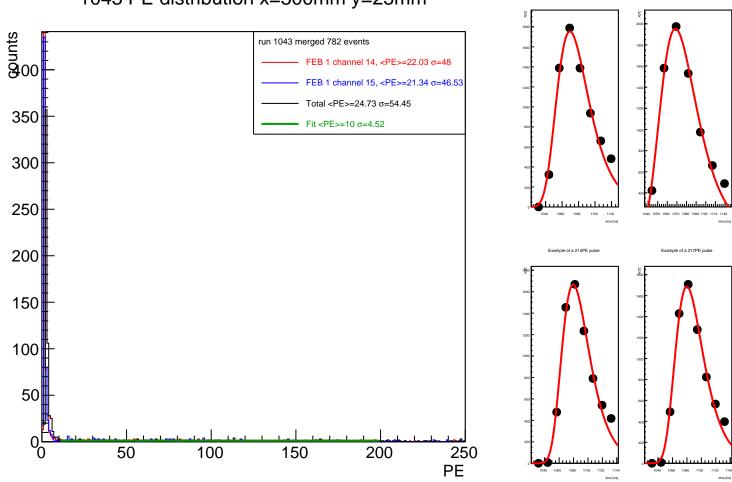


Example of a 229PE pulse

Example of a 247PE pulse

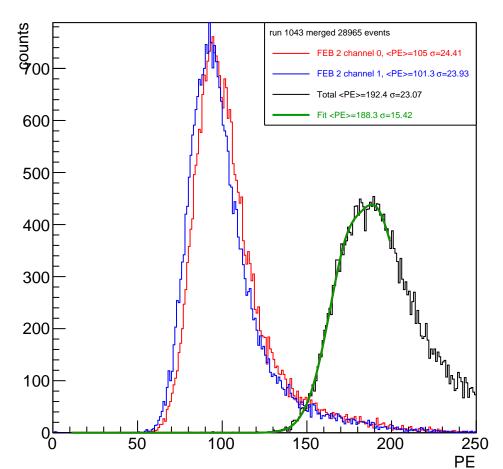


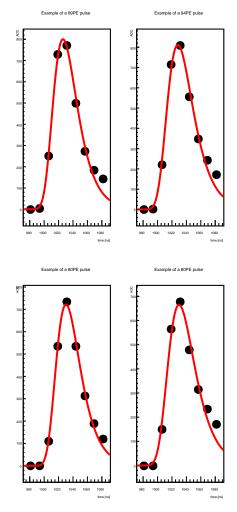


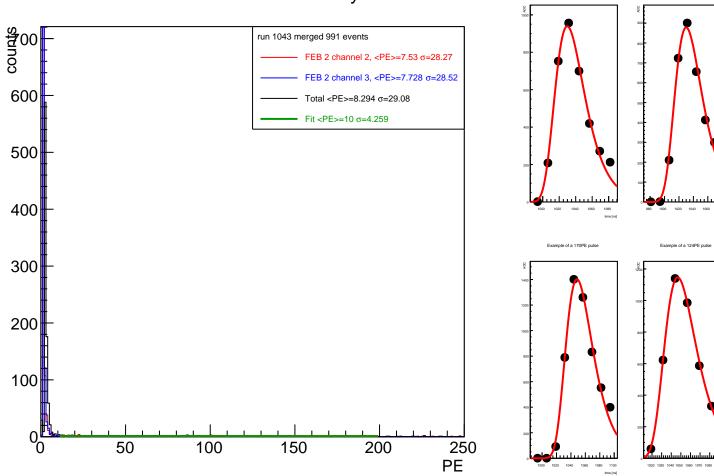


Example of a 109PE pulse

Example of a 108PE pulse

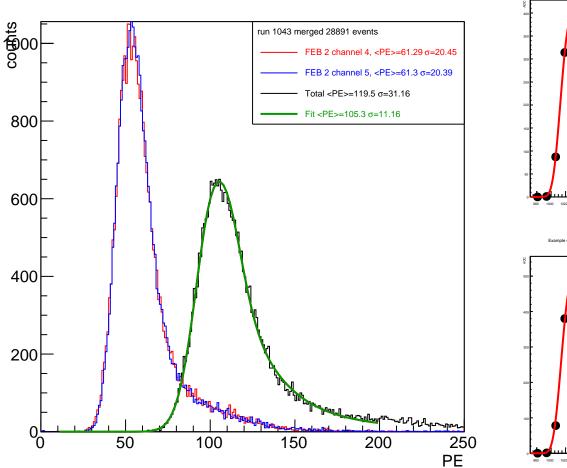


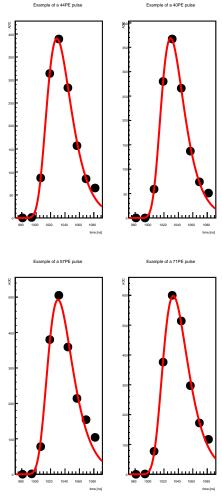


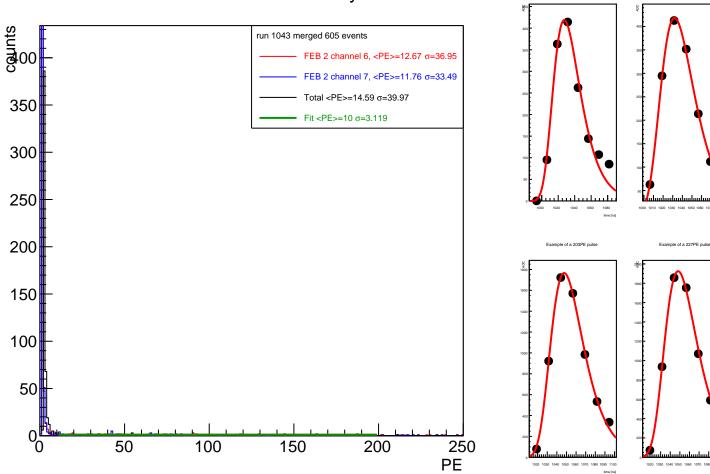


Example of a 47PE pulse

Example of a 52PE pulse

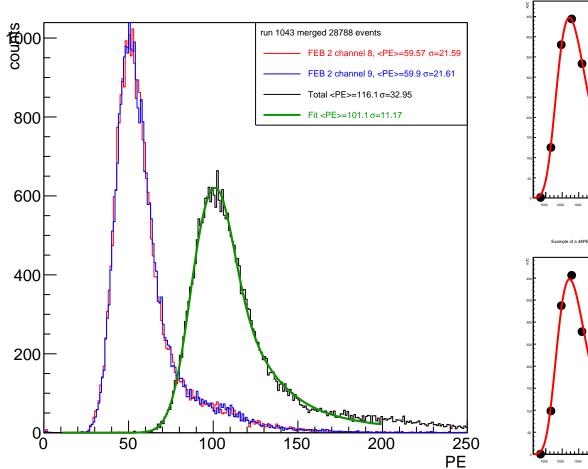


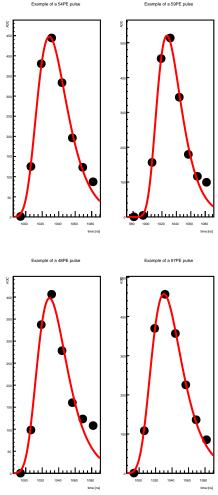


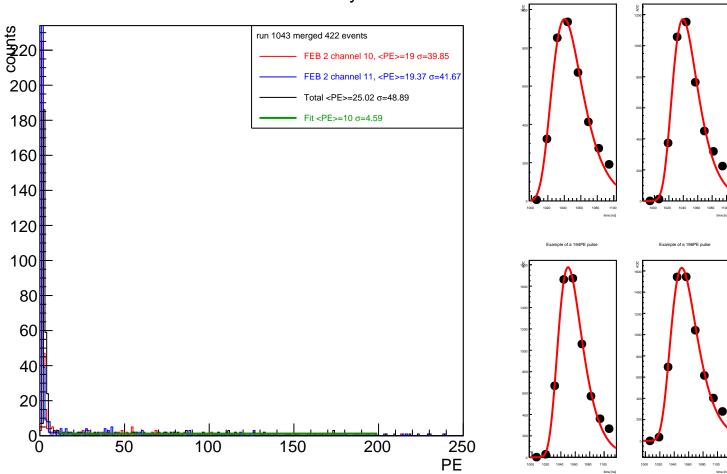


Example of a 116PE pulse

Example of a 138PE pulse

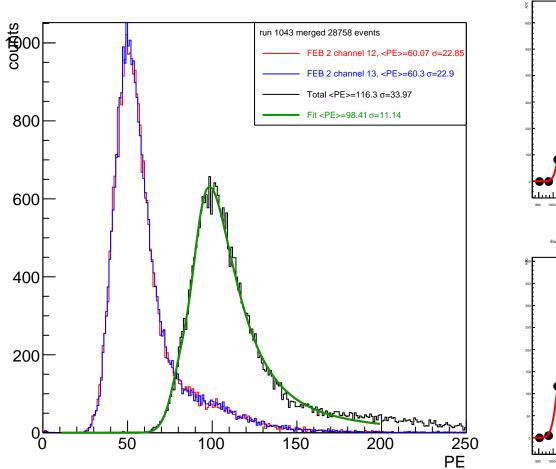

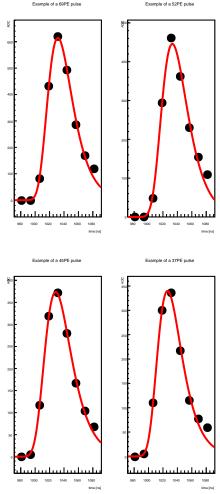

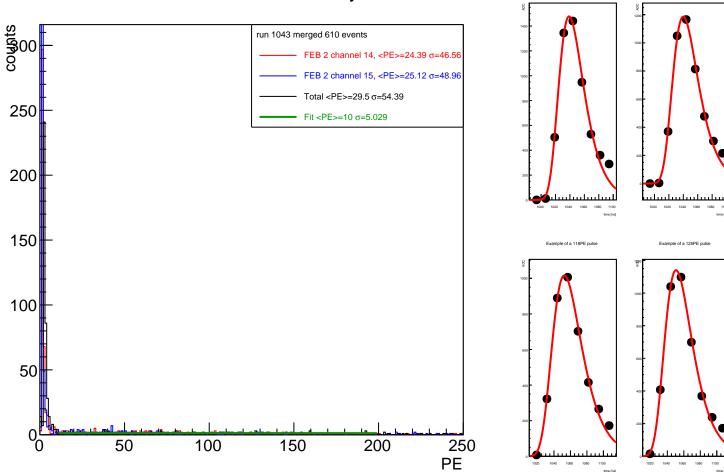

Example of a 168PE pulse

Example of a 138PE pulse