



Example of a 190PE pulse


Example of a 242PE pulse

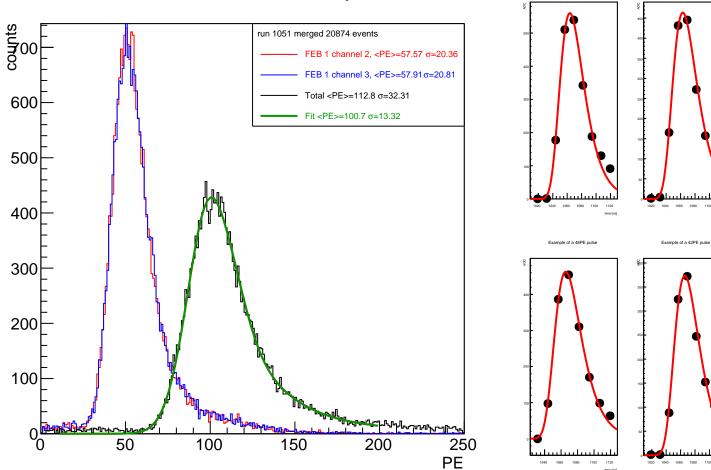



Example of a 60PE pulse


Example of a 51PE pulse

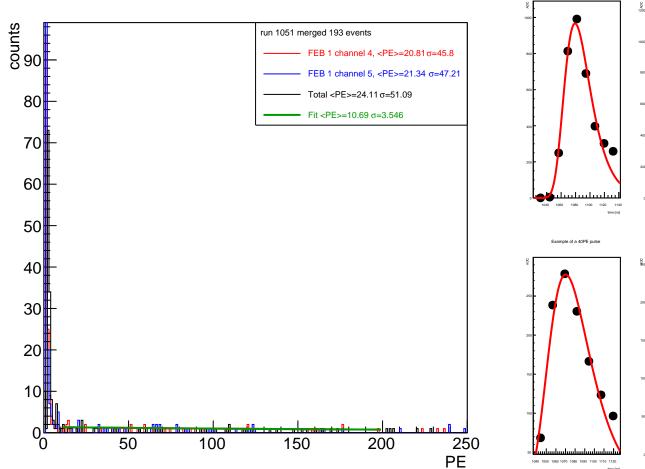


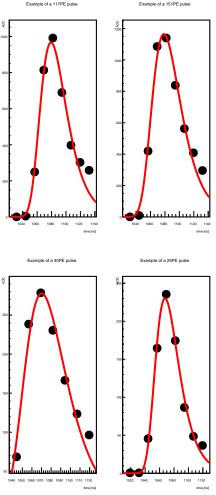


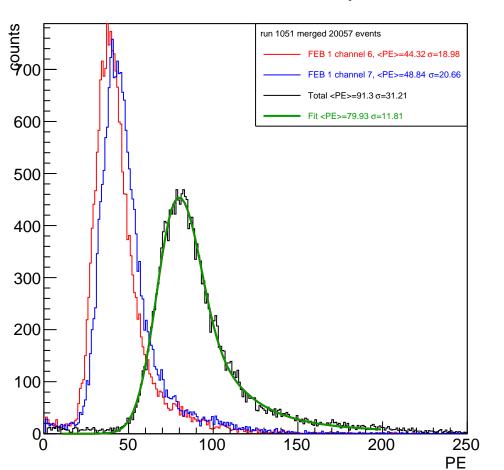

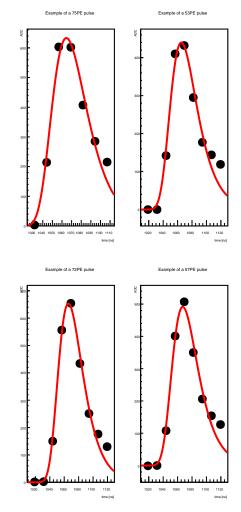

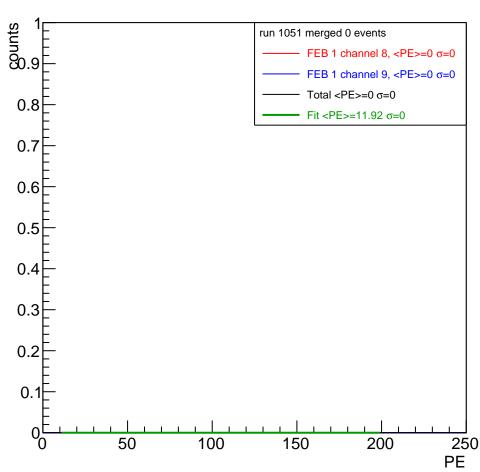


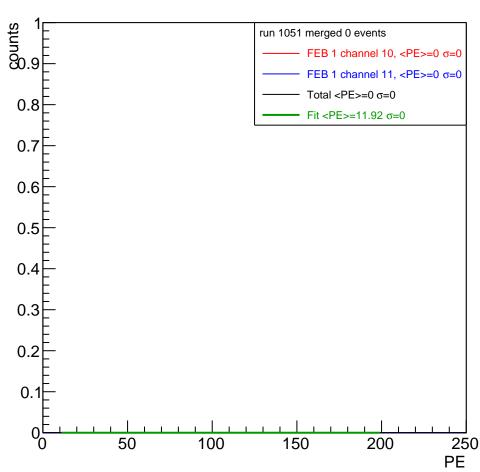


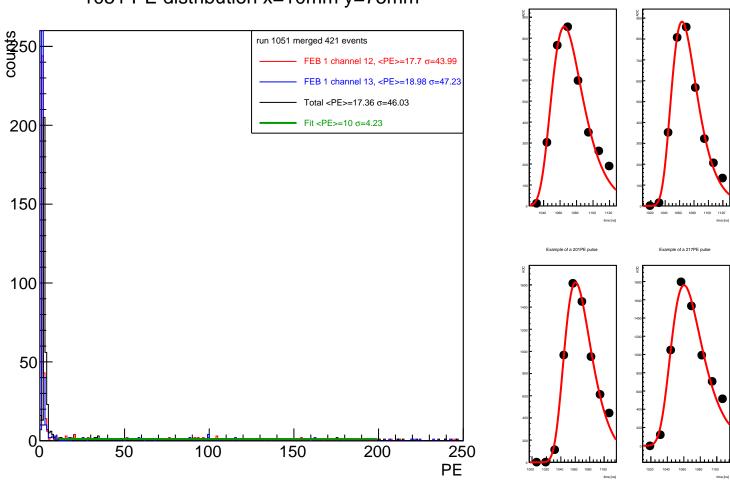


Example of a 106PE pulse

Example of a 103PE pulse

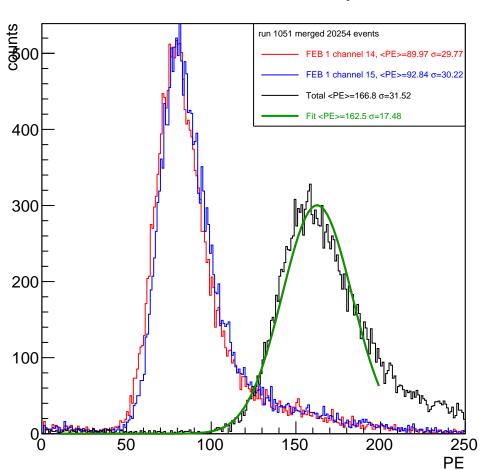


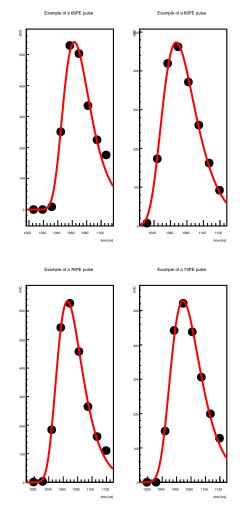


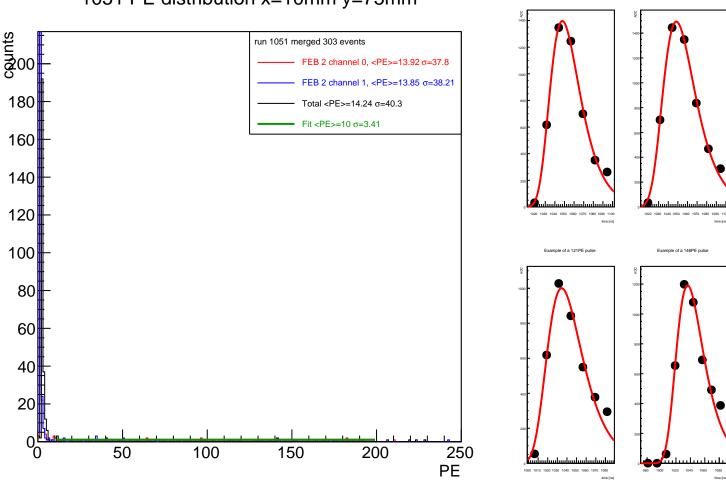


Example of a 144PE pulse

Example of a 161PE pulse

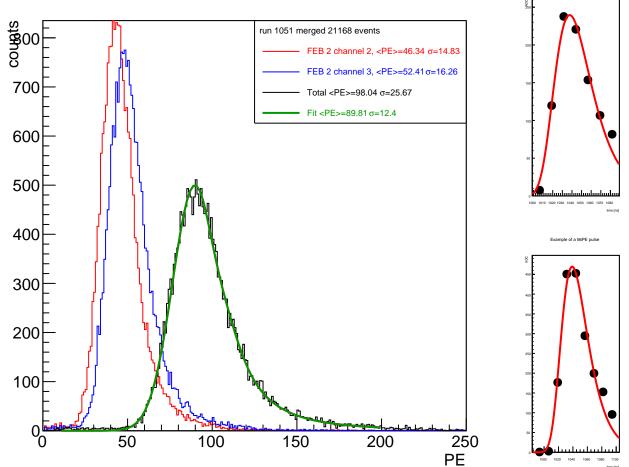


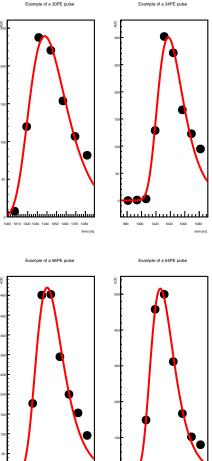

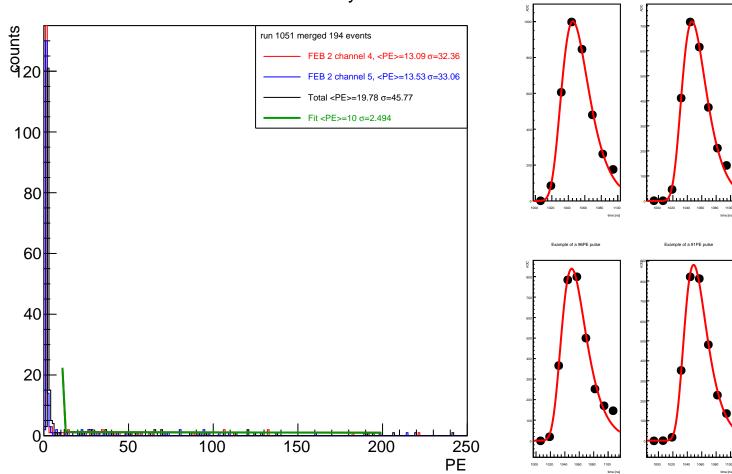


Example of a 112PE pulse


Example of a 80PE pulse

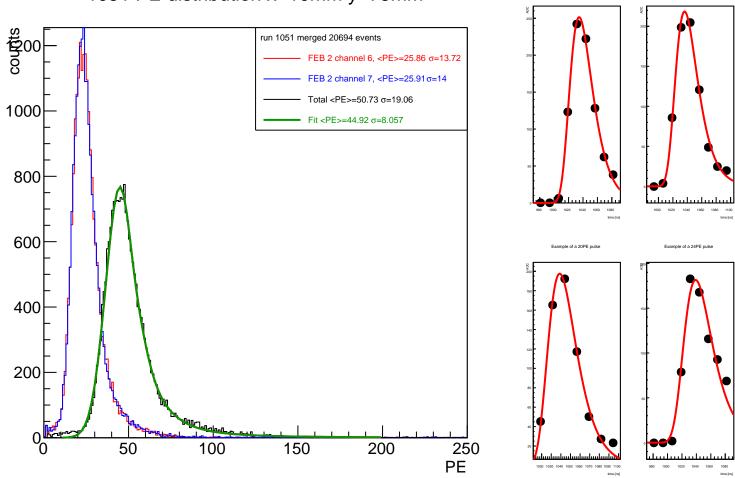


Example of a 27PE pulse

Example of a 23PE pulse

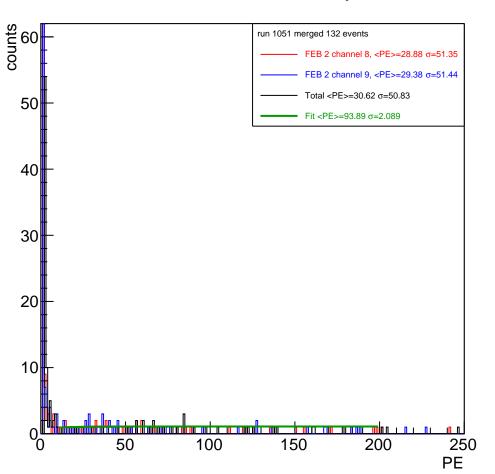


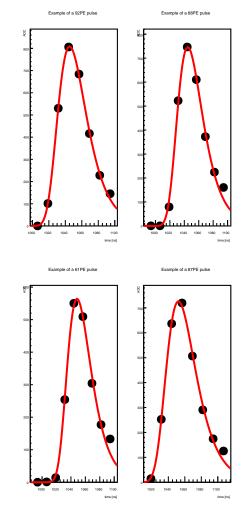

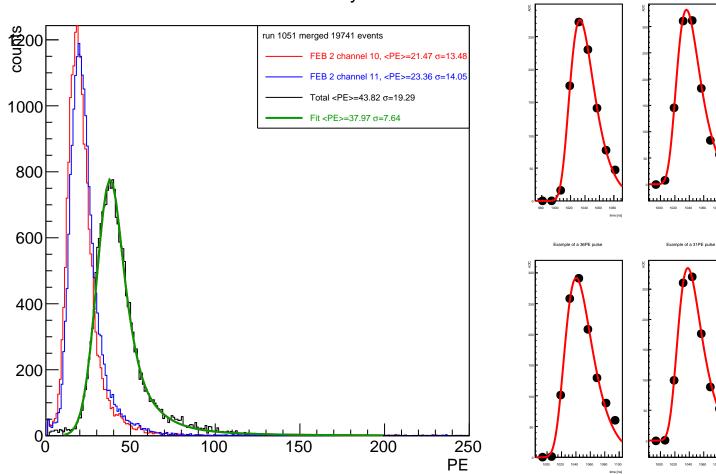

Example of a 30PE pulse

Example of a 36PE pulse

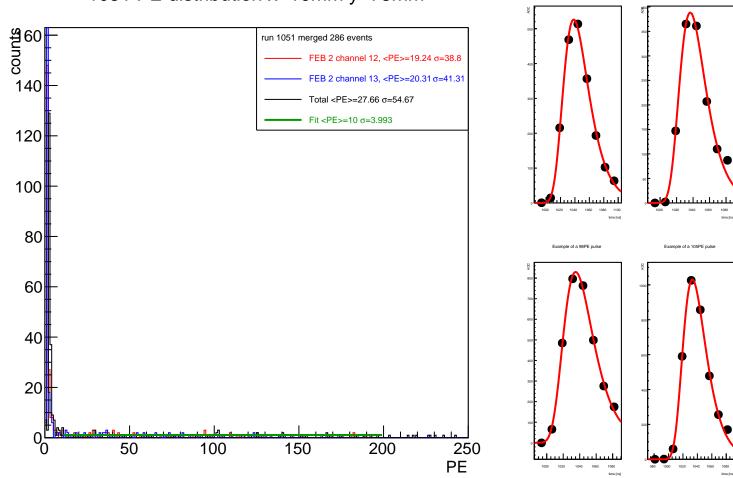

Example of a 60PE pulse

Example of a 39PE pulse

