



Example of a 108PE pulse

Example of a 139PE pulse

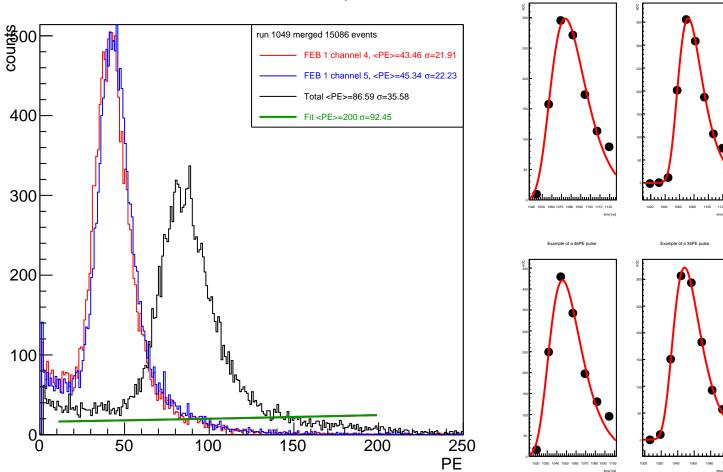


Example of a 36PE pulse


Example of a 39PE pulse

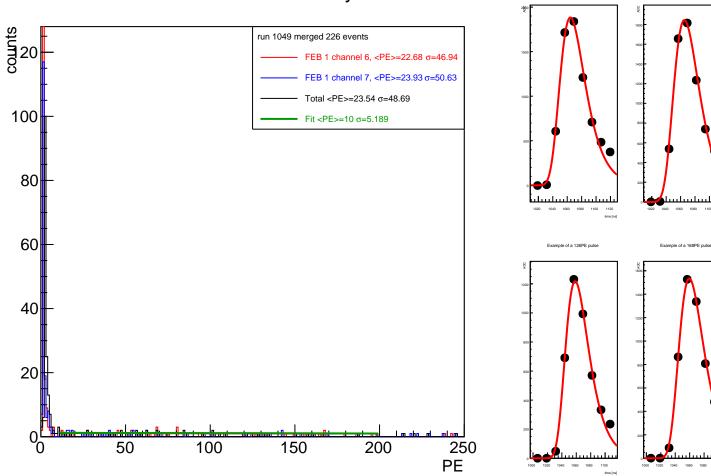



Example of a 211PE pulse


Example of a 209PE pulse

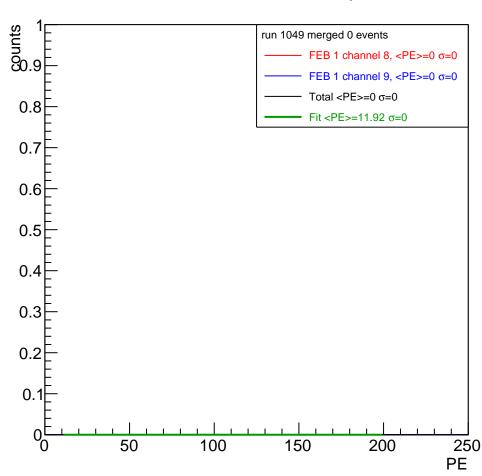

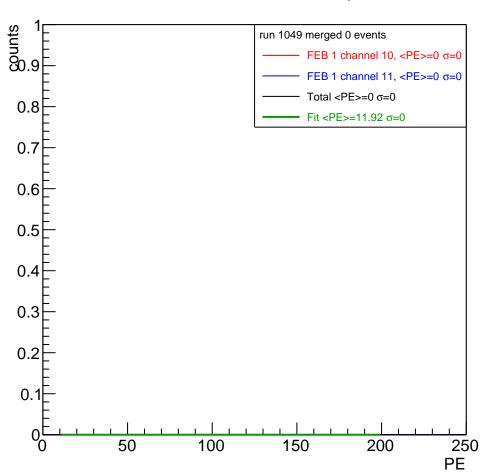

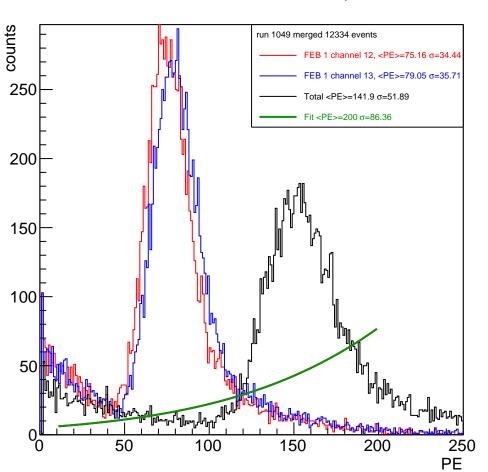


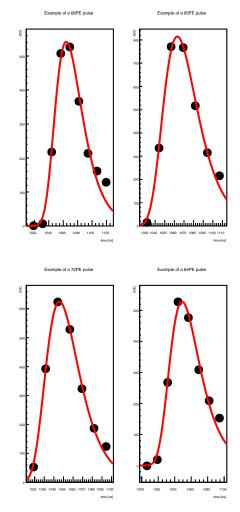

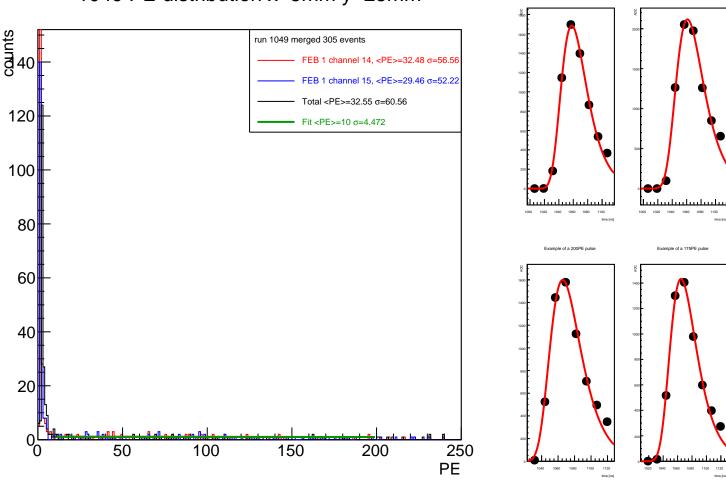


Example of a 199PE pulse

Example of a 271PE pulse

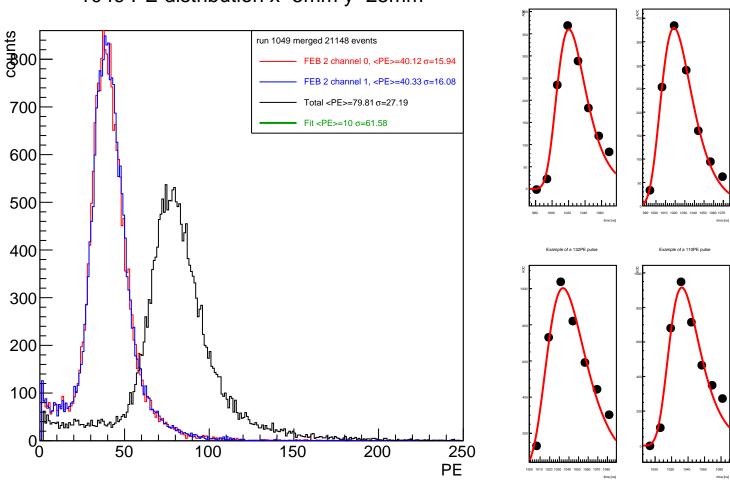


Example of a 41PE pulse

Example of a 39PE pulse

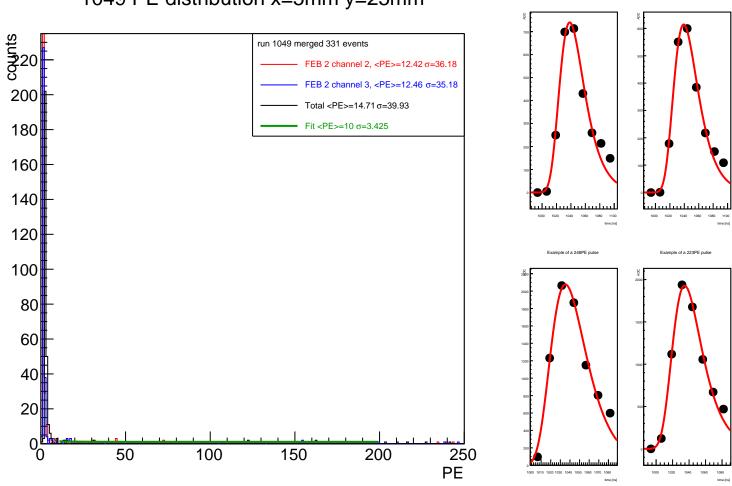


Example of a 82PE pulse

Example of a 67PE pulse

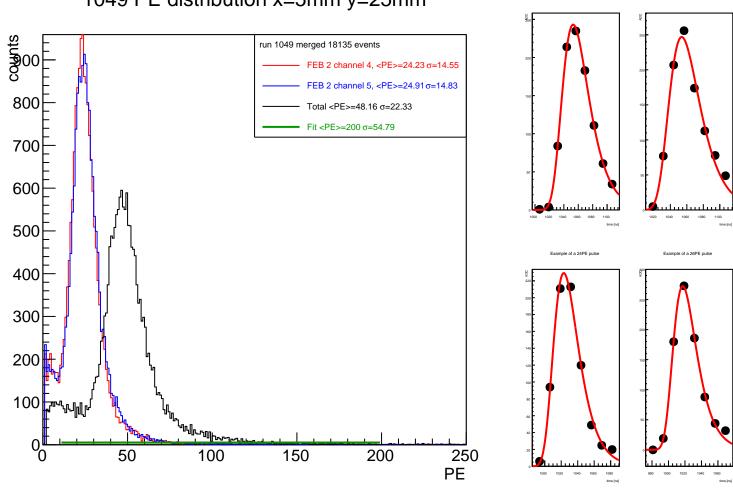


Example of a 31PE pulse

Example of a 31PE pulse

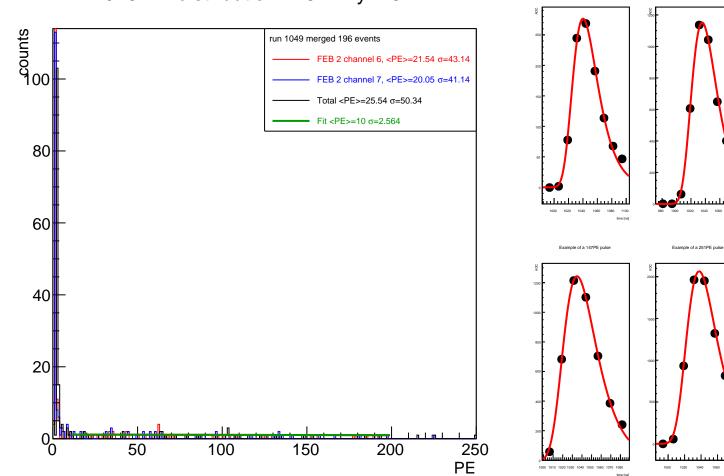


Example of a 33PE pulse

Example of a 136PE pulse

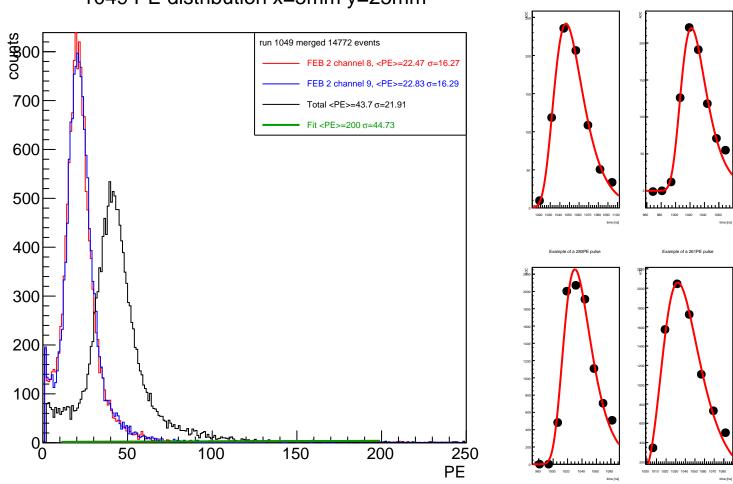

Example of a 24PE pulse


Example of a 25PE pulse

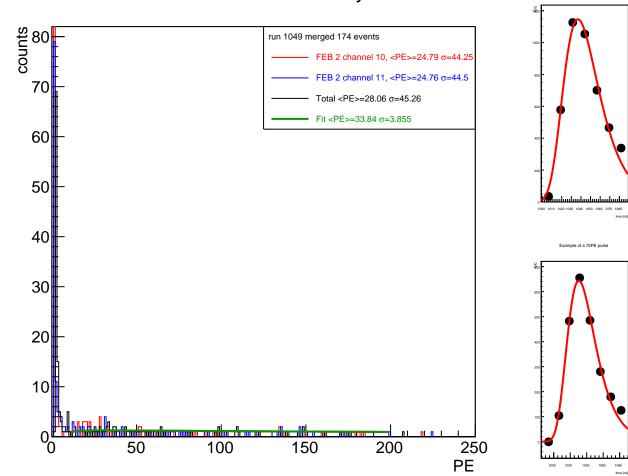



Example of a 138PE pulse

Example of a 127PE pulse

Example of a 80PE pulse

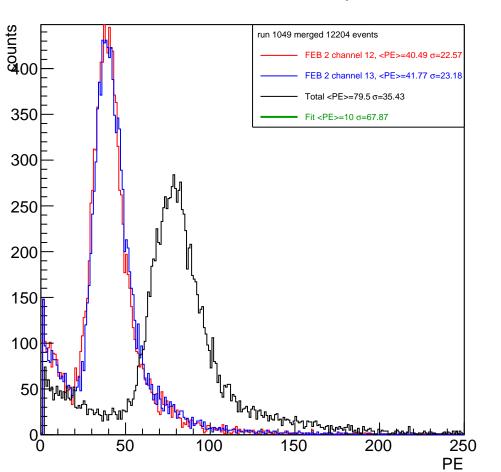

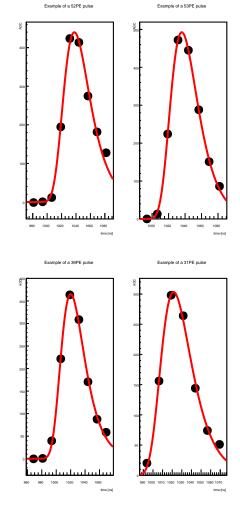

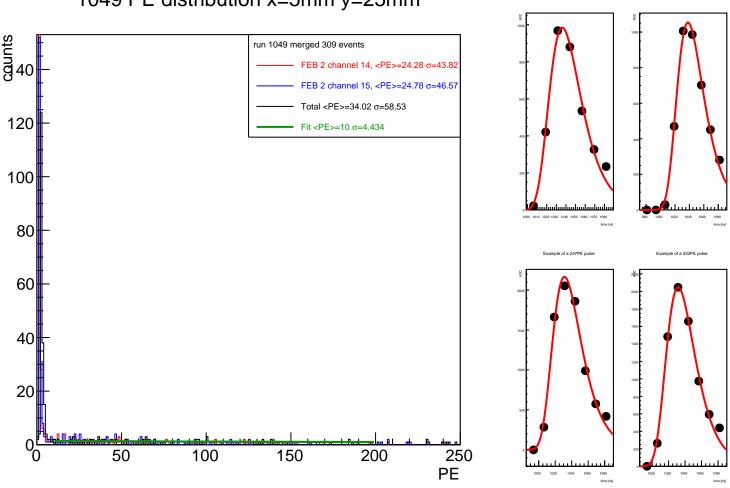

Example of a 106PE pulse

Example of a 127PE pulse